

CT29Z40/29Z43/29Z50/29Z57/
29Z58/29A730/29A750/29A760/
29B850

Owner's Instructions

Before operating, please read this manual carefully,
and retain it for future reference.

Register your product at www.samsung.com/global/register.

 
Record your Model and Serial number.

▪ Model _____ ▪ Serial No. _____

Control Panel (depending on the model)

➤ The actual configuration of your TV may be different,
depending on your model.

Front (or Side) Panel

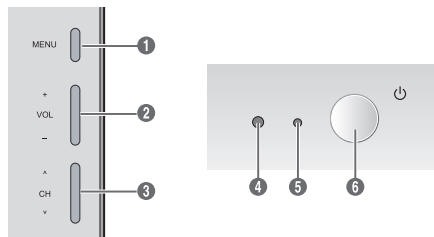





- 1 On-screen menu display
- 2 Volume adjustment
- 3 Channel selection
- 4 Remote control sensor
- 5 Standby indicator
- 6 Power on/off

- ◆ The 2 and 3 buttons also have the same function as the ◀/▶/▲/▼ buttons on the remote control.
- ◆ If the remote control no longer works or you have misplaced it, you can use the controls on the panel of the television.

Connection Panel (depending on the model)

➤ The product color and shape may vary depending on the model.

    Rear Jack

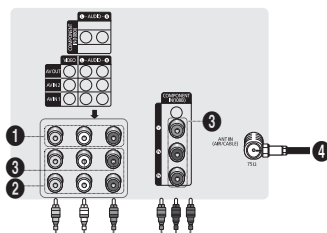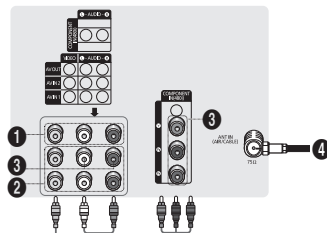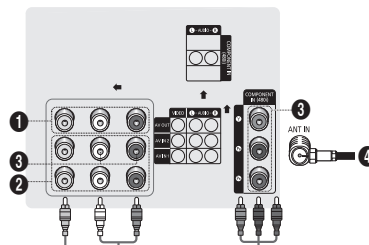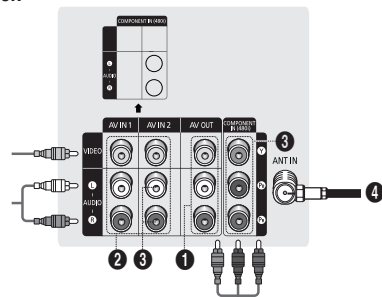

➤ Whenever you connect an audio or video system to your television, ensure that all elements are switched off.
Please be sure to match the color coded input terminals and cable jacks.

1 Audio/Video Output Jacks

Connect to the audio/video input jacks of a recording VCR.

2 Audio/Video Input Jacks

Connect to the audio/video output jacks of VCRs, DVD players and similar devices.

3 Component Video Input Jacks (Y, Pb, Pr)

Connect to the Component video outputs of a DVD 480i video signal input is available.

 
When using the Component Video input, connect audio jacks to "AV IN 2 (AUDIO-L/R)".

➤ The availability of 480i video signal input depends on the model you have bought.

4 ANT IN

Connect to an antenna or to a cable TV system.

Side Jack

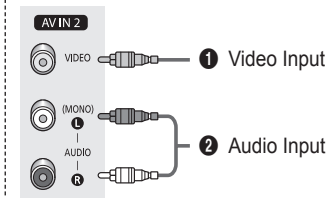

➤ Please be sure to match the color coded input terminals and cable jacks.
When both the side and rear jacks (AV IN 2) are connected to external equipment, the side receives priority.

1 Video Input Jack

Connect a video signal from a camcorder or video game.

2 Audio Input Jacks

Connect audio signals from a camcorder or video game.




AA68-03973K-00

continued...

Remote Control (depending on the model)

 - Operation of remote control may be affected by bright artificial light near to the TV.

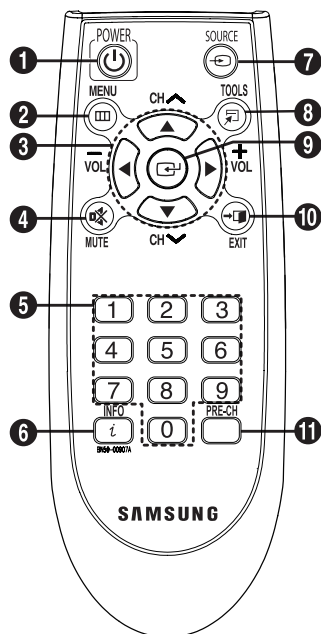

4 MUTE

Used to switch the sound off or sound half temporarily. To turn the sound back on, press the **MUTE**, **VOL+** or **VOL-** button.

5 Numeric buttons

Used to select channels directly.

6 INFO

Used to view the channel information and setting status you selected.

7 SOURCE

Used to display all of the available video sources.

8 TOOLS (depending on the model)

You can check the following selection by pressing Tools button.

1. Sleep Timer(Used to select a preset time interval for automatic turn off.)

2. Picture Mode

Used to select the picture effect.

3. Sound Mode

Used to select the sound effect.

4. MTS(Multi-channel Television Sound)

Press to choose "Stereo" or "Mono" or"

SAP"

5. Turbo Plus

Used to select the Turbo Plus option.

6. Equalizer

Used to select the Equalizer option.

7. R.SURF

Press to automatically return to a preferred channel after a user preset time delay.

8. EasyView

Used to display **Channel Grouping**, **Channel Minimizer**, **Channel Scheduler**, **Music Mode**, **Half Mute** menu.

9 ENTER

While using the on-screen menus, press the **ENTER** button to activate (or change) a particular item.

10 EXIT

Used to exit from any display or return to normal viewing.

11 PRE-CH

Used to switch repeatedly between the last two channels displayed.

Turning the TV On and Off

Press the **POWER** button on the remote control. You can also use the button on the TV.

- Caution: One pole switch is totally not off(one line still live) if power cord is not unplugged.

Viewing the Menus

- 1 Press the **MENU** button.
The main menu is displayed on the screen. Its left side has five icons: **Input**, **Picture**, **Sound**, **Channel**, and **Setup**.
- 2 Press the **▲** or **▼** button to select one of the icons. Press the **ENTER** button to access the icon's sub-menu.
- 3 Press the **▲** or **▼** button to move to items in the menu. Press the **ENTER** button to enter items in the menu.
- 4 Press the **▲/▼/◀/▶** button to change the selected items. Press the **MENU** button to return to the previous menu.
- 5 Press the **EXIT** button to exit from the menu.

1 POWER

Used to switch the TV on and off.

2 MENU

Used to display the on-screen menu or return to the previous menu.

3 ▲/▼/◀/▶

Used to control the cursor in the menu.

CH ▲, CH ▼

Used to display the next or previous stored channel

VOL +, VOL -

 
Used to increase or decrease the volume.

Installing Batteries

Remove the cover. Install two AAA size batteries, then replace the cover.

When the remote control does not operate normally, check that the "+" and "-" ends of the batteries are inserted correctly or the batteries are drained.

- Do not mix battery types, i.e. alkaline and manganese.

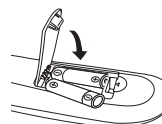


Setup - Plug & Play (depending on the model)

When the TV is initially powered on, several basic customer settings proceed automatically and subsequently. The following settings are available.


- 1 Press the **POWER** button on the remote control.

 The message "Start Plug & Play" is displayed. It flickers for a little while and then Language menu is automatically displayed.



- 2 Press the **▲** or **▼** button to select the language, then press the **ENTER** button. The message "Check antenna input" is displayed.

 ➤ If any language is not selected, the language menu will disappear about 30 seconds later.




- 3 Make sure that the antenna is connected to the TV.


Press the **ENTER** button, then the "Auto Program" is displayed.



 
- 4 Press the **ENTER** button to select "Start". The TV will begin memorizing all of the available channels. Press the **ENTER** button to stop.

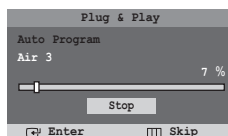

 - 5 After all available channels are stored, the "Clock set" is displayed. Press the **ENTER** button. Press the **◀** or **▶** button to move to the hour or minute. Set the clock by pressing the **▲** or **▼** button.



 - 6 When you have finished, press the **MENU** button. The "Enjoy your watching." is displayed and then the channel which has been stored will be activated.




➤ Plug & Play feature doesn't work in the AV and component mode.

Re-setting the Plug & Play

Method:

 MENU → **▲/▼** (Setup) → **ENTER** → **▲/▼** (Plug & Play) → **ENTER**

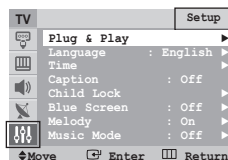


Input - Source List

◆ Source List

You can switch between viewing signal from connected equipment, such as a VCR, DVD, set-top box, and the TV source (broadcast or cable).

 - Press the **SOURCE** button on the remote control repeatedly to select the desired signal source.
- To return to the TV mode, press the **SOURCE** button on the remote control.

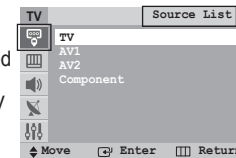

continued...

 
Channel - Memorizing the Channels

Your TV can memorize and store all of the available channels for both air and cable channels. After the available channels are memorized, use the **CH** \wedge and **CH** \vee buttons to scan through the channels.

This eliminates the need to change channels by entering the channel digits. There are three steps for memorizing channels: "Air/Cable", "Auto Program" and "Add/Delete".

◆ Air/Cable

Before your TV can begin memorizing the available channels, you must specify the type of signal source that is connected to the TV (i.e., an antenna or a cable system). Select "Air" or "Cable" by pressing the $\blacktriangle/\blacktriangledown$ button.

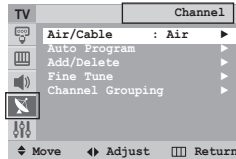

◆ Auto Program

 
All available channels are automatically stored in memory when channels are selected by the direct tuning function.

Press the **ENTER** button at any time to interrupt the memorization process.



◆ Add/Delete

You can add or delete a channel to display the channels you want only. To use the "Add/Delete" function, first run Auto Program. Select "Deleted" or "Added" by pressing the **ENTER** button.

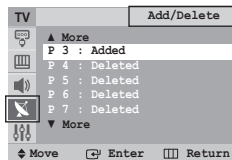


Channel - Fine Tune

If the reception is clear, you do not have to fine-tune the channel, as this is done automatically during the search and store operation. If however the signal is weak or distorted, you may have to fine-tune the channel manually.

Adjust the fine tuning by pressing the \blacktriangleleft or \blacktriangleright button.

To store the fine tuning setting in the TV's memory, press the **ENTER** button.

 To reset the fine tuning to "0", select "Reset" by pressing the \blacktriangle or \blacktriangledown button, then press the **ENTER** button.



Channel - Channel Grouping

You can choose your category and find your desired channel in a few seconds. You can save a channel under the following categories: Movie, Music, News, Sport, and User.

 
Method:

$\blacktriangle/\blacktriangledown$: Used to select a Programme.

$\blacktriangleleft/\blacktriangleright$: Used to select the desired channel group.

$\blacktriangle/\blacktriangledown$: Used to confirm the new choice.

➤ You can press **TOOLS** button and enter **EasyView** to use this function.

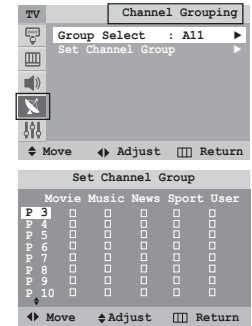

R.SURF Feature (depending on the model)

This feature allows you to set the TV to return to a particular channel after a certain amount of time. For example, you may be watching a channel when commercials start. You can press **TOOLS** button to enter **R.SURF** to set the **R.SURF** to "5 minutes", then switch channels. After minutes, the TV will return to the original channel.

 
Press the **ENTER** button on the remote control to set the timer in thirty second intervals, up to five minutes.



Setup - Time

◆ Clock

Setting the clock is necessary in order to use the various timer features of the TV. Also, you can check the time while watching the TV. (Just press the **INFO** button.)

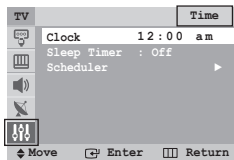


◆ Sleep Timer

You can select a time period of between 30 and 180 minutes after which the TV automatically switches to standby mode.

- You can also press the **TOOLS** button and enter **Sleep Timer** to use this function.

◆ Scheduler

 You can set the scheduler to make the TV return to a particular channel at a pre-set time.

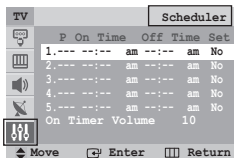

- Upto 5 Programmes can be scheduled at a time.
- If the Clock is not set in the Time menu, a pop-up warning will flash if user tries to enter **Scheduler**.
- You can also use the **TOOLS** button and enter **EazyView** to use this function.

◆ On Timer Volume

The preferred volume can be set for when the timer automatically turns on the TV.

Method:

- ◀/▶ : Move to the programme hour or minute.
- ▲/▼ : Used to set programme hour or minute.
- ▲/▼ → **ENTER** : Set option of YES/NO to activate/deactivate the operation.

 
- ☛ You must set the clock first.

☛ Auto Power Off

When you set the timer "On", the TV will eventually turn off, if no controls are operated for 3 hours after the TV was turned on by timer. This function is only available in timer "On" mode and prevents overheating, which may occur if a TV is on for too long.

Setup - Caption (depending on the model)

Your TV decodes and displays the closed captions that are broadcast with certain TV shows. These captions are usually subtitles for the hearing impaired or foreign-language translations. All VCRs record the closed caption signal from TV programs, so home-recorded video tapes also provide closed captions. Most pre-recorded commercial video tapes provide closed captions as well. Check for the closed caption symbol in your TV schedule and on the tape's packaging: **CC**.

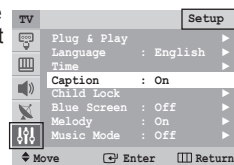

◆ Caption: On/Off

 
You can activate or deactivate the "Caption" function.

- ☛ Misspellings and unusual characters sometimes occur during closed caption transmissions, especially those of live events. There may be a small delay before captions appear when you change channels. These are not malfunctions of the TV.

Setup - Language / Blue Screen / Melody / Music Mode

◆ Language

When you start using the TV for the first time, you must select the language which will be used for displaying menus and indications.

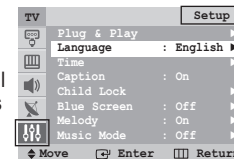

◆ Blue Screen

If no signal is being received or the signal is very weak, a blue screen automatically replaces the noisy picture background. If you wish to continue viewing the poor picture, you must set the "Blue Screen" to "Off".

◆ Melody

You can hear melody sound when the TV is powered on or off.

◆ Music Mode

You can listen to the music/audio without video or visual distraction.

- When Music Mode is selected, only music is audible and no picture is visible. You can see music mode icon (🎵) on screen.
- You can also use the **TOOLS** button and enter **EazyView** to use this function.

Method:

ENTER : On/Off

Setup - Child Lock (depending on the model)

This feature allows you to prevent unauthorized users, such as children, from watching unsuitable programs by muting out video and audio. Child Lock cannot be released using front panel buttons. Only remote control can release the Child Lock setting, so keep the remote control away from children.

 
◆ Child Lock: On/Off

You can activate or deactivate the **Child Lock** function.

◆ Channel: Channel number to be locked.

◆ Lock: When press the **ENTER** button, the Locked is displayed.

- If any channel is locked, you can not access to the "Channel" and "Child Lock" menu by using the control buttons on the TV panel (the "Not Available" is displayed in the "Child Lock" menu). You can access by using the remote control only.

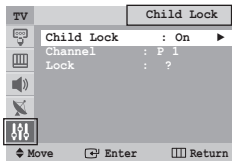


Picture - Mode

◆ Mode: Dynamic / Standard / Movie / Custom

You can select the type of picture which best corresponds to your viewing requirements.

 - You can select these options simply by pressing the **TOOLS** button on the remote control and enter **Picture Mode**.

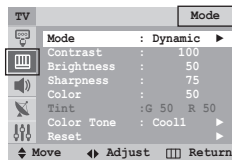

◆ Contrast / Brightness / Sharpness / Color / Tint (NTSC only)

The TV has several settings which allow you to control the picture quality.

◆ Color Tone: Cool2 / Cool1 / Normal / Warm1 / Warm2

You can change the color of the entire screen according to your preference.

◆ Reset

You can return to the factory defaults. The reset function is set for each mode (**Dynamic**, **Standard**, **Movie**, or **Custom**).

 
Picture - Digital NR/DNle Jr (depending on the model)

◆ Digital NR

If the signal received by the television is weak, you can activate this feature to reduce any static and ghosting that may appear on the screen.

◆ DNle Jr


This feature bring you more detailed image with detail enhancement, contrast enhancement and white enhancement. New image compensation algorithm gives brighter, clearer, much detailed image to you. DNle Jr technology will fit every signals into your eyes.

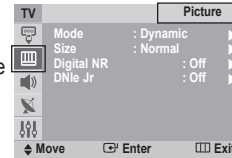

Picture - Size (depending on the model)

◆ Size: Normal/Zoom

 You can select the picture size which best corresponds to your viewing requirements. It is variable depending on the model.

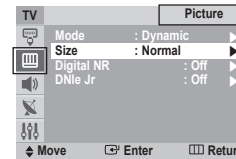

Method:

 
◀/▶: Select Normal or Zoom.

Sound - Mode / Equalizer / MTS / Auto Volume / Pseudo Stereo / Turbo Plus / Half Mute

◆ Mode: Standard/Music/ Movie/Speech/Custom

You can select the type of special sound effect to be used when watching a given broadcast.

- You can select these options simply by pressing the **TOOLS** button on the remote control and enter **Sound Mode**.

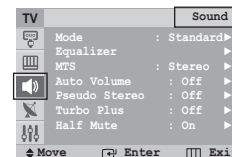

◆ Equalizer

The television has several settings which allow you to control the sound quality.

- If you make any changes to these settings, the sound mode is automatically switched to Custom.
- You can select these options simply by pressing the **TOOLS** button on the remote control and enter **Equalizer**.

◆ MTS (Multi-channel Television Sound)

Depending on the particular program being broadcast, you can listen to Mono, Stereo, or SAP.

- Press the **TOOLS** button on the remote control and enter **MTS** to select "Stereo", "Mono", or "SAP" (Secondary Audio Program).

◆ Auto Volume

Each broadcasting station has its own signal conditions, and so it is not easy to adjust the volume every time the channel is changed. This feature lets you automatically adjust the volume of the desired channel by lowering the sound output when the modulation signal is high or by raising the sound output when the modulation signal is low.

◆ Pseudo Stereo

This feature converts a monaural sound signal into two identical left and right channels. Once the "Pseudo Stereo" is set to "On" or "Off", the setting applies to the sound effects such as "Standard", "Music", "Movie" and "Speech".

◆ Turbo Plus

This feature suitably emphasizes both higher and lower bands of sound (and includes other effects). You can enjoy more magnificent and dynamic sound when watching music, movie, or other channels.

- You can change the options simply by pressing the **TOOLS** button and enter **Turbo Plus**.

◆ Half Mute

You can reduce volume to half and control volume even in the mute mode.

- When you click the "mute" button once to activate Half Mute see half mute icon (⏸) on screen, twice for Full Mute see full mute icon (⏻) on screen.
- You can also use the **TOOLS** button and enter **EasyView** to use this function.

Method:

 
ENTER : On/Off

continued...

TOOLS (depending on the model)

Use to quickly select frequently used functions.

- You can press **TOOLS** button and check the **Sleep Timer/Picture Mode/Sound Mode/MTS/Turbo Plus/Equalizer/ R.SURF/ Easy View** function by **▲/▼** button.
The detail information please refer to page2

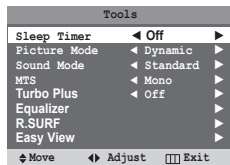

Easy View - Channel Minimizer

Easy view is a combination of Video&Audio features that make TV viewing much easier.

Channel minimizer is a feature that offers freedom in the number of channels that you can watch at any time!

 
To add a Channel

You can go to your favorite channel you wish to add to Channel Minimizer.

Method:

▲ : Add the present channel to Channel Minimizer.

- Repeat the process to add upto six channels.



To delete a Channel

You can delete the channel in Channel Minimizer by pressing ▼ button.

- You cannot display Channel Minimizer menu by pressing ▲ button when six channels are added.
➤ Channel Minimizer is always activated hence you don't need to press Easy view button.

Troubleshooting

If the TV seems to have a problem, first try this list of possible problems and solutions. If none of these troubleshooting tips apply, then call your nearest Samsung authorized service center.

Poor picture.

- ◆ Try another channel.
- ◆ Adjust the antenna.
- ◆ Check all wire connections.

Poor sound quality.

- ◆ Try another channel.
- ◆ Adjust the antenna.

No picture or sound.

- ◆ Try another channel.
- ◆ Press the **SOURCE** button.
- ◆ Make sure the TV is plugged in.
- ◆ Check the antenna connections.
- ◆ Make sure the **MUTE** button is off.

No color, wrong colors or tints.

- ◆ Make sure the program is broadcast in color.
- ◆ Adjust the picture settings.

Picture rolls vertically.

- ◆ Adjust the antenna.
- ◆ Check all wire connections.
- ◆ If you are using a VCR, check the tracking.

The TV operates erratically.

- ◆ Unplug the TV for 30 seconds, then try operating it again.

Your remote control does not operate your TV.

- ◆ Make sure the remote has batteries.
- ◆ Check that the "+" and "-" ends of the batteries are inserted correctly.
- ◆ Check that the batteries are drained.

The TV won't turn on.

- ◆ Make sure the wall outlet is working.
- ◆ Make sure the TV is plugged in.
- ◆ Make sure the remote has batteries.

continued...

Remote control malfunctions

- ◆ Replace the remote control batteries.
- ◆ Clean the upper edge of the remote control (transmission window).
- ◆ Check that the "+" and "-" ends of the batteries are inserted correctly.
- ◆ Check that the batteries are drained.

A still image may cause color distortion, but with normal sound(white or highlight image).

- ◆ Switch to other channels with moving image, and check if the color turns normal after 5 minutes.
- ◆ Turn off the TV, and turn it on after 30 minutes to check the color.

Cleaning and Maintaining Your TV

Please follow the guidelines to get the maximum performance from your TV.

Placement

- ◆ Do not Place the TV near extremely hot, cold, humid or dusty places.
- ◆ Do not place TV near appliances with electric motor that create magnetic fields, such as vacuum cleaners.
- ◆ Keep the ventilation openings clear; do not place TV on a soft surface, such as cloth or paper.
- ◆ Place the TV in a vertical position only.

Liquids

- ◆ Do not handle liquids near or on the TV. Liquid that spills into it can cause serious damage.

Cabinet

- ◆ Never open the cabinet or touch the parts inside.
- ◆ Wipe your TV with a clean, dry cloth. Never use water, cleaning fluids, wax or chemicals.
- ◆ Do not put heavy objects on top of the cabinet.

Temperature

- ◆ If your TV suddenly move from a cold to a warm place, unplug the power cord and allow at least two hours for moisture that may have formed inside the unit to dry completely.

Using Your TV in Another Country

- ◆ If you plan to take the TV with you to a foreign country please be aware of a different television systems that are in use around the world. A TV designed for one system may not work properly with another system due to differences in the TV channel frequencies.
- Note: Main plug serves as the disconnect

OSD Map

* : It is variable depending on the model.



Input

- Source List
- TV / AV1 / AV2 / Component



Picture

- Mode
 - Dynamic / Standard / Movie / Custom
 - Contrast
 - Brightness
 - Sharpness
 - Color
 - Tint (NTSC only)
 - Color Tone – Cool2 / Cool1 / Normal / Warm1 / Warm2
 - Reset
- Size
- Digital NR
- DNIe Jr *
- Normal / Zoom
- Off / On
- Off / On



Sound

- Mode
- Equalizer
- MTS
- Auto Volume
- Pseudo Stereo
- Turbo Plus
- Half Mute
- Standard / Music / Movie / Speech / Custom
- Mono / Stereo / SAP
- Off / On
- Off / On
- Off / On



Channel

- Air/Cable
- Auto Program
- Add/Delete
- Fine Tune
- Channel Grouping
- Air / Cable
- Added/Deleted



Setup

- Plug & Play
- Language *
- Time
- English / Español / Português / Français
- Clock
- Sleep Timer
- Scheduler
- Off / On
- Child Lock
- Channel
- Lock
- Off / On
- Off / On
- Off / On
- Caption
- Child Lock
- Blue Screen
- Melody
- Music Mode

Important Warranty Information Regarding Television Format Viewing

Standard screen format televisions (4:3, the aspect ratio of the screen width to height) are primarily designed to view standard format full-motion video. The images displayed on them should primarily be in the standard 4:3 ratio format and constantly moving. Displaying stationary graphics and images on screen, such as the dark top and bottom letterbox bars (wide screen pictures), should be limited to no more than 15% of the total television viewing per week.

Wide screen format televisions (16:9, the aspect ratio of the screen width to height) are primarily designed to view wide screen format full-motion video. The images displayed on them should primarily be in the wide screen 16:9 ratio format, or expanded to fill the screen if your model offers this feature, and constantly moving. Displaying stationary graphics and images on screen, such as the dark side-bars on non-expanded standard format television video and programming, should be limited to no more than 15% of the total television viewing per week.

Additionally, viewing other stationary images and text such as stock market reports, video game displays, station logos, web sites or computer graphics and patterns, should be limited as described above for all televisions. ***Displaying any stationary images that exceed the above guidelines can cause uneven aging of picture tubes (CRTs) that leave subtle, but permanent burned-in ghost images in the television picture. To avoid this, vary the programming and images, and primarily display full screen moving images, not stationary patterns or dark bars.*** On television models that offer picture sizing features, use these controls to view the different formats as a full screen picture.

Be careful in the selection and duration of television formats used for viewing. Uneven CRT aging as a result of format selection and use, as well as other burned-in images, is not covered by your Samsung limited warranty.

Viewing screen size: 508mm