 




OWNER'S INSTRUCTIONS

AW05M0YEA AW05M0YBA/BB

Window-type Room Air Conditioner (Cool)

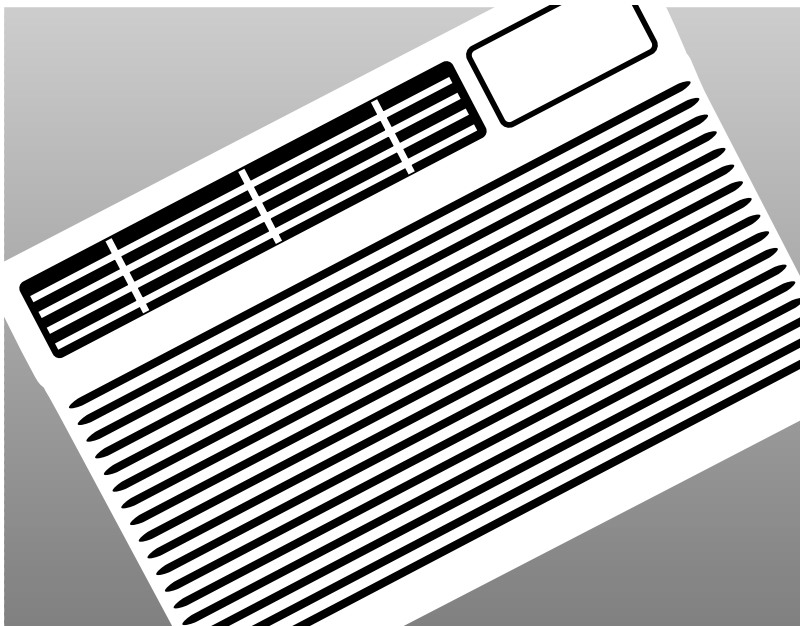

Safety Precautions

The following safety precautions must be taken when installing and using your air conditioner.

-
- 1** The air conditioner must be plugged into its own specific power source, which must be installed in compliance with national wiring, earthing and safety regulations.

Depending on national regulations and your specific installation, you may need to install:

- ◆ A circuit breaker

For further information on electrical requirements, contact a professional electrician.

This device must be installed according to the national electrical rules.

-
- 2** Make sure that the unit is correctly ventilated at all times; do NOT place clothing or other materials over it.

-
- 3** NEVER spill liquids of any kind into the unit. Should this happen, unplug the unit and contact your installation specialist.

-
- 4** Do NOT insert anything between the air outlet blades, as it may damage the inner fan and you may be hurt. Keep children away from the unit.

-
- 5** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

-
- 6** Do NOT attempt to repair the unit yourself. If it is damaged in any way, contact:
- ◆ An authorized service center
 - ◆ The dealer from whom you purchased the air conditioner.

-
- 7** Do NOT place any blocking objects in front of the unit.

-
- 8** If the remote control will not be used for a long time, remove the batteries.

-
- 9** Before throwing out the device, it is necessary to pull back the battery cells and get rid of them safely.

-
- 10** The appliance is not intended for use by young children or infirm person without supervision; young children should be supervised to ensure that they do not play with the appliance.

-
- 11** Do NOT use an extension cord with this product.



CAUTION

The manufacturer does not assume responsibility for accidents or injury caused by an incorrectly installed air conditioner. If you are unsure about installation, contact an installation specialist.

Contents

◆ PREPARING YOUR AIR CONDITIONER	
■ Safety Precautions	2
■ Description of Each Component	4
■ Getting Started	5
◆ OPERATING YOUR AIR CONDITIONER	
■ Cooling Your Room	6
■ Switching the Air Conditioner Off	7
■ Adjusting the Air Flow Direction Horizontally	7
◆ RECOMMENDATIONS FOR USE	
■ Power Failure	8
■ Temperature and Humidity Ranges	8
■ Cleaning Your Air Conditioner	9
■ Solving Common Problems	10
■ Technical Specifications	11
◆ INSTALLATION	

  Description of Each Component

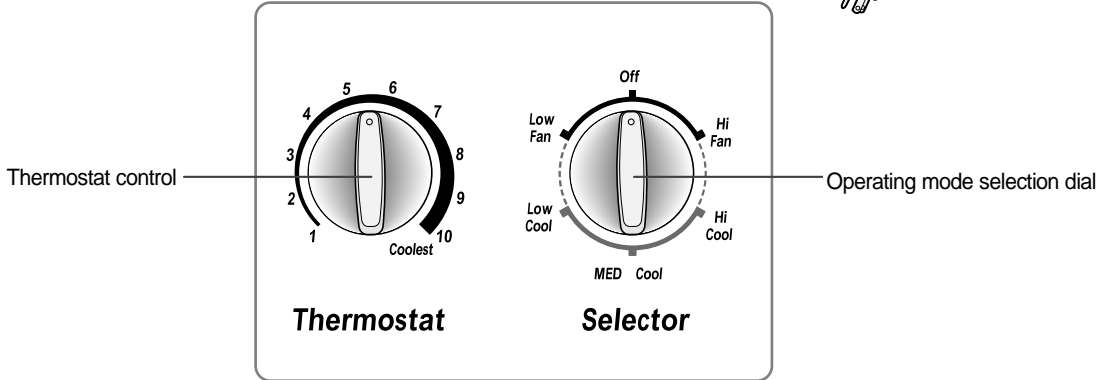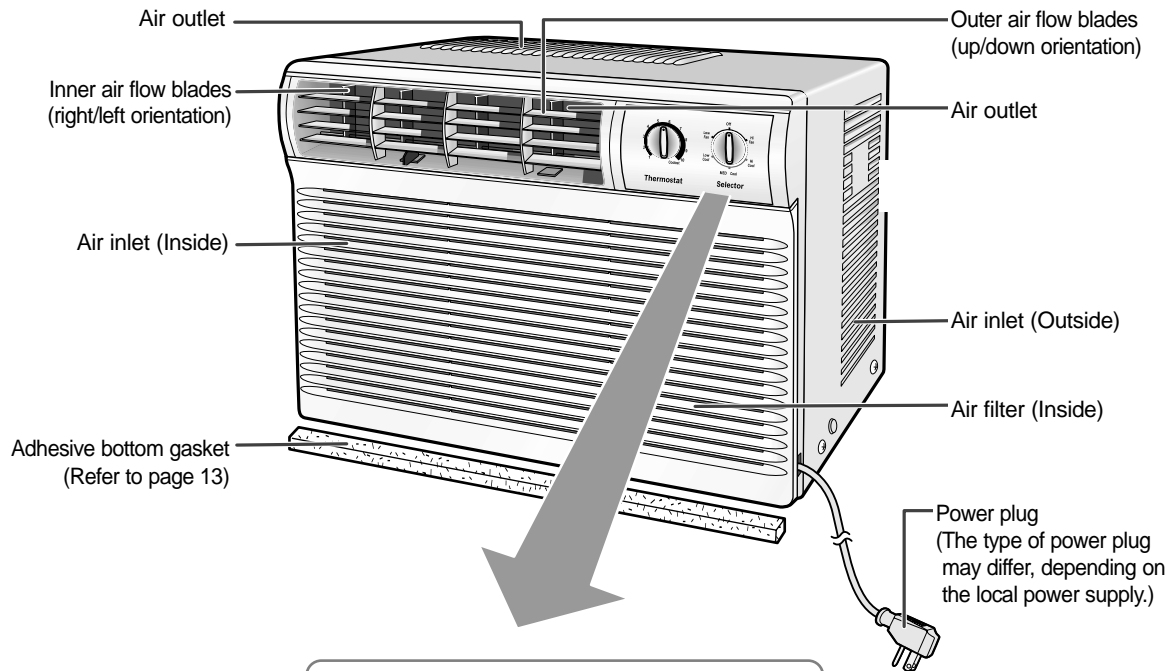


Getting Started

You have just purchased a Samsung window-type room air conditioner which should be installed following your Owner's Instructions.

Your Owner's Instructions contain much valuable information on using your air conditioner. Please take the time to read them as they will help you take full advantage of the unit's features.


 
The illustrations in the step-by-step procedures use four different symbols:

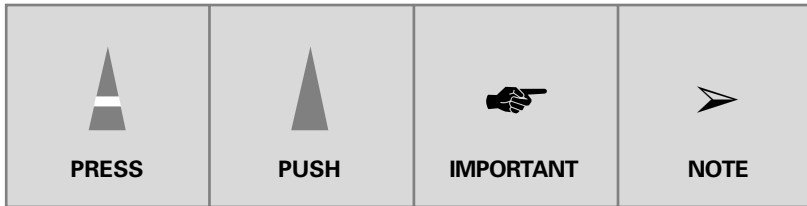

Cooling Your Room

You must select the COOL mode if you wish to adjust the:

  - ◆ **Cooling temperature**
- ◆ **Fan speed when Cooling**

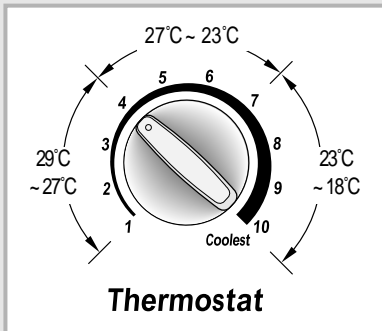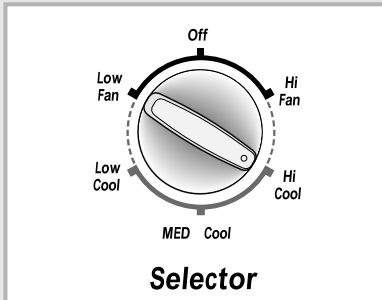

- 1 Turn the operating mode selection dial and set it to "HI COOL", "MED COOL" or "LOW COOL".

Result: ◆ The air conditioner starts up in cool mode.

➤ ◆ You can change modes at any time.

- 2 Turn the THERMOSTAT control to the desired position.

Possible temperatures: Can be set between 18°C and 29°C.

Result: The air conditioner starts cooling, if the room temperature is higher than the selected temperature.

 
- 3 To control the direction of the air flow, refer to page 9.

Switching the Air Conditioner Off

You can switch the air conditioner off whenever you want.

- 1 To switch the unit off, simply set the operating mode selection dial to the "Off" position.


Result: The air conditioner stops operating.

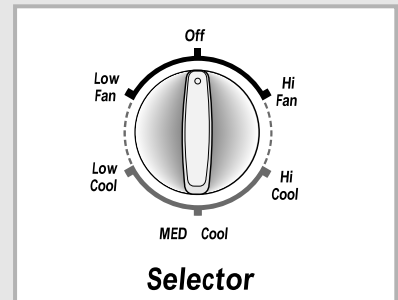

Adjusting the Air Flow Direction Horizontally

Depending on the position of the unit in your room, you can adjust the orientation of the inner air flow blades on the unit.

 Adjust the air flow blades to the desired position by pushing them side to side.

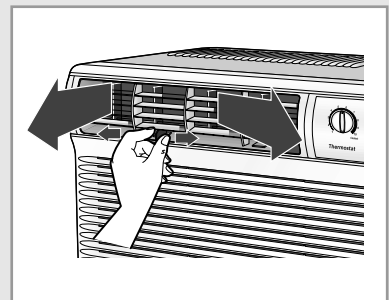

Power Failure

If a power failure occurs, the air conditioner is switched off. When the power comes back on, the air conditioner starts up again automatically.

Temperature and Humidity Ranges

The following table indicates the temperature and humidity ranges within which the air conditioner can be used.

Mode	Indoor Temperature	Outdoor Temperature	Indoor Humidity
Cooling	21°C to 32°C approx.	21°C to 43°C approx.	80% or less

If the air conditioner is used at...	Then...
Higher temperature	The automatic protection feature may be triggered and the air conditioner stopped.
Lower temperature	A water leakage or some other malfunction may happen if the heat exchanger freezes.
Higher humidity levels	Water may condense on and drip from the surface of the unit if it is used for long periods.

Cleaning Your Air Conditioner

Be sure to clean the air filter periodically to maintain the air conditioner in the best condition for a long period of time.

 **When cleaning the air conditioner, turn it off and pull out the power plug.**

 
 
 
1 Open the front grille by pulling the tabs on both sides of the grille. Then lift it up slightly to open the front grille completely.

2 Grab the tabs on the filter and pull it up and out.

3 Remove all dust on the air filter with a vacuum cleaner or brush.

4 When you have finished, insert the air filter back into its original position.

5 Wipe the surface of the unit with a neutral detergent and then wipe it again with dry cloth.
(Be sure not to use benzene, solvent or other chemical products.)

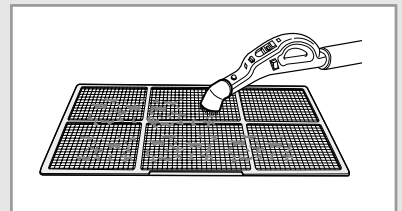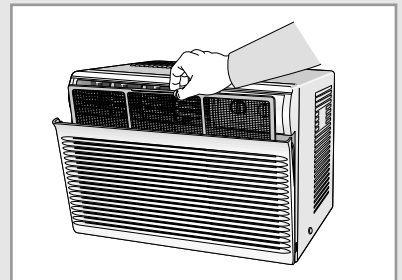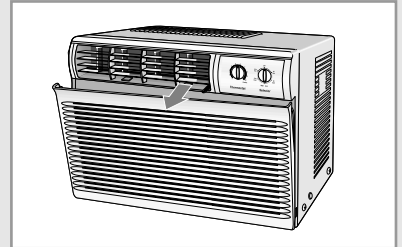

➤	If you...	Then...
	Will not be using the air conditioner for a long period of time	<ul style="list-style-type: none">◆ Set the fan going for a few hours to dry the inside of the air conditioner thoroughly.◆ Switch the air conditioner off and unplug it from the wall socket.◆ Clean the filter and outer surfaces.
	Have not used the air conditioner for a long period of time	Set the fan going for a few hours to dry the inside of the air conditioner thoroughly.

Solving Common Problems

Before contacting an authorized service center, perform the following simple checks. They may save you the time and the expense of an unnecessary call.

Problem	Explanation / Solution
The air conditioner does not operate at all.	<ul style="list-style-type: none">◆ Check for a power failure.◆ Check the voltage. (See the technical specifications)◆ Check the power plug for disconnection.◆ Check to see whether the operating mode selection dial is placed in the "Off" position. (Set it to the desired position.)◆ Check to see whether the room temperature is too low. - Refer to page 10 for details about temperature condition.
The air comes out smoothly, but cooling is not effective.	<ul style="list-style-type: none">◆ Set the THERMOSTAT control to the desired position. - When the number on the THERMOSTAT control is high, the room temperature may be too warm.◆ Check to see whether there is any open window or leakage of cool air to the outside. - Close the window, and fill the gap.◆ Check to see whether there is any obstacle adversely affecting the flow of the air inside and outside the room. - Remove the obstacle or change the position of the air conditioner.◆ Check to see whether the air filter is clogged with dust or contaminated with foreign substances. - Clean the air filter.◆ Check to see whether there is any direct sunlight facing the air conditioner. - Block the sunlight with a sunshade.◆ Check to see whether there is any electric device generating heat. - Do not use the air conditioner together with any heating device.
Odors are permeating the room during air conditioning.	<ul style="list-style-type: none">◆ Ventilate the room.

Technical Specifications

Design and specifications are subject to change without notice.

Model	Power Supply
AW05M0YEA	220-240V~,50Hz
AW05M0YBA/BB	220(230)V~,60Hz

- *Max current is measured according to IEC standard for safety and current is measured according to ISO standard for energy efficiency. This condition belongs to the above model.*

Installation

 
Before installation, be sure to check the installation area or the air conditioner, and drain hose.

Checkpoints prior to installation


- 1 Check the cabinet and front grille of the unit for any harmful defects such as scratches.
- 2 Be sure to check the power supply.
- Refer to the specifications on the label attached to the unit.

Installation Conditions

- 1 As the unit is heavy, the wall or window of the installation area should have sufficient strength and durability for operation of the air conditioner, and for prevention of any vibration or noise.
If it is weak, reinforcement work should be performed separately.
- 2 It is advisable to install the air conditioner in the north or west side to prevent the effect of direct sunlight.
When installing it in the south or east side due to unavoidable circumstances, it is advisable to install the sunshade to prevent the direct sunlight.
In this case, take care not to cause any hindrance to the flow of outside air.
- 3 When installing the air conditioner, be sure to obtain sufficient space on the rear side of the unit for smooth flow of air.
When operating the air conditioner in closed areas such as inner building with cooling operation, and result in trouble with the unit.
See the illustration below.

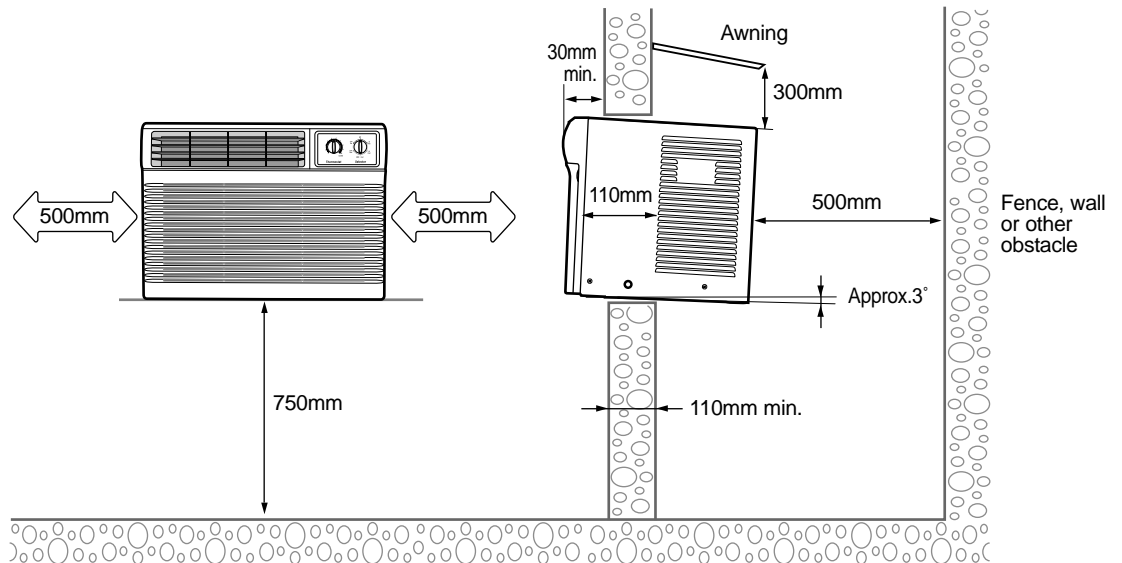


 
◆ If the wall is greater than 110mm thick, cut the wall back on a 45° angle if possible.

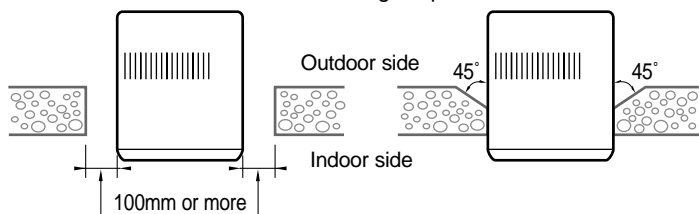

Install an adhesive bottom gasket to prevent air and insects from getting into the room.

1 Strip an adhesive bottom gasket off.

  2 Seal an adhesive bottom gasket to the bottom of the air conditioner.

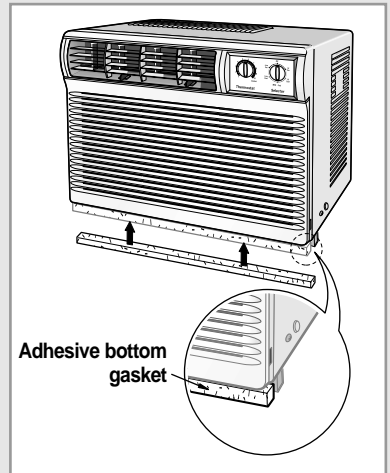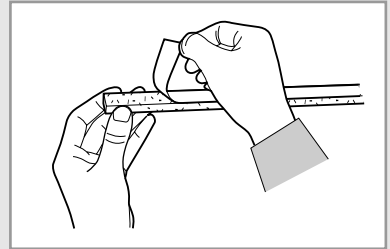

THIS AIR CONDITIONER IS MANUFACTURED BY:

