

SAMSUNG

**OWNER'S INSTRUCTIONS
MANUAL DE INSTRUCCIONES
MANUEL D'UTILISATION**


Indoor Unit	Outdoor Unit
APC4082E	UPC4082E
APC4082EC	UPC4082EC

ENGLISH

ESPAÑOL

FRANÇAIS

Split-type Packged Air Conditioner (Cool)
Grieta de Colmado de Aire Acondicionado (Refrigeración)
Climatiseur Monobloc de Type Split (Refroidissement)

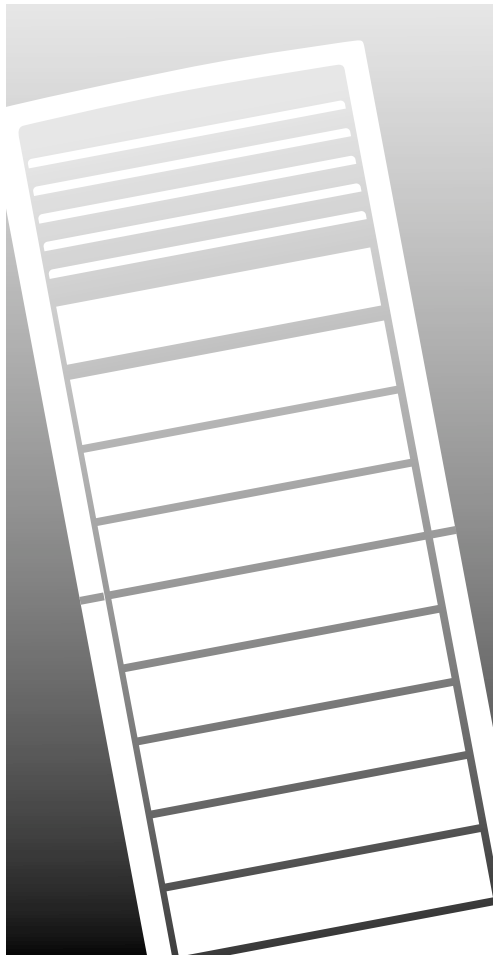

Safety Precautions



WARNING

- ◆ If the power supply cord of this air conditioner is damaged, it must be replaced by the manufacturer or its authorized service personnel only in order to avoid a safety hazard.



DANGER

- ◆ Do not attempt to install this air conditioner by yourself.
- ◆ This unit contains no user-serviceable parts. Always consult authorized service personnel for repairs.
- ◆ When moving, consult authorized service personnel for disconnection and installation of the unit.
- ◆ Do not become over-exposed to cold air by staying in the direct path of the airflow of the air conditioner for extended periods of time.
- ◆ Do not insert fingers or objects into the outlet port or intake grilles.
- ◆ Do not start and stop air conditioner operation by disconnecting the power supply cord and so on.
- ◆ Take care not to damage the power supply cord.
- ◆ In the event of a malfunction (burning smell, etc.), immediately stop operation, turn off the electrical breaker, and consult authorized service personnel.



CAUTION


- ◆ Provide occasional ventilation during use.
- ◆ Do not direct air flow at fireplaces or heating apparatus.
- ◆ Do not climb on, or place objects on, the air conditioner.
- ◆ Do not hang objects from the indoor unit.
- ◆ Do not set flower vases or water containers on top of air conditioners.
- ◆ Do not expose the air conditioner directly to water.
- ◆ Do not operate the air conditioner with wet hands.
- ◆ Do not pull power supply cord.
- ◆ Turn off power source when not using the unit for extended periods.
- ◆ Check the condition of the installation stand for damage.
- ◆ Do not place animals or plants in the direct path of the air flow.
- ◆ Do not drink the water drained from the air conditioner.
- ◆ Do not use in applications involving the storage of foods, plants or animals, precision equipment, or art works.
- ◆ Do not apply any heavy pressure to radiator fins.
- ◆ Operate only with air filters installed.
- ◆ Do not block or cover the intake grille and outlet port.
- ◆ Ensure that any electronic equipment is at least one metre away from either the indoor or outdoor units.
- ◆ Avoid installing the air conditioner near a fireplace or other heating apparatus.
- ◆ When installing the indoor and outdoor unit, take precautions to prevent access to infants.
- ◆ Do not use inflammable gases near the air conditioner.

Contents


◆	PREPARING YOUR AIR CONDITIONER	
■	Safety Precautions	2
■	View of the Unit	4
■	Remote Control-Buttons and Display	6
■	Digital Telecommunicator	7
■	Getting Start	8
■	Inserting the Remote Control Batteries	9
■	Operating Preparation	9
◆	OPERATING YOUR AIR CONDITIONER	
■	Cooling Your Room	10
■	Selecting the Automatic Operating Mode	11
■	Changing the Room Temperature Quickly	12
■	Cooling Distant Place	13
■	Removing Excess Humidity	14
■	Airing Your Room	15
■	Selecting Energy Saving Mode	16
■	Cleaning Air in Your Room	17
■	Adjusting the Air Flow Direction Vertically	18
■	Adjusting the Air Flow Direction Horizontally	19
◆	PROGRAMMING YOUR AIR CONDITIONER	
■	Setting the On Timer	20
■	Setting the Off Timer	21
■	Setting the Sleep Timer	22
■	Using Digital Telecommunicator	23
◆	RECOMMENDATIONS FOR USE	
■	Operating Recommendations	25
■	Temperature and Humidity Ranges	25
■	Cleaning Your Air Conditioner	26
■	Solving Common Problems	28
◆	TECHNICAL SPECIFICATIONS	

View of the Unit


Indoor Unit

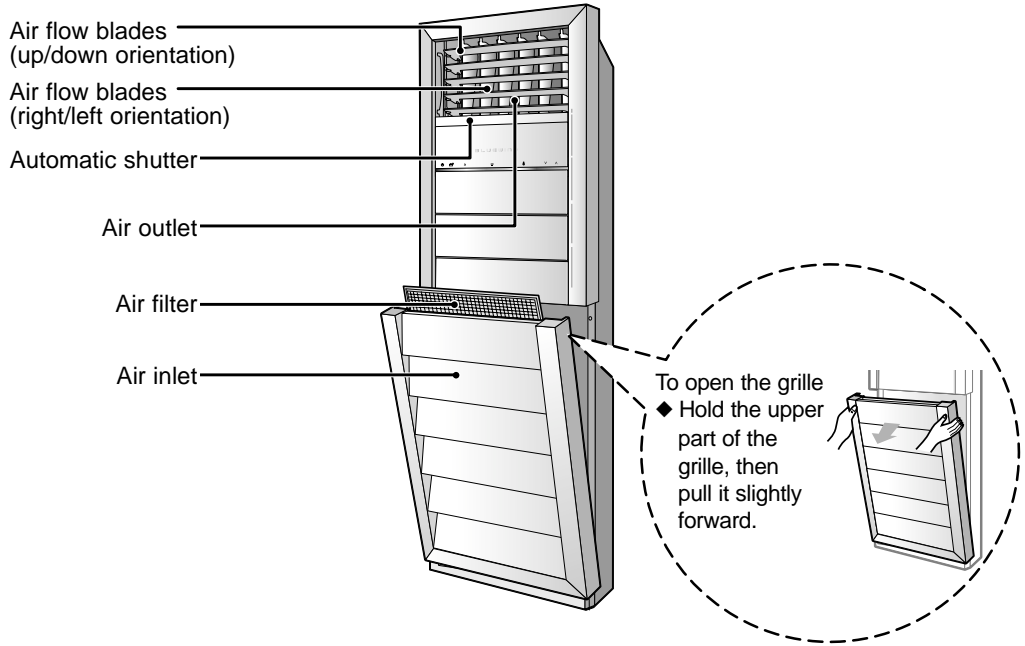


Control Panel You can operate the air conditioner with the control panel when you do not wish to or cannot operate the air conditioner with the remote control.

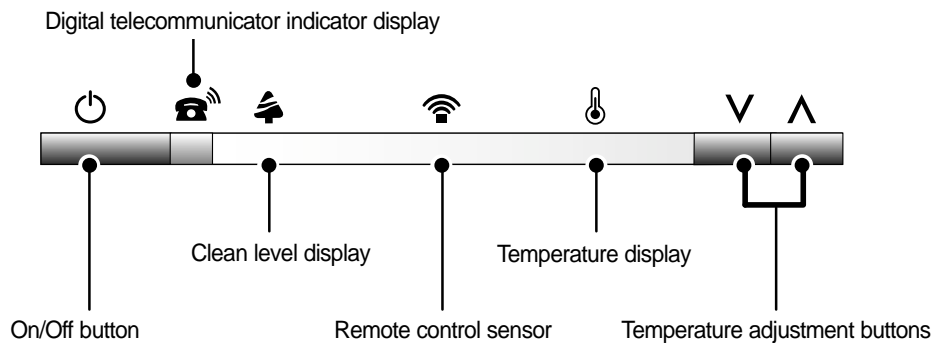

Outdoor Unit

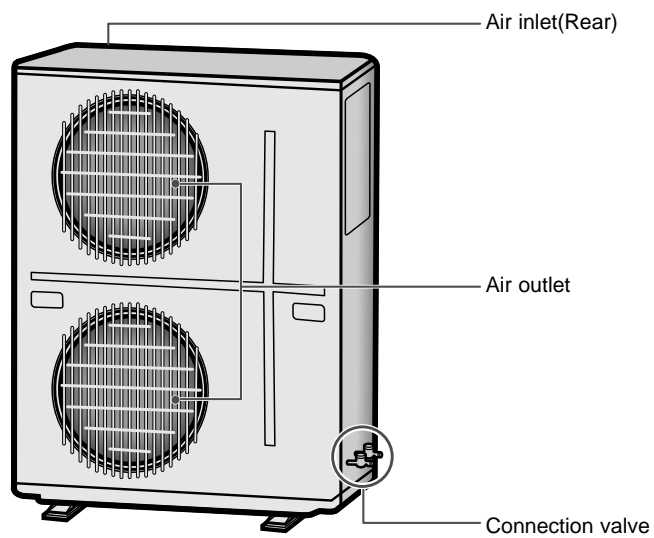


Remote Control - Buttons and Display

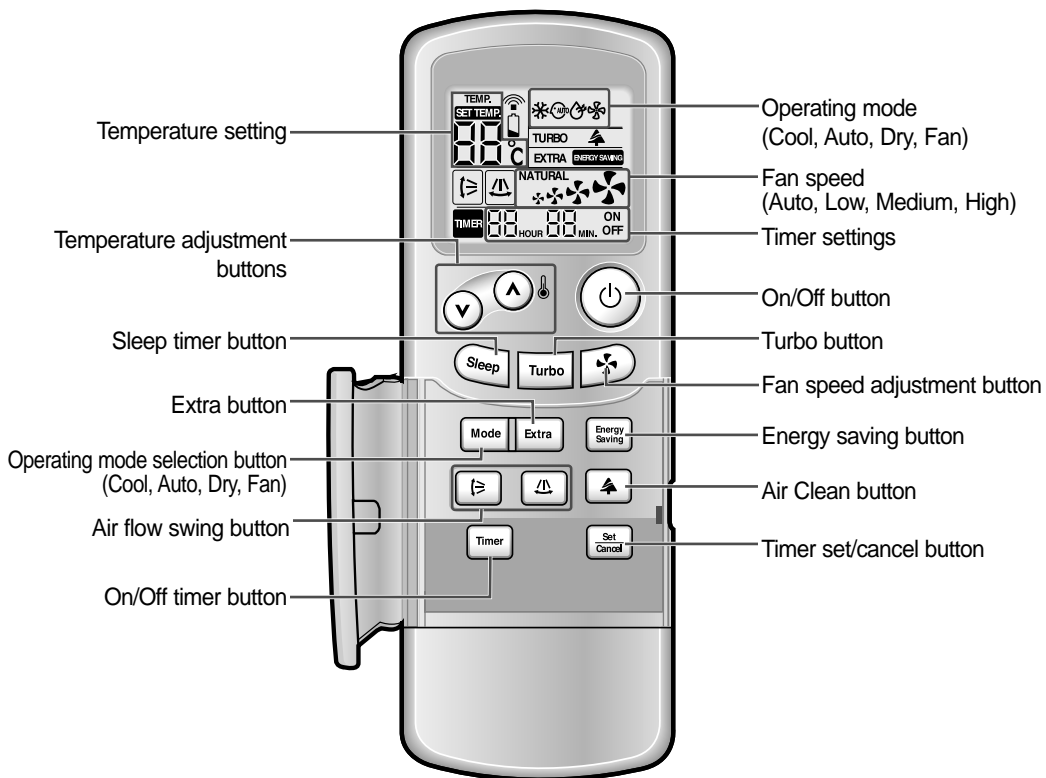


Digital Telecommunicator

Front

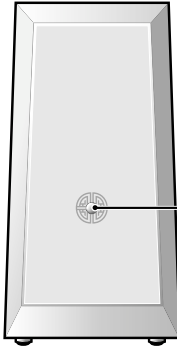


Operating indicator
◆ It flashes when the ARS is operating.

Back

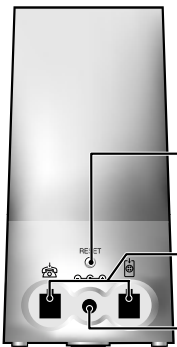

Reset button
◆ Press if the digital telecommunicator does not operate normally.
Telephone cable port
Power cable port

Connection

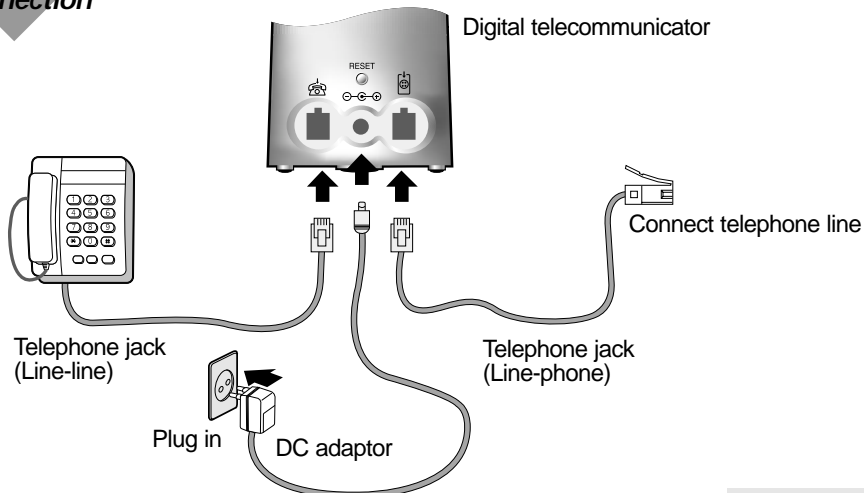

Getting Start

You have just purchased a split-type packaged air conditioner and it has been installed by your installation specialist.

You Owner's Instructions contain much valuable information on using your air conditioner. Please take the time to read them as they will help you take full advantage of unit's features.


The booklet is organized as follows.

- ◆ *The following figures are shown on pages from 4 to 7:*
 - *Indoor and outdoor units*
 - *Remote control (buttons and display)*
 - *Digital telecommunicator*

They will help you find the buttons and understand the symbols displayed.

- ◆ *In the main part of the document, you will find a series of step-by-step procedures for each function available.*

The illustrations in the step-by-step procedures use three different symbols:

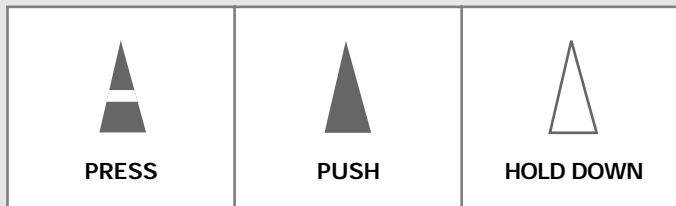

Inserting the Remote Control Batteries

You must insert or replace the remote control batteries when :

- ◆ *You purchase the air conditioner*
- ◆ *The remote control does not work correctly*

Note



- ◆ Use two AAA, LR03 1.5V batteries.
- ◆ Do not use old batteries or different kinds of batteries together.
- ◆ Batteries may be completely discharged after 12 months, even if they have not actually been used.

1 Push the battery cover on the rear of the remote control with your thumb in the direction of the arrow and remove it.

2 Insert the two batteries, taking care to respect the polarities :

- ◆ + on the battery with + on the remote control.
- ◆ - on the battery with - on the remote control.

3 Close the cover by sliding it back until it clicks into place.

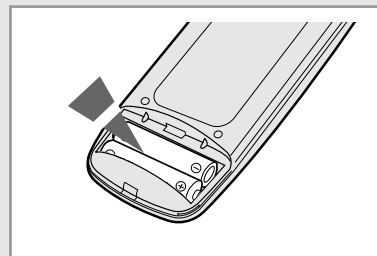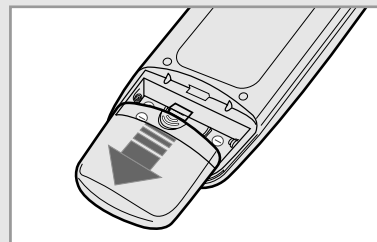


Operating Preparation

Look around the indoor and outdoor unit. Confirm if any obstacles that may prevent the air flow are present near the air conditioner.

1 Turn the power switch on.

IMPORTANT To operate the unit, the power switch is fitted to the wall must be set to ON.

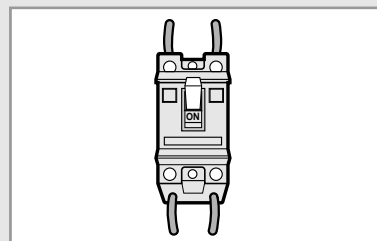

Cooling Your Room

You must select the Cool mode if you wish to adjust the :

- ◆ Cooling temperature
- ◆ Fan speed when cooling




- 1 If necessary, press the  button.


Result: ◆ The air conditioner starts up in the Cool mode.
◆ The indoor unit beeps.


IMPORTANT The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

- ◆ Plugged in
- ◆ Stopped

It will start up normally after three minutes.

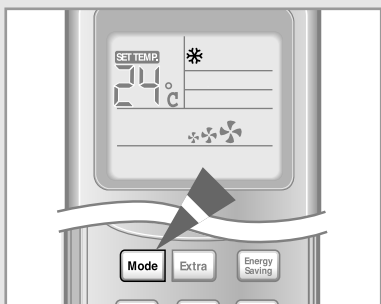





- 2 If the * is not displayed at the top of the remote control, press the  button on the remote control one or more times until it appears.

Result: ◆ The indoor unit beeps each time you press the  button.
◆ The air conditioner runs in the Cool mode.


Note You can change modes at any time.




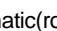


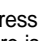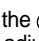




- 3 To adjust the temperature, press the   button one or more times until the required temperature is displayed. Possible temperatures are between 18°C and 30°C inclusive.

Result: ◆ Each time you press the   button:
- The temperature is adjusted by 1°C.
- The indoor unit beeps.
◆ The air conditioner starts cooling, provided that the room temperature is higher than the selected temperature.



- 4 Select the fan speed by pressing the  button one or more times until the required setting is displayed :

- ◆  Automatic (rotated :  →  →  → )
- ◆  Low
- ◆  Medium
- ◆  High

Result: ◆ Each time you press the  button, the indoor unit beeps.

- 5 To control the direction of the air flow, refer to pages 18~19.

Selecting the Automatic Operating Mode

You can start the air conditioner in the Automatic mode from your remote control. In the Automatic mode, the temperature and the optimum fan speed is selected automatically.

- 1 If necessary, press the  button.



Result:

- ◆ The air conditioner starts up in the Cool mode.
- ◆ The indoor unit beeps.


IMPORTANT The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

- ◆ Plugged in
- ◆ Stopped

It will start up normally after three minutes.


- 2 If the  is not displayed at the top of the remote control, press the  button on the remote control one or more times until it appears.


Result:

- ◆ The indoor unit beeps each time you press the  button.
- ◆ The air conditioner runs in the Auto mode.

Note You can change modes at any time.

- 3 To control the direction of the air flow, refer to pages 18-19.

Note To adjust the temperature, press the  button. The temperature will be adjusted and the mode will be changed with the Cool mode.

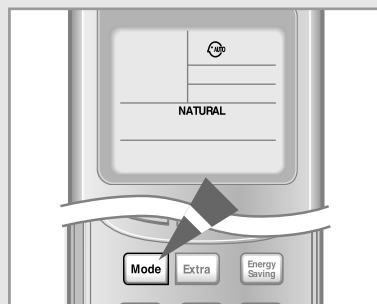

Changing the Room Temperature Quickly

The Turbo function is used to cool your room as quickly as possible.

Example : *You have just come home and find that the room is very hot.
You wish to cool it down as quickly as possible.*

The Turbo function operates for 30 minutes with the maximum setting before returning automatically to the mode and temperature previously selected.



- 1 If necessary, press the  button.


Result:

- ◆ The air conditioner starts up in the Cool mode.
- ◆ The indoor unit beeps.

IMPORTANT The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:


- ◆ Plugged in
- ◆ Stopped


It will start up normally after three minutes.

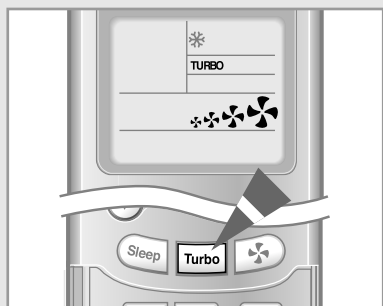

- 2 Press the  button.

Result:

- ◆ The air conditioner cools the room as quickly as possible.
- ◆ The temperature and fan settings are adjusted automatically.
- ◆ After 30 minutes, the air conditioner is reset automatically to the previous mode, temperature and fan setting. But, if you press the  button in the Dry or the Fan mode that is changed with the Auto mode automatically.

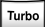- 3 If you wish to stop the Turbo function before the end of 30-minute period, press the  button again.

Result:

- ◆ The air conditioner is reset automatically to the previous mode, temperature and fan settings.

- 4 To control the direction of the air flow, refer to pages 18~19.

Cooling Distant Place

The Extra function is used to cool your room as far as possible. In the Extra mode, the up/down orientation of air flow and fan speed are selected automatically.


- 1 If necessary, press the  button.

Result:


- ◆ The air conditioner starts up in the Cool mode.
- ◆ The indoor unit beeps.


IMPORTANT The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

- ◆ Plugged in
 - ◆ Stopped
- It will start up normally after three minutes.


- 2 Press the  button.

Result:

- ◆ The air conditioner cools the room as far as possible.
- ◆ The fan settings are adjusted automatically.
- ◆ If you press the  button in the Dry or the Fan mode that is changed with the Auto mode automatically.

- 3 To adjust the temperature, press the  button one or more times until the required temperature is displayed. Possible temperatures are between 18°C and 30°C inclusive.

Result:


- ◆ Each time you press the  button:
 - The temperature is adjusted by 1°C.
 - The indoor unit beeps.

- 4 If you wish to stop the Extra function, press the  button again.

Result:


- ◆ The air conditioner is reset automatically to the previous mode, temperature and fan settings.

- 5 To control the direction of the air flow horizontally, refer to pages 18~19.

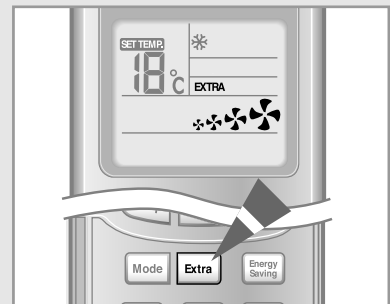

Removing Excess Humidity

If the atmosphere in your room is very humid or damp, you can remove excess humidity without lowering the room temperature too much.

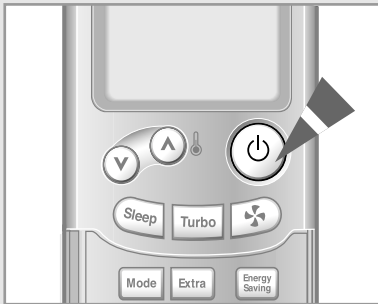

- 1 If necessary, press the  button.


Result:



- ◆ The air conditioner starts up in the Cool mode.
- ◆ The indoor unit beeps.

IMPORTANT The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:


- ◆ Plugged in
- ◆ Stopped

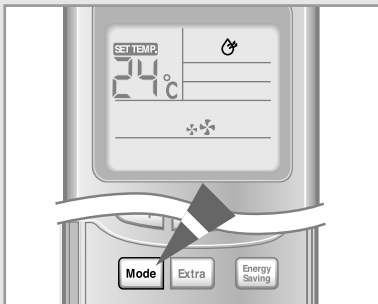It will start up normally after three minutes.




- 2 If the  is not displayed at the top of the remote control, press the  button on the remote control one or more times until it appears.

Result:


- ◆ The indoor unit beeps each time you press the  button.
- ◆ The air conditioner runs in the Dry mode.

Note You can change modes at any time.



- 3 To adjust the temperature, press the  button one or more times until the required temperature is displayed. Possible temperatures are between 18°C and 30°C inclusive.

Result:

- ◆ Each time you press the  button:
 - The temperature is adjusted by 1°C.
 - The indoor unit beeps.
- ◆ The air conditioner starts removing the excess humidity; the quantity of air is adjusted automatically.

- 4 To control the direction of the air flow, refer to pages 18~19.

Airing Your Room

If the atmosphere in your room is stale, you can air the room using the Fan feature.



- 1 If necessary, press the  button.


Result: ◆ The air conditioner starts up in the Cool mode.
◆ The indoor unit beeps.

IMPORTANT The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:


- ◆ Plugged in
- ◆ Stopped

It will start up normally after three minutes.


- 2 If the  is not displayed at the top of the remote control, press the  button on the remote control one or more times until it appears.

Result: ◆ The indoor unit beeps each time you press the  button.
◆ The air conditioner runs in the Fan mode.


Note You can change modes at any time.


- 3 Select the fan speed by pressing the  button one or more times until the required setting is displayed:

- ◆ Low
- ◆◆ Medium
- ◆◆◆ High



Result: ◆ Each time you press the  button, the indoor unit beeps.

- 4 To control the direction of the air flow, refer to pages 18~19.

Note To adjust the temperature, press the  button. The temperature will be adjusted and the mode will be changed with the Cool mode.

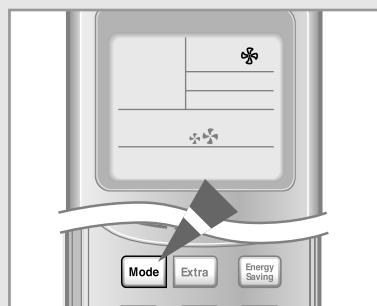

Selecting Energy Saving Mode

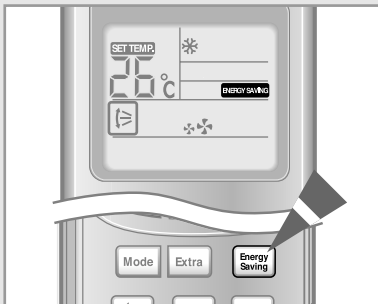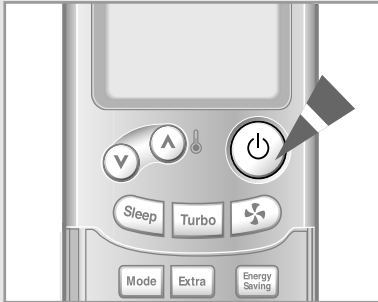

If you wish to save energy when using your air conditioner, select the Energy saving mode with the Energy saving button.

- 1 If necessary, press the  button.


Result:

- ◆ The air conditioner starts up in the Cool mode.
- ◆ The indoor unit beeps.

IMPORTANT The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:


- ◆ Plugged in
- ◆ Stopped

It will start up normally after three minutes.

- 2 Press the  button.

Result:

- ◆ The indoor unit beeps.
- ◆ The air conditioner runs in the Energy saving mode.
 - If the selected temperature is lower than 25°C, it will slowly rise up to 26°C.
 - If the selected temperature is higher than 26°C, it will slowly rise.
- ◆ The outer air flow blade moves up and down.

- 3 To adjust the temperature, press the  button one or more times until the required temperature is displayed. Possible temperatures are between 26°C and 30°C inclusive.

Note You can adjust the temperature only when the air conditioner runs in the Cool mode.

- 4 To select the fan speed, press the  button one or more times until the required setting is displayed.

Note You can adjust the fan speed only when the air conditioner runs in the Cool mode.


- 5 To control the direction of the air flow, refer to pages 18~19.


Cleaning Air in Your Room


You can clean air in your room with an electric dust collector and a deodorizing filter in the indoor unit which remove minute dust particles or odors. Since it is an additional function, you can select it in any mode, even when the air conditioner is turned off.

- 1 Press the  button.

Result: ◆ The air conditioner starts up in the Clean mode.
◆ The indoor unit beeps.

Note If you press the  button during unit off, it will turn on automatically and clean air in the Fan mode.

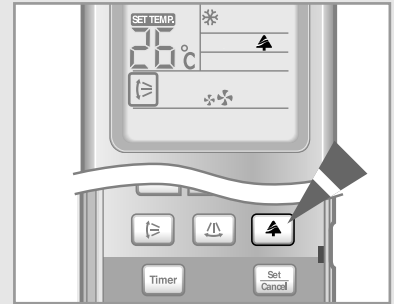


- 2 If you wish to stop the Cleaning function, press the  button again.


Result: ◆ The air conditioner is reset automatically to the previous mode, temperature and fan settings.

- 3 To control the direction of the air flow, refer to pages 18~19.

Adjusting the Air Flow Direction Vertically

Depending on the position of the indoor unit your room, you can adjust the position of the outer air flow blade on the upper part of the unit, thus increasing the efficiency of the air conditioner.

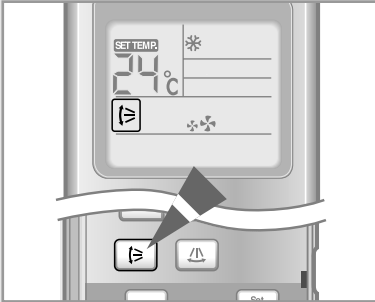


- 1 Press the  button.

Result: ◆ The outer blade moves up and down.


RECOMMENDATION

When...	Adjust the blade to face...
Cooling	Upwards.


- 2 To stop the blade moving up and down, press the  button again.


Adjusting the Air Flow Direction Horizontally

There are two sets of air flow blades. Just as the outer air flow blade can be adjusted vertically, the inner blade can be adjusted horizontally.





1 Press the  button.

Result: ◆ The inner blade moves right and left.

2 To stop the blade moving right and left, press the  button again.

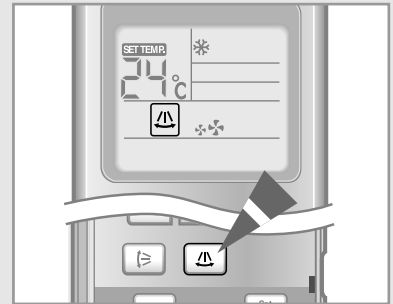

Setting the On Timer

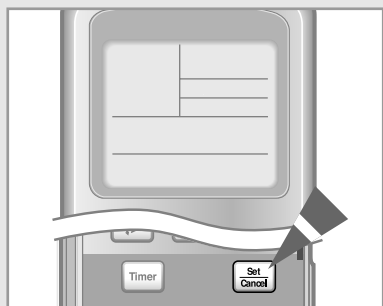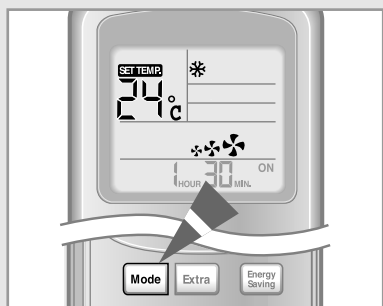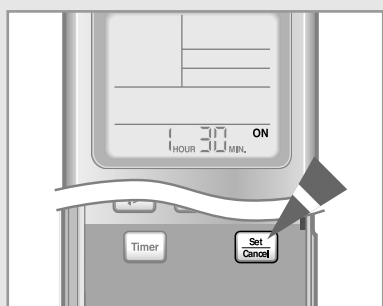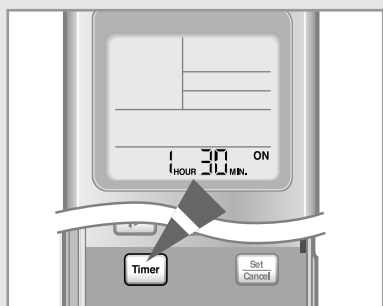


The On timer enables you to switch on the air conditioner automatically after a given period of time. You can set the period of time from 30 minutes to 24 hours.

- 1 Make sure that the air conditioner is turned off. The On timer can be set only when the air conditioner is turned off.
- 2 Press the **Timer** button one or more times until the required time is displayed. Possible time is between 0.5 hour and 24 hours inclusive.
Result:
 - ◆ Each time you press the **Timer** button :
 - The time is adjusted by 0.5 hour or 1 hour.
 - The indoor unit beeps.
- 3 Press the **Set/Cancel** button to complete the setting.
Result:
 - ◆ The remaining time is displayed.
 - ◆ Blinking of the On timer indicator stops.
 - ◆ The air conditioner will turn on automatically when the counter displayed on the remote control reaches the setting time as disappearing the On timer setting.
- 4 To select an operating mode in advance, press the **Mode** button until the desired mode is displayed at the top of the remote control.
Result:
 - ◆ The air conditioner will run in the selected mode when it is turned on.




To Cancel the On Timer



Press the **Set/Cancel** button again.

Note If you want to turn on the air conditioner before the timer reaches the setting time, press the  button.

Setting the Off Timer


The Off timer enables you to switch off the air conditioner automatically after a given period of time. You can set the period of time from 30 minutes to 24 hours.


- 1 Make sure that the air conditioner is turned on. The Off timer can be set only when the air conditioner is turned on.
- 2 Press the  button one or more times until the required time is displayed. Possible time is between 0.5 hour and 24 hours inclusive.
Result:
 - ◆ Each time you press the  button :
 - The time is adjusted by 0.5 hour or 1 hour.
 - The indoor unit beeps.
- 3 Press the  button to complete the setting.
Result:
 - ◆ The remaining time is displayed.
 - ◆ Blinking of the Off timer indicator stops.
 - ◆ The air conditioner will turn off automatically when the counter displayed on the remote control reaches the setting time as disappearing the Off timer setting.

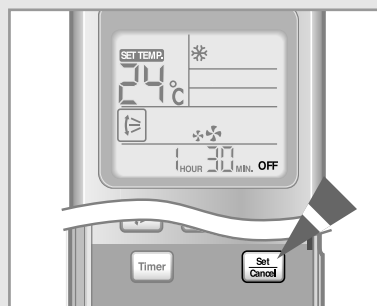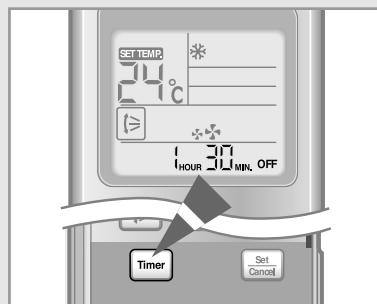


To Cancel the Off Timer

Press the  button again.


Note If you want to turn off the air conditioner before the timer reaches the setting time, press the  button.

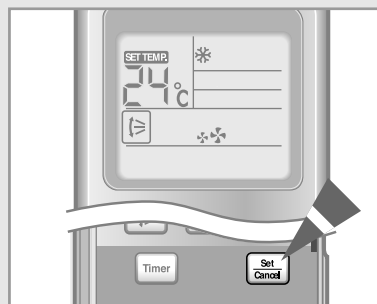


Setting the Sleep Timer

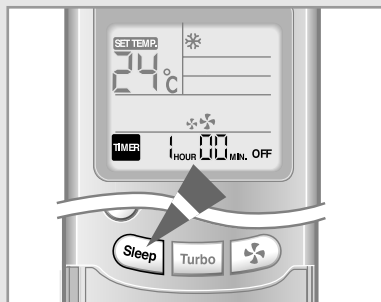

The Sleep timer can be used to switch the air conditioner off automatically after maximum five hours.


- 1 Press the  button one or more times until the required time is displayed. Possible time is between 0.5 hour and 5 hours inclusive.


Result:

- ◆ Each time you press the  button :
 - The time is adjusted by 0.5 hour or 1 hour.
 - The indoor unit beeps.
- ◆ The air conditioner will turn off automatically when the counter displayed on the remote control reaches the setting time as disappearing the Sleep timer setting.

To Cancel the Sleep Timer



Press the  button one or more times until the Sleep timer setting disappears.

Note If you want to turn off the air conditioner before the timer reaches the setting time, press the  button.

Using Digital Telecommunicator

You can control the air conditioner by phone after entering a password. Cooling and changing the password are available, and you can also turn the air conditioner off.

- 1 Call a place where the digital telecommunicator is installed.

Result: ◆ The ARS is operated after 6 bells.

Note If the digital telecommunicator is connected to an answering machine, press * within 10 seconds after beginning a message. Otherwise, ARS will not operate.

- 2 Enter the password.

Note The original password is 00. To change the password, refer to page 24.

- 3 Select a function according to the instructions through a phone.

Note The air conditioner cools your room for 60 minutes. After an hour, the air conditioner turns off automatically.


- 4 Hang up the phone.

Caution

- ◆ If you want to use the digital telecommunicator outdoors, make sure the outdoor unit is not covered and the place where the unit installed is well ventilated before going out.
- ◆ The digital telecommunicator does not work if it is connected with the key phones normally used in the office.

To Change the Password

- 1 Call a place where the digital telecommunicator is installed.
- 2 Select changing the password by pressing number 8.
- 3 Enter a new password.
- 4 Hang up the phone after confirmation.

- Note**
- ◆ If you forget the password, press the RESET button on the back of the digital telecommunicator. The password is set to 00.
 - ◆ When the air conditioner is not controlled by phone after changing a password, follow these instructions:
 1. Turn the air conditioner off and press the  buttons at once on the indoor unit until the unit beeps.
 2. After the indoor unit beeps, press the On/Off button on the indoor unit once within 3 seconds. It will set the password to 00.
 3. Change the password by calling a place where the digital telecommunicator is installed.




Caution

- ◆ Do not lay down the digital telecommunicator or put an obstacles between the indoor unit and the telecommunicator.
- ◆ Distance between the indoor unit and the digital telecommunicator should be less than 10m.
- ◆ Make sure that the power cable is plugged in before going out. If power does not supplied to the digital telecommunicator, you cannot operate the air conditioner by phone.
- ◆ You must turn on the air conditioner and the digital telecommunicator before changing a password.

Operating Recommendations

Here are a few recommendations that you should follow when using your air conditioner.

Topic	Recommendation
Power failure	If a power failure occurs when the air conditioner is operating, the unit is switched off. When the power returns, you must press the  (ON/OFF) button to restart it.

Temperature and Humidity Ranges

The following table indicates the temperature and humidity ranges, within which the air conditioner can be used.

If the air conditioner is used at...	Then...
High temperature	The automatic protection feature may be triggered and the air conditioner stopped.
Low temperature	A water leakage or some other malfunction may happen if the heat exchanger freezes.
High humidity levels	Water may condense on and drip from the surface of the indoor unit if it is used for a long periods.


Mode	Outdoor Temperature	Indoor Temperature	Indoor Humidity
Cooling	21°C to 43°C approx.	18°C to 32°C approx.	80% or less
Drying	18°C to 43°C approx.	18°C to 32°C approx.	-

* *If the cooling operation is used at over 33°C(indoor temperature) then, does not a full capacity.*

Cleaning Your Air Conditioner

To get the best possible use out of your air conditioner, you must clean it regularly to remove the dust that accumulates on the air filter.

IMPORTANT Before cleaning your air conditioner, ensure that you have switched off the breaker for the unit.

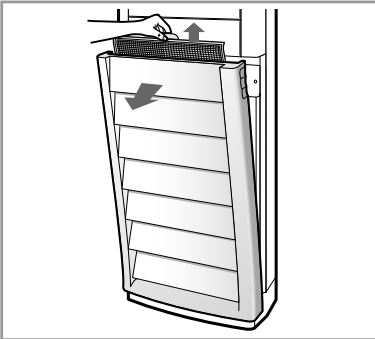


1 Open the front grille, then pull out the air filter.

2 Remove all dust on the air filter with a vacuum cleaner or brush.

3 When you have finished, insert the air filter into the original position and close the front grille.

4 Clean the unit with a damp cloth and mild detergent (do NOT use benzene, solvents or other chemicals).

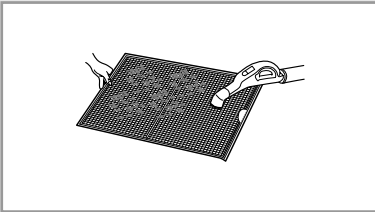

Note If you have not used the air conditioner for a long period of time, set the fan going for three to four hours to dry the inside of the air conditioner thoroughly.

To Clean the Deodorizing Filter



You have to clean the deodorizing filter regularly and the service life of the filter is max. The cleaning cycle of the filter depends on environment of using air conditioner.

1 Open the front grille, then pull out the deodorizing filter.

2 Clean the filter with a vacuum cleaner.

Note Do not put the deodorizing filter in water as it will lose its properties.

3 When you have finished, insert the deodorizing filter into the original position and close the front grille.

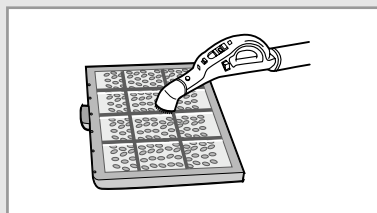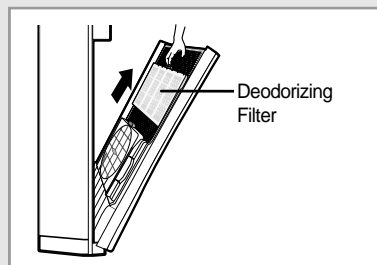

To Clean the Electric Dust Collector

You have to clean the electric dust collector once a month and the cleaning cycle depends on the time during which the air conditioner is used.

1 Open the front grille, then pull out the electric dust collector.



2 Dissolve an alkaline detergent in tepid water, then put the electric dust collector in the water for 30 minutes.

Note

- ◆ Do not handle the detergent with bare hands.
- ◆ Do not place the filter in the water for a long time. It may damage the filter.




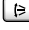


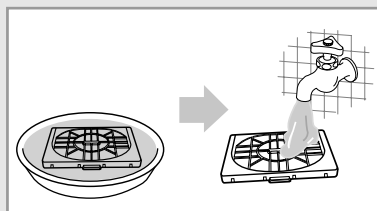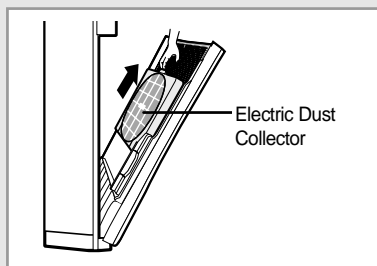3 Clean the electric dust collector with running water.

4 Dry the electric dust collector in the shade, then insert the collector into the original position, close the front grille.



Solving Common Problems

Before contacting the after-sales service, perform the following simple checks. They may save you the time and expense of an unnecessary call.

Problem	Explanation/Solution
The air conditioner does not operate at all	<ul style="list-style-type: none"> ◆ Check that the breaker used for the air conditioner is switched on. ◆ Check that the indoor unit is turned on; if necessary press the  button on the remote control. ◆ Check whether the Timer indicator on the remote control is switched on. If so: <ul style="list-style-type: none"> - Wait until the switch-on time is reached and the air conditioner starts up automatically. - Cancel the timer (see pages 20~22 for further details).
The air conditioner does not operate with the remote control	<ul style="list-style-type: none"> ◆ Check that there are no obstacles between you and the indoor unit. ◆ Check the remote control batteries. ◆ Check that you are close enough to the indoor unit (seven metres/ yards or less).
No beep is heard when you press the  button on the remote control	<ul style="list-style-type: none"> ◆ Check that you are pointing the remote control at the remote control sensor of the indoor unit. ◆ Replace the remote control batteries if necessary.
The air conditioner does not cool	<ul style="list-style-type: none"> ◆ Check that the correct operating mode has been selected (Cool, Auto). ◆ The room temperature may be too low or too high. ◆ Dust may be blocking the air filter guard; refer to pages 26~27 for cleaning instructions. ◆ Check that there is no obstacle in front of the outdoor unit.
The fan speed does not change when you press the  button	<ul style="list-style-type: none"> ◆ Check that the operating mode is set to Cool, or Fan ; in the Auto, Turbo, Extra and Dry mode, the fan speed is controlled automatically.
The air flow direction does not change when you press the  or  button	<ul style="list-style-type: none"> ◆ Check that the air conditioner has been switched on; if necessary, press the  button on the remote control.
The timer is not correctly triggered	<ul style="list-style-type: none"> ◆ Check that the timer has been programmed correctly; see pages 20~22.
Odours are permeated in the room during air conditioning	<ul style="list-style-type: none"> ◆ Air the room.

Technical Specifications

Model	APC4082E/APC4082EC
Power supply	1Ø, 220-240V~, 50Hz
Capacity	40000BTU/h
Power Dissipation	3850W
Current	19.5A

**THIS AIR CONDITIONER IS MANUFACTURED BY:
ESTE AIRE ACONDICIONADO HA SIDO FABRICADO POR:
CE CLIMATISEUR EST FABRIQUE PAR:**



ELECTRONICS