

삼성전자주식회사

94-1



에니콜 A/S 문의

전국 어디서나 **1588-7285**
(처리바로)

제품 모델명, 고장상태, 연락처를 정확히 알려 주시면 고객 여러분의
궁금증을 언제나 친절하게 상담 빠른 서비스를 제공합니다.

02-3451-3366

051-550-3366

0391-652-3366

0652-240-3366

053-430-3366

062-250-3366

042-480-3366

064-742-3366



고객상담실

02-541-3000, 080-022-3000

051-861-3000, 080-051-3000



PC통신

PC ()

GO SEC(, , ,)



Internet

인터넷 홈페이지

<http://www.sec.co.kr>

<http://www.anycall.co.kr>



AS ? 가

가

GH68-01016A
2000/02.Rev.1.0

SAMSUNG



WORLDWIDE OLYMPIC PARTNER

Anycall Digital



삼성애니콜디지털

SCH-PO2

(for Foreigner)
see page 122

Anycall Land
www.anycall.co.kr

사용설명서의 모든 내용은 애니콜 랜드의
'Manual Bank'에서도 보실 수 있습니다.

•

•

•

가



 
각부의 명칭과 기능

버튼 설명

메뉴	
이메일	/ (94)
확인	/ (75)
이동	/
지움	/
전화	/
다시	(20)
0	(70)
다시	(64)
다시	(12)
종료	/ (40)
다시	(45)
다시	/
다시	(73)



화면표시부

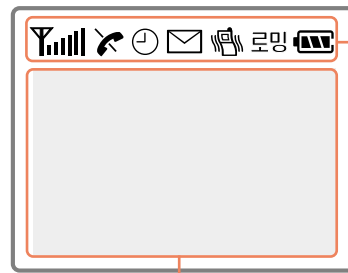

가

?

	/

Signal	
Mute	가
Call	가
Clock	/
Email	
Roaming	
Battery	



차례

기 본 편

.....	5	20
.....	6	21
.....	6	24
.....	7	28
/	9	29
.....	10	31
/	11	33
.....	12	36
.....	13	
,	14	37
.....	15	
(	16	38
.....	17	38
.....	18	
.....	19	

응 용 편





/	40	
.....	41	
.....	42	
.....	43	
.....	44	
/	45	
.....	47	
.....	51	
.....	53	
.....	54	
.....	55	
.....	56	
.....	57	
.....	58	
D-DAY	59	
.....	61	
.....	63	
(	64	
.....	65	
.....	67	
(	69	
.....	70	
.....	71	
.....	72	
.....	73	
.....	75	
.....	76	
DTMF	79	
.....	79	
.....	80	
.....	80	
.....	81	
.....	81	
.....	82	
/	84	
.....	85	
(	86	
.....	87	
.....	88	

부 록


가	91
.....	101
.....	103
.....	104
.....	104
700 / 가	105
PC 가	106
.....	107
?	109
.....	111
가	112
.....	113
.....	116
.....	117
.....	118
.....	120
(for Foreigner)	122



    구성품 확인

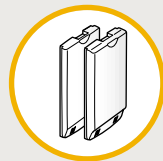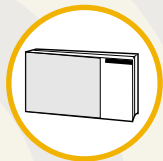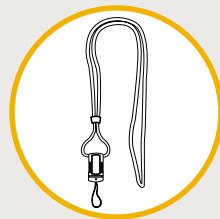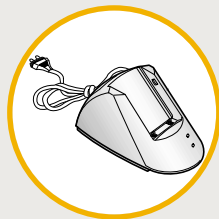

휴대용 걸이(휴대용 목걸이)를 연결하려면

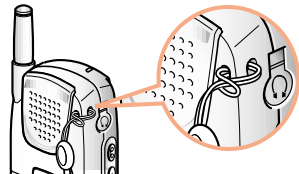 


배터리를 끼우려면

2가 가


1

 가

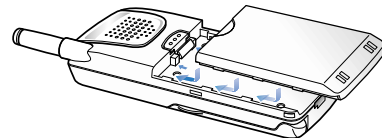


2

 가

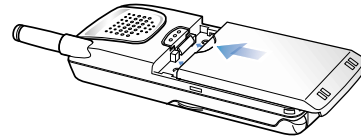

배터리를 빼려면

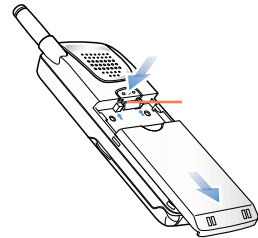 



배터리를 충전하려면

휴대폰에 배터리를 부착한 경우

 
휴대폰 배터리 표시등

여분 배터리 표시등

배터리만 충전할 경우

전원 연결

• 110V (110V) 220V

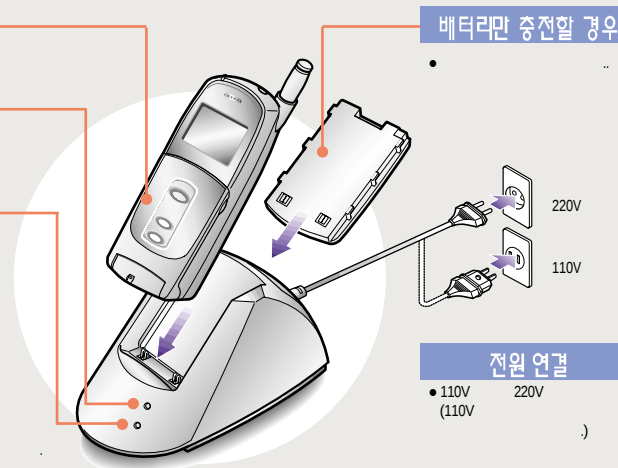

기본 기능편



알아두세요!

가 가





 
휴대폰을 켜려면/끄려면

휴대폰을 켜려면



가

- 가 가 가
- 가 가 가



휴대폰을 끄려면

 


가




전화를 걸려면

1

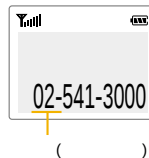

2

 

통화가 끝나면



확인

(21~23)



, 119 (000~199) 3



전화를 받으려면

1 가



2



(80)

가



 
가



상대방 전화번호 표시기능!

가

통화가 끝나면



(2)

(SMS)



스피커폰으로 전화를 걸려면/받으려면

 
(가)

스피커폰으로 전화를 걸려면

1 가

• 30

2



3 가

 
가

(20)

스피커폰으로 전화를 받으려면

1

2 가



3 가

가

(20)



일반 통화중에 스피커폰으로 통화하려면

(20)

 
스피커폰 기능을 설정하려면



스피커폰 기능을 해제하려면




스피커폰 통화를 끝내려면

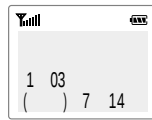

벨이나 진동, 램프를 선택하려면

 (20)

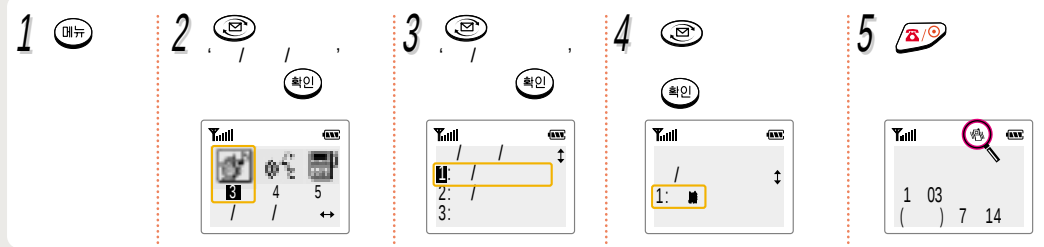



벨소리나 멜로디를 바꾸려면

10
2 PC
700
2
3
(106)
(105)
(20)

- 1 메뉴
- 2 확인
- 3 확인
- 4 확인
- 5 확인

3

2

1

1~10

1~10

1, 2

1, 2

700

3



멜로디를 녹음하려면

2 가

- 1 메뉴
- 2 확인
- 3 확인
- 4 확인
- 5 확인

3

 
7

1

20



녹음된 멜로디를 들으려면

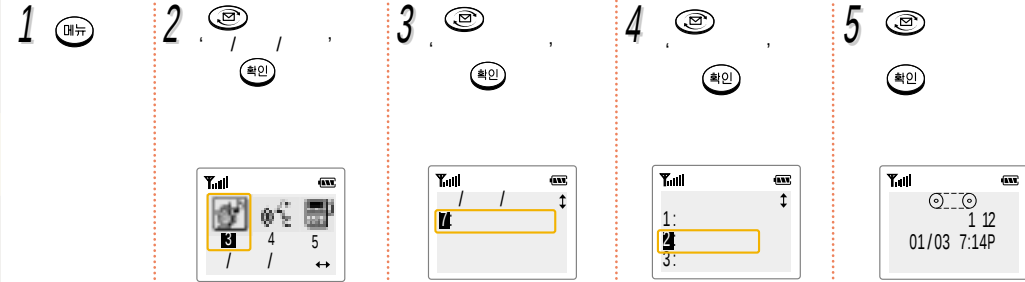

3 DEF

7 LBT PRS

 
2 ABC

1234567890



녹음된 멜로디를 삭제하려면

녹음된 멜로디를 하나씩 삭제하려면

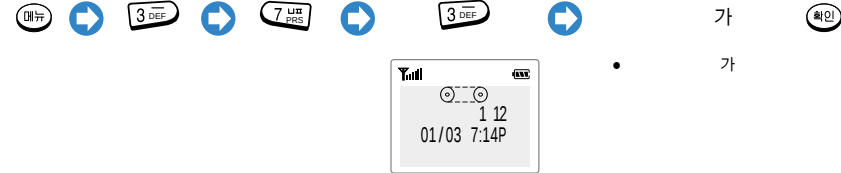

녹음된 멜로디를 모두 삭제하려면



 


소리 크기를 조절하려면

전화벨 소리조절



버튼을 누를 때 나는 소리조절



통화중 상대방에게 들리는 소리조절



• Mute/Unmute: , End Call: 가

통화중 들리는 소리조절



 
스피커폰 통화중에 들리는 소리 조절



매너 기능

가

설정하려면

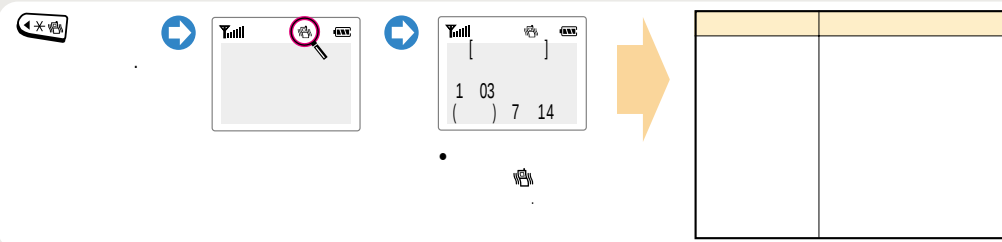

해제하려면





전화번호를 저장하려면

가 .(000 ~ 199) (

4

50

, 200
.)

. (66)

Figure 1-1 illustrates the process of confirming the display, showing five sequential steps:

- Step 1:** The initial screen displays a list of items (1, 2, 3) and a confirmation button (확인).
- Step 2:** Item 4 is selected, and the confirmation button (확인) is highlighted.
- Step 3:** Item 4 is highlighted with a yellow box, and the confirmation button (확인) is highlighted.
- Step 4:** Item 4 is highlighted with a yellow box, and the confirmation button (확인) is highlighted.
- Step 5:** Item 4 is highlighted with a yellow box, and the confirmation button (확인) is highlighted.

● **CH-39**, **1.1** _{oz}

● 4월 GHI

25~27

● 000 ~ 199

지움



21



1

?

(38) 가

31

[illegible]

가 $\frac{32}{16} \left(- \frac{1}{2} \right)$ 가

-  (),
 ()
 ()
 ()

지움

22



전화번호를 저장하려면

 
 
간단한 전화번호 저장방법

1



2

확인

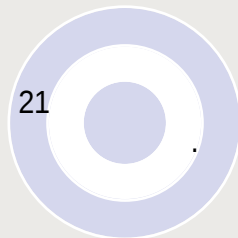

문자를 입력하려면

(1, ., -)

문자입력은 문자입력 상태에서!

?

- (21)
- (29)
- (31)
- (34)
- (47)
- 가 (49)
- 가 (51)
- 가 (52)
- D-DAY D-DAY (59)
- D-DAY 가 (60)
- (71)
- (97)



문자를 입력하려면 (계속)

(24) 가

한글 입력 방법

☎ / ☎

지움

- 가
- 5 LJK 'L' 'R'
- 1 QW, 2 ABC, 3 DEF
- 1 QW, 2 ABC (2 ABC)) ㅏ (ㅑ) + 1 QW H (H)
- 3 DEF, 2 ABC (2 ABC)) ㅓ (ㅕ) + 1 QW ㅗ
- ☎ / ☎, 0 END
- (: ㅓ, ㅕ, ㅗ)
- ㅓ ㅕ ㅗ, 8 SVO



한번 따라해보세요!

0 END 2 ABC 1 QW 1 QW 7 LJK 3 DEF 6 DEF 1 QW 2 ABC

○ ○ ○ ○ ○

영문 입력 방법

☎ / ☎

지움

- ☎, ☎, ☎ / ☎ () () , 확인
- 2 ABC A B C a b c가
- , 'D' , 3 'E' 3
- ☎ / ☎, 0 END



한번 따라해보세요!

'HIT'

(24) ☎ () ☎ 확인

☎ 4 QW 3 4 QW 8 SVO

H HI HIT



문자를 입력하려면 (계속)

(24)) 가

특수문자 입력 방법

0 연
지움

- [메뉴] , [문자] [↑/↓] () , [확인]
- [←*→/☰] [↑/↓] [확인]
- [메뉴] , [확인]



한번 따라해보세요!



 
숫자 입력 방법

-



저장된 전화번호를 모두 지우려면

가

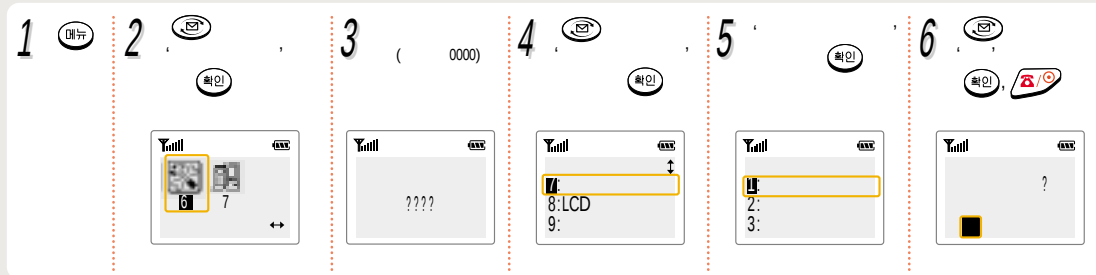

버튼으로
선택하려면





저장된 전화번호를 수정/추가/삭제하려면

3 가

1 (33 ~ 35)

2 [002] 051-861-3000 확인

3 [002] 051-861-3000 가 메뉴

4 가 확인

수정 선택시

추가 선택시

● 1 4

● 4
, 50

●  / 

가



 
 , 

삭제 선택시

● 가



그룹 이름을 편집하려면

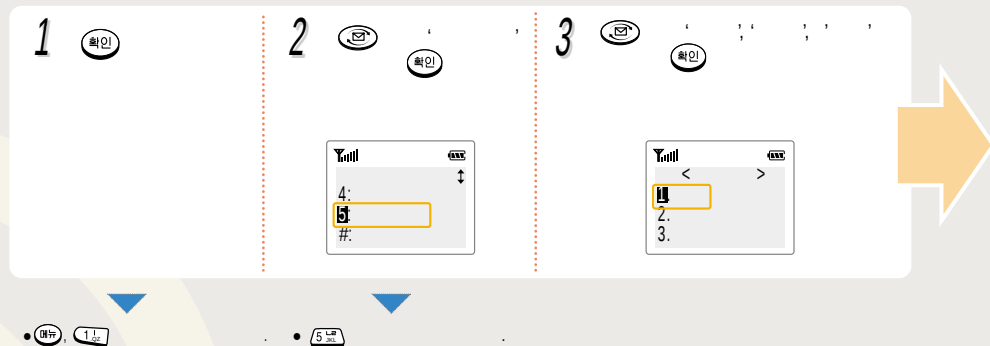

등록 선택시

• (24 ~ 27)

• (15)

수정 선택시

• (24 ~ 27)

• (15)

삭제 선택시

• (24 ~ 27)

• (15)



가

/

(80)

 
 
가

AnyCall


기본편



그룹으로 찾기

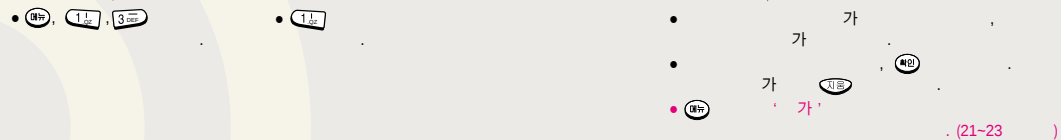

이름으로 찾기

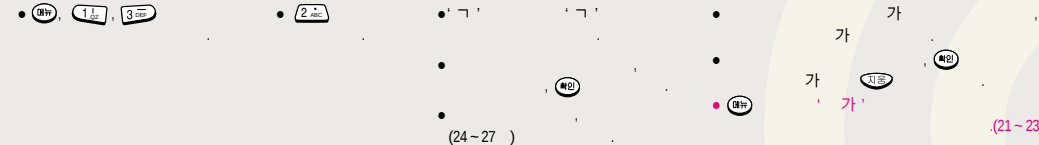 



저장된 전화번호를 찾아 전화하려면 (계속)

번지로 찾기

1. ✉ (Compose icon)

2. 확인 (Confirm button)

3. 002 (Phone number entered in the 'To' field)

4. 051-861-3000 (Message content entered in the 'Message' field)

5. 보내기 (Send button)



최근에 통화한 전화번호로 다시 걸려면

10

최근에 발신한 번호로 통화하려면



최근 발신한 번호를 모두 지우려면





 (0000)
 





 ,
 



 



최근에 수신한 상대방 전화번호로 다시 걸려면 (상대방 전화번호 표시기능)

가 10

80

최근에 수신된 번호로 통화하려면

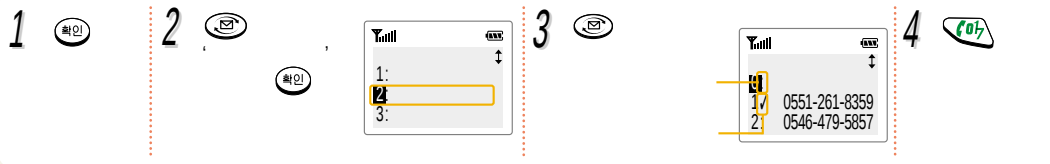

최근 수신된 번호를 모두 지우려면

 


원터치 다이얼 기능 (번지로 간단하게 전화걸기)

가 . (22)

○○○~○○9번지에 저장된 경우

010~199번지에 저장된 경우



국번없이 전화 걸기

$$\begin{array}{rcl} \bullet & (200) & (10) \\ \bullet & & .(66) \end{array} \quad 4$$


6 가 가 • 가 4

 가 . / 4

응응편

자동응답 기능

(, , 가)



자동응답 기능을 설정/해제 하려면

가

가

자동응답 기능을 설정 하려면



자동응답 기능을 해제 하려면



간단하게 자동응답 기능을 설정 또는 해제 하려면

가

응답

자동응답이 설정되면

 


AnyCall
응응편



자동 응답 인사말을 선택하려면

가

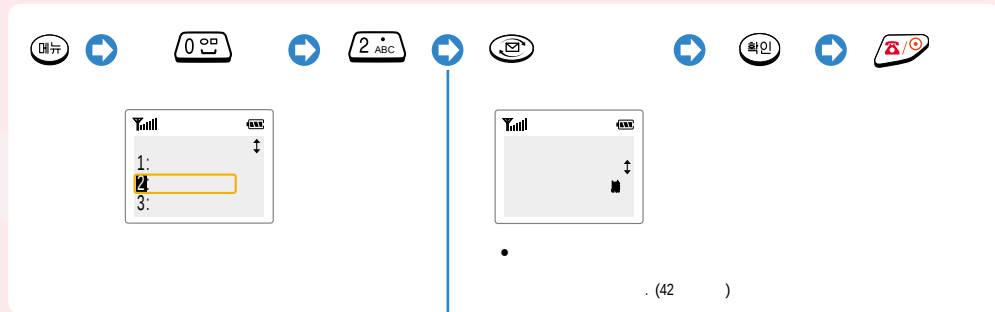

자동 응답 인사말을 직접 만들려면

가

(66)

자동 응답 인사말을 녹음하려면



• 15

사용자 인사말(내가 만든)을 들어보려면



 
사용자 인사말(내가 만든)을 지우려면






메시지를 남기는 상대방 음성을 들으려면

(20)

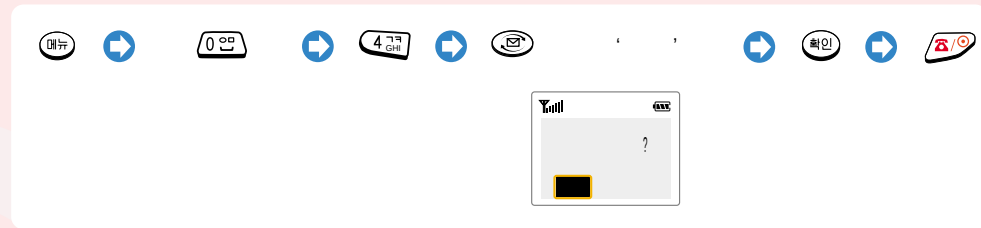

착신 시간을 선택하려면

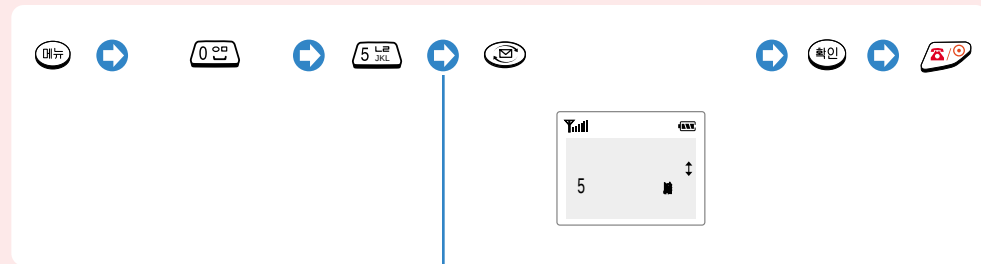 

• 5 : 5
10 : 10
가



상대방이 남긴 메시지를 재생/삭제하려면

8

(66)

녹음된 메시지를 들으려면



가



가

녹음된 메시지를 지우려면



가

확인



전자수첩기능

-
-
-
-
- D-DAY
-

D-DAY

D-DAY



 
 
 
 
 
 


스케줄 관리 기능

20

3

스케줄을 등록하려면

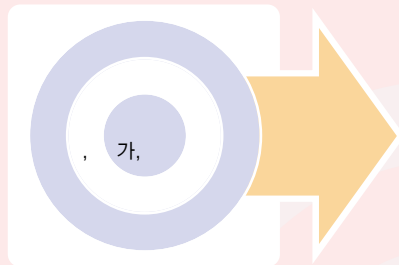


Ancall 응용편



스케줄 관리 기능 (계속)

스케줄을 확인하거나 수정/추가/삭제하려면



 
(66)

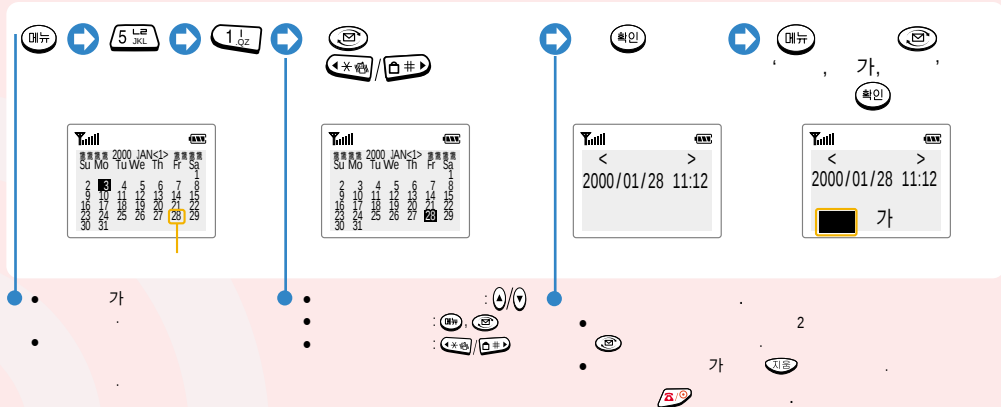

수정 선택시

추가 선택시

   삭제 선택시

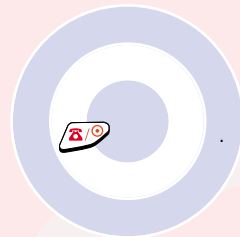

Amycall
이용편

 


할일 관리 기능

20


할일을 등록하려면

. (66)

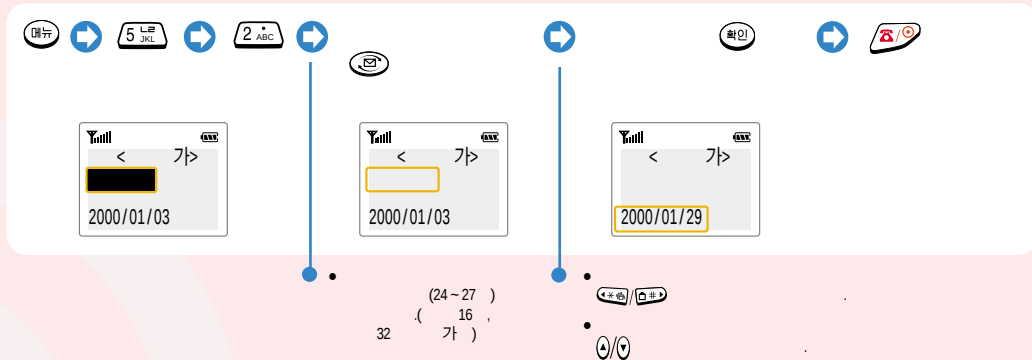


할일을 보거나 수정/추가/삭제하려면

 . (66)

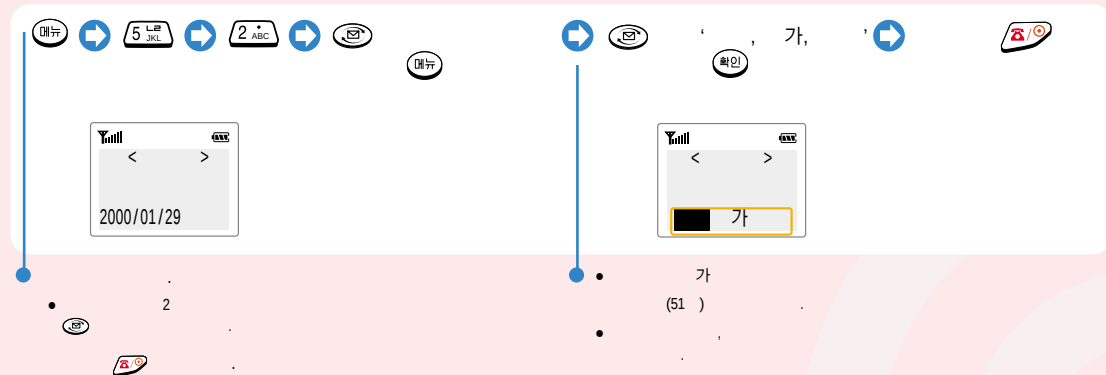




전자계산기 기능

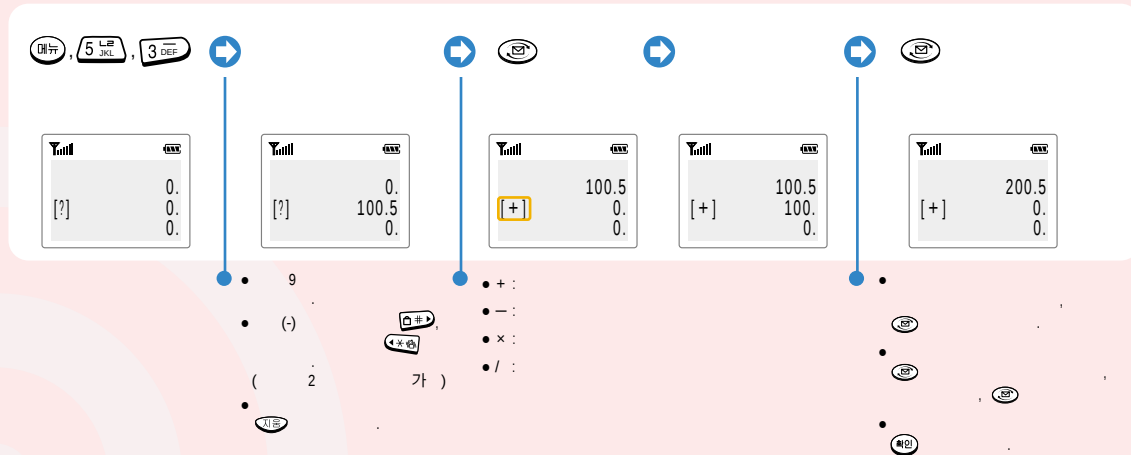 

현재 시각을 설정하려면

 가

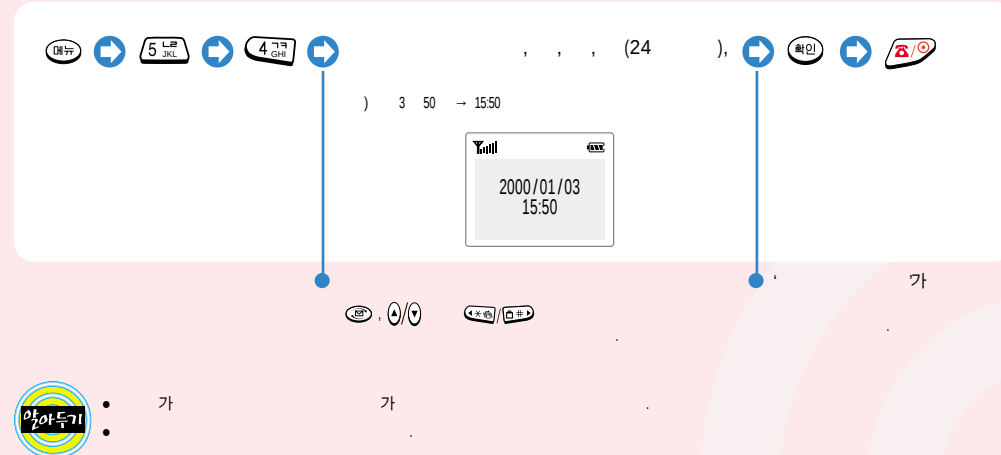




모닝콜을 설정하려면

3

 모닝콜 설정방법

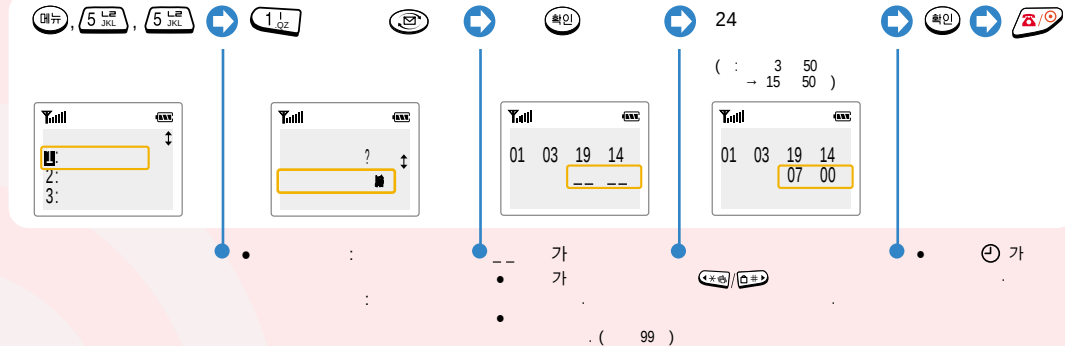


모닝콜 해제방법



알람을 설정하려면

3

 알람 설정방법

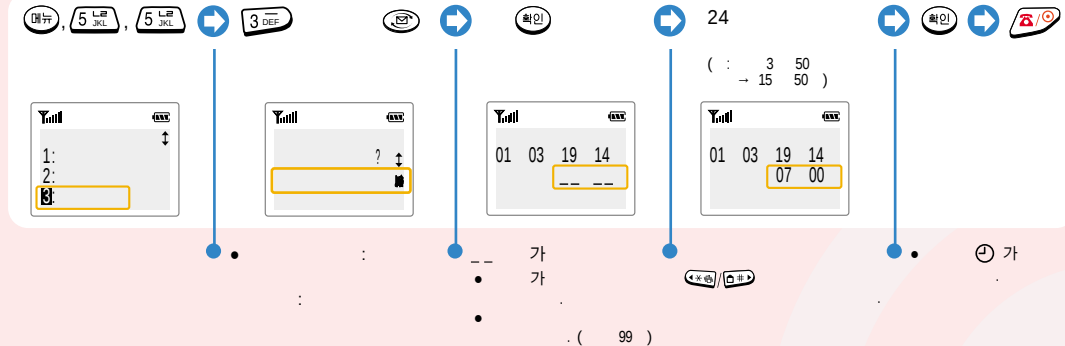

알람 해제방법





알람 멜로디를 선택하려면



알람 멜로디 선택방법



● 3

가



알람 기능이 설정된 상태에서 전원을 켜다 켜면

•



세계의 현지 시각을 확인하려면

가



40개 도시의 현지 시각을 볼 수 있습니다.

-
- Figure 1 consists of three scatter plots arranged horizontally, each showing the relationship between two variables, LA1 (x-axis) and LA2 (y-axis). The plots are labeled 1, 2, and 3 from left to right. Each plot has a grid of points. Plot 1 shows a positive correlation, Plot 2 shows a negative correlation, and Plot 3 shows a positive correlation. Each plot has a legend indicating 'LA1' and 'LA2'.

 


D-DAY 기념


. D-DAY 5

. (66)

D-DAY를 등록하려면

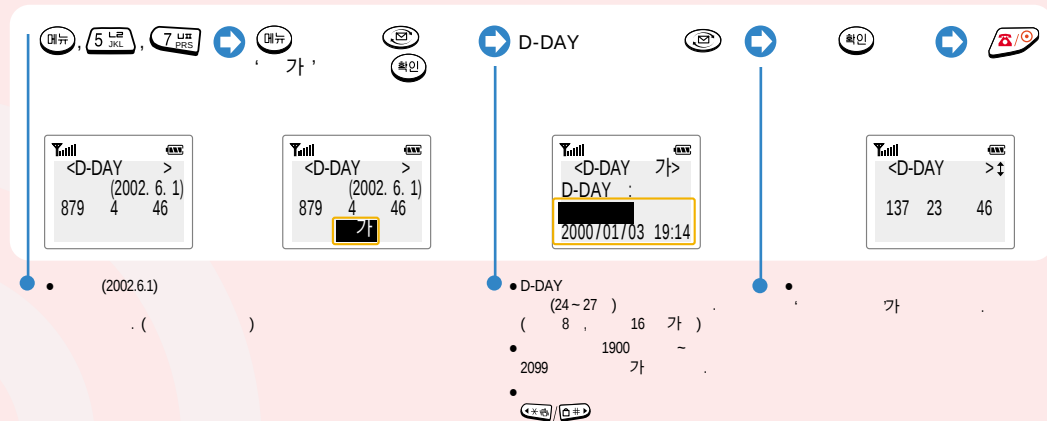

D-DAY를 확인하거나 수정/추가/삭제하려면

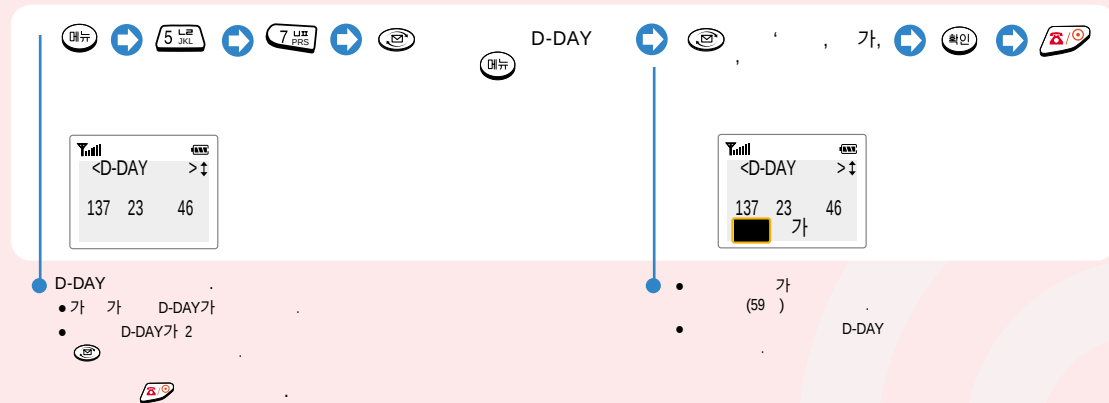 



게임 기능

가

The screenshot shows a mobile game interface. At the top, there's a keypad with numbers 1-9 and letters. Below the keypad, there's a 'Game Help' button. At the bottom, there's a 'Key Help' section with a list of items and their corresponding keys.

Key Help :

 
Game Help :

Exit :

- Game Help



30

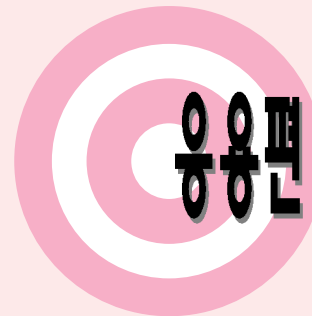

잠금기능

가

(:119, 112)

가



 


비밀번호를 바꾸려면

'0000'



가 가 !

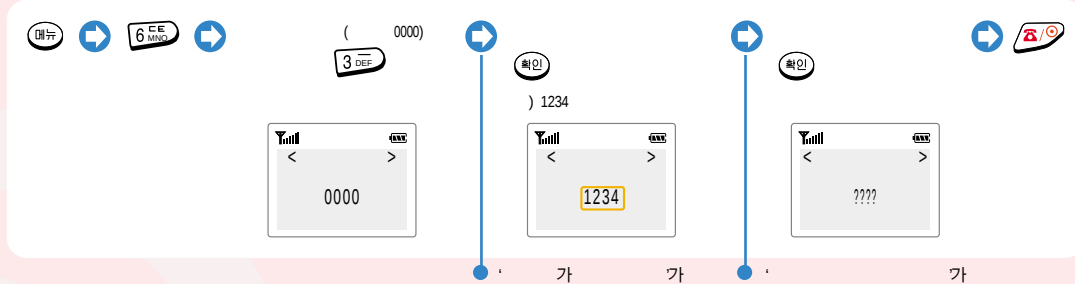

• 4

 
확인



다른 사람이 휴대폰을 사용할 수 없게 하려면 (자동잠금)

(:119, 112) 가

.(' ')

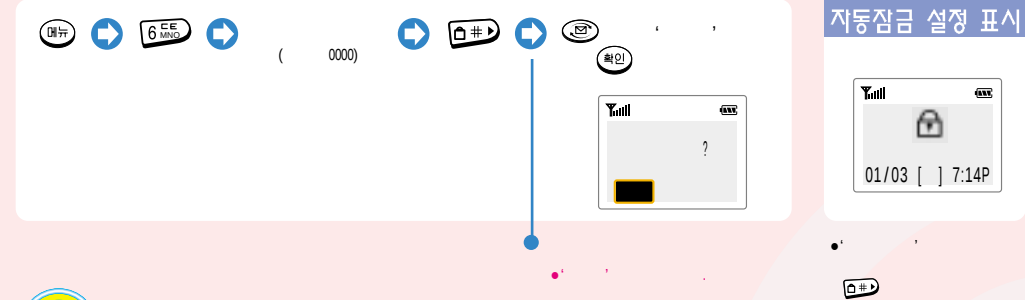

자동잠금 설정 표시





기타 사용제한 방법

가

메뉴 → 6 MNO → (0000) → 6 MNO → 1 QZ → [Envelope Icon] → 확인 → [Phone Icon]

[Phone Screen Mockup: ?]

가 가 가 가

메뉴 → 6 MNO → (0000) → 6 MNO → 2 ABC → [Envelope Icon] → 확인 → [Phone Icon]

[Phone Screen Mockup: ?]

002) :001, 가

메뉴 → 6 MNO → (0000) → 6 MNO → 3 DEF → [Envelope Icon] → 확인 → [Phone Icon]

 
 
[Phone Screen Mockup: ?]

D-DAY

메뉴 → 6 MNO → (0000) → 6 MNO → 5 JKL → [Envelope Icon] → 확인 → [Phone Icon]

[Phone Screen Mockup: ?]

휴대폰 통화는 이렇게 이루어집니다

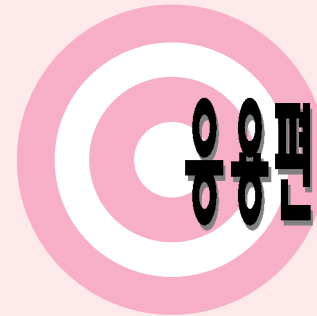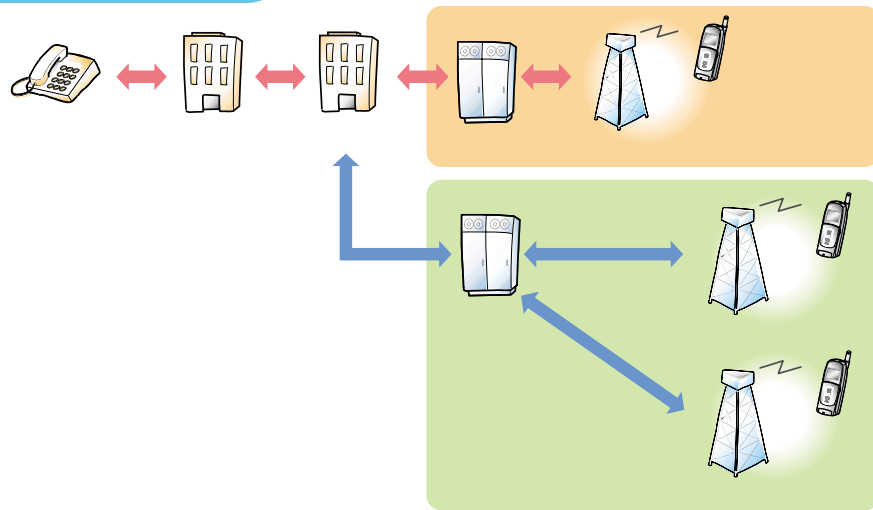

편리기능

- /
- !
- 가 !
- !
- ?
- 가 ?
- !

EVRC란?

Enhanced Variable Rate Codec

 
EVRC

가



자주 사용하는 지역번호를 누르지 않고 통화하려면 (지역번호 자동다이얼 기능)


설정방법

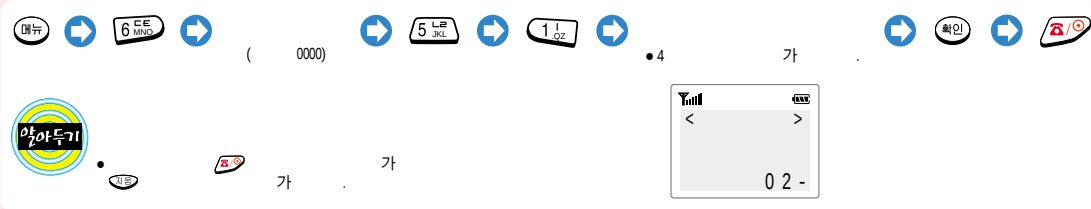

해제방법



 
국제전화를 선택하려면

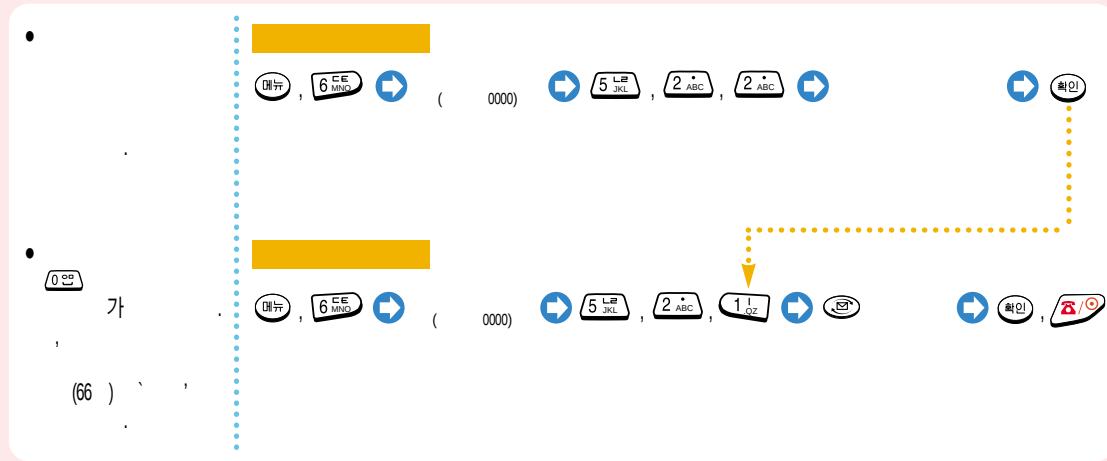



휴대폰에 자기이름을 입력하려면

 8 16



(24~27)

 


전자식 다이얼 기능

(ARS) 가
(: ,)

메모리를 이용한 전자식 다이얼

• (66)



포즈를 이용한 전자식 다이얼 (포즈란? 일종의 잠시 멈춤시간)



(ARS)

. (79)



 
 
녹음기로 사용하기

12

, 1



1

통화내용 녹음하기 (통화중예)

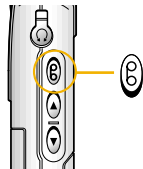

- 1
- 가 가
- 가

  주변소리 녹음하기 (메모 녹음)

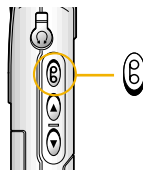

- 1
- 가 가
- 가

녹음된 내용 듣기



 
녹음된 내용 한개씩 지우기



녹음된 내용 모두 지우기



(66)

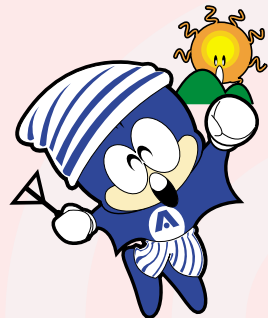



통화중 편리기능

기 능	설 정 방 법
가	
• 가	
• 가	
• 가	



기타 편리기능

기 능	확 인 방 법
•	
•	
• (66)	

기능	설정 방법
•	가 (0000) 메뉴 → 6 MNO → * → 1 OZ → → 확인
•	가 (0000) 메뉴 → 6 MNO → * → 2 ABC → → 확인
•	안타독기 D-DAY 가
가	가 (메뉴 6 MNO 0 연)



선택기능

-
- 가
- 가
- 가
-

?

!





선택기능

기 능	설정 또는 해제방법 (차례대로 누르세요)
DTMF (' ,) • 가 • ,	→ → → , ' , ' → →
(' ,) • 가 가 ()	→ → → , ' , ' → →

기 능	설정 또는 해제방법 (차례대로 누르세요)
(' ,) • 가 ()	→ → → , ' , ' → →
(' ,) • 가 • 가 가 ()	, → (0000) → , → , ' , ' → ,

기능	설정 또는 해제방법 (차례대로 누르세요)
128 X 64 Pixel - PC CD-ROM 가 (106)	메뉴, 6 MNO, (0000), 2 ABC, 확인, 8/0 Power 017 Power 017, 1/2
5 00 8 00	메뉴, 6 MNO, (0000), 8 TUV, 1 OZ, 확인, 8/0 1: 8 1: 8, 2: 20, 3:

기능	설정 또는 해제방법 (차례대로 누르세요)
	메뉴, 6 MNO, (0000), 8 TUV, 2 ABC, 0/1, 확인, 8/0 : 20 00 ~ 39





음성다이얼 기능

·
·
·

· (20)
· (66)



- 가
-
- (2~5 가)
-

 
) / , / ...
) , ,

-
-


1 ,



음성으로 이름을 등록하려면

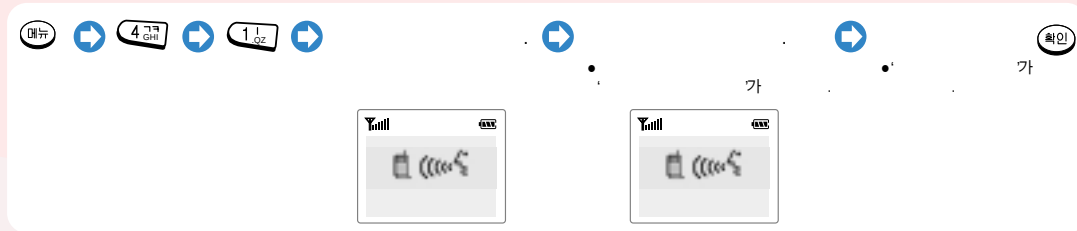


다음과 같은 소리가 나와요!

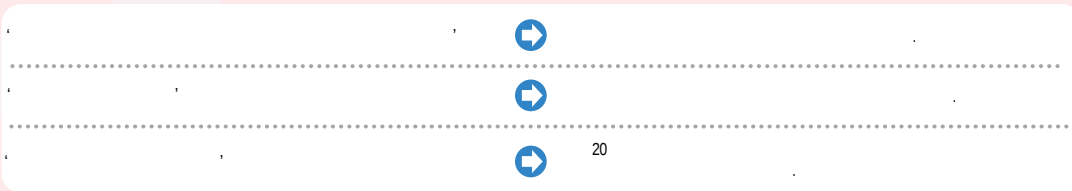 


음성으로 전화하려면 (자동음성다이얼 기능)

 자동음성다이얼 설정하기

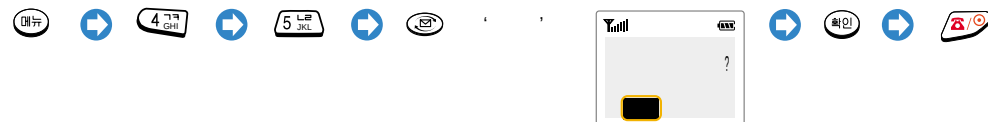

음성으로 전화걸기

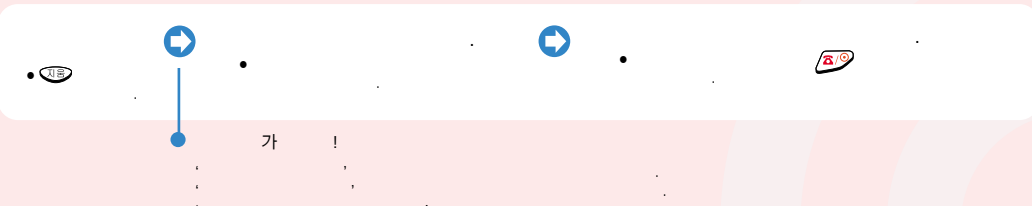 



등록한 음성 이름을 확인하거나 지우려면

등록한 음성 이름을 확인하려면

[메뉴] → [4 GH] → [2 ABC] → 가

등록한 음성 이름을 지우려면

• [메뉴] → [4 GH] → [3 DEF] → [] → [확인] → []

 
• [메뉴] → [4 GH] → [4 GH] → [확인]




핸즈프리에 연결하여 사용하려면

5

8 00

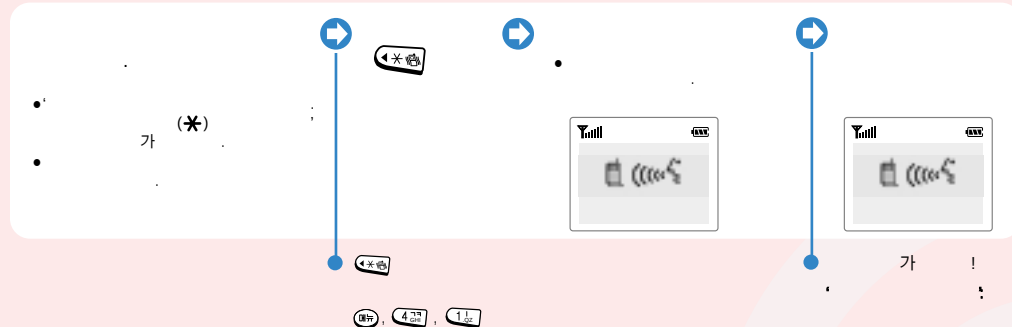

MEMO

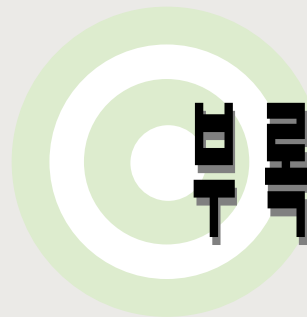 

부가서비스

 
가 가

- 50 가 가 가 .
- (: ,)
- ' 114 '





이 서비스는 휴대폰을 이용하여 호출 및 문자, 음성 메시지를 수신 및 발신할 수 있는 서비스입니다.

수신함 관리 기능

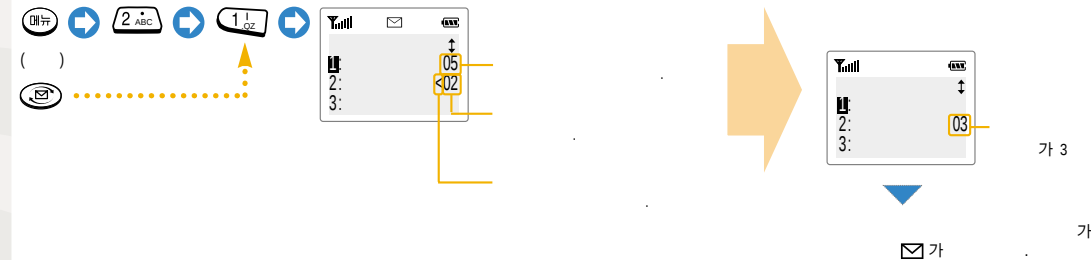

메시지 내용표시 설정/예제방법

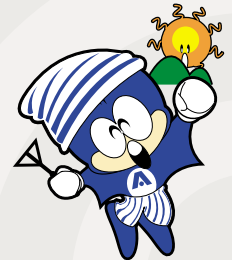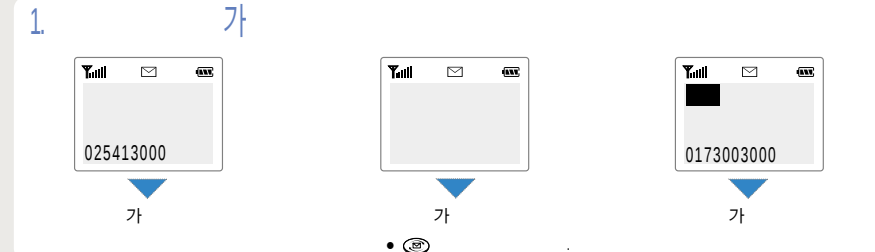  


수신된 문자 메시지를 보려면

1.



 2.

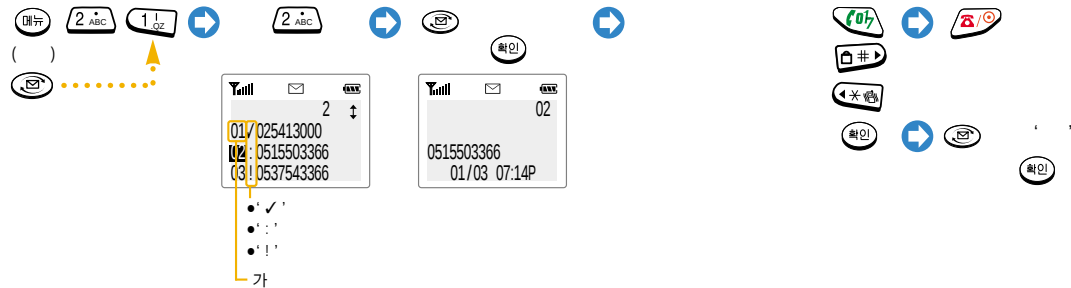

수신된 메시지를 모두 지우려면

 


메시지 수신 알림을 선택하려면



편지를 쓰려면


1.



확인



 확인



(24 ~ 27)

• 10

가



2.

확인



확인



확인

가

지움

(,)

음악 편지를 보내려면



보관된 문장을 선택하여 보내려면



보관된 문장을 지우려면



 
전송 속도를 선택하려면



휴대폰에 호출하려면



저장된 발신 메시지를 확인, 지움 또는 재발신하려면

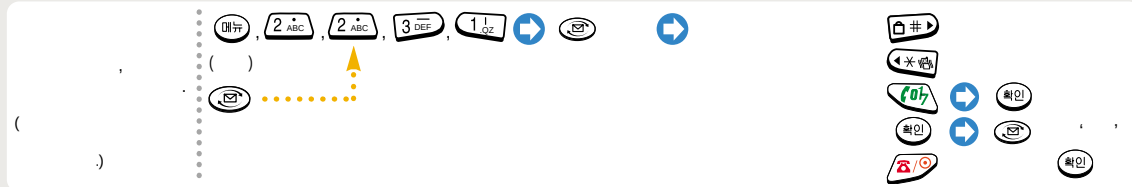

저장된 발신 메시지를 모두 지우려면



부록 국제전화 자동로밍 서비스 기능

017

서비스 시스템을 선택하려면

부록 파워 엔젤 서비스 기능

017

부록 외부 장치 연결 통신 기능

017 가 가
(, ,)
017

 





700 서비스를 이용한 벨/멜로디 추가 기능

(SMS) 가

700 서비스로 벨/멜로디를 다운로드 받으려면

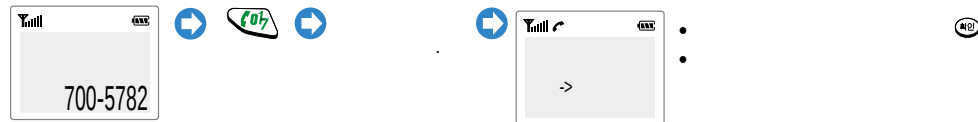

다운로드 받은 벨/멜로디를 확인하려면

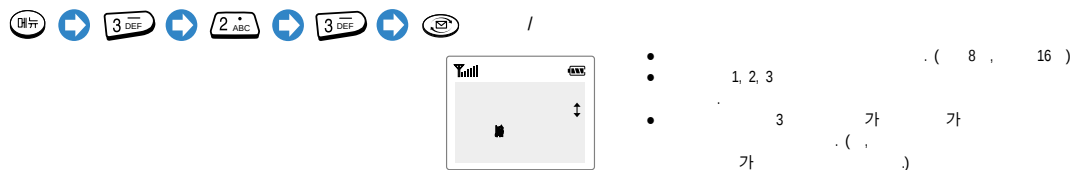 


PC링크를 이용한 멜로디 및 이미지 추가 기능

Anycall 부록

PC
PC
(
•
•
PC
PC
CD-ROM
PC
CD-ROM
SMS
가

 화면구성 및 기능

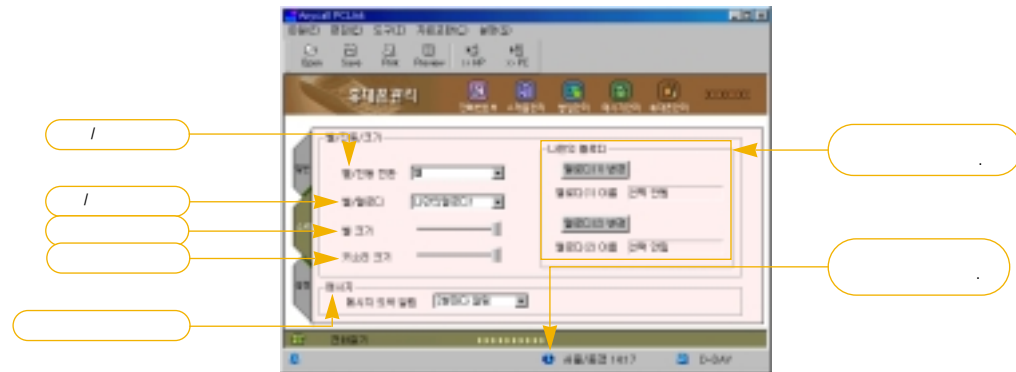



고장 같나요?

증상

조치

• 가 (7)

•

‘’ 가

• 가 2

•

• ‘’

•

가

•

•

()

•

•

증상

조치

(?)

•

•

(19)

가

• / /

(14)

• 가

•

•

• 가

가

가

•

•



안전을 위한 주의사항

전 원 관 면

기 타

가



가



 
 
부록

휴대폰 덮개가 빠졌을 때

가


가

1.

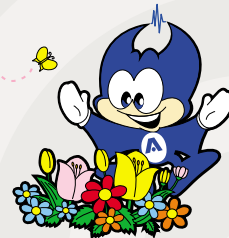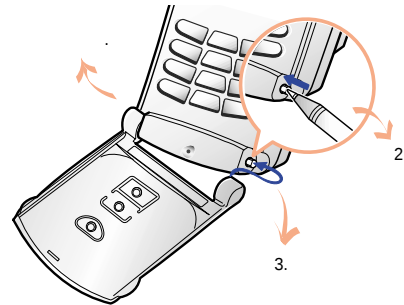


기능 메뉴 요약표

 메뉴

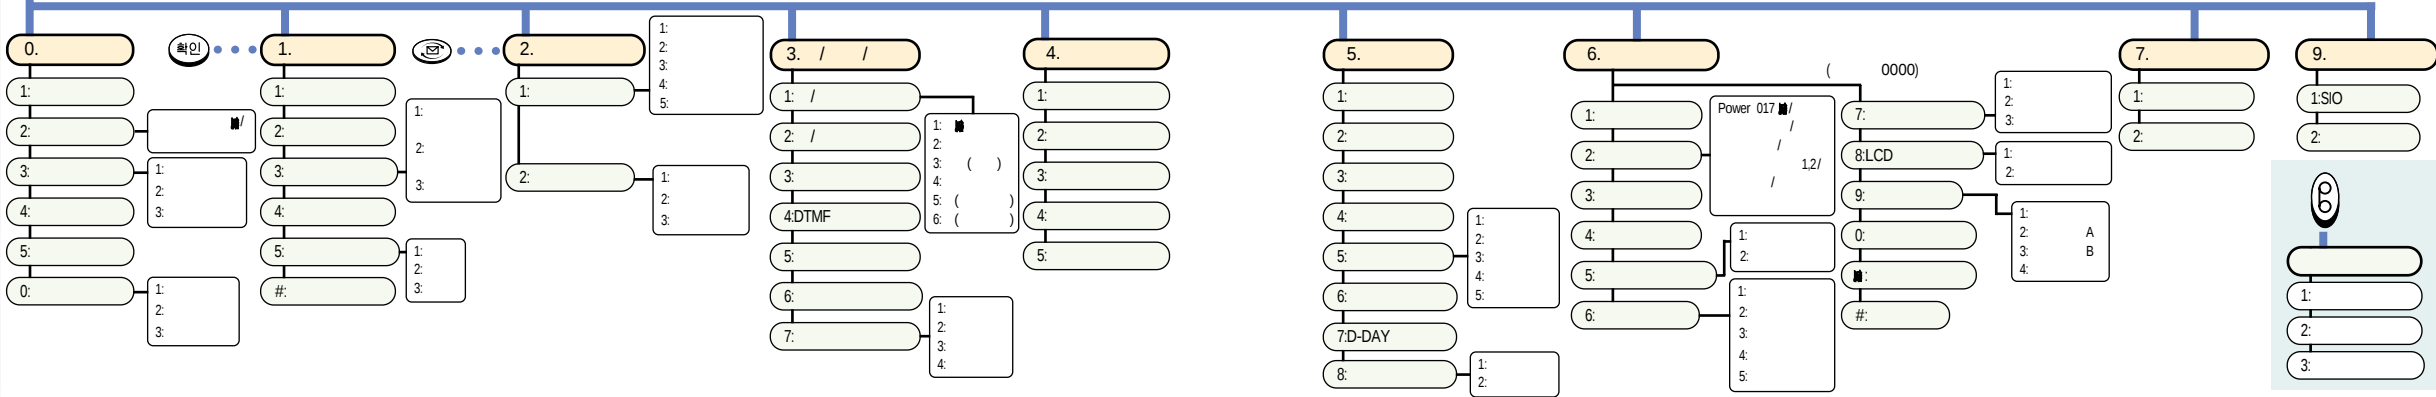

부록 메뉴 찾기

 
통화중 메뉴 요약표

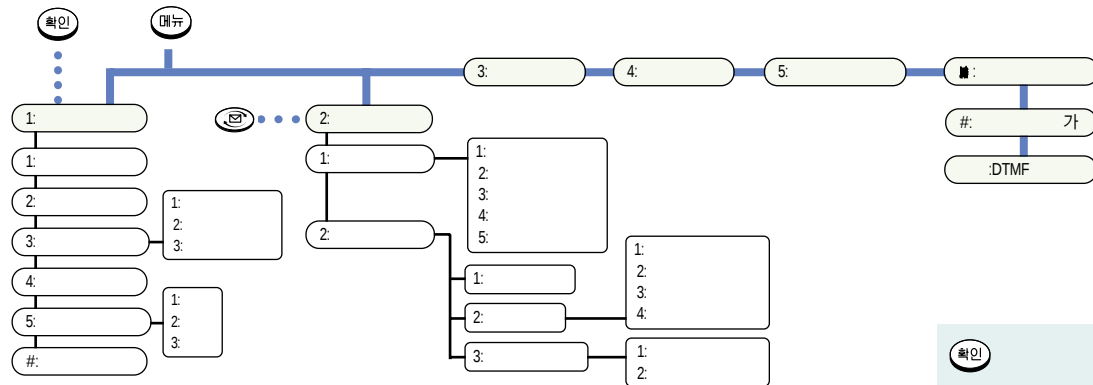


부록 별매품

Anycall 부록

 차량용 핸즈프리 박스 (HF B22D)

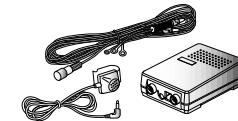


차량용 충전 키트 (CKT011SBK)

 

이어마이크 폰 (EMP20)



 
PC 링크용 CD-ROM

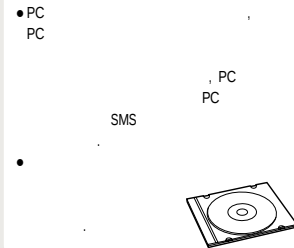


차량용 거치대 (HCRO11SBK)



 데이터 통신 케이블 (PCB010SBK)



여행용 충전기 (TCHO10KBK)

 

배터리



($\pm 1g$)

0% ~ 95%

서비스에
대하여

• ()

• ()

• ()

14

7

1

6

5

			SCH-P02
		SERIAL NO.	

1 ()

10			
1			
가	3		
가	4		
가	() 가		가
가	() 가		10% 가

서비스에
대하여

• ()

• ()

• ()

14

7

1

6

5

			SCH-P02
		SERIAL NO.	

1 ()

10			
1			
가	3		
가	4		
가	() 가		가
가	() 가		10% 가

서비스에
대하여

• ()

• ()

• ()

14

7

1

6

5

			SCH-P02
		SERIAL NO.	

1 ()

10			
1			
가	3		
가	4		
가	() 가		가
가	() 가		10% 가

서비스에
대하여

• ()

• ()

• ()

14

7

1

6

5

			SCH-P02
		SERIAL NO.	

1 ()

10			
1			
가	3		
가	4		
가	() 가		가
가	() 가		10% 가

서비스에
대하여

• ()

• ()

• ()

14

7

1

6

5

			SCH-P02

외국인을 위한 페이지 (for Foreigner)

The following illustration shows the menu structure available and indicates the number assigned to each option. To access menu mode, press the soft key indicated by the text '  (Menu)'.

2. Mail service ()

- 0-1. Set answering mode (Set/Cancel 轉)
- 0-2. Greeting selection (Prerecorded greeting 轉 / Your greeting)
- 0-3. Your greeting (1. Record / 2. Play / 3. Delete)
- 0-4. Listen during playback (Set/Cancel 轉)
- 0-5. Ring count (1. 5 Second after 轉 / 2. 10 Second after /
3. Direct answering)
- 0-0. Recorded messages (1. Play / 2. Delete one / 3. Delete all)

- 2-1. Message received (1. Voice messages/2. Text messages/
3. Erase messages/4. Message alert/
5. Message display on/off)
- 2-2. Message to send (1. Page phone/2. Write message/
3. Message maintenance)

3. Alert type and volume

- 1-1. Last numbers dialled
- 1-2. Last numbers received
- 1-3. Search a number (1. Recall by Group/2. Recall by name/3. Recall by memory location)
- 1-4. Add new entry
- 1-5. Group editing (1. Registration/2. Edit/3. Delete)
- 1-#. Own number display

- 3-1. Alert type (1. Ring 警 / 2. Vibration / 3. Silence(lamp) /
4. Vibration after ring / 5, 6. Ring (Getting louder / lower)
- 3-2. Ring type
 - 3-2-1. Alert 警 (1~10)
 - 3-2-2. Melody (1~10)
 - 3-2-3. Registration melody (1, 2. Record melody /
3, 4. Mine melody /
5~7. 700 Melody)

Menu Map (Continued)

☞ preset at factory

- 3-3. Ring volume
- 3-4. DTMF otne lenght (Short ☞ /Long)
- 3-5. Connect tone (Set ☞ /Cancel)
- 3-6. Disconnect tone (Set/Cancel ☞)
- 3-7. Melody record(1. Record/2. Play/3. Delete one/4. Delete all)

4. Voice Dial

- 4-1. Record
- 4-2. Play Back
- 4-3. Delete One
- 4-4. Delete All
- 4-5. Voice Mode (Set/Cancel ☞)

5. Additional features

- 5-1. Scheduler
- 5-2. Job list
- 5-3. Calculator

- 5-4. Set time
- 5-5. Alarm
 - 5-5-1. Set morning call (Every day ☞ /Week-days)
 - 5-5-2. Release morning call
 - 5-5-3. Set alarm (Every day on time ☞ /Only once)
 - 5-5-4. Release alarm
 - 5-5-5. Melody alarm (1~3. Melody/4. Vibration)

- 5-6. World time (40 City)
- 5-7. D-Day
- 5-8. Game (1. Black Jack/2. Casino)

6. Personal information (Password required)

- 6-1. Set name
- 6-2. Initial screen type (Power 017☞ /Digital clock/None /
My own image1,2/Samsung/Olympic partner)
- 6-3. Change password
- 6-4. Call time display

- 6-5. Auto dial (1. Area code/2. International code)
- 6-6. Call barring
 - 6-6-1. Memory dial (Set/Cancel ☞)
 - 6-6-2. Incoming (Set/Cancel ☞)
 - 6-6-3. International (Set/Cancel ☞)
 - 6-6-4. Received number display (View ☞ /Restriction)
 - 6-6-5. Private (Set/Cancel ☞)

- 6-7. Erase number (1. Numbers stored/2. Numbers dialled /
3. Numbers received)

- 6-8. LCD backlight
 - 6-8-1. LCD backlight (1. 8 Second ☞ /2. 20 Second
3. Always off)
 - 6-8-2. Brightness of display (0~39 Step)

- 6-9. NAM select
- 6-0. PIN check (Set/Cancel ☞)
- 6-☞. Reset (1. All data/2. Only function)
- 6-#. Auto lock (Set/Cancel ☞)

- 7. Data service
 - 7-1. Select ring type (1. Alert ☞ /2. Melody)
 - 7-2. Automatic receiving setup
 - 7-2-1. Automatic receiving release
 - 7-2-2. Modem Automatic receiving
 - 7-2-3. Fax Automatic receiving

9. System information

- 9-1. SIO Mode
- 9-2. Vocoder Type

Record Menu()

- 1. Play
- 2. Delete one
- 3. Delete all

Quick-Converting to Vibration

In addition , with a touch of a key , you can set the phone into the vibration mode at any time. Press and hold down  .

In-Call Options

To access these functions during a call, press the soft key indicated by the text '  (Menu)'.

1. Phonebook ()

- 1-1. Last numbers dialled
- 1-2. Last numbers received
- 1-3. Search a number (1. Recall by Group/2. Recall by name/3. Recall by memory)
- 1-4. Add new entry
- 1-5. Group editing
- 1-#. Own number display

2. Mail service ()

- 2-1. Message received (1. Voice messages/2. Text messages/3. Erase messages/
4. Message alert/5. Message display on/off)
- 2-2. Message to send (1. Page phone/2. Write message/3. Message maintenance)

3. Switching microphone off(on)

4. Muting (Sending) key tone

5. Sending own number


 . Decrease of microphone Sensitivity

. Increase of microphone Sensitivity


. DTMF dialing

SCH-P02 Quick Reference Card

Function	Press in sequence
Alert Type	 ,  ,  ,  ,  , 
Ring Type	 ,  ,  ,  ,  ,  ,  , 
Ring Volume	 ,  ,  ,  ,  ,  ,  , 
Speaker Volume	(During a call)  (adjust)
Autotransfer on/off	 ,  ,  ,  ,  , 
Using Speakerphone	(During conversation Flip open)  (Hold) (During conversation Flip closed)  (Hold)
Store in Memory	Phone number  , Name  , Memory location  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  ,  , ,

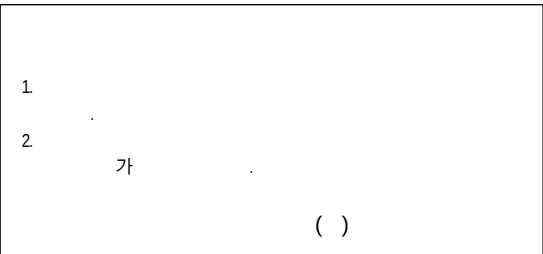 

 Licensed by QUALCOMM Incorporated under one or more of the following Patents.
 U.S. Patent No. 4,901,307 5,056,109 5,099,204
 5,101,501 5,103,459 5,107,225
 5,109,390

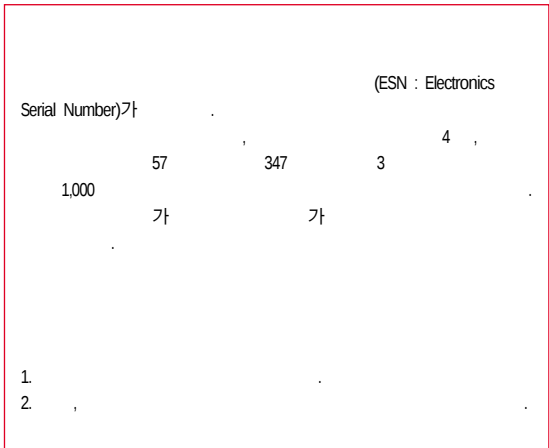

Function	Press in sequence
Erase Memory	[6 5 5], Password, [7 4 4], [1 2], [3 2 2] (choose), [4 2 2], [5 2 2]
Redial	[6 5 5], [1 2], [1 2], [3 2 2] (select a number to dial), [4 2 2]
Auto lock on/off	[6 5 5], Password, [7 4 4], [3 2 2] (choose), [4 2 2]
Manner Mode on/off	[* *], (no0)
Change Password	[6 5 5], Password, [3 2 2], New password (two times), [4 2 2]
Voice Mode on/off	[6 5 5], [4 2 2], [5 2 2], [3 2 2] (choose), [4 2 2]
Record Voice	[6 5 5], [4 2 2], [1 2], [3 2 2] (choose), [4 2 2]
Playback Recorded Voice	[6 5 5], [4 2 2], [2 2 2], Recorded names are played with phone number in the display
Delete One Recorded Voice	[6 5 5], [4 2 2], [3 2 2], select voice, [4 2 2]
Delete All Recorded Voices	[6 5 5], [4 2 2], [4 2 2], [4 2 2]

Function	Press in sequence
Erase Memory	[6 5 5], Password, [7 4 4], [1 2], [3 2 2] (choose), [4 2 2], [5 2 2]
Redial	[6 5 5], [1 2], [1 2], [3 2 2] (select a number to dial), [4 2 2]
Auto lock on/off	[6 5 5], Password, [7 4 4], [3 2 2] (choose), [4 2 2]
Manner Mode on/off	[* *], (no0)
Change Password	[6 5 5], Password, [3 2 2], New password (two times), [4 2 2]
Voice Mode on/off	[6 5 5], [4 2 2], [5 2 2], [3 2 2] (choose), [4 2 2]
Record Voice	[6 5 5], [4 2 2], [1 2], [3 2 2] (choose), [4 2 2]
Playback Recorded Voice	[6 5 5], [4 2 2], [2 2 2], Recorded names are played with phone number in the display
Delete One Recorded Voice	[6 5 5], [4 2 2], [3 2 2], select voice, [4 2 2]
Delete All Recorded Voices	[6 5 5], [4 2 2], [4 2 2], [4 2 2]