 




Operating Instructions



VACUUM CLEANER

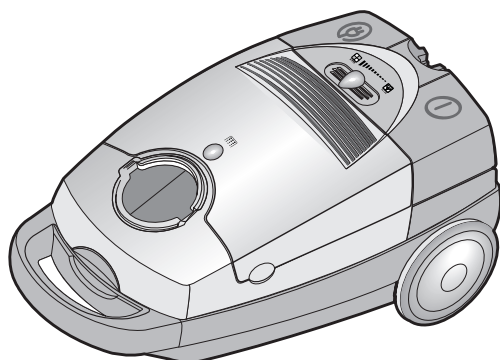

* Before operating this unit, please read the instructions carefully.

FEATURES

Features include indicator and automatic cord rewind.

NOTE : Not all models have the same features.

 
IMPORTANT SAFEGUARDS

1. Read all instructions carefully. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate on the bottom of the cleaner.
2. **WARNING:** Do not use the vacuum cleaner when rug or floor is wet.
3. Close supervision is necessary when any appliance is used by or near children. Do not allow the vacuum cleaner to be used as a toy. Do not allow the vacuum cleaner to run unattended at any time. Use the vacuum cleaner only for its intended use as described in these instructions.
4. Do not use the vacuum cleaner without a dust bag. Change the dust bag before it is full in order to maintain the best efficiency.
5. Do not use the vacuum cleaner to pick up matches, live ashes or cigarette butts. Keep the vacuum cleaner away from stoves and other heat sources. Heat can deform and discolour the plastic parts of the unit.
6. Avoid picking up hard, sharp objects with the vacuum cleaner as they may damage the cleaner parts. Do not stand on the hose assembly. Do not put a weight on the hose. Do not block the suction or the exhaustion part.
7. Switch the vacuum cleaner off at the machine before unplugging from the electrical outlet. Grasp the plug to disconnect cord from electrical outlet before changing the dust bag.
8. The use of an extension cord is not recommended.
9. If your vacuum cleaner is not operating correctly, switch off the power supply and consult an authorized service agent.
10. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

WARNING

1. Do not use to suck up water.
2. Do not immerse in water for cleaning
3. The hose should be checked regularly and must not be used if damaged.


IDENTIFICATIONS OF PARTS

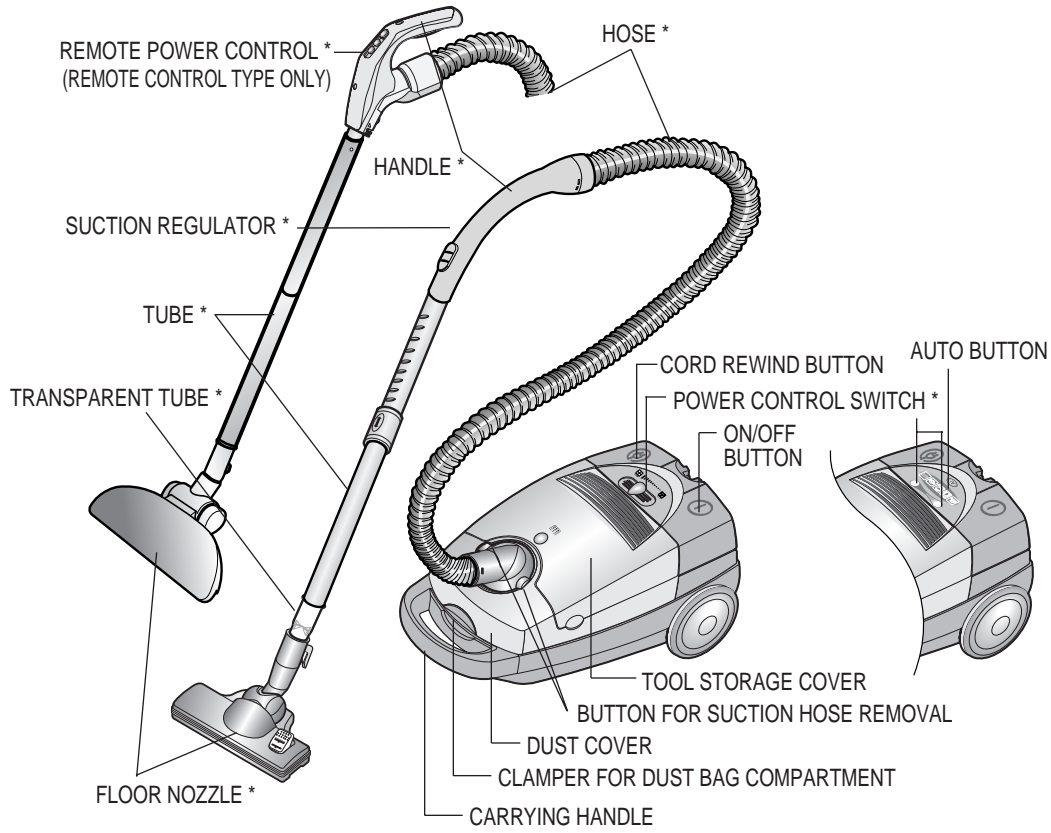


Features marked with * may vary according to model.

ASSEMBLING THE VACUUM-CLEANER READY FOR USE

 1) Connect the suction hose to the suction tube.

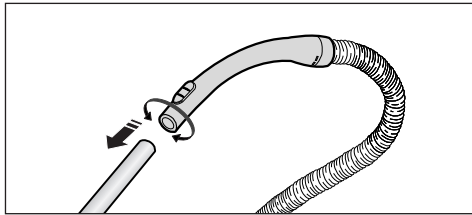

 OPTION : Connect the suction tubes together.

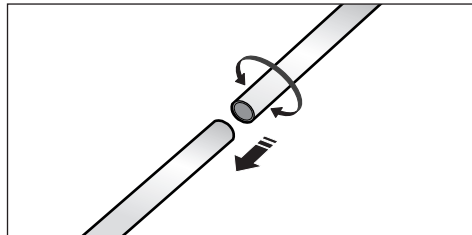


2) Adjust the suction tube (depending on model).


① **EXTENDING :** Holding the narrow part of the telescopic tube with one hand, push the handle in the opposite direction with your other hand.

② **SHORTENING :** Holding the narrow part of the telescopic tube with one hand, pull the handle towards it using the other hand.

 
NOTE : Adjustable telescopic tube is not available with all models.

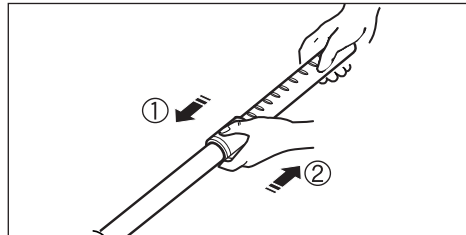

 
3) Connect the nozzle to the suction tube.

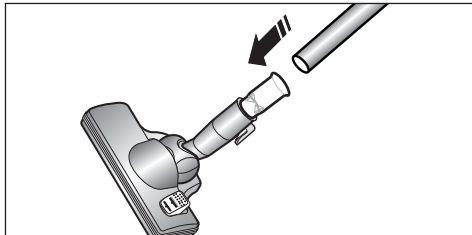

 4) Open the hose connection cover.

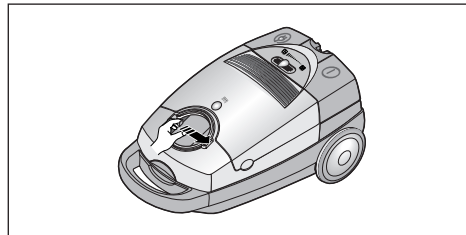

 
5) Connect the body connector to the body of the cleaner.

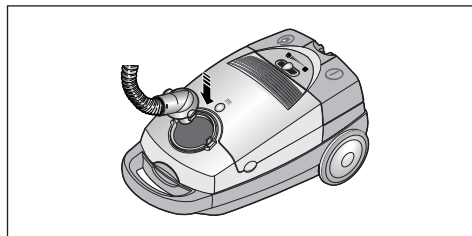

POWER CORD

1) PULLING OUT : The power cord is long enough to draw out for convenience.

 
2) REWINDING : When you have finished cleaning, disconnect the plug from the electrical outlet and simply press the cord rewind button lightly with your toe.

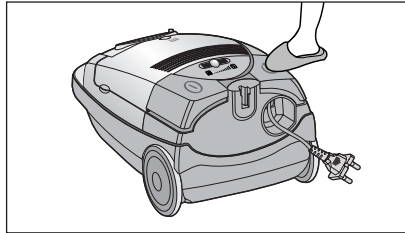

NOTE : When removing the power cord from the electrical outlet, grasp the plug, not the cord.

ON/OFF SWITCH

 You can start or stop your vacuum cleaner by pressing the on/off switch lightly with your toe.

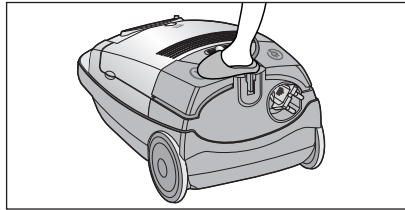

POWER CONTROL(VARIABLE CONTROL TYPE ONLY)

The vacuuming power can be adjusted to suit any situation with electrical power control.

 
MIN = For delicate fabrics, e.g. net curtains.

ECO = Economy setting for normally soiled carpets.


MAX = For hard floors and heavily soiled carpets.

1) For slider control types

Slide the controller to upwards or downwards to adjust the power output.

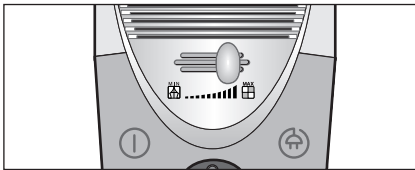

 ■ Model with controller on the body of cleaner

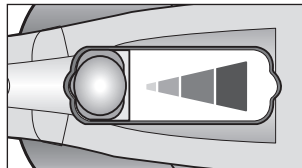


■ Model with controller on the handle


2) For button control types

Press (+) button to heighten the power.

 Press (-) button to lower the power.

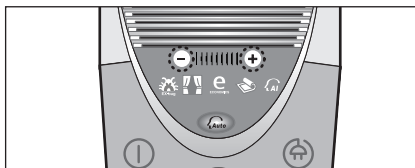

 ■ Model with controller on the body of cleaner

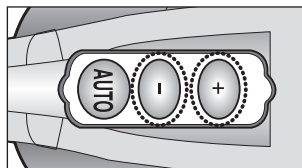

■ Model with controller on the handle

 
 
AUTO MODE (BUTTON CONTROL TYPE ONLY)

If you press AUTO MODE, the power is automatically set at 1200~1300 watt.

This mode reduces the suction power fluctuation which is caused by the fluctuation of airflow quantity to the motor.

For example, when dust bag is full, the quantity of air to the motor will be decreased and power will be down followingly. AUTO MODE, in this case, increases the power automatically for sufficient suction.

If you want to go back to the normal control type, just press "+" or "-" buttons.

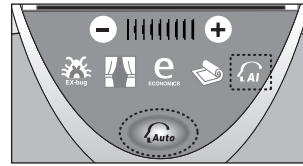

Using Exbug Elimination System (DEPENDING ON MODEL)

It is best to use the Mite Killing cycle immediately after you have finished your cleaning.

 
 
 
Ensure machine is plugged in and the power point is switched on.

Disconnect the hose from the cleaner by pressing in the two buttons on the hose end and lift the hose out.

Close the hose connection cover on the top of the cleaner until tone is heard. Make sure that it is fully shut.

Switch the cleaner on and the cleaner will run.


The Mite Killer cycle will automatically stop when complete.

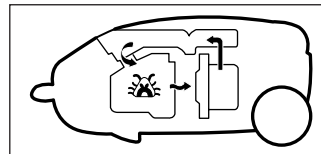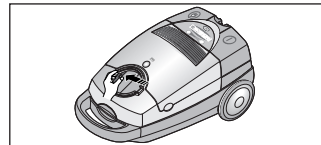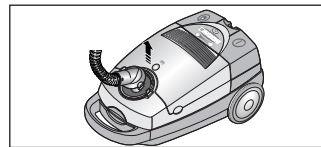


Unplug the cleaner, rewind the cord, open the hoses connection cover and re-connect the hose. Your cleaner can be used immediately after the Mite Killer cycle stop or by interrupting the cycle. To do this, switch cleaner off, open the hose connection cover and re-connect the hose.

USING THE ACCESSORIES

 Open the tool storage cover upwards.

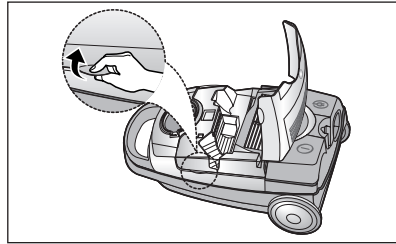


CREVICE

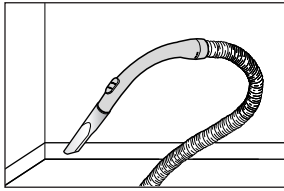 


Crevice tool for radiators, crevices, corners, between cushions.

 DUSTING

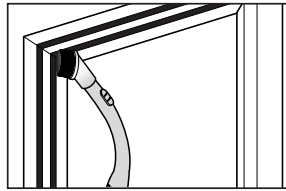

Dusting brush for furniture, shelves, books, etc.

 
UPHOLSTERY

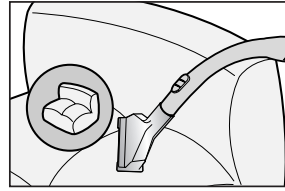

Upholstery brush for cushions and drapery.


PARK POSITION

 Located in the top rear side of the vacuum cleaner, there is a nozzle support that can be used to park the nozzle during pauses in cleaning

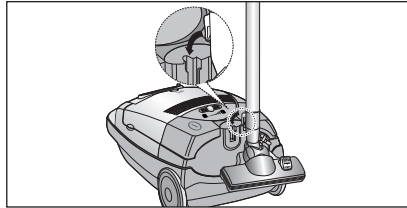


TRANSPORTING AND STORING THE VACUUM CLEANER

 For easy storage and transportation, this vacuum cleaner has a clip system built into body, which will keep the wand, hose and nozzle in an upright position.

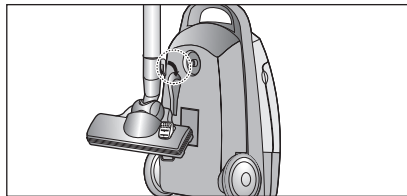


REPLACING THE DUST BAG

 
1) To open the dust cover of the dust bag compartment, press the clamber upwards(the clamber is located at the front of the dust cover).

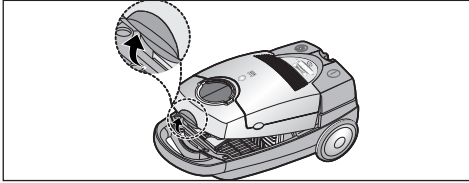


 
2) Remove the dust bag from the cleaner

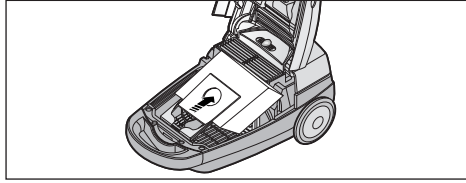

 3) After removing the used dust bag, insert the cardboard bag collar of the new dust bag into its original position.

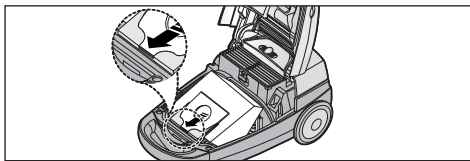

  4) Press the dust cover down gently until the clamber relocks.

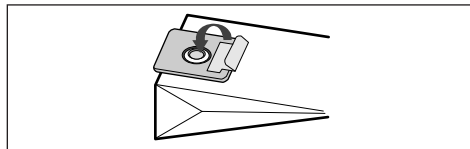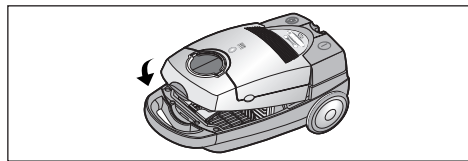

NOTE : Used dust bags can be sealed by removing the film from the paper and sticking over the suction opening.

FOR CLOTH FILTER BAG

After using,if the cloth filter bag is full of dust, clean the cloth filter bag and use it again.

DUST-FULL INDICATOR

If the "Dust-Full" indicator switch changes to "RED" while you are cleaning, the dust bag is full and must be replaced.

NOTE : If the "Dust-Full" indicator continues to display "RED" even after changing the dust bag, turn the cleaner off and check whether the hose, tube or nozzle is clogged.

MAINTENANCE OR REPLACEMENT OF THE FILTERS

 
► INLET FILTER

The secondary filter, located behind the grille in the back of dust bag compartment, protects the motor from dirt particles.

Do not allow the filter to become clogged.

Suction power reduction or motor damage may result. If filter becomes dirty, pull off the grille and lift out filter. After cleaning the secondary filter attach it in place.


NOTE : The filters must be completely dried before being replaced in the dust compartment.

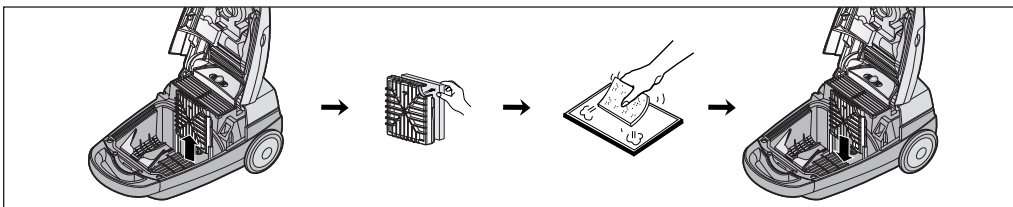

► OUTLET FILTER


Open the dust cover and lift off the grille.

 For HEPA Filter Type

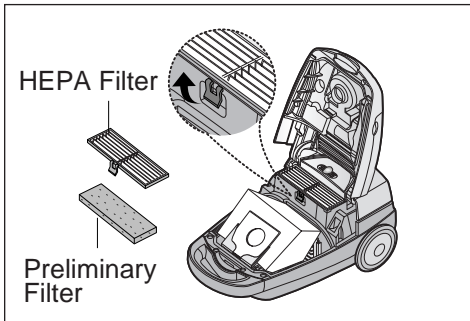

Grasp filter and pull it out with preliminary filter. After cleaning preliminary filter, reposition new filter and preliminary filter by reversing this procedure.

 For Micro Filter Type

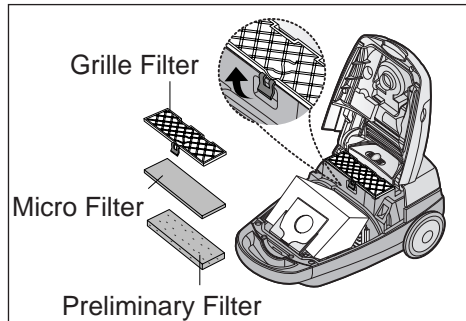


Grasp grille filter and pull it out with preliminary filter. After cleaning preliminary filter, reposition new filter compartment and preliminary filter by reversing this procedure.

USAGE OF FLOOR NOZZLE

FOR RUG / FLOOR SELECTOR

 
Before use make sure that the position of the selector is in the right position for the type of surface to be cleaned.

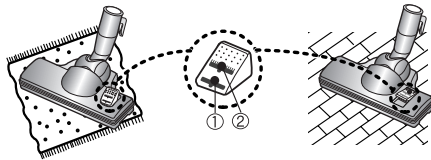


Select the carpet indicator ① when cleaning carpets.
Select flat surface indicator ② when cleaning the floors, tiles, etc.

FOR UNIVERSAL BRUSH

 Use the floor nozzle for cleaning all surfaces.

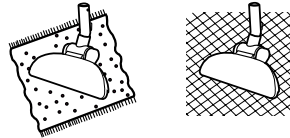

 NOTE: For optimum efficiency, clean floor brush with crevice tool.

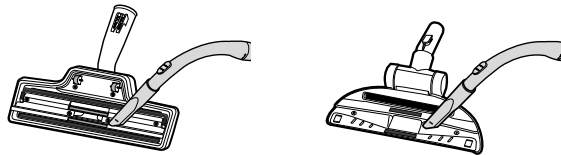


TRANSPARENT TUBE

Transparent tube prevent the tube and hose from being clogged by obstacle like as socks and clothes.

When transparent tube is clogged.

 Separate the nozzle from the tube. Remove the alien substance with a stick from it. After cleaning it, reassemble the nozzle to the tube.

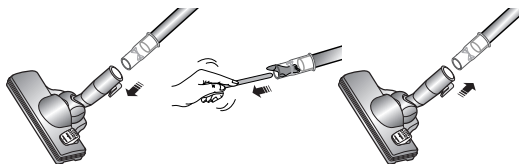

TROUBLE SHOOTING

PROBLEM	CAUSE	REMEDY
Motor does not start.	No power supply.	Check cable, plug and socket.
Suction force is gradually decreasing.	Filter, nozzle, suction hose or tube is blocked.	Remove the object.
Cord does not rewind fully.	Check that the cord is not twisted or wound unevenly.	Pull the cord out 2~3m & push down the cord rewind button.

This Vacuum cleaner is approved the following.
EMC Directive : 89/336/EEC , 92/31/EEC and 93/68/EEC
Low Voltage Safety Directive : 73/23/EEC and 93/68/EEC

