



SGH-C145 User's Guide

- Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
- Depending on your country, your phone and accessories may appear different from the illustrations in this guide.

World Wide Web
<http://www.samsungmobile.com>


Printed in Korea
Code No.: GH68-18437A
English (Ind). 03/2008. Rev.1.0

Silent mode Press and hold **#** in Idle mode to disable all sounds on the phone. To exit, press and hold this key again.

Keypad lock mode Press and hold ***** in Idle mode and then press the **Yes** soft key to lock the keypad. To unlock, press the **Unlock** soft key and then *****.

Display

Your phone is in Idle mode when you are not on a call or using a menu. You must be in Idle mode to dial a phone number.

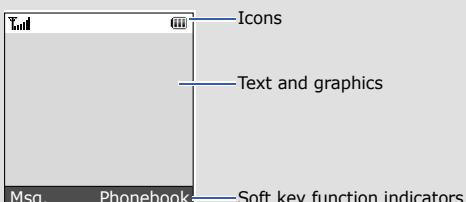

Your phone displays the following status indicators on the top of the screen:

Icon	Description
	Received signal strength
	Call in progress
	Out of your service area; you cannot make or receive calls except for emergency calls
	Alarm set
	Silent mode (Mute)
	Silent mode (Vibration)
	Ringer type <ul style="list-style-type: none"> None: Melody : Vibration : Vibration then melody
	Home Zone, if registered for the appropriate service
	Call diverting feature active
	New text message
	Battery power level

Using the menus

In Idle mode, press the **OK** key to enter the main menu.

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key (**C**) or right soft key (**OK**) to perform the function indicated.




Use the 4-way navigation keys to scroll up, down, left, or right through the menu system, highlight menu items, and change feature settings.


To select or modify a menu or feature:

- In Idle mode, press the **OK** key.
- Press the Navigation keys to reach a desired menu and then press the **Select** soft key or **OK** key.
- If the menu contains any submenus, locate the one you want by pressing the Navigation keys. Press the **Select** soft key or **OK** key to enter the submenu.
- If the selected menu contains additional submenus, repeat this step.
- Press the Navigation keys to find the setting of your choice.
- Press the **Select** soft key or **OK** key to confirm your chosen setting.

Installing the SIM card and battery

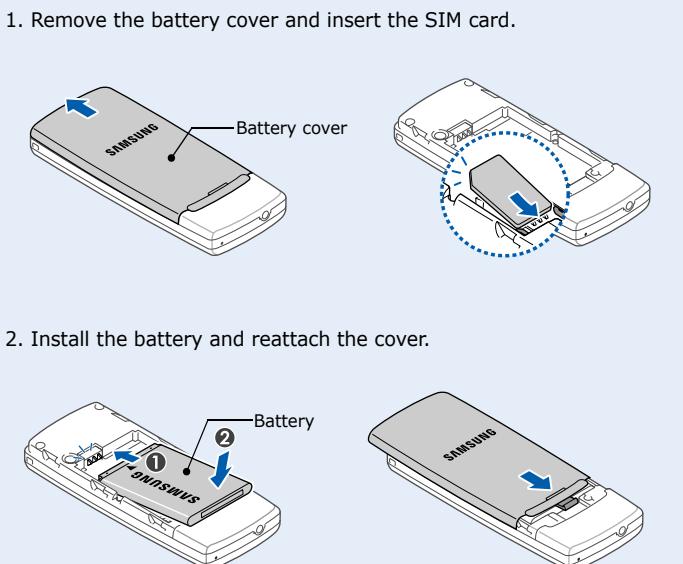

Charging the battery

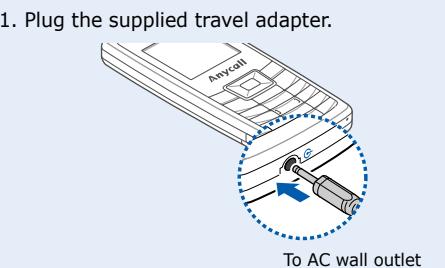

- Plug the supplied travel adapter.
- When charging is finished, unplug the adapter.

Note: Do not remove the battery from the phone without unplugging the adapter first. Otherwise, the phone may be damaged.

Phone layout and key functions



Adjusting the volume

- In Idle mode, press **OK** key.
- Select **Sound settings** → **Incoming calls** → **Ring volume**.
- Press the Navigation keys to adjust the volume level.
- Press the **Save** soft key.

While a call is in progress, press **Up** or **Down** to adjust the earpiece volume.

Changing a ringtone for calls

- In Idle mode, press **OK** key.
- Select **Sound settings** → **Incoming calls** → **Default ringtones**.
- Select a ringtone and press the **Yes** soft key.

Redialling recent numbers

- In Idle mode, press **OK**.
- Press **Up** or **Down** to scroll to the number you want.
- Press **OK** to dial the number.

Entering text

Changing the text input mode

In a text input field, press the right soft key until the input mode indicator you want appears:

- T9Eng:** T9 mode
- AEng:** ABC mode
- IEng:** Number mode
- None: Symbol mode

T9 mode

- Press **2** to **9** to start entering a word. Press each key once for one letter.
- The word you are entering appears on the display. It may change with each keypress. Finish entering the word before editing or deleting any keystrokes.

Example: To enter "Hello" in T9 mode, press **4, 3, 5, 5**, and **6**.

- Press **#** to insert a space and enter the next word.

ABC mode

Press the keys labelled with the character you want once for the first letter, twice for the second letter, and so on.

For example, press **2** three times to enter "C" and **5** two times to enter "K".

Menu map

1. Call log	4. Calendar	8. Sound settings
1.1 Missed calls	4.1 Calendar	4.1 Incoming calls
1.2 Received calls	4.2 Panchang	4.2 Messages
1.3 Dialled calls		4.3 Power on/off
1.4 Delete all		4.4 Connection tone
1.5 Call time		4.5 Keypad tone
1.6 Call costs*		4.6 Minute minder
2. Phonebook	5. Messages	4.7 Silent mode
2.1 Find name	5.1 Short messages	4.8 Alerts on call
2.2 FDN list*	5.2 Templates	
2.3 Add entry	5.3 Voice mail	
2.4 Speed-dial list	5.4 Broadcast	
2.5 Own number	5.5 Settings	
2.6 Management	5.6 SOS messages	
2.7 Search by initials	5.7 Memory status	
2.8 Service number*		
3. Applications	6. My files	9. Phone settings
3.1 Alarm	6.1 Game	9.1 Display
3.2 New memo	6.2 Images	9.2 Greeting message
3.3 To do list	6.3 Delete all	9.3 Language
3.4 Clock	6.4 Memory status	9.4 Security
3.5 Calculator		9.5 Auto redial
3.6 Converter		9.6 Voice clarity
3.7 SIM-AT*		9.7 Anykey answer
7. Network services		9.8 Auto keypad lock
2.1 Call diverting		9.9 Reset settings
2.2 Call barring		
2.3 Call waiting		
2.4 Network selection		
2.5 Caller ID		
2.6 Active line*		

* Available only if supported by your SIM card.

Number mode

Press the keys corresponding to the digits you want.

Symbol mode

Press the number keys corresponding to the symbol you want and press the **OK** soft key. You can press **Up** or **Down** to display more symbols.

Tips for entering text

- To move the cursor, press the Navigation keys.
- To delete characters one by one, press **C**. To delete all of the characters, press and hold **C**.
- To insert a space between characters, press **#**.
- To change case in T9 mode or ABC mode, press *****.
- To enter punctuation marks in T9 mode or ABC mode, press **1**.
- To access additional options related to text input, press and hold the **Right** soft key.

Using the Neopad Indian Mode

To type a character in the Neopad Hindi mode:

- Press a corresponding key to access the Virtual Keypad that contains a character you want. The character will appear in the Virtual Keypad at the bottom of display.

If you want to know which key is assigned to which Hindi characters group, see the table of "List of the characters available in Hindi".

- Press the corresponding key 1 to 5 to input a character, or press the ***** key to toggle a virtual keypad page to Virama.

Note: When you enter a character, you will see the predicted word in the word prediction box at the bottom of the display. If you want to know about this input method, see the page 2. Otherwise, repeat above steps to enter other characters.

List of the characters available in Hindi

Key	Characters in the order displayed	
	Press the key	And press the * key
1 क	'क' 'ख' 'ग' 'घ' 'ङ'	'क' 'ख' 'ग' 'घ' 'ङ'
2 च	'च' 'छ' 'ज' 'झ' 'ञ'	'च' 'छ' 'ज' 'झ' 'ञ'
3 ट	'ट' 'ঠ' 'ঢ' 'ধ' 'ণ'	'ট' 'ঠ' 'ঢ' 'ধ' 'ণ'
4 ত	'ত' 'থ' 'দ' 'ধ' 'ন'	'ত' 'থ' 'দ' 'ধ' 'ন'
5 প	'প' 'ফ' 'ব' 'ভ' 'ম'	'প' 'ফ' 'ব' 'ভ' 'ম'
6 য	'য' 'ৰ' 'ল' 'ৱ' 'শ'	'য' 'ৰ' 'ল' 'ৱ' 'শ'
7 ষ	'ষ' 'স' 'হ' 'ঞ' 'ঢ'	'ষ' 'স' 'হ' 'ঞ' 'ঢ'
8 ঞ	'ঞ' 'আ' 'ই' 'ঝ' 'ঞ'	'ঞ' 'আ' 'ই' 'ঝ' 'ঞ'

9 ঠ	'ঠ' 'ঢ' 'জ' 'ঝ' 'ণ'	'ঠ' 'ঢ' 'জ' 'ঝ' 'ণ'
0 ঁ	'ঁ' 'ঁ' 'ঁ' 'ঁ' 'ঁ'	'ঁ' 'ঁ' 'ঁ' 'ঁ' 'ঁ'
* ঁ	Virama (toggles a virtual keypad page)	

Key 1~7: Consonants Groups

Key 8: Independent Vowels Group

Key 9: Dependent Vowels Group

Key 0: Signs & Symbols

Example: To enter **কঠ** (made up of half character), press the **1**, ***** (Virama), **1**, **5**, and **5** keys.

Example: To enter **কিএ** (**ক** + **ি** + **এ**), press the **1**, **1**, **9**, **2**, **8**, ***** (toggles the page), and **2** keys.

Typing a word using the linguistic dictionary (Forward prediction)

- Enter the first character of the word you want.
- You will see a word starting with the first character you enter in the word prediction box at the bottom of the display.
- If that word is correct, go to step.
- Alternatively, press the Up or Down key to search the word you want to enter.
- Press the **OK** key to select it.

Example: To enter **বহুত অচ্ছা** (**ব** + **হ** + **ু** + **ত** + space + **অ** + **চ** + **ছ** + **া**) using the linguistic dictionary, first press the **5**, **3**, **7**, and **3** keys and then you will see **বহুত** in the word prediction box. Press the **OK** key to select the word.

Press the **#** key to insert a space for the next word. Press the **8**, **1**, **2**, ***** (Virama), and **1** keys and then you will see **অচ্ছা** in the word prediction box. Press the **OK** key to select the word.

List of the combination of half and full formed consonant

ক + ক = কক	ত + ন = তন
ক + ক + ক = ককক	দ + থ = দথ
স + থ + য = সথ্য	ধ + দ = ধদ
স + ম + থ + ক = স্মথ্ক	দ + য = যদ
ট + র = টৰ	দ + ম = দম
গ + র = গৰ	শ + চ = শচ
র + গ = র্গ	শ + র = শ্ৰ
ত + ত = ত্ত	দ + দ = দ্দ

Sending an SMS message

- In Idle mode, press **Left**.
- Enter the message text.
- Press the **Options** soft key and add items using the following options:
 - Add media:** add sounds, images, or animated images.
 - Add emoticon:** add emoticons.
 - Templates:** add text templates.
- Press the **Options** soft key and select **Send**.
- Select an empty location.
- Enter a destination number and press the **OK** soft key.
- Press the **Send** soft key to send the message.

Quick feature reference

This section provides brief explanations of features on your phone.

Feature	Description	Select
View recent calls	View the most recent calls you have dialled, received, or missed.	OK > Call log > Missed calls, Received calls, or Dialed calls

Feature	Description	Select
Delete recent calls	Delete the call logs in each call type, or all logs at once.	OK > Call log > Delete all
Call time display	View the duration of recent calls you have dialled and received. Also reset the time counter.	OK > Call log > Call time
Call cost display	View the cost of your calls.	OK > Call log > Call costs
Find a contact	Search for contacts in Phonebook.	OK > Phonebook > Find name
Create an FDN list	Create a list of contacts to be used in FDN (Fixed Dialling Number) mode, in which the phone allows outgoing calls only to the specified phone numbers.	OK > Phonebook > FDN list
Add a new contact	Add a new contact to Phonebook.	OK > Phonebook > Add entry
Speed dial	Assign speed dial numbers (2 to 9) for eight of your most frequently dialled numbers.	OK > Phonebook > Speed-dial list
Check your own phone numbers	Check your phone numbers or assign a name to them.	OK > Phonebook > Own number
Manage contacts	Copy all contacts on the SIM card to the phone's memory, delete all Phonebook contacts. You can also check memory information for Phonebook contacts.	OK > Phonebook > Management
Find a contact by initials	Activate the last name and first name input fields on the contact list. You can find a contact with the initials.	OK > Phonebook > Search by initials

Feature	Description	Select
SDN (Service Dialling Numbers)	Access the list of service numbers assigned by your service provider.	OK > Phonebook > Service number
Alarm	Set an alarm to sound at a specific time.	OK > Applications > Alarm
Memo	Make memos for things that are important.	OK > Applications > New memo
Task list	Create a list of tasks and assign a deadline to each task.	OK > Applications > To do list
Time and date	Set the current time and date manually and set your local time zone.	OK > Applications > Clock
Calculator	Perform basic arithmetic functions.	OK > Applications > Calculator
Converter	Do conversions such as length and temperature.	OK > Applications > Converter
Use the SIM service	Use a variety of additional services offered by your service provider.	OK > Applications > SIM-AT
Calendar	Keep track of daily or monthly schedules.	OK > Calendar
Send SMS messages	Create and send messages to other mobile phones.	OK > Messages > Short messages > Create
Read SMS messages	Read received or sent messages.	OK > Messages > Short messages > Inbox or Outbox
Emoticon templates	Preset templates of frequently used emoticons.	OK > Messages > Short messages > Emoticon templates

Feature	Description	Select
Delete messages	Delete messages in each message folder, or all messages at once.	OK > Messages > Short messages > Delete all
Message templates	Preset templates of frequently used messages.	OK > Messages > Templates
Voicemail	Access your voicemail server and listen to messages on the network.	OK > Messages > Voice mail
Broadcast message	Change settings for the service and access broadcast messages.	OK > Messages > Broadcast
Messaging options	Set options for using messaging services.	OK > Messages > Settings
SOS message	Activate the SOS message feature. Enter recipients and select the repeat mode.	OK > Messages > SOS messages
Message memory status	Check memory information for messages.	OK > Messages > Memory status
Access media files	Access games or images in your phone's memory.	OK > My files > Game or Images
Delete all media files	Delete images in each media box, or all media files at once.	OK > My files > Delete all
Memory status	Check the amount of memory in use for sounds and images.	OK > My files > Memory status
Network services	Access network services offered by your service provider.	OK > Network services
Select ringtone and volume	Select a ringtone for incoming calls, a volume level, or an alert type.	OK > Sound settings > Incoming calls

Feature	Description	Select
Select a message tone	Select the alert ringtone and alert type for incoming SMS messages or set how often you are informed of a new message.	OK > Sound settings > Messages
Power on/off tone	Set the phone to sound when it is switched on or off.	OK > Sound settings > Power on/off
Connection tone	Set the phone to beep when a call is connected to the system.	OK > Sound settings > Connection tone
Select key tone and volume	Select a tone which the phone sounds when you press a key or adjust the key tone volume.	OK > Sound settings > Keypad tone
Minute minder	Set the phone to beep every minute during a call to keep you informed of the length of your call.	OK > Sound settings > Minute minder
Silent mode	Set how the phone acts to alert you to a specific event while in Silent mode.	OK > Sound settings > Silent mode
Alerts on call	Set the phone to alert you when you receive a new message or when the time for an alarm comes during a call.	OK > Sound settings > Alerts on call
Display settings	Change settings for the display and backlight.	OK > Phone settings > Display
Greeting message	Enter the greeting message to be displayed when the phone is switched on.	OK > Phone settings > Greeting message

Feature	Description	Select
Language selection	Select a language to be used for the display text or text input mode.	OK > Phone settings > Language
Security	Protect the phone against unauthorised use.	OK > Phone settings > Security
Mobile tracker	Track your phone when it is stolen or lost. When someone tries to use your phone with other SIM card, the phone will automatically send the preset tracking message to your family or friends.	OK > Phone settings > Security > Mobile tracker
Auto redial	Set the phone to make up to ten attempts to redial a phone number after an unsuccessful call.	OK > Phone settings > Auto redial
Voice clarity	Remove extraneous noise and increase call quality so that the other person can hear you clearly.	OK > Phone settings > Voice clarity
Anykey answer	Answer an incoming call by pressing any key, except for the Spkr on/off soft key and ৱ .	OK > Phone settings > Anykey answer
Auto keypad lock	Set the phone to automatically lock the keypad in times of inactivity.	OK > Phone settings > Auto keypad lock
Reset the phone	Reset the phone to the factory default settings.	OK > Phone settings > Reset settings

| Feature | Description | Select |
</tr
| --- | --- | --- |