

Mobile Phone user manual

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

www.samsungmobile.com

Printed in Korea
Code No.:GH68-19444A
English (IND). 07/2008. Rev. 1.0

SAMSUNG



Safety warnings

Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phone in a fire. Follow all local regulations when disposing used batteries or phone.
- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless

Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

Reduce the risk of repetitive motion injuries

When sending text messages or playing games on your phone, hold the phone with a relaxed grip, press the buttons lightly, use special features that reduce the number of buttons you have to press (such as templates and predictive text), and take frequent breaks.



Safety precautions

Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

Turn off the phone near medical equipment

 
Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.



Important usage information

Use your phone in the normal position

Avoid contact with your phone's internal antenna.

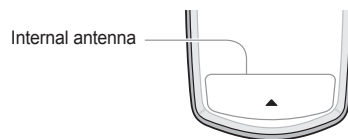

Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

Handle SIM cards with care

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Ensure access to emergency services

Emergency calls from your phone may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

SAR information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the European Union (EU) Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies.

 
The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit set by the EU Council is 2.0 W/kg.*

The highest SAR value for this model phone was 0.491 W/kg.

*. The SAR limit for mobile phones used by the public is 2.0 watts/ kilogram (W/kg) averaged over ten grams of body tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. The SAR values may vary, depending on national reporting requirements and the network band.

Phone layout

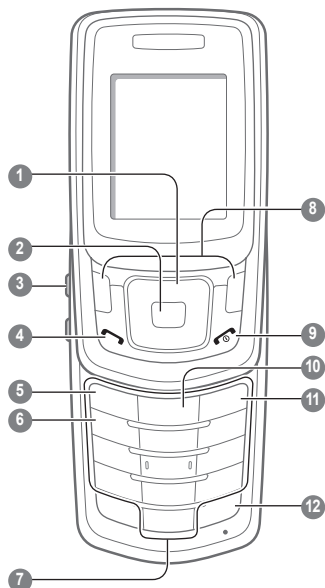

1

4-way navigation key

In Idle mode, access user-defined menus; In Menu mode, scroll through menu options

2

Web access/Confirm key

In Idle mode, access the web browser; In Menu mode, select the highlighted menu option or confirm an input

3

Volume key

In Idle mode, adjust the key tone volume; Send an SOS message
▶ Activate and send an SOS message

4

Dial key

Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers;

5

My Menu key

In Idle mode, access My Menu mode

6

Voice mail service key

In Idle mode, access voice mails (press and hold)

7

Alphanumeric keys

8

Softkeys

Perform actions indicated at the bottom of the display

9

Power/Menu exit key

Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode

10

Delete key

Delete characters

11

FM radio key

In Idle mode, access the FM radio

12

Silent mode key

In Idle mode, activate or deactivate Silent mode (press and hold)

Your phone displays the following status indicators on the top of the screen:


Icon	Description
	Signal strength
	GPRS network connected
	Call in progress
	Connecting to secured web page
	Connected with PC
	New message
	SOS message feature activated
	Alarm activated
	FM radio on
	Silent mode activated (set to vibrate)
	Silent mode activated (muted)
	Ringer mode: vibration
	Whisper mode activated (during a call)
	Mute mode activated (during a call)
	Battery power level




- Use either a 3.5 mm headset or S20 pin headset for listening to the radio. However, the sound quality may be different.
- While listening to the radio with a 3.5 mm headset, do not connect the travel adapter or PC data cable to your phone. The adapter or cable may interrupt the headset's function as a radio antenna.

Install the SIM card and battery

 1. Remove the battery cover and insert the SIM card.

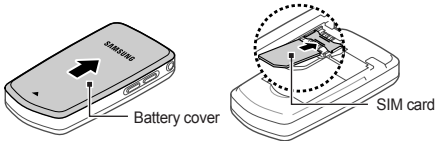

 2. Insert the battery and replace the battery cover.

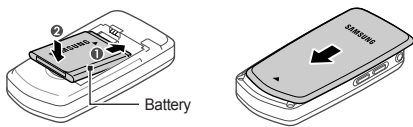


Charge the battery





1. Plug the supplied travel adapter.

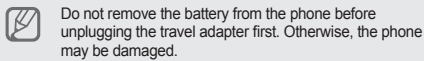

2. When charging is finished, unplug the travel adapter.




Instructional icons

	Note: notes, usage tips, or additional information
	Followed by: the order of options or menus you must select to perform a step; for example: Press <Menu> → Messages (represents Menu , followed by Messages)
	Square brackets: phone keys; for example: [Power] (represents the Power/Menu exit key)
	Angled brackets: softkeys that control different functions at each screen; for example: < OK > (represents the OK softkey)

Symbol mode


Press the appropriate alphanumeric key to select a symbol.

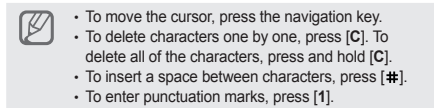

Neopad Indian Mode

To enter a character in the Neopad Hindi mode:

1. Press a corresponding key to access the Virtual Keypad that contains a character you want.
 - The characters will appear in the Virtual Keypad at the bottom of the display.
 - If you want to know which key is assigned to which Hindi character group, see the table of "List of the characters available in Hindi."
2. Press the corresponding key 1 to 5 to enter a character, or press the * key to toggle a virtual keypad page to Virama.

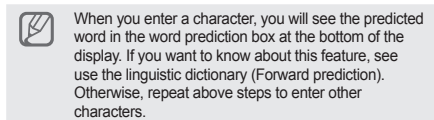

Add a new contact

1. In Idle mode, enter a phone number and press <Options>.
2. Select **Save contact** → a memory location (phone or SIM) → **New**.
3. Select a number type (if necessary).
4. Enter contact information.
5. Press <Save> or [OK] to add the contact to memory.

Send and view messages

To send a text message

1. In Idle mode, press <Menu> → **Messages** → **Create message** → **Text message**.
2. Enter the message text.
3. Press <Options> → **Save and send** or **Send only**.
4. Enter a destination number.
5. Press <Options> → **Send** to send the message.

To view text messages


1. In Idle mode, press <Menu> → **Messages** → **My messages** → **Inbox**.
2. Select a text message.

Turn your phone on or off

1. To turn your phone on, press and hold [**Power**].
2. To turn your phone off, press and hold [**Power**].

Make a call

1. In Idle mode, enter an area code and a phone number.
2. Press [**Call**] to dial the number.
3. To end the call, press [**End**].

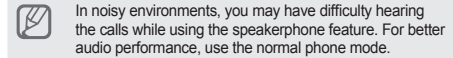

Answer a call

1. When a call comes in, press [**Answer**].
2. To end the call, press [**End**].

Key 1~7: Consonant Groups

Key 8: Independent Vowel Group

Key 9: Dependent Vowel Group

Key 0: Signs & Symbols

Example

To enter **कम** (made up of half character), press the 1, * (Virama), 1, 5, and 5 keys.

Example

To enter **किए** (क + ि + ए), press the 1, 1, 9, 2, 8, * (toggles the page), and 2 keys.

Adjust the volume

To adjust the volume of the ringtone

1. In Idle mode, press <Menu> → **Settings** → **Sound settings** → **Incoming call** → **Call alert volume**.
2. Scroll left or right to adjust the volume level.
3. Press <Save>.

To adjust the volume of voice during a call

While a call is in progress, press the Volume key to adjust the earpiece volume.

Change your ringtone

1. In Idle mode, press <Menu> → **Settings** → **Sound settings** → **Incoming call** → **Ringtone**.
2. Select a ringtone category → a ringtone.
3. Press <Save>.

Call a recently dialed number

1. In Idle mode, press [**Recent**].
2. Scroll left or right to select a call type.
3. Scroll up or down to select a number or name.
4. Press [OK] to view details of the call or [**Call**] to dial the number.

Use the linguistic dictionary (Forward prediction)

1. Enter the first character of the word you want.
 - You will see a word starting with the character you entered in the word prediction box at the bottom of the display.
2. If that word is correct, go to step 3.
 - Alternatively, scroll up or down to search for the word you want.
3. Press [OK] to select it.

Example

To enter **बहुत अच्छा** (ब + ह + ु + त + space + अ + च + ् + छ + ा) using the linguistic dictionary,

1. Press the 5, 3, 7, and 3 keys.
 - You will see **बहुत** in the word prediction box.
2. Press [OK] to select the word.
3. Press the key to insert a space for the next word.
4. Press the 8, 1, 2, * (Virama), and 1 keys.
 - You will see **अच्छा** in the word prediction box.
5. Press [OK] to select the word.

Enter text

To change the text input mode

- Press and hold [*] to select an input mode. Depending on your region, you may be able to access an input mode for your specific language.
- Press [*] to change case.
- Press and hold [#] to switch to Symbol mode.

T9 mode

1. Press the appropriate alphanumeric keys to enter an entire word.
2. When the word displays correctly, press [#] to insert a space. If the correct word does not display, press [0] to select an alternative word.

ABC mode

Press the appropriate alphanumeric key until the character you want appears on the display.

Number mode

Press the appropriate alphanumeric key to enter a number.

List of the characters available in Hindi

Key	Characters in the order displayed	
	Press the key	And press the * key
1	क ख ग घ ङ	क ख ग घ ङ
2	च छ ज झ ञ	च छ ज झ ञ
3	ट ठ ड ढ ण	ट ठ ड ढ ण
4	त थ द ध न	त थ द ध न
5	प फ ब भ म	प फ ब भ म
6	य र ल व श	य र ल व श
7	ष स ह क्ष त्र	ष स ह क्ष त्र
8	अ आ इ ई उ	ऊ ए ऐ ओ औ
9	ा ि िी ु ू	े ै ी ो ू
0	ँ ं ः ऋ ॠ	। ॥ ० १
*	्	Virama (togles a virtual keypad page)

Activate the mobile tracker

This feature helps track your phone when it is stolen or when someone tries to use your phone using other SIM card, the phone will automatically send the preset tracking message to family or friends. This feature may be unavailable due to certain features supported by your service provider.

1. In Idle mode, press <Menu> → **Settings** → **Security** → **Mobile tracker 2.0**.
2. Enter your password and press <OK>.
3. Confirm your password and press <OK>.
4. Scroll left or right to **ON**.
5. Scroll down and press [OK] to open the recipient list.
6. Press <Options> → **Phonebook** to open your contact list.
7. Scroll to a contact and press [OK].
8. When you are finished selecting contacts, press <Options> → **Ok** to return to the recipient list.
9. Press <Options> → **Save** to save the recipients.
10. Scroll down and enter the sender's name.
11. Press <Options> → **Save** → <Accept>.

Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

To activate the SOS message

1. In Idle mode, press <Menu> → **Messages** → **SOS messages** → **Sending options**.
2. Scroll left or right to **On**.
3. Scroll down and press [OK] to open the recipient list.
4. Press [OK] to open your contact list.
5. Scroll to a contact and press [OK].
6. When you are finished selecting contacts, press <Options> → **Ok** to return to the recipient list.
7. Press <Options> → **OK** to save the recipients.
8. Scroll down and set the number of times to repeat the SOS message.
9. Press <Save> → <Yes>.

To send an SOS message

1. With the phone slid down, press the Volume key four times to send an SOS message to preset numbers.
 - The phone switches to SOS mode and sends the preset SOS message.
2. To exit SOS mode, press [**End**].

Set and use alarms

To set a new alarm

1. In Idle mode, press <Menu> → **Applications** → **Alarm**.
2. Scroll to an empty alarm location and press [OK].
3. Set alarm details.
4. Press <Save>.

To stop an alarm

When the alarm sounds,

- Press any key to stop an alarm without snooze.
- Press <Confirm> or [OK] to stop an alarm with snooze, or press <Snooze> or any key to silence the alarm for the snooze period.

To deactivate an alarm

1. In Idle mode, press <Menu> → **Applications** → **Alarm**.
2. Scroll to the alarm you want to deactivate and press [OK].
3. Scroll down (if necessary).
4. Scroll left or right to **Off**.
5. Press <Save>.

