

Mobile Phone user manual

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

Bluetooth ID : B015043

www.samsungmobile.com

Printed in China
Code No.: GH68-21999A
English. 02/2009. Rev. 1.0

SAMSUNG



WARNING

Safety warnings

Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone.
- Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phone in a fire. Follow all local regulations when disposing used batteries or phone.
- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research.

If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

Reduce the risk of repetitive motion injuries

When sending text messages or playing games on your phone, hold the phone with a relaxed grip, press the buttons lightly, use special features that reduce the number of buttons you have to press (such as templates and predictive text), and take frequent breaks.



CAUTION

Safety precautions

Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Store the battery pack in a dry place.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Handle UIM cards and memory cards with care

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Ensure access to emergency services

Emergency calls from your phone may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

Handle your phone carefully and sensibly

- Do not allow your phone to get wet—liquids can cause serious damage. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.
- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.
- Your phone and memory cards may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

Avoid interference with other electronic devices

Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.

Specific Absorption Rate (SAR) certification information

 
Your phone conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile phones that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 watts per kilogram of body tissue.



Important usage information

Use your phone in the normal position


Avoid contact with your phone's internal antenna.

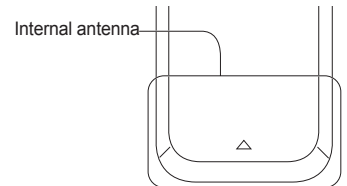

Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

 Phone layout

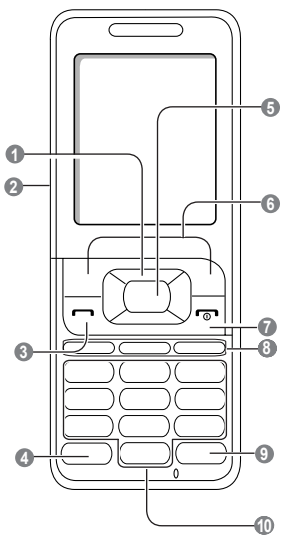

1
4-way navigation key
In Idle mode, access default menus; In Menu mode, scroll through menu options

2
Volume key
In Idle mode, activate or deactivate the Outdoor profile (up; press and hold) or adjust the key tone volume; Send an SOS message
▶ *Activate and send an SOS message*

3
Dial key
Make or answer a call; In Idle mode, retrieve recently dialled, missed, or received numbers

4
Keypad lock key
In Idle mode, lock the keys (press and hold)

5
Confirm key
In Menu mode, select the highlighted menu option or confirm an input

6
Soft keys
Perform actions indicated at the bottom of the display

7
Power/Menu exit key
Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode

8
Music player key
In Idle mode, launch the music player

9
Silent profile key
In Idle mode, activate or deactivate the Silent profile (press and hold)


10
Alphanumeric keys

Your phone displays the following status indicators on the top of the screen:

Icon	Description
	Signal strength
	Call in progress
	Transferring data via 1X network
	SOS message feature activated
	Alarm activated
	New text message (SMS)
	Bluetooth activated
	Normal profile activated
	Silent profile activated
	Driving profile activated
	Meeting profile activated
	Outdoor profile activated
	Offline profile activated
	Battery power level

Install the UIM card and battery

 1. Remove the battery cover and insert the UIM card.
2. Insert the battery and replace the battery cover.



Charge the battery

1. Plug the supplied travel adapter.
2. When charging is finished, unplug the travel adapter from the phone.



Do not remove the battery from the phone before unplugging the travel adapter first. Otherwise, the phone may be damaged.

Instructional icons

	Note ; notes, usage tips, or additional information
	Followed by ; the order of options or menus you must select to perform a step; for example: Press <Menu> → Messages (represents Menu , followed by Messages)
	Square brackets ; phone keys; for example: (represents the Power/Menu exit key)
	Angled brackets ; softkeys that control different functions at each screen; for example: <OK> (represents the OK softkey)

Turn your phone on or off

1. To turn your phone on, press and hold .
2. To turn your phone off, press and hold .

Make a call

1. In Idle mode, enter an area code and a phone number.
2. Press to dial the number.
3. To end the call, press .

Answer a call

1. When a call comes in, press .
2. To end the call, press .

Send and view messages

Send a text message

1. In Idle mode, press <Menu> → **Messages** → **Create new message** → **Text messages**.
2. Enter the destination number and scroll down.
3. Enter your message text.
4. Press <Options> → <Send> to send the message.

View text messages

1. In Idle mode, press <Menu> → **Messages** → **Inbox**.
2. Select a text message.

Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

To activate the SOS message

1. In Idle mode, press <Menu> → **Settings** → **Message settings** → **SOS messages** → **Sending options**.
2. Scroll left or right to **On**.
3. Scroll down and press [OK] to open the recipient list.
4. Press <Options> → **Phonebook** to open your contact list.
5. Scroll to a contact and press [OK].
6. Press <Select> to select a number.

Adjust the volume

To adjust the volume of the ringtone

1. In Idle mode, press < Menu > → **Settings** → **Phone settings** → **Phone profiles**.
2. Scroll to the phone profile you are using.
3. Press <Options> → **Edit**.
4. Select **Ringtone volume**.
5. Scroll left or right to adjust the volume level.
6. Press <Select>.
7. Press <Options> → **Save**.

To adjust the volume of voice during a call

While a call is in progress, press the Volume key up or down to adjust the earpiece volume.

Change your ringtone

1. In Idle mode, press < Menu > → **Settings** → **Phone settings** → **Phone profiles**.
2. Scroll to the phone profile you are using.
3. Press <Options> → **Edit**.
4. Select **Voice call ringtone**.
5. Select a ringtone category → a ringtone.
6. Press <Select>.
7. Press <Options> → **Save**.

7. Press <Options> → **Save** to save the recipient.
8. Scroll down and set the number of times to repeat the SOS message.
9. Press <Save> → <Yes>.

To send an SOS message

1. With the keys locked, press the Volume key four times to send an SOS message to preset numbers. The phone switches to SOS mode and sends the preset SOS message.
2. To exit SOS mode, press .

Use the camera

Capture photos

1. In Idle mode, press <Menu> → **Camera**.
2. Aim the lens at the subject and make any adjustments.
3. Press [OK] to take a photo.
The photo is saved automatically.

View photos

In Idle mode, press <Menu> → **My files** → **Phone memory** → **Images** → a photo file.

Call a recently dialled number

1. In Idle mode, press .
2. Scroll left or right to select a call type.
3. Scroll up or down to select a number or name.
4. Press the Confirm key to view details of the call or to dial the number.

Enter text

To change the text input mode

- Press and hold to switch to an input mode.
- Press to select to an input mode.
- Press to change case in T9 English or ABC mode.
- Press and hold to switch to Symbol mode.

T9 English mode

1. Press the appropriate alphanumeric keys to enter an entire word.
2. When the word displays correctly, press [0] to insert a space. If the correct word does not display, press the navigation key down to select an alternate word.

ABC mode

Press the appropriate alphanumeric key until the character you want appears on the display.

Hinglish mode

Press the appropriate alphanumeric key to enter a

Listen to music

1. In Idle mode, press <Menu> → **Music player**.
2. Select a music category → a music file.
3. Control playback using the following keys:

Key	Function
OK	Pause or resume playback
Volume	Adjust the volume up or down
Navigation	• Left: Restart playback; Skip backward (press within 3 seconds); Scan backward in a file (press and hold) • Right: Skip forward; Scan forward in a file (press and hold) • Up: Open the playlist • Down: Stop playback

Activate the mobile tracker

This feature helps track your phone when it is stolen or when someone tries to use your phone using other UIM card, the phone will automatically send the preset tracking message to registered family members or friends. This feature may be unavailable due to certain features supported by your service provider.

1. In Idle mode, press <Menu> → **Settings** → **Security settings** → **Mobile tracker 2.0**.
2. Enter your phone password for the phone and press [OK].
3. Select **Settings**.
4. Enter a new 8-digit password for the mobile tracker and press [OK].

Hinglish word, which is made by combination of Hindi and English according to Hindi grammar.

Number mode

Press the appropriate alphanumeric key to enter a number.

Symbol mode

Press the navigation key and then appropriate alphanumeric key to select a symbol.



- To move the cursor, press the navigation key.
- To delete characters one by one, press <Clear>. To delete the characters on the left side of the cursor, press and hold <Clear>.
- To insert a space between characters, press [0].
- To enter punctuation marks in T9 English mode, press [1].

Add a new contact

1. In Idle mode, enter a phone number and press <Options> → **Save** → a memory location (phone or UIM).
2. Enter a contact information.
3. Press <Options> → <Save> to add the contact to memory.

5. Enter the new password again and press [OK].
6. Scroll left or right to **On**.
7. Scroll down and press <Options> → **Phonebook** to open your contact list.
8. Select a contact.
9. Select a number (if necessary).
10. When you are finished selecting contacts, press <Select> to save the recipients.
11. Scroll down and enter the sender's name.
12. Press <Options> → **Save**.



By setting the options in **Access remote phone**, you can get contacts, delete data, forward calls, and get location information of the remote phone.