

**Warning: Prevent electric shock, fire, and explosion**

**Do not use damaged power cords or plugs, or loose electrical sockets**

**Do not touch the power cord with wet hands, or disconnect the charger by pulling on the cord**

**Do not bend or damage the power cord**

**Do not use your device while charging or touch your device with wet hands**

**Do not short-circuit the charger or the battery**

**Do not drop or cause an impact to the charger or the battery**

**Do not charge the battery with chargers that are not approved by the manufacturer**

**Do not use your device during a thunderstorm**

Your device may malfunction and your risk of electric shock is increased.

**Do not handle a damaged or leaking Lithium Ion (Li-Ion) battery**  
For safe disposal of your Li-Ion batteries, contact your nearest authorised service centre.

**Handle and dispose of batteries and chargers with care**

- Use only Samsung-approved batteries and chargers specifically designed for your device. Incompatible batteries and chargers can cause serious injuries or damage to your device.
- Never dispose of batteries or devices in a fire. Follow all local regulations when disposing of used batteries or devices.
- Never place batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

- Some of the contents in this manual may differ from your phone depending on the software of the people or your service provider.
- Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time.

www.samsung.com

Printed in Korea

CH68-36062A

English (IND), 04/2012, Rev. 1.1



- Use your device to help others in emergencies. If you see an auto accident, a crime in progress, or a serious emergency where lives are in danger, call a local emergency number.
- Call roadside assistance or a special, non-emergency assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or another special, non-emergency number.

**Proper care and use of your mobile device****Keep your device dry**

- Humidity and all types of liquids may damage device parts or electronic circuits.
- Do not turn on your device if it is wet. If your device is already on, turn it off and remove the battery immediately (if the device will not turn off or you cannot remove the battery, leave it as-is). Then, dry the device with a towel and take it to a service centre.
- Liquids will change the colour of the label that indicates water damage inside the device. Water damage to your device can void your manufacturer's warranty.

**Do not use or store your device in dusty, dirty areas**

Dust can cause your device to malfunction.

**Do not store your device on slopes**

If your device falls, it can be damaged.

**Do not store your device in hot or cold areas. Use your device at -20 °C to 50 °C**

- Your device can explode if left inside a closed vehicle, as the inside temperature can reach up to 80 °C.
- Do not expose your device to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Store the battery at 0 °C to 40 °C.

**Do not store your device with such metal objects as coins, keys and necklaces**

- Your device may become deformed or malfunction.
- If the battery terminals are in contact with metal objects, it may cause a fire.

**Do not store your device near magnetic fields**

- Your device may malfunction or the battery may discharge from exposure to magnetic fields.
- Magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic fields.
- Do not use carrying cases or accessories with magnetic closures or allow your device to come in contact with magnetic fields for extended periods of time.

**Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers**

- The battery may leak.
- Your device may overheat and cause a fire.

**Do not drop your device or cause impacts to your device**

- The screen of your device may be damaged.
- If bent or deformed, your device may be damaged or parts may malfunction.

**Do not use your device or applications for a while if the device is overheated**

Prolonged exposure of your skin to an overheated device may cause low temperature burn symptoms, such as red spots and pigmentation.

**If your phone has a camera flash or light, do not use a flash close to the eyes of people or animals**

Using a flash close to the eyes may cause temporary loss of vision or damage to the eyes.

**Use caution when exposed to flashing lights**

- While using your device, leave some lights on in the room and do not hold the screen too close to your eyes.
- Seizures or blackouts can occur when you are exposed to flashing lights while watching videos or playing Flash-based games for extended periods. If you feel any discomfort, stop using the device immediately.

**Protect the device, batteries, and chargers from damage**

- Avoid exposing your device and batteries to very cold or very hot temperatures.
- Extreme temperatures can cause the deformation of the device and reduce the charging capacity and life of your device and batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

**Caution: Follow all safety warnings and regulations when using your device in restricted areas****Turn off your device where prohibited**

Comply with all regulations that restrict the use of a mobile device in a particular area.

**Do not use your device near other electronic devices**

Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices.

**Do not use your device near a pacemaker**

- Avoid using your device within a 15 cm range of a pacemaker if possible, as your device can interfere with the pacemaker.
- If you must use your device, keep it at least 15 cm away from the pacemaker.
- To minimise the possible interference with a pacemaker, use your device on the opposite side of your body from the pacemaker.

**Do not use your device in a hospital or near medical equipment that can be interfered with by radio frequency**

If you personally use any medical equipment, contact the manufacturer of the equipment to ensure the safety of your equipment from radio frequency.

**Reduce the risk of repetitive motion injuries**

When you repetitively perform actions, such as pressing keys, drawing characters on a touch screen with your fingers, or playing games, you may experience occasional discomfort in your hands, neck, shoulders, or other parts of your body. When using your device for extended periods, hold the device with a relaxed grip, press the keys lightly, and take frequent breaks. If you continue to have discomfort during or after such use, stop use and see a physician.

**Ensure maximum battery and charger life**

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purposes.

**Use manufacturer-approved batteries, chargers, accessories and supplies**

- Using generic batteries or chargers may shorten the life of your device or cause the device to malfunction.
- Samsung cannot be responsible for the user's safety when using accessories or supplies that are not approved by Samsung.

**Do not bite or suck on the device or the battery**

- Doing so may damage the device or cause explosion.
- If children use the device, make sure that they use the device properly.

**When speaking on the device:**

- Hold the device upright, as you would with a traditional phone.
- Speak directly into the mouthpiece.
- Avoid contact with your device's internal antenna. Touching the antenna may reduce the call quality or cause the device to transmit more radio frequency than necessary.

**If you are using a hearing aid, contact the manufacturer for information about radio interference**

Some hearing aids may be interfered with by the radio frequency of your device. Contact the manufacturer to ensure the safety of your hearing aid.

**Turn off the device in potentially explosive environments**

- Turn off your device in potentially explosive environments instead of removing the battery.
- Always comply with regulations, instructions and signs in potentially explosive environments.
- Do not use your device at refuelling points (service stations), near fuels or chemicals, and at blasting areas.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

**Turn off your device when in an aircraft**

Using your device in an aircraft is illegal. Your device may interfere with the electronic navigation instruments of the aircraft.

**Electronic devices in a motor vehicle may malfunction due to the radio frequency of your device**

Electronic devices in your car may malfunction due to radio frequency of your device. Contact the manufacturer for more information.

**Do not use a headset while operating an automobile, motorcycle, or bicycle**

- Doing so can lead to a serious accident and may be prohibited by law in some areas.
- Using a headset while walking or jogging on roads or in crosswalks can lead to a serious accident.

**Protect your hearing and ears when using a headset**

- Excessive exposure to loud sounds can cause hearing damage.
- Exposure to loud sounds while driving may distract your attention and cause an accident.
- Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.
- In dry environments, static electricity can build up in the headset. Avoid using headsets in dry environments or touch a metal object to discharge static electricity before connecting a headset to the device.

**Use caution when using the device while walking or moving**

Always be aware of your surroundings to avoid injury to yourself or others.

**Do not carry your device in your back pockets or around your waist**

You can be injured or damage the device if you fall.

**Do not disassemble, modify, or repair your device**

- Any changes or modifications to your device can void your manufacturer's warranty. For service, take your device to a Samsung Service Centre.
- Do not disassemble or puncture the battery, as this can cause explosion or fire.

**Do not paint or put stickers on your device**

Paint and stickers can clog moving parts and prevent proper operation. If you are allergic to paint or metal parts of the product, you may experience itching, eczema, or swelling of the skin. When this happens, stop using the product and consult your physician.

**When cleaning your device:**

- Wipe your device or charger with a towel or an eraser.
- Clean the terminals of the battery with a cotton ball or a towel.
- Do not use chemicals or detergents.

**Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle**

While driving, safely operating the vehicle is your first responsibility. Never use your mobile device while driving, if it is prohibited by law. For your safety and the safety of others, practice good common sense and remember the following tips:

- Use a hands-free device.
- Get to know your device and its convenience features, such as speed dial and redial. These features help you reduce the time needed to place or receive calls on your mobile device.
- Position your device within easy reach. Be able to access your wireless device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, let your voice mail answer it for you.
- Let the person you are speaking with know you are driving. Suspend calls in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and heavy traffic can be hazardous.
- Do not take notes or look up phone numbers. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility of driving safely.
- Dial sensibly and assess the traffic. Place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call, dial only a few numbers, check the road and your mirrors, then continue.
- Do not engage in stressful or emotional conversations that may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road.
- Use your device to call for help. Dial a local emergency number in the case of fire, traffic accident, or medical emergencies.

**Do not use the device if the screen is cracked or broken**

Broken glass or acrylic could cause injury to your hands and face. Take the device to a Samsung Service Centre to have it repaired.

**Do not use the device for anything other than its intended use****Avoid disturbing others when using the device in public****Do not allow children to use your device**

Your device is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the device, or make calls that increase your charges.

**Install mobile devices and equipment with caution**

- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.
- Avoid placing your device and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

**Allow only qualified personnel to service your device**

Allowing unqualified personnel to service your device may result in damage to your device and will void your manufacturer's warranty.

**Handle SIM or UIM cards or memory cards with care**

- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

**Ensure access to emergency services**

Emergency calls from your device may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternative method of contacting emergency services personnel.

**Keep your personal and important data safe**

- While using your device, be sure to back up important data. Samsung is not responsible for data loss.
- When disposing of your device, back up all data and then reset your device to prevent misuse of your personal information.

**Do not distribute copyright-protected material**

Do not distribute copyright-protected material that you have recorded to others without the permission of the content owners. Doing this may violate copyright laws. The manufacturer is not liable for any legal issues caused by the user's illegal use of copyrighted material.

**Specific Absorption Rate (SAR) certification information**

Your device conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile devices that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 W/kg.

In normal use, the actual SAR is likely to be much lower, as the device has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your device reduces your overall exposure to RF energy.

For more information about the SAR and related EU standards, visit the Samsung website.

**Correct disposal of this product**

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

This EEE is compliant with RoHS.

 
**Correct disposal of batteries in this product**

(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life.

Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

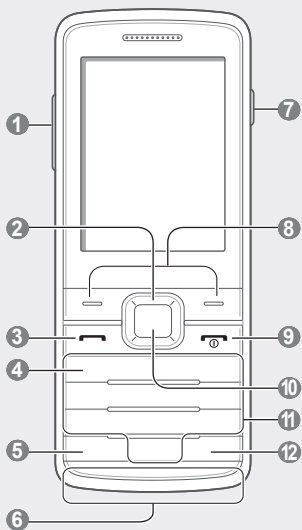**Phone layout**

**1**

**Volume key**

In Idle mode, adjust the phone's volume; In Menu mode, scroll through menu options; Send an SOS message

See "Activate and send an SOS message"

**2**

**4-way navigation key**

In Idle mode, access user-defined menus; In Menu mode, scroll through menu options; Make a fake call (down)

See "Make fake calls"

Depending on your service provider, pre-defined menus may differ

**3**

**Dial key**

Make or answer a call; In Idle mode, retrieve logs of your calls and messages

**4**

**Voice mail service key**

In Idle mode, access voice mails (press and hold)

This feature is available only for a GSM network

**5**

**Keypad lock key**

In Idle mode, lock or unlock the keypad (press and hold)

**6**

**Internal antenna**

**7**

**Network switch key**

In Idle mode, select a primary network; In Camera mode, take a photo or record a video

**8**

**Softkeys**

Perform actions indicated at the bottom of the display

**9**

**Power/End key**

Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode

**10**

**Confirm key**

In Idle mode, launch the web browser; In Menu mode, select the highlighted menu option or confirm an input

Depending on your service provider or region, the key may perform differently

**11**

**Alphanumeric keys**

**12**

**Silent profile key**

In Idle mode, activate or deactivate the silent profile (press and hold)

 
Your phone displays the following status indicators on the top of the screen:

Icon	Description	Icon	Description
	1X network connected		New email message
	EVDO network connected		Urgent text message
	GSM network connected		Connected to secured web page
	Active SIM or UIM card slot <sup>1</sup>		Bluetooth activated
	Call in progress		Normal profile activated
	SOS message feature activated		Silent profile activated
	Roaming (outside of normal service area)		Battery power level
	Alarm activated		10:00 Current time
	Memory card inserted		
	New text message (SMS)		
	New multimedia message (MMS)		


- This icon may vary depending on your SIM card setting.

## Install the SIM or UIM card and battery


- Remove the back cover and insert the SIM or UIM card.

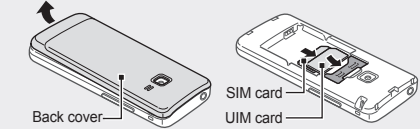

 
- Insert the battery and replace the back cover.

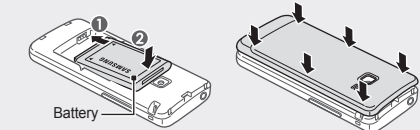


## Charge the battery

-  If the battery is completely discharged, you cannot turn on the device, even with the travel adapter connected. Allow a depleted battery to charge for a few minutes before you try to turn on the device.

 - Plug a travel adapter into the multifunction jack.
- When charging is finished, unplug the travel adapter.

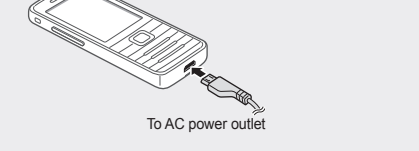

-  Do not remove the battery before removing the travel adapter. Doing this may cause damage to the phone.
- To save energy, unplug the travel adapter when not in use. The travel adapter does not have a power switch, so you must unplug the travel adapter from the outlet when not in use to avoid wasting power. The travel adapter should remain close to the socket when in use.

### To activate the SIM or UIM card

- In Menu mode, select **Settings** → **Dual standby settings** → **Network settings**. You can also press and hold [⏏] in Idle mode.
- Scroll left or right to a SIM or UIM card and scroll down to the card slot.
- Press the Confirm key to turn the card slot on or off.
- Press <Save>.

### To select a primary network

- In Menu mode, select **Settings** → **Dual standby settings** → **Primary network**. You can also press [⏏] in Idle mode.
- Scroll left or right to a SIM or UIM card.
- Press <Save>.

### To change the names and icons of the cards

- In Menu mode, select **Settings** → **Dual standby settings** → **Register card**.
- Scroll left or right to a SIM or UIM card.
- Change the name and the icon of the card and press <Save>.
- Repeat steps 2-3 for another SIM or UIM card.

## Make a call

- In Idle mode, enter an area code and a phone number.
- Press [↔] to dial the number.
- To end the call, press [⏏].

## Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

### To activate the SOS message

- In Menu mode, select **Messages** → **Settings** → **SOS messages** → **Sending options**.
- Scroll left or right to **On** to turn on the SOS messaging feature.
- Select **Recipient** to open the recipient list.
- Scroll down and press <Options> → **Phonebook** to open your contact list. You can also enter phone numbers including a country code (with +) in the recipient list. Skip to step 7.
- Select a contact.
- Select a number (if necessary).
- When you are finished setting the recipients, press the Confirm key to save the recipients.
- Scroll down to **Repeat** and scroll left or right to select the number of times to repeat the SOS message.
- Press <Save> → <Yes>.

### To send an SOS message

- With the keys locked, press the Volume key four times to send an SOS message to preset numbers. The phone switches to SOS mode and sends the preset SOS message.
- To exit SOS mode, press [⏏].

## Call a recently dialed number

- In Idle mode, press [↔] to display a list of recent numbers.
- Scroll left or right to a call type.
- Scroll up or down to a number or name.
- Press the Confirm key to view details of the call or [↔] to dial the number.


## Answer a call

- When a call comes in, press [↔].
- To end the call, press [⏏].

## Adjust the volume

### To adjust the volume of the ringtone


- In Menu mode, select **Settings** → **Phone profiles**.
- Scroll to the profile you are using.

-  If you are using the silent or offline profile, you are not allowed to adjust the volume of the ringtone.

 
- Press <Options> → **Edit**.
- Scroll left or right to select **Incoming calls** for the appropriate network.
- Select **Ringtone volume**.
- Scroll left or right to adjust the volume level and press <Select>.

## Insert a memory card (optional)

Your phone accepts microSD™ or microSDHC™ memory cards up to 16 GB (depending on memory card manufacturer and type).

-  Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.
- Frequent writing and erasing of data will shorten the lifespan of memory cards.


- Open the cover of the memory card slot.
- Insert a memory card with the gold-coloured contacts facing down.

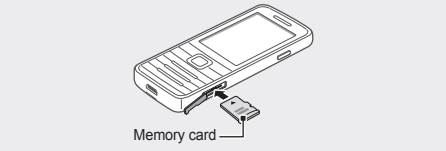

- Push the memory card in the memory card slot until it locks in place.
- Close the cover of the memory card slot.

### To adjust the volume of voice during a call

 While a call is in progress, press the Navigation key up or down to adjust the volume.

-  In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

## Change your ringtone

- In Menu mode, select **Settings** → **Phone profiles**.
- Scroll to the profile you are using.

Press an appropriate alphanumeric key until the character you want appears on the display.

- Numeric mode**

Press an appropriate alphanumeric key to enter a number.

- Symbol mode**

- Press <Options> → **Edit**.
- Scroll left or right to select **Incoming calls** for the appropriate network.
- Select **Voice call ringtone**.
- Select a ringtone category → a ringtone.
- Press <Select>.


 
To switch to another profile, select it from the list.

## Enter text

### To change the text input mode

- Press and hold [#] to switch between T9 and ABC modes.
- Press [#] to change case or switch to Numeric mode.
- Press [✖] to switch to Symbol mode.
- Press and hold [✖] to select an input mode or change the input language.


## Instructional icons

	<b>Note:</b> notes, usage tips, or additional information
	<b>Followed by:</b> the order of options or menus you must select to perform a step; for example: In Menu mode, select <b>Messages</b> → <b>Create message</b> (represents <b>Messages</b> , followed by <b>Create message</b> )
[ ]	<b>Square brackets:</b> phone keys; for example: [⏏] (represents the Power/End key)
< >	<b>Angled brackets:</b> softkeys that control different functions at each screen; for example: <OK> (represents the <b>OK</b> softkey)

## Turn your phone on or off

To turn your phone on,

- Press and hold [⏏].
- Enter your PIN and press <OK> (if necessary).
- When the setup wizard opens, customise your phone as desired by following the screen.


-  If the battery remains fully discharged or removed from the device, the time and date will be reset.

To turn your phone off, repeat step 1 above.


## Access menus

To access your phone's menus,

- In Idle mode, press <Menu> to access Menu mode.

-  You may need to press the Confirm key to access Menu mode depending on your region or service provider.

- Use the Navigation key to scroll to a menu or option.
- Press <Select> or the Confirm key to confirm the highlighted option.
- Press <Back> to move up one level; Press [⏏] to return to Idle mode.

-  When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

## Switch networks

Once you insert SIM or UIM cards, you can switch back and forth between each network and select a primary SIM or UIM card.

### To switch networks

From any of the phone's menus (not in Idle mode), press [⏏]. You cannot switch networks while the device is sending or receiving messages or data.

## Send and view messages

### To send a text or multimedia message

- In Menu mode, select **Messages** → **Create message**.
- Enter a recipient number and scroll down.
- Enter the message text. *See "Enter text."* For sending as a text message, skip to step 5. For attaching multimedia, continue with step 4.
- Press <Options> and add an item.
- Press the Confirm key → **Send** to send the message.

## Send and view messages

### To send a text or multimedia message

- In Menu mode, select **Messages** → **Create message**.
- Enter a recipient number and scroll down.
- Enter the message text. *See "Enter text."* For sending as a text message, skip to step 5. For attaching multimedia, continue with step 4.
- Press <Options> and add an item.
- Press the Confirm key → **Send** to send the message.

### To view a text or multimedia messages

- In Menu mode, select **Messages** → **Inbox**.
- Select a text or multimedia message.

## Make fake calls

You can simulate an incoming call when you want to get out of meetings or unwanted conversations.

### To make a fake call

In Idle mode, press and hold the Navigation key down.

### To change the delay time before fake calls

In Menu mode, select **Settings** → **Application settings** → **Call** → **Fake call** → **Fake call timer**.

## Use the camera

### To activate the SOS message

- In Menu mode, select **Messages** → **Settings** → **SOS messages** → **Sending options**.
- Scroll left or right to **On** to turn on the SOS messaging feature.
- Select **Recipient** to open the recipient list.
- Scroll down and press <Options> → **Phonebook** to open your contact list. You can also enter phone numbers including a country code (with +) in the recipient list. Skip to step 7.
- Select a contact.
- Select a number (if necessary).
- When you are finished setting the recipients, press the Confirm key to save the recipients.
- Scroll down to **Repeat** and scroll left or right to select the number of times to repeat the SOS message.
- Press <Save> → <Yes>.

### To stop an alarm


- When the alarm sounds,
- Press <OK> or the Confirm key to stop the alarm.
- Press <Snooze> to silence the alarm for the snooze period.

### To deactivate an alarm

- In Menu mode, select **Organizer** → **Alarms**.
- Select the alarm you want to deactivate.
- Scroll left or right to **Off**.
- Press the Confirm key.

## Listen to the FM radio

- Plug a headset into the phone.
- In Menu mode, select **FM radio**.
- Press the Confirm key to start the FM radio.
- Press <Yes> to start automatic tuning. The radio scans and saves available stations automatically.

-  The first time you turn on the FM radio, you will be prompted to start automatic tuning.

- Control the FM radio using the following keys:

Key	Function
Confirm	Turn the FM radio on or off
Volume	Adjust the volume
Navigation	<ul style="list-style-type: none"><li>Left/Right: Fine-tune the frequency; Search for an available radio station (press and hold)</li> <li>Up/Down: Select a radio station saved in the favourite list.</li></ul>

## Use Air services

### To use the Internet service

Learn to access and bookmark your favourite web pages. In Menu mode, select **Air services** → **Internet** to launch your service provider's homepage.

### To use the Brew service

You can use this service to download various kinds of ringtones, wallpapers, or games offered by your service provider. In Menu mode, select **Air services** → **BREW**.

## Use the mobile prayer feature

## Use the mobile prayer feature

The mobile prayer feature alerts you to prayer time using the specified alarm tone.

- In Menu mode, select **Applications** → **Mobile prayer**.
- Select your religion to customise the mobile prayer settings.
- Select a day you want. If you selected **Islam salat**, select a prayer type.
- Scroll left or right to **On**.
- Set details as desired.
- Press <Save> or press <Options> → **Save**.

## Listen to music

- In Menu mode, select **Music Player**.
- Select a music category → a music file.
- Control playback using the following keys:

Key	Function
Confirm	Pause or resume playback
Volume	Adjust the volume
Navigation	<ul style="list-style-type: none"><li>Left: Skip backward; Scan backward in a file (press and hold)</li> <li>Right: Skip forward; Scan forward in a file (press and hold)</li> <li>Up: Return to the previous list</li> <li>Down: Rate the current track</li></ul>
<b>1</b>	Activate or deactivate Shuffle mode
<b>2</b>	Change the repeat mode