 





## Install the UIM card and battery

- Remove the back cover and insert the UIM card.

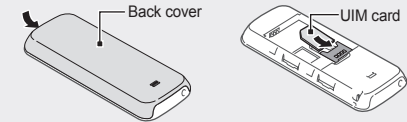


 - Insert the battery and replace the back cover.

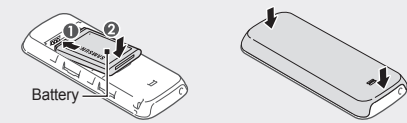

## Charge the battery

 - Plug the supplied travel adapter.
- When charging is finished, unplug the travel adapter.

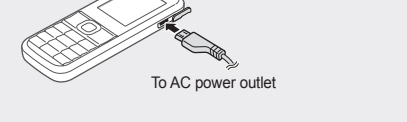

## Call a recently dialed number

- In Idle mode, press [**↶**].
- Scroll left or right to a call type.
- Scroll up or down to a number or name.
- Press the Confirm key to view details of the call or [**↶**] to dial the number.

## Lock your phone

- In Menu mode, select **Settings** → **Security**.
- Select **Phone**.
- Select **Phone lock**.
- Enter a new 4-digit password and press **<OK>**.
- Enter the new 4-digit password again and press **<OK>**.

## Lock your UIM card

You can lock your UIM card to allow the phone to use only the UIM card and to prevent other people from using the UIM card.

### To allow the phone to use only your UIM card

- In Menu mode, select **Settings** → **Security**.
- Select **Phone**.
- Select **UIM lock**.
- Enter a new 4-digit password and press **<OK>**.
- Enter the new 4-digit password again and press **<OK>**.

- Enter a new 8-digit password for the mobile tracker and press **<OK>**.

- Enter the new password again and press **<OK>**.
- Scroll left or right to **On**.
- Scroll down and press **<Options>** → **Phonebook** to open your contact list. You can also enter phone numbers including a country code (with +) in the recipient list. Skip to step 8.
- Select a contact.
- Select a number (if necessary).
- Scroll down and enter the sender's name.
- Press the Confirm key → **Save** to open the agreement page.
- Press **<Accept>**.

- By setting the options in **Access remote phone**, you can get contacts of the remote phone, delete data on the remote phone, forward calls to another phone, or get location information.
- To change the password for the mobile tracker, select **Change mobile tracker password**.

 
- Do not remove the battery before removing the travel adapter. Doing this may cause damage to the phone.
- To save energy, unplug the travel adapter when not in use. The travel adapter does not have a power switch, so you must unplug the travel adapter from the outlet to interrupt the power supply. The travel adapter should remain close to the socket when in use.

## Insert a memory card (optional)

Your phone accepts microSD™ or microSDHC™ memory cards up to 4 GB (depending on memory card manufacturer and type). You can use two memory cards at the same time.

- Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.
- Frequent writing and erasing of data will shorten the lifespan of memory cards.

- Remove the back cover.
- Insert a memory card with the gold-coloured contacts facing down.

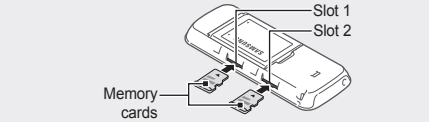

- Push the memory card in the memory card slot until it locks in place.
- Replace the back cover.

### To prevent others from using the UIM card

- In Menu mode, select **Settings** → **Security**.
- Select **UIM**.
- Select **PIN lock**.
- Enter the 4-digit PIN supplied with the UIM card and press **<OK>**.

## Use the smart home screen

The smart home screen allows you to access applications, contacts, and calendar events or view the clock from Idle mode.

- When you are using the smart home screen, the Navigation key does not work as shortcuts.

### To add items to the smart home screen

- In Menu mode, select **Settings** → **Display** → **Smart home**.
- Scroll to **Smart idle** and press the Confirm key.
- Select the items to display on the smart home screen. For the shortcuts toolbar, you can add or delete the shortcuts as desired. Press **<Options>** → **Edit shortcuts**.
- Press **<Save>** or press **<Options>** → **Save**.
- Press **<Set>**.

- You can change the idle screen to another style. In Menu mode, select **Settings** → **Display** → **Smart home** → a style you want.

## Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

### To activate the SOS message

- In Menu mode, select **Messages** → **Settings** → **SOS messages** → **Sending options**.
- Press **<Change>** to turn on the SOS message.
- Scroll down and press **<Change>** to open the recipient list.
- Press **<Options>** → **Add recipients** → **Contacts** to open your contact list. You can also enter phone numbers including a country code (with +) in the recipient list. Skip to step 7.
- Select a contact.
- Select a number (if necessary).
- When you are finished selecting contacts, press the Confirm key to save the recipients.
- Scroll down and set the number of times to repeat the SOS message.
- Press **<Back>** → **<Yes>**.

### To send an SOS message

- With the keys locked, press [**↶**] four times to send an SOS message to preset numbers. The phone switches to SOS mode and sends the preset SOS message.
- To exit SOS mode, press [**☎**].

## Instructional icons

	<b>Note:</b> notes, usage tips, or additional information
	<b>Followed by:</b> the order of options or menu you must select to perform a step; for example: In Menu mode, select <b>Messages</b> → <b>Create message</b> (represents <b>Messages</b> , followed by <b>Create message</b> )
	<b>Square brackets:</b> phone keys; for example: [ <b>☎</b> ] (represents the Power/End key)
	<b>Angled brackets:</b> softkeys that control different functions at each screen; for example: <b>&lt;OK&gt;</b> (represents the <b>OK</b> softkey)

## Turn your phone on or off

To turn your phone on,

- Press and hold [**☎**].
- Enter your PIN and press **<OK>** (if necessary).

To turn your phone off, repeat step 1 above.

## Access menus

To access your phone's menus,

- In Idle mode, press **<Menu>** to access Menu mode.

- You may need to press the Confirm key to access Menu mode depending on your region or service provider. When you are using the smart home screen, you cannot use the Confirm key to access Menu mode.

### To access the smart home items

Press the Navigation key to scroll through the items on the smart home screen and press the Confirm key to select an item.

## Enter text

### To change the text input mode

- Press and hold [**✖**] to select an input mode or change the input language.
- Press and hold [**##**] to switch between T9 and ABC modes. Depending on your region, you may be able to access an input mode for your specific language.
- Press [**##**] to change case or switch to Number mode.
- Press [**✖**] to switch to Symbol mode.

### T9 mode

- Press appropriate alphanumeric keys to enter an entire word.
- When the word displays correctly, press [**0**] to insert a space. If the correct word does not display, press the Navigation key up or down to select an alternate word.

### ABC mode

Press an appropriate alphanumeric key until the character you want appears on the display.

### Number mode

Press an appropriate alphanumeric key to enter a number.

## Listen to music

- In Menu mode, select **Music player**.
- Select a playlist → a music file.
- Control playback using the following keys:

Key	Function
Confirm	Pause or resume playback
Navigation	<ul style="list-style-type: none"><li>Left: Skip backward; Scan backward in a file (press and hold)</li><li>Right: Skip forward; Scan forward in a file (press and hold)</li><li>Up/Down: Adjust the volume</li></ul>

## Listen to the FM radio

- Plug the supplied headset into the phone.
- In Menu mode, select **FM radio**.
- Press the Confirm key to start the FM radio.
- Press **<Yes>** to start automatic tuning. The radio scans and saves available stations automatically.

- The first time you turn on the FM radio, you will be prompted to start automatic tuning.

- Use the Navigation key to scroll to a menu or option.
- Press **<Select>** or the Confirm key to confirm the highlighted option.
- Press **<Back>** to move up one level; Press [**☎**] to return to Idle mode.

- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

## Make a call

- In Idle mode, enter an area code and a phone number.
- Press [**↶**] to dial the number.
- To end the call, press [**☎**].

## Answer a call

- When a call comes in, press [**↶**].
- To end the call, press [**☎**].

## Adjust the volume

### To adjust the volume of the ringtone

- In Menu mode, select **Settings** → **Sound profiles**.
- Scroll to the profile you are using.

- If you are using the silent profile, you are not allowed to adjust the volume of the ringtone.

### Symbol mode

Press an appropriate alphanumeric key to enter a symbol.

### To use other features for text input

- To move the cursor, press the Navigation key.
- To delete characters one by one, press **<Clear>**. To delete entire words, press and hold **<Clear>**.
- To insert a space between characters, press [**0**].
- To enter punctuation marks, press [**1**].

## Add a new contact

- The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Menu mode, select **Contacts** → **<Options>** → **Settings** → **Save new contacts to** → a memory location.

- In Idle mode, enter a phone number and press the Confirm key.
- Select **New entry** → a memory location (if necessary).
- Enter contact information.
- Press the Confirm key to add the contact to memory.

## Send and view messages

### To send a text message

- In Menu mode, select **Messages** → **Create message**.
- Enter a recipient number and scroll down.

- Control the FM radio using the following keys:

Key	Function
Confirm	Turn the FM radio on or off
Navigation	<ul style="list-style-type: none"><li>Left/Right: Fine-tune the frequency; Search for an available radio station (press and hold)</li><li>Up/Down: Adjust the volume</li></ul>

## Use Air services

### To use the Brew service

You can use this service to download various kinds of ringtones, wallpapers, or games offered by your service provider. In Menu mode, select **Air services** → **BREW**.

### To use UIM Card toolkit menus

You can use a variety of additional services offered by your service provider. This menu is available only when you use a UTK UIM card that provides additional services. In Menu mode, select **Air services** → **UTK**.

## Set and use alarms

### To set a new alarm

- In Menu mode, select **Alarms**.
- Press **<Create>**.
- Set alarm details.

- Press **<Edit>**.
- Select **Volume**.
- Scroll to **Call alert**.
- Scroll left or right to adjust the volume level and press **<Save>**.

### To adjust the volume of voice during a call

While a call is in progress, press the Navigation key up or down to adjust the volume.

- In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better audio performance, use the normal phone mode.

## Change your ringtone

- In Menu mode, select **Settings** → **Sound profiles**.
- Scroll to the profile you are using.

- If you are using the silent profile, you are not allowed to change the ringtone.

- Press **<Edit>**.
- Select **Voice call ringtone**.
- Select a memory location (if necessary).
- Select a ringtone.

To switch to another profile, select it from the list.

- Enter your message text. *See "Enter text"*
- Press the Confirm key to send the message.

### To view text messages

- In Menu mode, select **Messages** → **Inbox**.
- Select a text message.

## Make fake calls

You can simulate an incoming call when you want to get out of meetings or unwanted conversations.

### To activate the fake call feature

In Menu mode, select **Settings** → **Call** → **Fake call** → **Fake call hot key** → **On**.

### To make a fake call

- In Idle mode, press and hold the Navigation key down.
- When the keys are locked, press the Navigation key down four times.

## Activate the mobile tracker

When someone inserts a new UIM card in your phone, the mobile tracker feature will automatically send the contact number to two recipients to help you locate and recover your phone. To activate the mobile tracker,

- In Menu mode, select **Settings** → **Security** → **Mobile Tracker** → **Settings**.

- Press **<Save>** or the Confirm key.

- The snooze feature sets the phone to repeat the alarm after a specified length of time. To set the length of time for the snooze feature, press **<Options>** → **Settings** → **Snooze Duration**.

### To stop an alarm

- When the alarm sounds, Press **<OK>** or the Confirm key to stop the alarm.
- Press **<Snooze>** to silence the alarm for the snooze period.

### To deactivate an alarm

- In Menu mode, select **Alarms**.
- Scroll to the alarm you want to deactivate.
- Press **<Options>** → **Deactivate**.

## Activate the torch light

The torch light on your phone helps you see in dark places.

In Idle mode, press and hold the Navigation key up to turn on the torch light. To turn off the torch light, press **<Off>**.