

Owner's Instructions

 
Before operating, please read this manual thoroughly, and retain it for future reference.

Register your product at
www.samsung.com/global/register

Control Panel (depending on the model)

➤ The actual configuration of your TV may be different, depending on your model.

Front (or Side) Panel




- ➊ Input source selection
- ➋ On-screen menu display
- ➌ Volume adjustment
- ➍ Channel selection
- ➎ Standby & Timer indicator
- ➏ Remote control sensor
- ➐ Power on/off

- ◆ You can use the ➍ buttons to switch the TV on when it is in standby mode depending on the model.
- ◆ The ➋ and ➌ buttons also have the same function as the ◀/▶/▼/▲ buttons on the remote control.
- ◆ If the remote control no longer works or you have misplaced it, you can use the controls on the panel of the television.

Connection Panel (depending on the model)

 ➤ The actual configuration of your TV may be different, depending on your model.

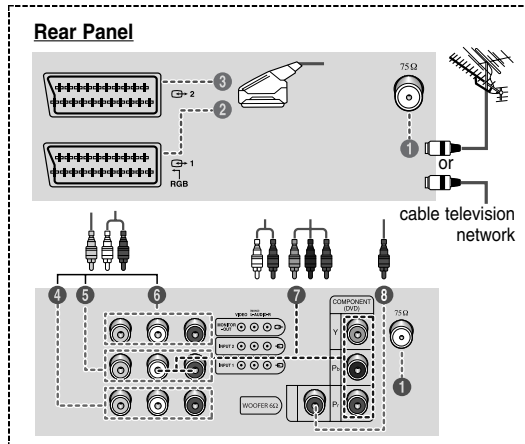

☛ Whenever you connect an audio or video system to your television, ensure that all elements are switched off. Please be sure to match the color coded input terminals and cable jacks.

Connecting to an Aerial or Cable Television Network

Connect the aerial or network input cable to the ➊ (75 Ω coaxial socket).

To view television channels correctly, a signal must be received by the set from one of the sources: an outdoor aerial, cable television network, or satellite network. If you are using an indoor aerial, you may need to adjust it when tuning your television until you obtain a picture that is both sharp and clear.

Connecting to the SCART Input/Output

The SCART ➋ and SCART ➌ connectors are used for equipment, such as a VCR, DVD, decoder, satellite receiver, video game device, or video disc player. The SCART ➍ is also used for equipment with an RGB output, such as a video game device or video disc player.

continued...

Connecting to the RCA Input

The RCA ➋ and RCA ➌ connectors are used for equipment, such as a VCR, DVD, decoder, satellite receiver, video game device, or video disc player. (When using the mono equipment, connect to the AUDIO-L input connector.) The RCA ➍ connectors are used for equipment such as a DVD with component output (480i only).

 
Connecting to the RCA Output

The RCA ➎ connectors are used for equipment, such as a recording VCR or audio system.

Connecting to the Woofer

The WOOFER ➏ connector is used for connecting the woofer box (to take full advantage of low frequency response).

Front (or Side) Panel

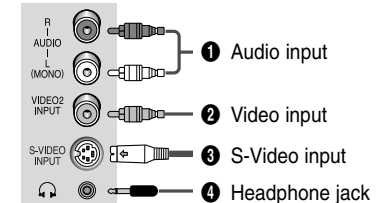

☛ Please be sure to match the color coded input terminals and cable jacks.

Connecting to the RCA Input

The ➋ (AUDIO-L/R) and ➌ (VIDEO) connectors are used for equipment, such as a camcorder, video disc player, or video game device.

Connecting to the S-VIDEO Input

The ➍ (S-VIDEO) and ➋ (AUDIO-L/R) connectors are used for equipment with an S-Video output, such as a camcorder or VCR.

 
Connecting Headphones

The ➌ (headphone) jack is used for watching a television programme without disturbing the other people in the room. Prolonged use of headphones at a high volume may damage your hearing.

➤ When both the front (or side) AV and rear connectors are connected to external equipment, the front (or side) AV receives priority.

Remote Control (depending on the model)

- Operation of remote control may be affected by bright artificial light near to the TV.

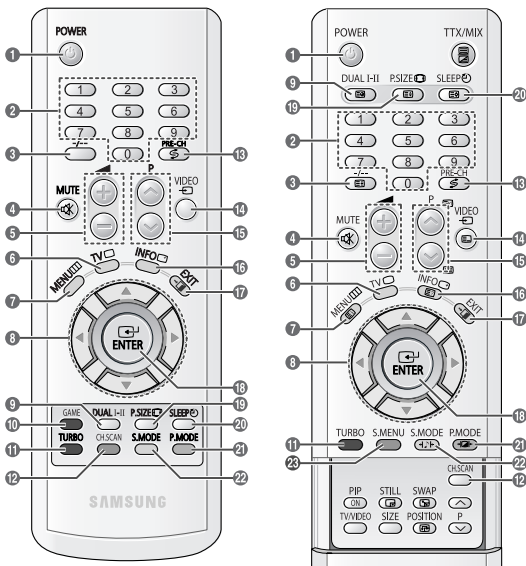

1 POWER

Used to switch the TV on and off.

2 Numeric buttons

Used to select channels directly.

3 -/--

Used to select a channel numbered ten or over. Press this button, then “--” symbol is displayed. Enter the two-digit channel number.

4 MUTE

Used to switch the sound off temporarily. To turn the sound back on, press the MUTE, , or button.

5

Used to increase or decrease the volume.

6 TV

Used to return to the TV mode when it is in external input mode.

7 MENU

Used to display the on-screen menu or return to the previous menu.

8

Used to control the cursor in the menu.

9 DUAL I-II

Used to select the sound mode.

10 GAME

Used to enjoy the game programmed in the TV.

11 TURBO

Used to select the turbo sound option.

12 CH.SCAN

Press to have the TV automatically scan all of the channels it has memorized.

13 PRE-CH

Used to switch repeatedly between the last two channels displayed.

14 VIDEO

Used to display all of the available video sources.

15

Used to display the next or previous stored channel.

16 INFO

Used to view the channel information and setting status you selected.

17 EXIT

Used to exit from any display or return to normal viewing.

18 ENTER

While using the on-screen menus, press the ENTER button to activate (or change) a particular item.

19 P.SIZE

Used to change the screen size.

20 SLEEP

Used to select a preset time interval for automatic turn off.

21 P.MODE

Used to select the picture effect.

22 S.MODE

Used to select the sound effect.

23 S.MENU

Used to display the sound menu.

Switching the Television On and Off

The mains lead is attached to the rear of the television.

- 1 Plug the mains lead into an appropriate socket.
 - The main voltage is indicated on the rear of the television and the frequency is 50 or 60Hz.
- 2 Press the button (On/Off) on the front (or side) of the television.
- 3 Press the **POWER** button on the remote control to switch the television on. The programme that you were watching last is re-selected automatically. If you have not yet stored any channels, no clear picture appears. Refer to “Channel - Auto Store” or “Channel - Manual Store” on page 4.
 - If the television is initially powered on, several basic customer settings proceed automatically. Refer to “Setup - Plug & Play” on page 3.
- 4 To switch the television off, press the button (On/Off) on the front (or side) of the television.

Placing the Television in Standby Mode

The television can be placed in standby mode, in order to reduce power consumption and wear of the cathode ray tube. Standby mode can be useful when you wish to interrupt viewing temporarily (during a meal, for example).

 
- 1 Press the **POWER** button on the remote control while viewing. The television is in standby mode.
- 2 To switch the television back on, simply press it again.

- ⚠ Do not leave the television in standby mode for long periods of time (when you are away on holiday, for example). Turn the television off by pressing the button (On/Off) on the front (or side) of the television. It is best to unplug the set from the mains and aerial.

Installing Batteries

Remove the cover. Install two AAA size batteries, then replace the cover. When the remote control does not operate normally, check that the “+” and “-” ends of the batteries are inserted correctly or the batteries are drained.

- Do not mix battery types, i.e. alkaline and manganese.

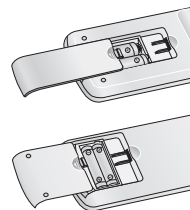

Viewing the Menus

- 1 Press the **MENU** button.
The main menu is displayed on the screen. Its left side has five icons: **Input**, **Picture**, **Sound**, **Channel**, and **Setup**.
- 2 Press the **▲** or **▼** button to select one of the icons. Press the **ENTER** button to access the icon's sub-menu.
- 3 Press the **▲** or **▼** button to move to items in the menu. Press the **ENTER** button to enter items in the menu.
- 4 Press the **▲/▼/◀/▶** button to change the selected items. Press the **MENU** button to return to the previous menu.
- 5 Press the **EXIT** button to exit from the menu.

Setup - Plug & Play

 
 
 
When the television is initially powered on, several basic customer settings proceed automatically and subsequently. The following settings are available.

- 1 If the television is in standby mode, press the **POWER** button on the remote control.
The **Plug & Play** is displayed. It flickers for a little while, and then **Language** menu is displayed.



continued...


- 2 Select the appropriated language by pressing the **▲** or **▼** button. Press the **ENTER** button.
The **Check antenna input.** is displayed.
➤ If any language is not selected, the language menu will disappear about 30 seconds later.
- 3 Make sure that the antenna is connected to the television (refer to page 1). Press the **ENTER** button.
The **Auto Store** menu is displayed with **Area** selected.
- 4 Press the **ENTER** button again.
- 5 Press the **▲** or **▼** button to select your area. Press the **ENTER** button.
- 6 To search the channels, select **Search** by pressing the **▲** or **▼** button. Press the **ENTER** button.
- 7 Press the **ENTER** button again to start search channels. To stop the search, press the **ENTER** button.
When the channel searching has finished, the **Time** menu is displayed with **Clock** selected.
- 8 Press the **◀** or **▶** button to move to the hour or minute. Set the hour or minute by pressing the **▲** or **▼** button.

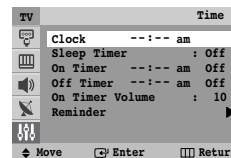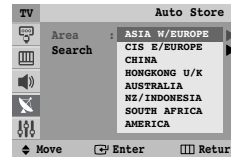

continued...


- 9 When you have finished, press the **MENU** button.
The **Enjoy your watching** is displayed, and then the channel which has been stored will be activated.

 Re-setting the Plug & Play
Method: **MENU** → **▲/▼**
(**Setup**) → **ENTER** → **▲/▼**
(**Plug & Play**) → **ENTER**

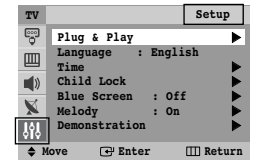


Input - Source List / Edit Name

 - ◆ **Source List**
You can switch between viewing signal from connected equipment, such as a VCR, DVD, set-top box, and the TV source (broadcast or cable).
➤ You can change the required external source simply by pressing the **VIDEO** button on the remote control. It might take a short period of time for pictures to be switched. To return to the TV mode, press the **TV** button on the remote control.

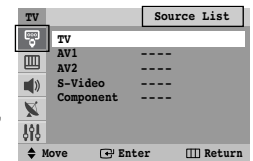

 - ◆ **Edit Name**
You can give a name to the external source.

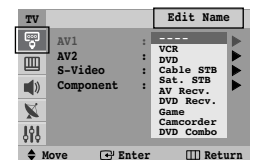

Channel - Auto Store

You can scan for the frequency ranges available to you (and availability depends on your country). Automatically allocated programme numbers may not correspond to actual or desired programme numbers. However you can sort numbers manually and clear any channels you do not wish to watch.

Channels are sorted and stored in the order which reflects their position in the frequency range (with lowest first and highest last). The programme originally selected is then displayed.

 
➤ To stop the search before it has finished, press the **MENU** button.

When finished, the **Sort** menu is displayed. To sort the stored channels into the desired numerical order, refer to "Channel - Sort". To exit without sorting, press the **EXIT** button.



Channel - Turbo Store


You can store all the channels found in your country in much less time compared to auto store.

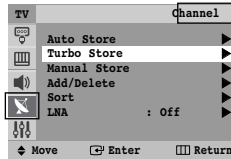

Channel - Sort

This operation allows you to change the programme numbers of stored channels. This operation may be necessary after using auto store.

 
- ◆ **From:** Channel number to be changed.
- ◆ **To:** New channel number to be identified.
- ◆ **Store:** Confirmation the exchange of channel numbers.

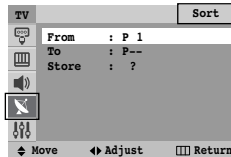

Channel - Manual Store

You can store channels, including those received via cable networks. When storing channels manually, you can choose:

 - Whether or not to store each of the channels found
- The programme number of each stored channel which you wish to identify

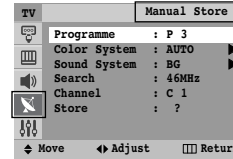

- ◆ **Programme** (Programme number to be assigned to a channel)
- ◆ **Color System:** **AUTO/PAL/SECAM/NT4.43/NT3.58**
- ◆ **Sound System:** **BG/DK/I/M**
- ◆ **Search** (When you do not know the channel numbers): The tuner scans the frequency range until the first channel or the channel that you selected is received on the screen.
- ◆ **Channel** (When you know the number of the channel to be stored)
 - You can also select the channel number directly by pressing the numeric buttons (0~9).
- ◆ **Store** (When you store the channel and associated programme number)
 - If there is no sound or abnormal sound, re-select the sound standard required.

 
Channel mode

- ◆ **P** (Programme mode): When completing tuning, the broadcasting stations in your area have been assigned to position numbers from P00 to P99. You can select a channel by entering the position number in this mode.
- ◆ **C** (Real channel mode): You can select a channel by entering the assigned number for each air broadcasting station in this mode.
- ◆ **S** (Cable channel mode): You can select a channel by entering the assigned number for each cable channel in this mode.

Channel - Add/Delete


You can exclude channels you have chosen from the channels you scanned. When you scan through the stored channels, those you have chosen to skip are not displayed. All of the channels that you did not specifically choose to skip are displayed during scanning.

Select **Added** or **Deleted** by pressing the **ENTER** button repeatedly.

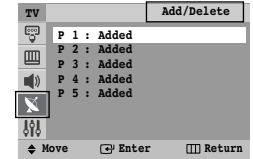

Channel - LNA

 This function is very useful in the situation that the TV is used in weak signal. **LNA** amplifies the TV signal in the weak signal area, but not noise.

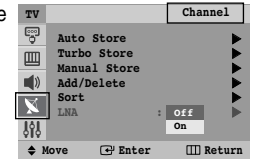


- ◆ **LNA** (Low Noise Amplifier) setting is to be made for each channel.
- ◆ If the picture is noisy with the **LNA** set to **On**, select **Off**.
- ◆ Depending on areas, factory mode of **LNA** will be set up as **On** or **Off**.

Setup - Time

◆ Clock

You can set the television clock so that the current time is displayed when pressing the **INFO** button on the remote control. You must also set the time if you wish to use the automatic on or off timers.

 ➤ When pressing the **⓪** button (On/Off) on the front (or side) of the television, the clock setting will be reset.

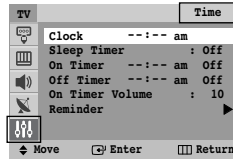

◆ Sleep Timer

You can select a time period of between 30 and 180 minutes after which the television automatically switches to standby mode.

➤ You can select these options simply by pressing the **SLEEP** button on the remote control. If the sleep timer is not yet set, **off** is displayed. If it is already set, the remaining time before which the television switches to standby mode is displayed.

◆ On Timer / Off Timer

You can set the On/Off timers so that the television will switch on or off automatically at the time you select.

☛ You must set the clock first.

◆ On Timer Volume

The preferred volume can be set for when the timer automatically turns on the television.

☛ Auto Power Off

When you set the timer "On", the TV will eventually turn off, if no controls are operated for 3 hours after the TV was turned on by timer. This function is only available in timer "On" mode and prevents overheating, which may occur if a TV is on for too long.

Setup - Reminder

This feature facilitates you for displaying a message input on the screen at the desired time set by you.

◆ REMINDER: ON/OFF

If you do not want to display a message, set to **OFF**.

◆ MESSAGE

 
 
- **EDIT** (A~Z, 0~9, &, -)
Message of maximum 30 characters can be entered.

- ERASE

You can delete the entire written message.

◆ DISPLAY TIME

It is the time at which the message will be displayed on the screen.

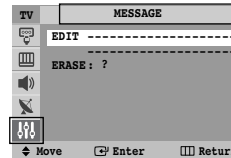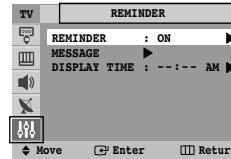

Setup - Child Lock

This feature allows you to prevent unauthorized users, such as children, from watching unsuitable programmes by muting out video and audio.

Child Lock cannot be released using front (or side) panel buttons. Only remote control can release the Child Lock setting, so keep the remote control away from children.

 
◆ Child Lock: On/Off

If you want to unlock a channel, set to **Off**.

◆ Programme: Channel number to be locked.

◆ Lock: When press the **ENTER** button, the **Locked** is displayed.

➤ If any channel is locked, you can not enter the **Channel** menu by using the control buttons on the television, and the **Not available** is displayed. You can access by using the remote control only.

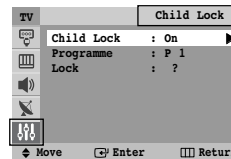

Setup - Language / Blue Screen / Melody / Demonstration

◆ Language

It is variable depending on the model. When you start using the television for the first time, you must select the language which will be used for displaying menus and indications.

◆ Blue Screen

 
If no signal is being received or the signal is very weak, a blue screen automatically replaces the noisy picture background. If you wish to continue viewing the poor picture, you must set the **Blue Screen** to **Off**.

◆ Melody

You can hear melody sound when the television is powered on or off.


◆ Demonstration

To become familiar with the various menus provided by the television, you can view the in built demonstration. Each of the menu options is displayed in turn. To exit from the demonstration, press the **EXIT** button.

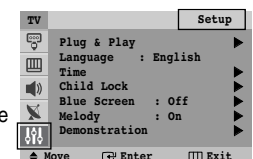


Picture - Mode / Custom / Color Tone / Size / Digital NR / DNle Jr /Tilt

 - ◆ **Mode: Dynamic/ Standard/Movie/Custom**
You can select the type of picture which best corresponds to your viewing requirements.

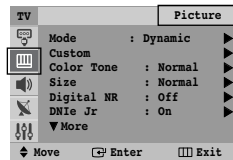

 - You can select these options simply by pressing the **P.MODE** button on the remote control.

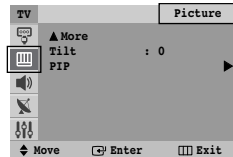

- ◆ **Custom: Contrast/ Brightness/Sharpness/ Color/Tint (NTSC only)**
The television has several settings which allow you to control the picture quality.

- If you make any changes to these settings, the picture mode is automatically switched to **Custom**.

- ◆ **Color Tone: Cool2/Cool1/Normal/Warm1/ Warm2**

- ◆ **Size**
You can select the picture size which best corresponds to your viewing requirements. It is variable depending on the model.

- You can change the picture size simply by pressing the **P.SIZE** button on the remote control.

- ◆ **Digital NR**

If the signal received by the television is weak, you can activate this feature to reduce any static and ghosting that may appear on the screen.

- ◆ **DNle Jr (Digital Natural Image engine Junior)** (depending on the model)



This feature bring you more detailed image with detail enhancement, contrast enhancement and white enhancement. New image compensation algorithm gives brighter, clearer, much detailed image to you. **DNle Jr** technology will fit every signals into your eyes.

- ◆ **Tilt** (depending on the model)

If you find that the picture received is slightly tilted to one side, you can adjust the tilt setting (-7 to +7).

Picture - PIP

You can display a sub picture within the main picture of TV programme or external A/V devices such as VCR or DVD. In this way you can watch TV program or monitor the video input from any connected devices while watching TV or other video input.

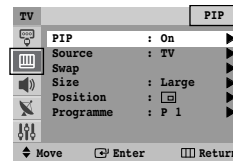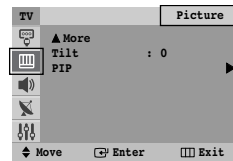  

- ◆ **PIP: On/Off**

You can activate or deactivate the PIP funtion. ❶

- ◆ **Source**

You can select a source of the sub-picture. ❷
➤ Depending on the models, the sub-picture can be viewed only when a source different from the main picture's is selected. If a TV programme is viewed on the main picture, the sub-picture is not available for TV programmes. If a TV source is selected, the message **Not available** is displayed.

- ◆ **Swap**

You can interchange the main picture and sub-picture. ❸

- ◆ **Size: Small/Large**

You can select a size of the sub-picture. ❹

 
- ◆ **Position:**

You can select a position of the sub-picture. ❺

- ◆ **Programme**


You can select a channel of the sub-picture only when the **Source** is set to **TV**. ❻

Easy functions of the remote control

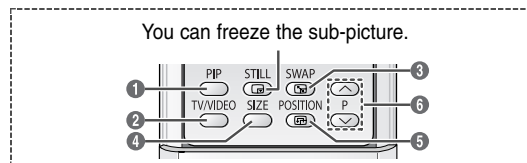

Sound - Mode / Equalizer / Auto Volume / Dolby Virtual / Pseudo Stereo /Turbo Plus

 - ◆ **Mode: Standard/Music /Movie/Speech/Custom**
You can select the type of special sound effect to be used when watching a given broadcast.

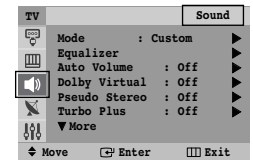

- You can select these options simply by pressing the **S.MODE** button on the remote control.

- ◆ **Equalizer**

The television has several settings which allow you to control the sound quality.

- If you make any changes to these settings, the sound mode is automatically switched to **Custom**.

- ◆ **Auto Volume**

Each broadcasting station has its own signal conditions, and so it is not easy to adjust the volume every time the channel is changed. This feature lets you automatically adjust the volume of the desired channel by lowering the sound output when the modulation signal is high or by raising the sound output when the modulation signal is low.

- ◆ **Dolby Virtual** (depending on the model) **Pseudo Stereo**

These features convert a monaural sound signal into two identical left and right channels. Once the **Dolby Virtual** or **Pseudo Stereo** is set to **On** or **Off**, these settings apply to the sound effects such as **Standard**, **Music**, **Movie**, and **Speech**.

- ☛ Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.



- ◆ **Turbo Plus**

 
This feature suitably emphasizes both higher and lower bands of sound (and includes other effects). You can enjoy more magnificent and dynamic sound when watching music, movie, or other channels.

- You can change the options simply by pressing the **TURBO** button on the remote control.

Sound - Woofer

When the woofer speaker is mounted to the TV, you can hear the bass sound-effect (if not mounted, the volume is much lower). Attach the woofer speaker ribs in the holes on the top of TV. Connect the woofer speaker wire to woofer output connector on the rear of TV. Select the **Woofer Volume** and adjust to satisfy your preference.


➤ When you use headphones, first turn off the woofer.

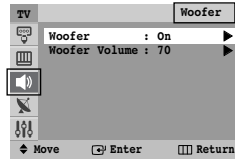

Enjoying Games (depending on the model)

You can enjoy the game (Chicken Farm), programmed in this TV.

 
- 1 Press the **GAME** button on the remote control to enter the Game mode. The READY window will be displayed.
- 2 Press the ◀ or ▶ button to run the game.
- 3 Move the farmer to catch eggs by using the ◀ or ▶ button. Every time the scores go up, the speed of game becomes faster bit by bit.
- 4 Every time you catch fifty eggs (i.e., 50, 100, 150 ...), if any broken egg exists, one egg can be restored. When five eggs are lost, the game will be over and simultaneously the final score window will be displayed.
- 5 If you want to stop during the game, press the **MENU** button. Then, the final score window will be displayed.
- 6 If you want to re-start the game, press the **MENU**, ◀, or ▶ button. Then, the final score window will be switched to the READY window.
- 7 To exit the Game mode, press the **GAME** button.

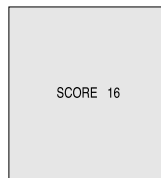

Teletext Feature (depending on the model)

Most television stations provide written information services via teletext. The index page of the teletext service gives you information on how to use the service. In addition, you can select various options to suit your requirements by using the remote control buttons.

 - ☛ For teletext information to be displayed correctly, channel reception must be stable. Otherwise, information may be missing or some pages may not be displayed.

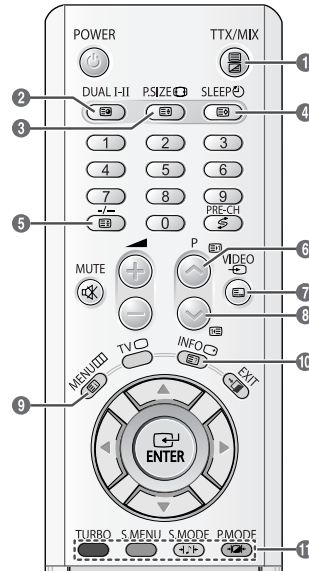

- 1 (teletext on/mix)
Press to activate teletext mode after selecting the channel providing the teletext service. Press it again to overlap the teletext with the current broadcasting screen.
- 2 (sub-page)
Used to display the available sub-page.

- 3 (size)
Press to display the double-size letters in the upper half of the screen. For lower half of the screen, press it again. To display normal screen, press it once again.
- 4 (store)
Used to store the teletext pages.
- 5 (hold)
Used to hold the display on a given page if the selected page is linked with several secondary pages which follow on automatically. To resume, press it again.
- 6 (page up)
Used to display the next teletext page.
- 7 (mode)
Press to select the teletext mode (LIST/FLOF). If you press it in the LIST mode, it switches into the List save mode. In the List save mode, you can save teletext page into list using the (store) button.
- 8 (page down)
Used to display the previous teletext page.
- 9 (index)
Used to display the index (contents) page at any time while you are viewing teletext.
- 10 (reveal)
Used to display the hidden text (answers to quiz games, for example). To display normal screen, press it again.
- 11 **Coloured buttons (red/green/yellow/blue)**
If the FASTEXT system is used by a broadcasting company, the different topics covered on a teletext page are color-coded and can be selected by pressing the coloured buttons. Press one of them corresponding to the required. The page is displayed with other coloured information that can be selected in the same way. To display the previous or next page, press the corresponding coloured button.

Troubleshooting

Before contacting the Samsung after-sales service, perform the following simple checks. If you cannot solve the problem using the instructions below, note the model and serial number of the television and contact your local dealer.

No sound or picture

- ◆ Check that the mains lead has been connected to a wall socket.
- ◆ Check that you have pressed the **⏻** button (On/Off) and the **POWER** button.
- ◆ Check the picture contrast and brightness settings.
- ◆ Check the volume.

Normal picture but no sound

- ◆ Check the volume.
- ◆ Check whether the volume **MUTE** button on the remote control has been pressed.

No picture or black and white picture

- ◆ Adjust the color settings.
- ◆ Check that the broadcast system selected is correct.

Sound and picture interference

- ◆ Try to identify the electrical appliance that is affecting the television, then move it further away.
- ◆ Plug the television into a different mains socket.

Blurred or snowy picture, distorted sound

- ◆ Check the direction, location and connections of your aerial.
This interference often occurs due to the use of an indoor aerial.

Remote control malfunctions

- ◆ Replace the remote control batteries.
- ◆ Clean the upper edge of the remote control (transmission window).
- ◆ Check that the “+” and “-” ends of the batteries are inserted correctly.
- ◆ Check that the batteries are drained.

OSD Map

* : It is variable depending on the model.



Input

- Source List *
- Edit Name
- VCR / DVD / Cable STB / Sat. STB / AV Recv. / DVD Recv. / Game / Camcorder / DVD Combo



Picture

- Mode
- Custom
- Colour Tone
- Size *
- Digital NR
- DNle Jr
- Tilt
- PIP
- Dynamic / Standard / Movie / Custom
- Contrast / Brightness / Sharpness / Colour / Tint (NTSC only)
- Cool2 / Cool1 / Normal / Warm1 / Warm2
- Off / On
- Off / On
- PIP
- Source *
- Swap
- Size
- Position
- Programme

- Off / On

Sound



- Mode
- Equalizer
- Auto Volume
- Dolby Virtual
- Pseudo Stereo
- Turbo Plus
- Woofer *
- Standard / Music / Movie / Speech / Custom
- Off / On
- Off / On
- Off / On
- Off / On



Channel

- Auto Store
- Area *
- ASIA W/EUROPE / CIS E/EUROPE / CHINA / HONGKONG U/K / AUSTRALIA / NZ/INDONESIA / SOUTH AFRICA / AMERICA
- Search
- Tubrbo Store
- Manual Store
- Programme
- Color System * - AUTO / PAL / SECAM / NT4.43 / NT3.58
- Sound System * - BG / DK / I / M
- Search
- Channel
- Store
- Add/Delete
- Sort
- LNA
- Off / On



Setup

- Plug & Play
- Language *
- Time
- Clock
- Sleep Timer
- On Timer
- Off Timer
- On Timer Volume
- Reminder *
- Off / On
- Off / On
- Off / On
- Child Lock
- Blue Screen
- Melody
- Demonstration