



COLOUR TELEVISION

Owner's Instructions


Before operating the unit,
please read this manual thoroughly,
and retain it for future reference.

**REMOTE CONTROL
ON-SCREEN MENUS
PICTURE IN PICTURE FUNCTION
GAME FUNCTION**


Safety Instructions

ENG


The following illustrations represent the precautions to be taken when using and moving your television.

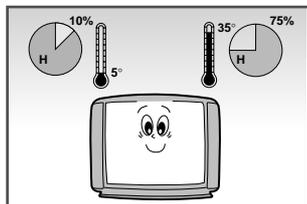


Do NOT expose the television to extreme temperature conditions or to extreme humidity conditions.

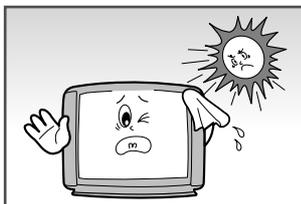


Do NOT expose the television to direct sunlight.

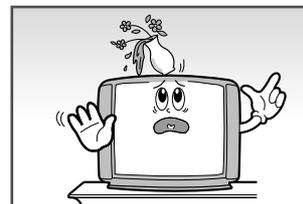


Do NOT expose the television to any liquids.

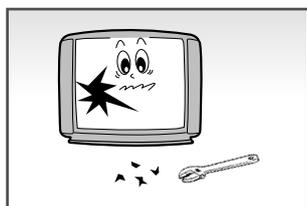

If the television is broken, do not try to repair it yourself. Contact qualified service personnel.

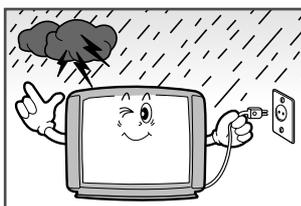

During a storm conditions (especially when there is lightning) unplug the television from the mains socket and aerial.

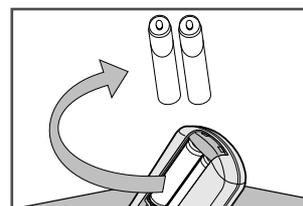


If the remote control is not used for a long period of time, remove the batteries and store it in a cool, dry place.

THIS DEVICE IS NOT FOR USE IN INDUSTRIAL ENVIRONMENTS

➤ Please use a soft and dry cloth (not containing volatile matter) when you clean the TV.

Caution

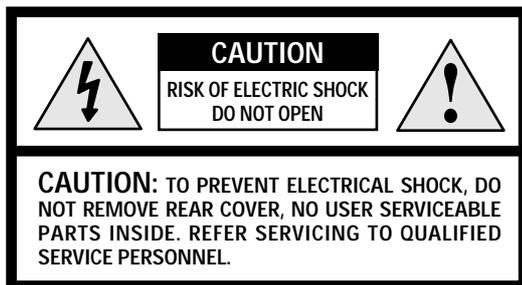

WARNING: TO PREVENT DAMAGE WHICH MAY RESULT IN FIRE OR SHOCK HAZARD. DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 The main voltage is indicated on the rear of the TV set and the frequency is 50 or 60Hz.

The lightning flash and arrow head within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.



The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.



Mode	System
CZ	PAL-B/G, D/K, I, SECAM-B/G,D/K, I, NTSC4.43
CW	PAL-B/G, D/K, I, SECAM-B/G,D/K, I, L/L', NTSC4.43
CS	PAL-B/G, D/K, I, SECAM-B/G,D/K, I, NTSC4.43/3.58

Contents

ENG

◆ FOREWORD	
■ Safety Instructions	2
■ Caution	2
◆ CONNECTING AND PREPARING YOUR TELEVISION	
■ Control Panels (depending on the model)	5
■ Connection Panels (depending on the model)	6
■ Infrared Remote Control (depending on model)	8
■ Inserting the Batteries in the Remote Control.....	10
■ Connecting to an Aerial or Cable Television Network	10
■ Switching Your Television On and Off.....	11
■ Placing Your Television in Standby Mode	11
■ Becoming Familiar with the Remote Control	12
■ Plug & Play Feature (depending on the model).....	13
■ Viewing the Demonstration.....	14
■ Choosing Your Language.....	14
◆ SETTING THE CHANNELS	
■ Storing Channels Automatically.....	15
■ Turbo Store	16
■ Storing Channels Manually.....	16
■ Skipping Unwanted Channels	18
■ Sorting the Stored Channels	19
◆ USING YOUR TELEVISION	
■ Changing the Picture Standard	20
■ Channel Scan	20
■ Adjusting the Picture Settings.....	21
■ Selecting the Picture Size.....	22
■ Extra Picture Settings	23
■ Using the Tilt Control Feature (depending on the model).....	24
■ Setting the Blue Screen.....	24
■ Changing the Sound Standard	25
■ Adjusting the Sound Settings	25
■ Enjoying the Woofer Sound (depending on the model)	26
■ Extra Sound Settings (depending on the model).....	27
■ Selecting the Melody	28
■ Selecting the Sound Mode (depending on the model)	29
■ Setting and Displaying the Current Time.....	30
■ Setting the Sleep Timer.....	31
■ Switching the Television On and Off Automatically	32
■ Setting the Preferred Volume Level.....	33
■ Setting the Reminder	34
■ Using the LNA (Low Noise Amplifier) feature (depending on the model)	36
■ Settings for Pic 'n' Choose	36
■ Activating the Child Lock	37
■ Viewing an External Signal Source (depending on the model)	38
■ Viewing the Picture In Picture (PIP) (depending on the model)	39
■ Enjoying Games	42

Contents (continued)

◆ ADDITIONAL INFORMATION ON CONNECTIONS	
■ Connecting to the AV-1 or 2 Input/Outputs.....	43
■ Connecting to the S-VIDEO Input (depending on the model).....	43
■ Connecting to the DVD Input (depending on the model).....	44
■ Connecting to the RCA Input (depending on the model).....	44
■ Connecting to the Audio Output (depending on the model)	44
■ Connecting Headphones (depending on the model)	45
■ Viewing Pictures From External Sources (depending on the model)	45
◆ RECOMMENDATIONS FOR USE	
■ Automatic Degaussing to Remove Colour Patches.....	46
■ Troubleshooting: Before Contacting Service Personnel.....	46

Symbols



Important




Note

Control Panels (depending on the model)

ENG

➤ Buttons and markings are subject to change.

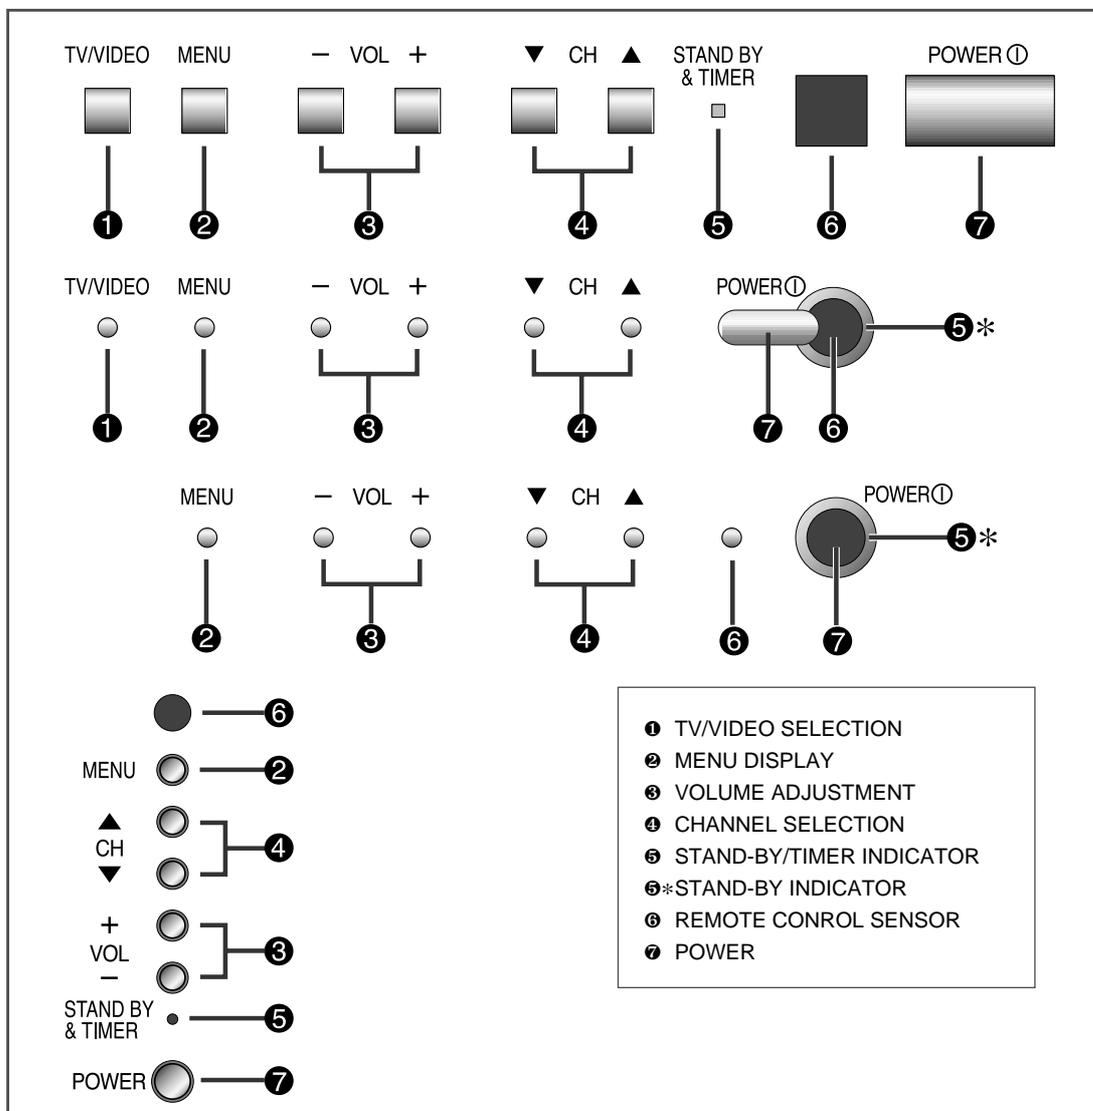

➤ Using the Front Panel Controls

If the remote control no longer works or you have lost it, you can use controls on the panel of the TV to:

- ◆ Switch on the TV when it is in Standby mode and select channels (**▼ CH ▲** or **∨ CH ∧**).
- ◆ Access the menu (**MENU**).
- ◆ Adjust the volume (**- VOL +**).
- ◆ Switch among Video input modes (**TV/VIDEO**).

How to use the **CH▼/▲** buttons to switch among Video input modes (the model without TV/VIDEO button):

- ◆ ...199 → 0 → \square 1 → \square 2 → 1 → 2 ...
- ... 2 → 1 → \square 1 → \square 2 → 0 → 199 ...
- ◆ ...199 ↔ 0 ↔ \square ↔ 1 ↔ 2 ...


The control-symbols on the TV front panel are the same as the ones used on the remote control.

Connection Panels (depending on the model)


ENG

➤ This figure shows the Standard Connector-jack panel.
The actual configuration on your TV may be different, depending on the model.

Side of TV

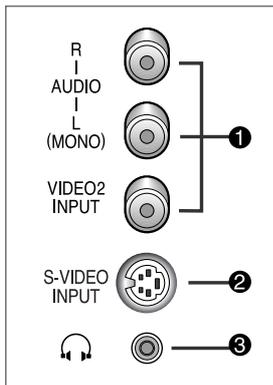

Front of TV

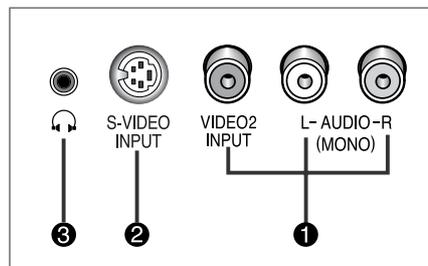

❶ CONNECTING EXTERNAL A/V DEVICES (INPUT)

The RCA (VIDEO + AUDIO-L and R) connectors are used for equipment such as camcorders, video disc players and some video game devices.

- ◆ When both the side (or front) and rear connectors are connected to external equipment, the side (or front) AV has the priority.
- ◆ When using the mono equipment such as camcorders, video disc players and some video game devices, connect to the “AUDIO-L” input connector.

❷ CONNECTING EXTERNAL S-VIDEO DEVICES (INPUT) (Option)

– Video and audio inputs for external devices with an S-Video output, such as a camcorder or VCR.

❸ CONNECTING HEADPHONES (Option)

- You can connect a set of headphones to your television if you wish to watch a television programme without disturbing the other people in the room.
- Prolonged use of headphones at a high volume may damage your hearing.




👉 Whenever you connect an audio or video system to your television, ensure that all elements are switched off.

Refer to the documentation supplied with your equipment for detailed connection instructions and associated safety precautions.

Connection Panels (depending on the model) (continued)

ENG

Rear of TV

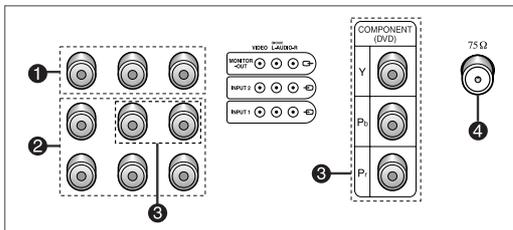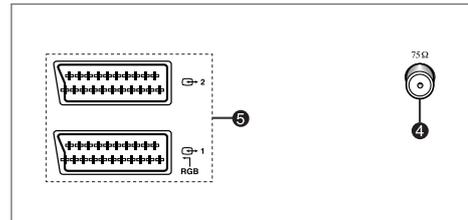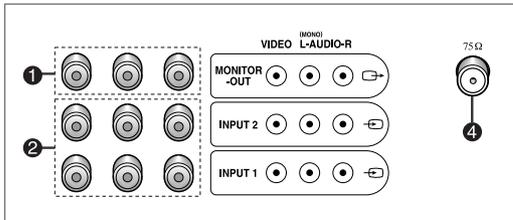

1 MONITOR OUT (VIDEO / L-AUDIO-R)
Outputs for external devices.

2 AV 1 (VCR) -VIDEO/L-AUDIO-R
AV 2 (VCR) -VIDEO/L-AUDIO-R
Inputs or outputs for external devices, such as VCR, DVD, video game device or video disc players.

3 COMPONENT (DVD)
Video (Y/Pb/Pr) and audio (L/R) inputs for Component.

4 VHF/UHF (75Ω)
75Ω Coaxial connector for Aerial/ Cable Network.

5 1 / 2 (SCART)
Inputs or outputs for external devices, such as VCR, DVD, video game device or video disc players.


➤ Available format for Component Inputs : 480i

➤ When using the mono equipment such as camcorders, video disc players and some video game device, connect to the "AUDIO-L" input connector.

Infrared Remote Control (depending on model)

ENG


➤ Buttons and markings are subject to change.

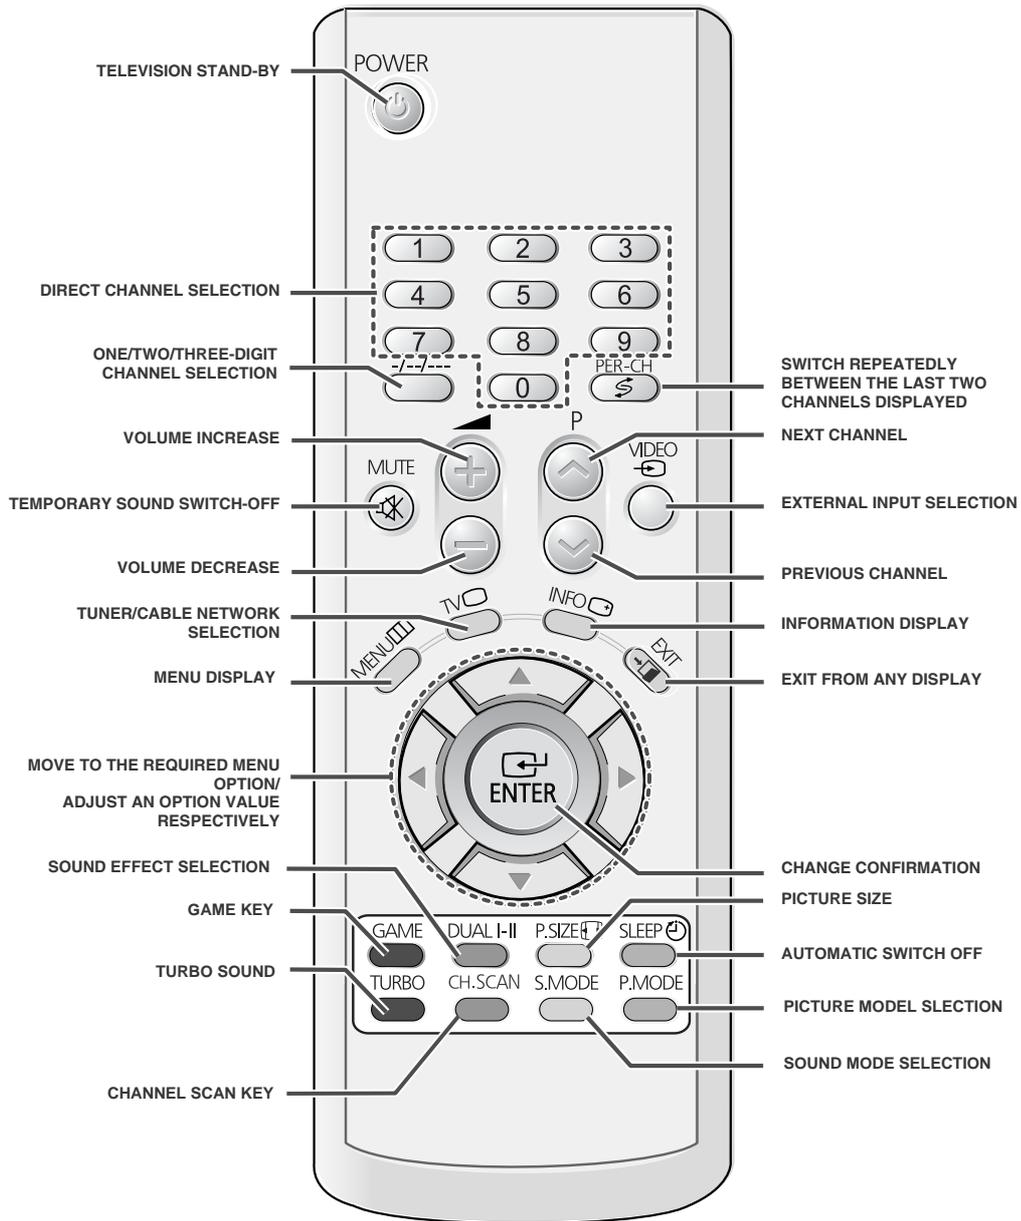

➤ The performance of the remote control may be affected by bright light.




Infrared Remote Control (depending on the model)

➤ Buttons and markings are subject to change.

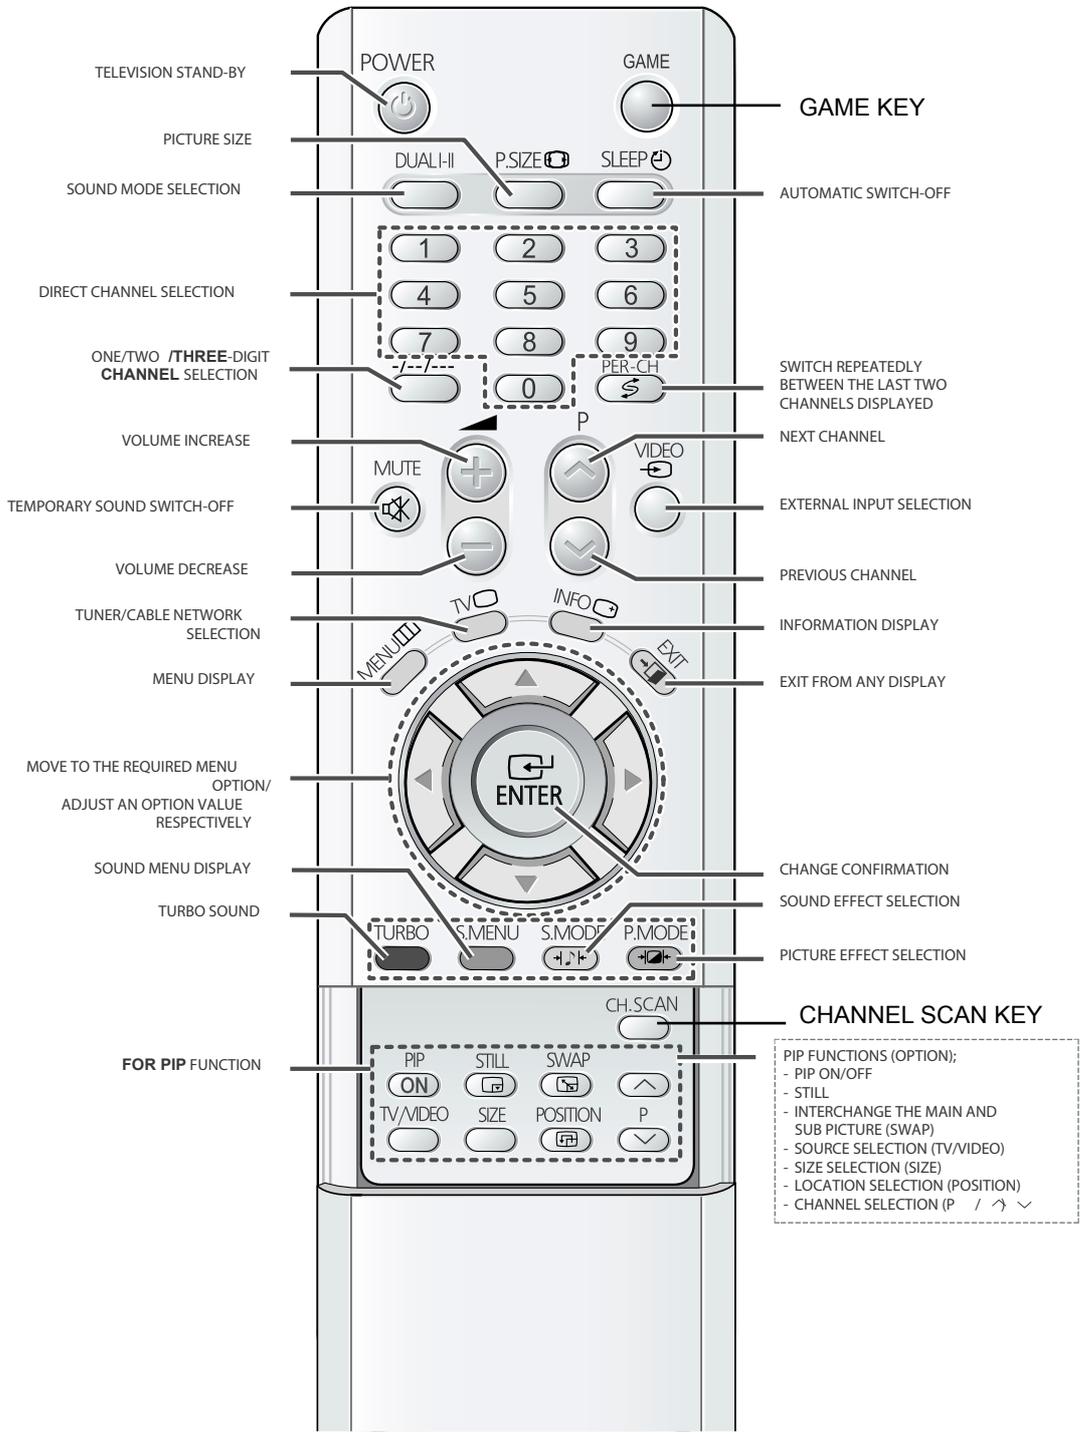

➤ The performance of the remote control may be affected by bright light.

Inserting the Batteries in the Remote Control

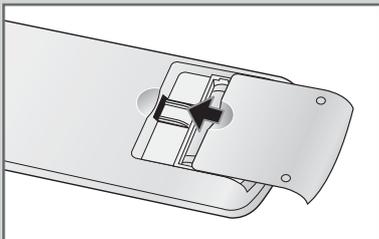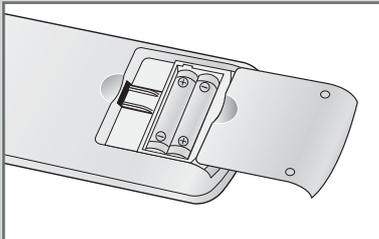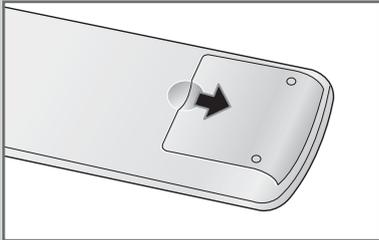


You must insert or replace the batteries in the remote control when you:

- ◆ Purchase the television
- ◆ Find that the remote control is no longer operating correctly

- 1 Remove the cover on the rear of the remote control by pressing the symbol (▼) downwards and then pulling firmly to remove it.
- 2 Insert two R03, UM4, "AAA" 1.5V or equivalent batteries taking care to respect the polarities:
 - ◆ - on the battery against - on the remote control
 - ◆ + on the battery against + on the remote control
- 3 Replace the cover by aligning it with the base of the remote control and pressing it back into place.

Connecting to an Aerial or Cable Television Network

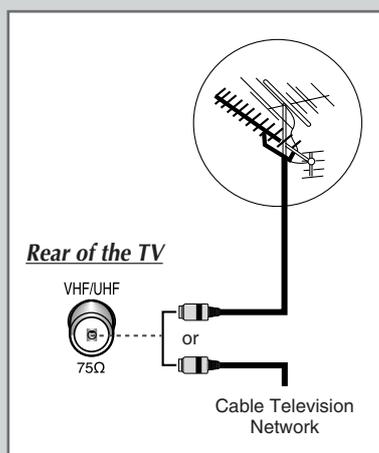

To view television channels correctly, a signal must be received by the set from one of the following sources:

- ◆ An outdoor aerial
- ◆ A cable television network
- ◆ A satellite network

- 1 In the first three cases, connect the aerial or network input cable to the 75Ω coaxial socket on the rear of the television.
- 2 If you are using an indoor aerial, you may need to turn it when tuning your television until you obtain a picture that is both sharp and clear.
For further details, refer to:
 - ◆ "Storing Channels Automatically" on page 15.
 - ◆ "Storing Channels Manually" on page 16.



➤ Signal Strength (Signal Strength Icon) display (Option)

The "Signal Strength" symbol is displayed by pressing the "INFO" button. This symbol displays signal strength for your watching TV channel. The more signal bar is the better TV gets sensitivity on current channel.

Switching Your Television On and Off

ENG


The mains lead is attached to the rear of your television.

- 1 Plug the mains lead into an appropriate socket.
 - The main voltage is indicated on the rear of the television and the frequency is 50 or 60Hz.
- 2 Press the “⏻” button (On/Off) on the front of the television.

Result: The Standby indicator on the front of the television lights up.
- 3 Press the **POWER** (⏻) button on the remote control to switch the television on.

Result: The programme that you were watching last is re-selected automatically.

 - If you have not yet stored any channels, No clear picture appears. Refer to “Storing Channels Automatically” on page 15 or “Storing Channels Manually” on page 16.
- 4 To switch your television off, press the “⏻” button (On/Off) again.

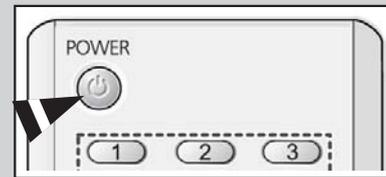

Placing Your Television in Standby Mode

Your television can be placed in Standby mode, in order to reduce:


- ◆ **Power consumption**
- ◆ **Wear of the cathode ray tube**

The Standby mode can be useful when you wish to interrupt viewing temporarily (during a meal, for example).

- 1 Press the **POWER** (⏻) button on the remote control.



Result: The screen is turned off and the Standby indicator on the front of the television lights up in red.
- 2 To switch the television back on, simply press the **POWER** (⏻) button again.
 - You can also switch on by pressing the **P** or **⏻** button.

- ☞ Do not leave your television in Standby mode for long periods of time (when you are away on holiday, for example). Turn your television off by pressing the “⏻” button (On/Off) on the front of the television. It is best to unplug the set from the mains and aerial.

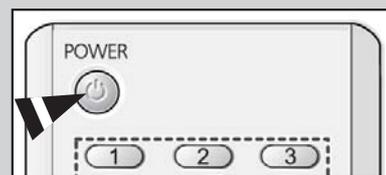

Becoming Familiar with the Remote Control

ENG

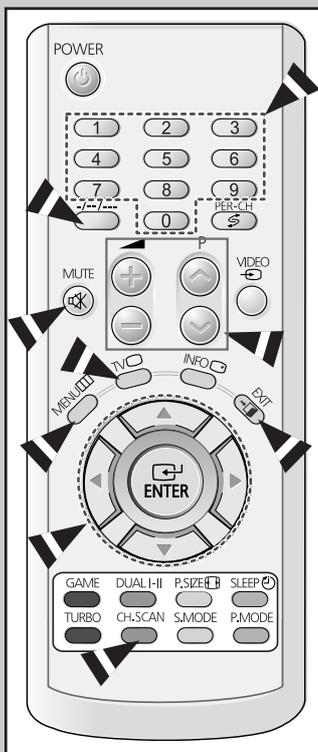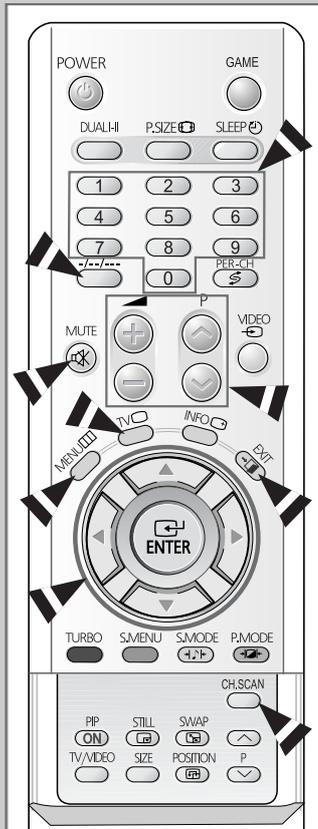



The remote control is used mainly to:

- ◆ Change channels and adjust the volume
- ◆ Set up the television using the on-screen menu system

The following table presents the most frequently used buttons and their functions.

Button	Viewing Function	Menu Function
	Used to display the next stored channel.	-
	Used to display the previous stored channel.	-
	Used to display the corresponding channels.	-
	Used to select a channel numbered ten or over. Press this button, and the "---" "--" symbol is displayed. Enter the two or three digit channel number.	-
PRE-CH	Press the PRE-CH button. The TV will switch to the last channel viewed. To quickly switch between two channels that are far apart, tune to one channel, then use the number button to select second channel. Then, use the PRE-CH button to quickly alternate between them.	-
	Used to increase the volume.	-
	Used to decrease the volume.	-
MUTE	Used to switch the sound off temporarily. ➤ To turn the sound back on, press this button again, or press the - or + button.	-
MENU	Used to display the on-screen menu system.	Used to return to the previous menu or normal viewing.
	-	Used to: ◆ Display a submenu containing selections for the current menu option ◆ Increase/decrease a menu option value
	-	Used to confirm your choice.
EXIT 	-	Used to exit from the menu system and return to normal viewing directly.
TV 	Used to switch the television on when it is in Standby mode.	-


Viewing the Demonstration

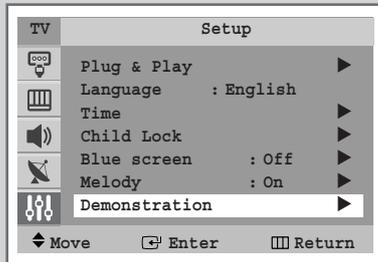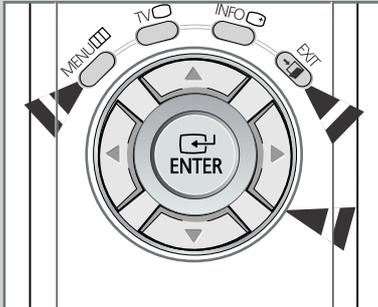

To become familiar with the various menus provided by your television, you can view the in built demonstration.

- 1 Press the **MENU** (□) button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Setup**.
Result: The options available in the **Setup** group are displayed.
- 3 Press the **ENTER** (↵) button.
- 4 Press the ▼ or ▲ button to select **Demonstration**.
- 5 Press the **ENTER** (↵) button.
Result: Each of the menu options is displayed in turn.
➤ When you wish to exit from the demonstration, press the **EXIT** (→) button on the remote control.

Choosing Your Language

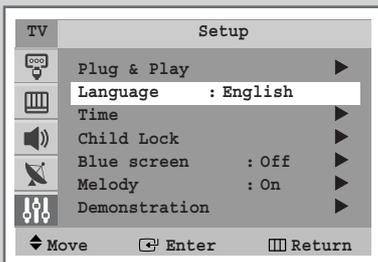

When you start using your television for the first time, you must select the language which will be used for displaying menus and indications.







- 1 Press the **MENU** (□) button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Setup**.
Result: The options available in the **Setup** group are displayed.
- 3 Press the **ENTER** (↵) button.
- 4 Press the ▼ or ▲ button to select **Language**.
- 5 Select the appropriate language by pressing the **ENTER** (↵) button repeatedly.

Storing Channels Automatically


ENG

You can scan for the frequency ranges available to you (and availability depends on your country). Automatically allocated programme numbers may not correspond to actual or desired programme numbers. However you can sort numbers manually and clear any channels you do not wish to watch.

- 1 Press the **MENU** (□□□) button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Channel**.
Result: The options available in the **Channel** group are displayed.
- 3 Press the **ENTER** (↵) button.
Result: The **Auto Store** is selected.
- 4 Press the **ENTER** (↵) button again.
Result: The options available in the **Auto Store** group are displayed with **Area** is selected.
- 5 Press the **ENTER** (↵) button again.
- 6 Select your area by pressing the ▼ or ▲ button, then press the **ENTER** (↵) button.
The areas are displayed in the following order:
ASIA W/EUROPE - CIS E/EUROPE - CHINA - HONGKONG U/K - AUSTRALIA - NZ/INDONESIA - SOUTH AFRICA - AMERICA
- 7 Press the ▼ or ▲ button to select **Search**, then press the **ENTER** (↵) button.
- 8 Press the **ENTER** (↵) button to start the search.
Result: The horizontal bar is displayed, and then channels are stored in an order which reflects their positions in the frequency range. Finally, the search will end automatically.
➤ To stop the search before it has finished, press the **MENU** (□□□) button.
- 9 When searching and storing are complete, the **Sort** menu is displayed.
 - ◆ To sort the stored channels into the desired numerical order, go to Step 6 of the “Sorting the Stored Channels” procedure on page 19.
 - ◆ To exit from the channel store function without sorting the channels, press the **MENU** (□□□) button repeatedly until the menus disappear.
- 10 When the channels have been stored, you can:
 - ◆ Sort them in the order required (refer to page 19)
 - ◆ Clear a channel (refer to page 18)
 - ◆ Activate the Digital Noise Reduction feature (refer to page 23)

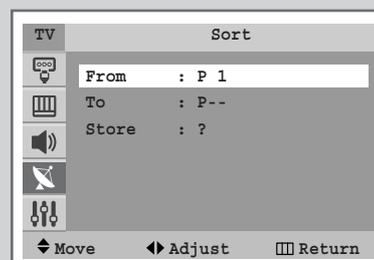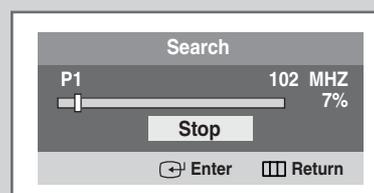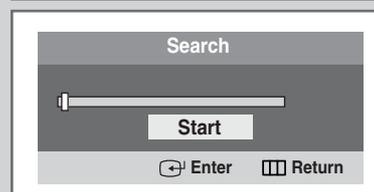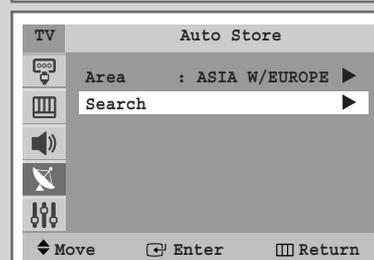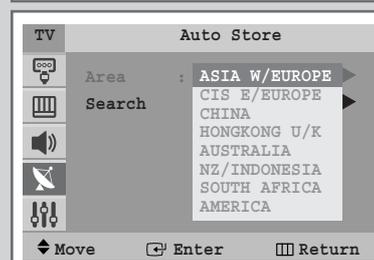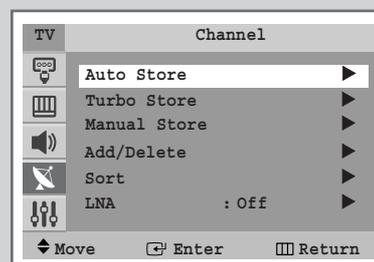

Storing the Channels Automatically - Turbo Store

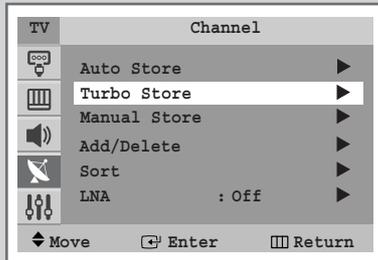


Using Turbo search you can store all the channels found in your country in much less time compared to auto store.

The channels are stored in the order in which they appear in the frequency bands. It is possible that the automatically allocated numbers may not correspond to those by which you wish to identify the channels. If this is the case, refer to "Sorting the Stored Channels" on page 16.

- Perform the above mentioned steps to store channels using Turbo Store. In the third step select Turbo store instead of Auto store.




Storing Channels Manually

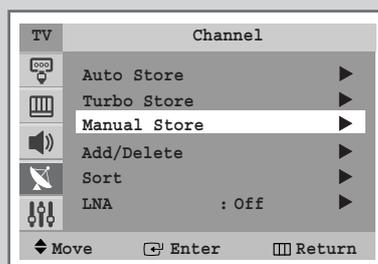

You can store the channels, including those received via cable networks.

When storing channels manually, you can choose:

- ◆ Whether or not to store each of the channels found
- ◆ The programme number of each stored channel which you wish to identify

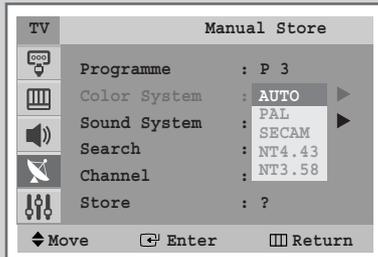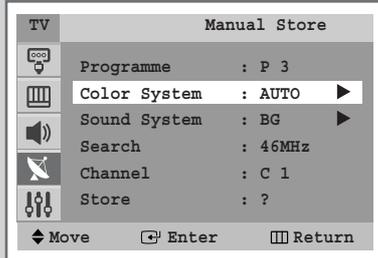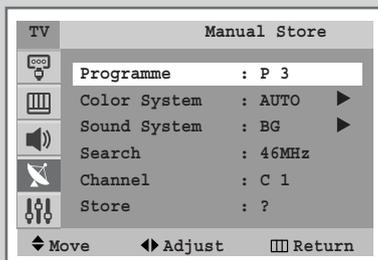

- 1 Press the **MENU** (☰) button.
Result: The main menu is displayed.
- 2 Press the **▼** or **▲** button to select **Channel**.
- 3 Press the **ENTER** (↵) button.
Result: The options available in the **Channel** group are displayed.
- 4 Press the **▼** or **▲** button to select **Manual Store**.
- 5 Press the **ENTER** (↵) button.
- 6 To assign a programme number to a channel, press the **◀** or **▶** button.
- 7 Press the **▼** or **▲** button to select **Color system**.
- 8 Press the **ENTER** (↵) button.
- 9 Press the **▼** or **▲** button to select the broadcasting standards.
Result: The color standards are displayed in the following order:
AUTO - PAL - SECAM - NT4.43 - NT3.58.
- 10 Press the **ENTER** (↵) button.

Storing Channels Manually (continued)

ENG

11 Press the ▼ or ▲ button to select **Sound System**.

12 Press the **ENTER** (↵) button.

13 Press the ▼ or ▲ button to select the sound standards.

Result: The sound standards are displayed in the following order:
BG - DK - I - M.

14 Press the **ENTER** (↵) button.

15 If you do not know the channel numbers, select **Search** by pressing the ▼ or ▲ button. Press the ◀ or ▶ button to start the search.

Result: The tuner scans the frequency range until the first channel or the channel that you selected is received on your screen.

16 If you know the number of the channel to be stored, see the following steps.

- ◆ Press the ▼ or ▲ button to select **Channel**.
- ◆ Press the ▶ button.
- ◆ Press the ▼ or ▲ button to select **C** (Air channel) or **S** (Cable channel).
- ◆ Press the ▶ button.
- ◆ Press the ▼ or ▲ button to select indicate the required number.
 - You can also select the channel number directly by pressing the numeric buttons (0~9).
 - If no sound or abnormal sound, re-select the sound standard required.






17 To store the channel and associated programme number, select **Store** by pressing the ▼ or ▲ button. Press the **ENTER** (↵) button to select **OK**.

18 Repeat Steps 16 to 17 for each channel to be stored.






Channel mode

- ◆ **P** (Programme mode): When completing tuning, the broadcasting stations in your area have been assigned to position numbers from P00 to max P199. You can select a channel by entering the position number in this mode.
- ◆ **C** (Real channel mode): You can select a channel by entering the assigned number to each air broadcasting station in this mode.
- ◆ **S** (Cable channel mode): You can select a channel by entering the assigned number for each cable channel in this mode.

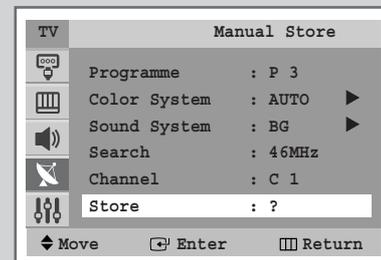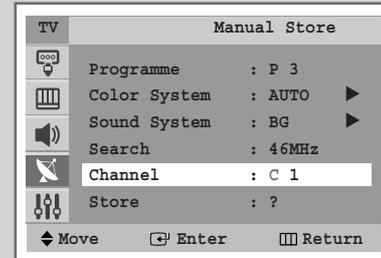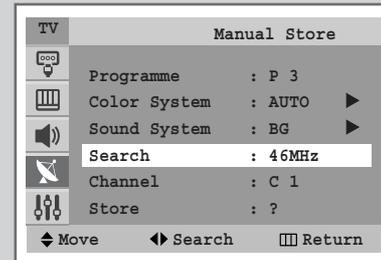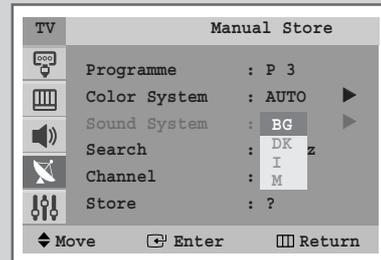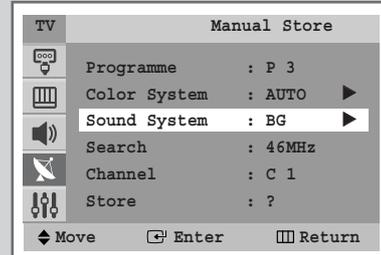

Skipping Unwanted Channels

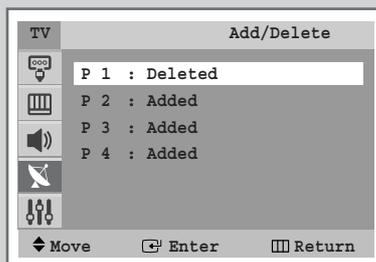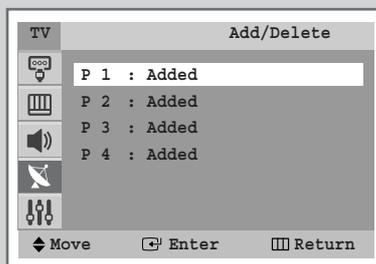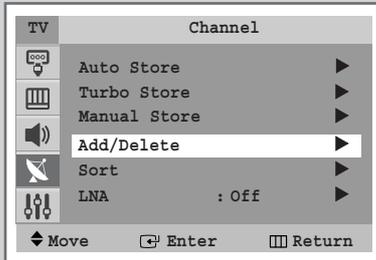

You can exclude the channels you chosen from the channels you scanned. When you scan through the stored channels, those you have chosen to skip are not displayed.

All of the channels that you do not specifically choose to skip are displayed during scanning.





- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▼** or **▲** button to select **Channel1**.
Result: The options available in the **Channel1** group are displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▼** or **▲** button to select **Add/Delete**.
- 5 Press the **ENTER** () button.
Result: The stored channels are displayed.
- 6 Press the **▼** or **▲** button to select the channel to add or erase. If necessary, select **Added** or **Deleted** by pressing the **ENTER** () button.
- 7 Repeat Step 6 for each channel to be added or erased.

Sorting the Stored Channels

ENG



This operation allows you to change the programme numbers of stored channels. This operation may be necessary after using auto store.

- 1 Press the **MENU** (□□□) button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Channel**.
Result: The options available in the **Channel** group are displayed.
- 3 Press the **ENTER** (↵) button.
- 4 Press the ▼ or ▲ button to select **Sort**.
- 5 Press the **ENTER** (↵) button.
Result: The options available in the **Sort** group are displayed with **From** is selected.
- 6 Select the channel number that you wish to change by pressing the ◀ or ▶ button repeatedly.
- 7 Press the ▼ or ▲ button to select **To**. Select the new channel number which you wish to identify by pressing the ◀ or ▶ button repeatedly.
- 8 Press the ▼ or ▲ button to select **store**. Select **OK** to confirm the exchange of channel numbers by pressing the **ENTER** (↵) button.
Result: The selected channel is exchanged with the one previously stored to the chosen number.
- 9 For all the channels to move to the required channel numbers, repeat steps **6** to **8** after selecting the **From** by pressing the ▼ or ▲ button.

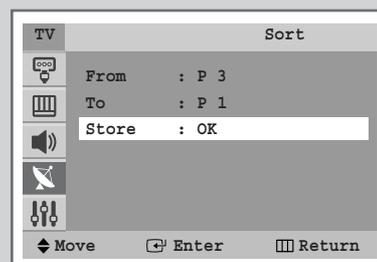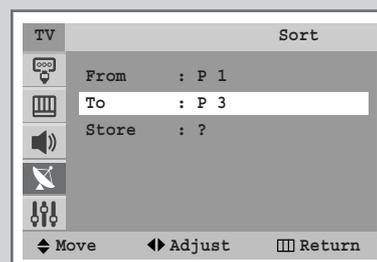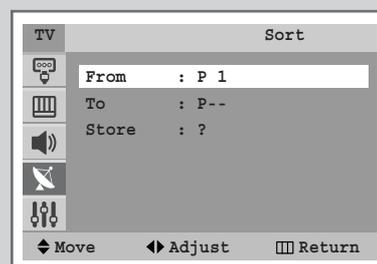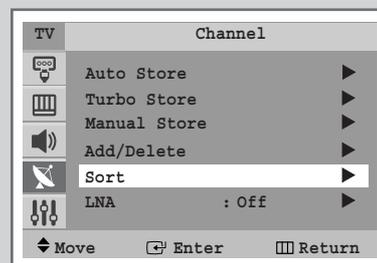

Changing the Picture Standard

ENG

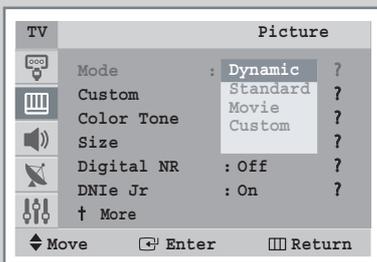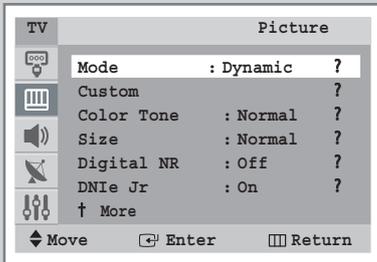

You can select the type of picture which best corresponds to your viewing requirements.

- 1 Press the MENU (□) button.
Result : The main menu is displayed.

- 2 Press the ▼ or ▲ button to select **Picture**.
Result : The options available in the **Picture** group are displayed.

- 3 Press the ENTER (↵) button.



- 4 Press the ENTER (↵) button again to select **Mode**.
Result : The options available in the **Mode** group are displayed.

- 5 Press the ▼ or ▲ button to select picture mode.
Result : The following picture effects are available:
Dynamic – Standard – Movie – Custom.

- 6 Press the ENTER (↵) button.

➤ You can also set these options simply by pressing the P.MODE (↵ : Picture Mode) button.

Channel Scan

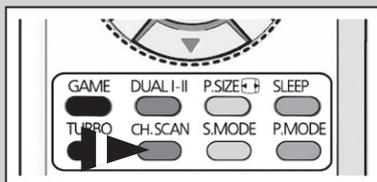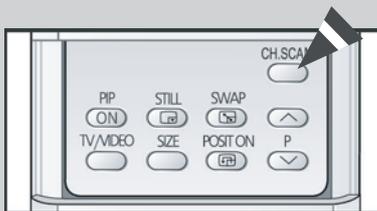

Press CH.SCAN (Channel Scan button) for a 2 Second review of each added channel. Press CH. SCAN key to exit Channel Scanning.

Adjusting the Picture Settings

ENG

Your television has several settings which allow you to control picture quality.





- 1 Press the **MENU** (□□□) button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Picture**.
Result: The options available in the **Picture** group are displayed.
- 3 Press the **ENTER** (↵) button.
- 4 Press the ▼ or ▲ button to select **Custom**.
- 5 Press the **ENTER** (↵) button.
Result: The options available in the **Custom** group are displayed.
- 6 Press the ▼ or ▲ button to select the option (**Contrast**, **Brightness**, **Sharpness**, **Color** or **Tint-NTSC** only) to be adjusted. Press the **ENTER** (↵) button.
Result: The horizontal bar is displayed. Move the horizontal bar's cursor left or right by pressing the ◀ or ▶ button.
- 7 Press the **EXIT** (→) button. **Custom.**

- ◆ If you make any changes to these settings, the picture standard is automatically switched to




Selecting the Color Tone

- 1 Press the **MENU** (□□□) button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Picture**.
Result: The options available in the **Picture** group are displayed.
- 3 Press the **ENTER** (↵) button.
- 4 Press the ▼ or ▲ button to select **Color Tone**.
- 5 Press the **ENTER** (↵) button.
- 6 Press the ▼ or ▲ button to select the required option (**Cool2**, **Cool1**, **Normal**, **Warm1** or **Warm2**).
- 7 Press the **ENTER** (↵) button.

- ◆ The television has an "automatic degaussing" system that is activated if magnetic interference is present. To degauss the television screen, switch power off by pressing the "Ⓞ" (On/Off) button on the front panel. (Refer to "Automatic Degaussing to Remove Colour Patches" on page 46.)

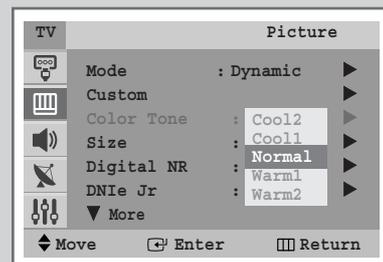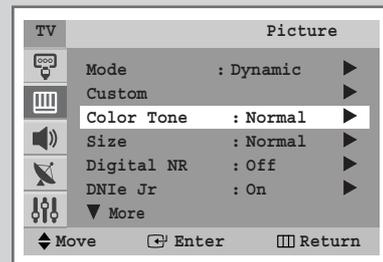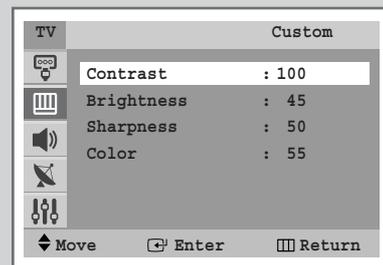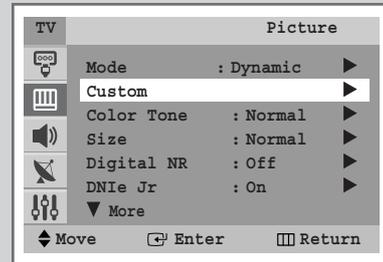

Selecting the Picture Size

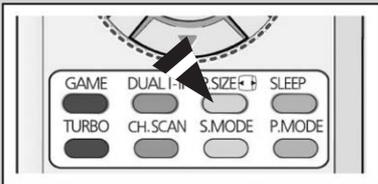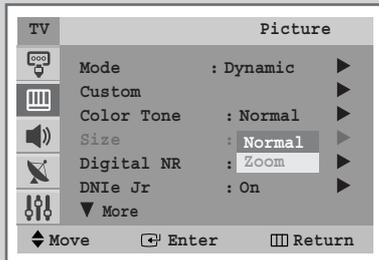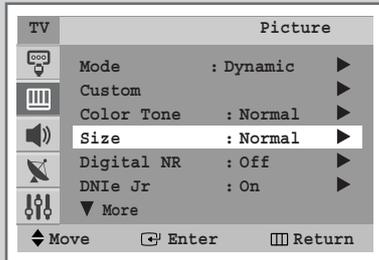

You can select the picture format which best corresponds to your viewing requirements. The following picture formats are available in the order given:

◆ Normal, Zoom

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▼** or **▲** button to select **Picture**.
Result: The options available in the **Picture** group are displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▼** or **▲** button to select **Size**.
- 5 Press the **ENTER** () button.
- 6 Press the **▼** or **▲** button to select the picture size (**Normal** or **Zoom**).
- 7 Press the **ENTER** () button.

- You can select the required picture format by simply pressing the "**P.SIZE** ()" (**Picture Size**) button on the remote control.
- If the picture is in zoom mode it will remain so even if the power switch is on or off.

Extra Picture Settings

ENG

◆ Digital NR




If the signal received by your television is weak, you can activate this feature to reduce any static and ghosting that may appear on the screen.

- 1 Press the **MENU** (□□□) button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Picture**.
Result: The options available in the **Picture** group are
- 3 Press the **ENTER** (↵) button.
- 4 Press the ▼ or ▲ button to select **Digital NR**.
- 5 Press the **ENTER** (↵) button.
- 6 Press the ▼ or ▲ button to select **On**.
- 7 Press the **ENTER** (↵) button.


◆ DNie Jr (Digital Natural Image engine Jr) (Option)

This feature bring you more detailed image with detail enhancement, contrast enhancement and white enhancement. New image compensation Algorithm gives brighter, clearer, much detailed image to you. **DNie Jr** technology will fit every signals into your eyes.

- 1 Press the **MENU** (□□□) button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Picture**.
Result: The options available in the **Picture** group are
- 3 Press the **ENTER** (↵) button.
- 4 Press the ▼ or ▲ button to select **DNie Jr**.
- 5 Press the **ENTER** (↵) button.
- 6 Press the ◀ or ▶ button to select **On**.
- 7 Press the **MENU** (↵) button.

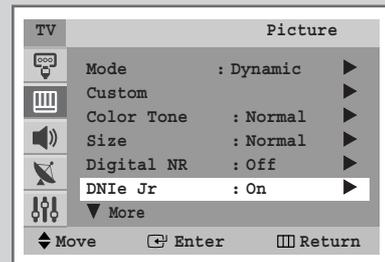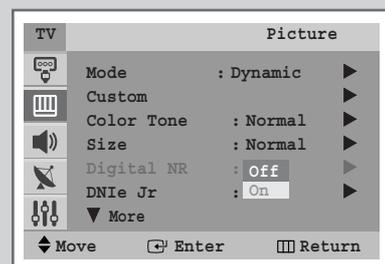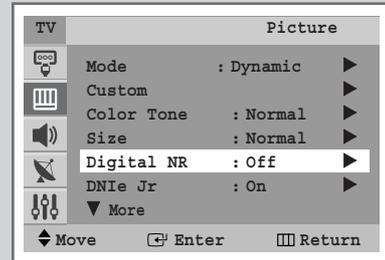


Using the Tilt Control Feature (depending on the model)

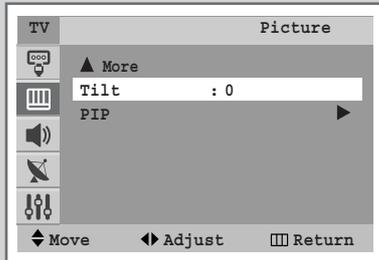

If you find that the picture received is slightly tilted to one side, you can adjust the tilt setting.

- 1 Press the **MENU** (□□□) button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Picture**.
Result: The options available in the **Picture** group are displayed.
- 3 Press the **ENTER** (↵) button.
- 4 Press the ▼ or ▲ button to select **Tilt**.
- 5 Press the ◀ or ▶ button to reach the required setting (-7 to +7).

Setting the Blue Screen

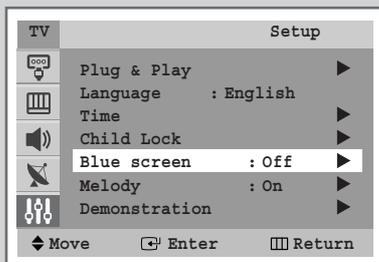

If no signal is being received or the signal is very weak, a blue screen automatically replaces the noisy picture background.

If you wish to continue viewing the poor picture, you must set the "Blue Screen" mode to "Off".





- 1 Press the **MENU** (□□□) button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Setup**.
Result: The options available in the **Setup** group are displayed.
- 3 Press the **ENTER** (↵) button.
- 4 Press the ▼ or ▲ button to select **Blue screen**.
- 5 Press the **ENTER** (↵) button.
- 6 Press the ▼ or ▲ button to select **on**.
- 7 Press the **ENTER** (↵) button.

Changing the Sound Standard

You can select the type of special sound effect to be used when watching a given broadcast.

- 1 Press the **MENU** (□) button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Sound**.
Result: The options available in the **Sound** group are displayed.
- 3 Press the **ENTER** (↵) button.
- 4 Press the **ENTER** (↵) button again to select **Mode**.
Result: The options available in the **Mode** group are displayed.
- 5 Press the ▼ or ▲ button to select sound mode.
Result: The following sound effects are available:
Standard - Music - Movie - Speech - Custom.
- 6 Press the **ENTER** (↵) button.


➤ You can also set these options simply by pressing the **S.MODE** (S.MODE : Sound Mode) button.

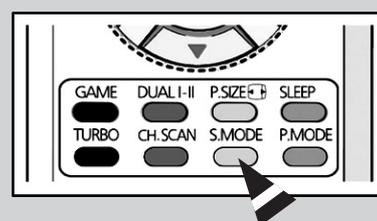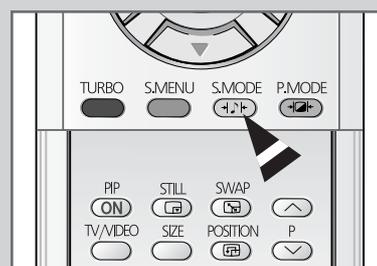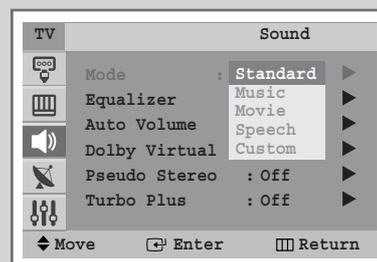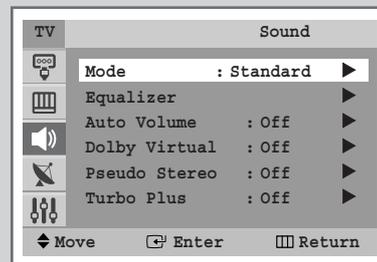



Adjusting the Sound Settings

The sound settings can be adjusted to suit your personal preferences.

- 1 Press the **MENU** (□) button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Sound**.
Result: The options available in the **Sound** group are displayed.
- 3 Press the **ENTER** (↵) button.

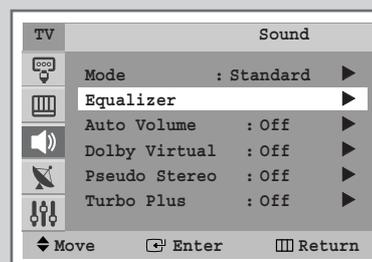




Adjusting the Sound Settings (continued)

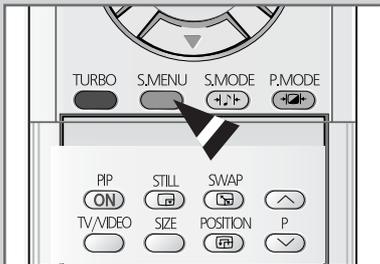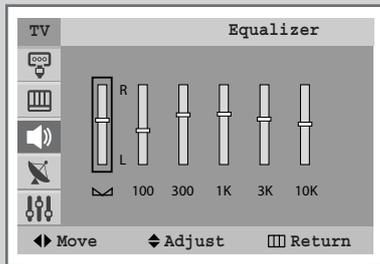

- 4 Press the ▼ or ▲ button to select **Equalizer**.
- 5 Press the **ENTER** (↵) button.
Result: The options available in the **Equalizer** group are displayed.
➤ You can also display this group simply by pressing the **S.MENU** (Sound Menu) button in PIP models only.
- 6 Select the option to be adjusted by pressing the ◀ or ▶ button. Press the ▼ or ▲ button to reach the required setting.

➤ If you make any changes to these settings, the sound standard is automatically switched to **Custom**.

Enjoying the Woofer Sound (depending on the model)

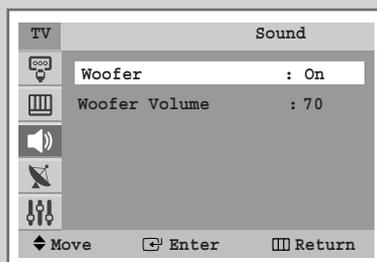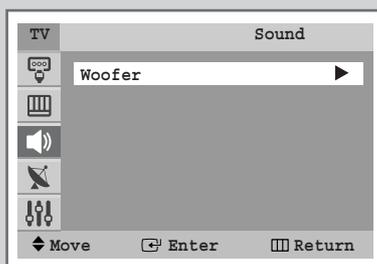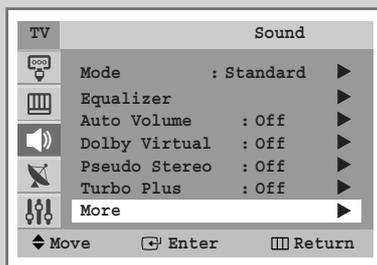

When the woofer speaker is mounted to the TV, you can hear the bass sound-effect (if not mounted, the volume is much lower). Remove the packing materials between the woofer speaker and TV. Attach the woofer speaker ribs in the holes on the top of the TV. Connect the woofer speaker wires to woofer output terminals at the TV rear panel as per color. Connect black wires to black terminal, the red wires to red terminal and follow the below.

- 1 Press the **MENU** button.
- 2 Press the ▲ or ▼ button to select the "SOUND " and press the ◀ or ▶ button.
- 3 Press the ▲ or ▼ button to select the "MORE"
- 4 Press the ◀ or ▶ button.
Result: The "WOOFER" menu is displayed with the "WOOFER" is set to "ON"
- 5 Select the "WOOFER VOLUME" by pressing the ▲ or ▼ button and adjust to satisfy your preference.
- 6 When you are satisfied with the settings, press the **EXIT** button or, press the **MENU** button repeatedly to return to normal viewing.

➤ When you use headphones, first turn off the woofer.

Extra Sound Settings (depending on the model)

ENG

◆ Auto Volume(Intelligent Sound)

Each broadcasting station has its own signal conditions, and so it is not easy for you to adjust the volume every time the channel is changed. This feature lets you automatically adjust the volume of the desired channel by lowering the sound output when the modulation signal is high or by raising the sound output when the modulation signal is low.

◆ Pseudo Stereo / Dolby Virtual (Option)

Pseudo stereo/Dolby Virtual (Option) feature converts a monaural sound signal into two identical left and right channels.






Once the **Pseudo stereo/Dolby Virtual** (Option) is set to **On** or **Off**, these settings apply to the sound effects such as **Standard, Music, Movie, and Speech**.

◆ Turbo Plus

This feature suitably emphasizes both higher and lower bands of sound (and includes other effects). You can enjoy more magnificent and dynamic sound when watching music, movie or other channels. This is stored for each channel individually.



- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▼** or **▲** button to select **Sound**.
Result: The options available in the **Sound** group are displayed.
- 3 Press the **ENTER** () button.
- 4 Select the required option (**Auto Volume, Dolby Virtual, Pseudo Stereo** or **Turbo Plus**) by pressing the **▼** or **▲** button. Press the **ENTER** () button.
 - You can select the turbo sound feature simply by pressing the **TURBO** button.
- 5 To activate each feature, select **On** by pressing the **▼** or **▲** button.
- 6 Press the **ENTER** () button.

- Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

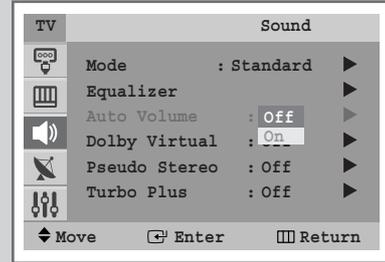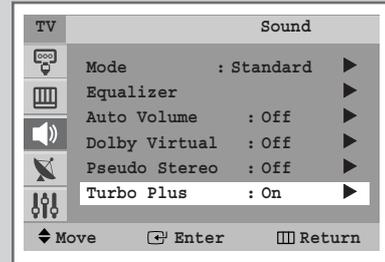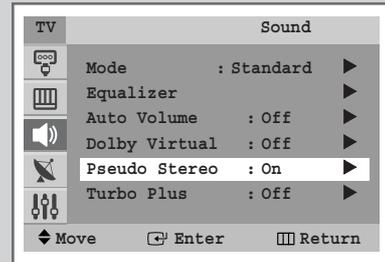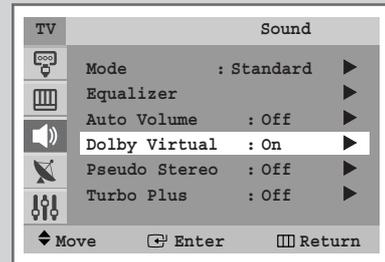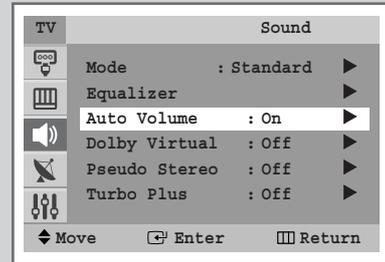

Selecting the Melody

ENG

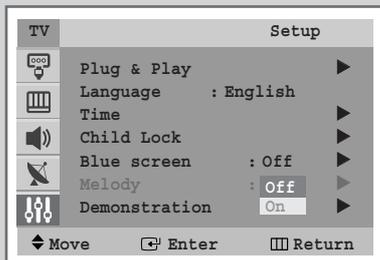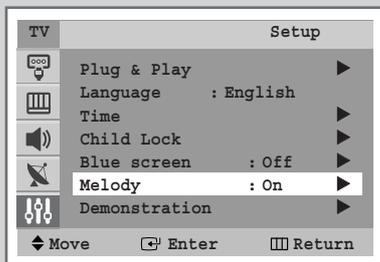

You can hear clear melody sound when the television is powered on or off.

- 1 Press the **MENU** (□□□) button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Setup**.
Result: The options available in the **Setup** group are displayed.
- 3 Press the **ENTER** (↵) button.
- 4 Press the ▼ or ▲ button to select **Melody**.
- 5 Press the **ENTER** (↵) button.
- 6 Press the ▼ or ▲ button to select **On** (activating) or **Off**.
- 7 Press the **ENTER** (↵) button.



Selecting the Sound Mode (depending on the model)

ENG




The "DUAL I/II" button displays/controls the processing and output of the audio signal. When power is switched on, the mode is automatically preset to either "Dual-I" or "Stereo", depending on the current transmission.

	Type of broadcast	On-screen indication
NICAM Stereo	Regular broadcast (Standard audio)	Mono (Normal use)
	Regular + NICAM Mono	Mono ↔ Mono NICAM (Normal)
	NICAM Stereo	Stereo ↔ Mono NICAM (Normal)
	NICAM Dual-I/II	Dual-I → Dual-II → Mono NICAM NICAM (Normal)
A2 Stereo	Regular broadcast (Standard audio)	Mono (Normal use)
	Bilingual or Dual-I/II	DUAL-I ↔ DUAL-II
	Stereo	Stereo ↔ Mono (Forced mono)

- ◆ If the receiving conditions deteriorate, listening will be easier if the mode is set to the **Mono**.
- ◆ If the stereo signal is weak and an automatic switching occurs, then switch to the **Mono**.
- ◆ When receiving a mono sound in the AV mode, connect to the "AUDIO-L" input connector on the panel (front or side). If the mono sound comes out only from left speaker, press the **DUAL I/II** button.

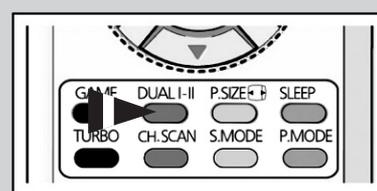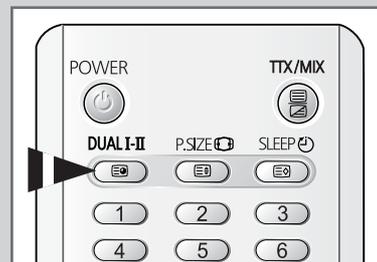

Setting and Displaying the Current Time

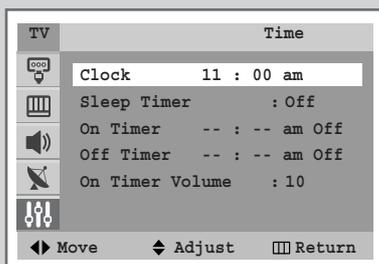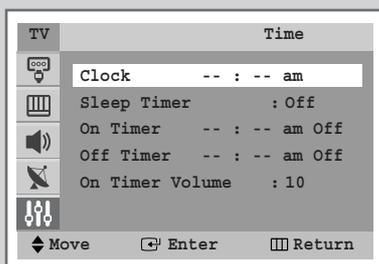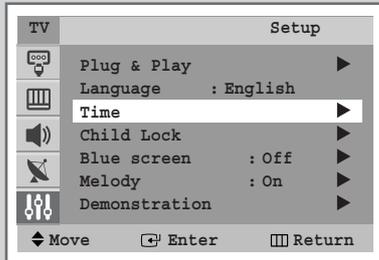

You can set the television's clock so that the current time is displayed by pressing the "INFO ()" button. You must also set the time if you wish to use the automatic on or off timers.

➤ When pressing the "Ⓜ" button (On/Off) on the front of the television, the clock setting will be reset.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▼** or **▲** button to select **Setup**.
Result: The options available in the **Setup** group are displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▼** or **▲** button to select **Time**.
- 5 Press the **ENTER** () button.
Result: The **Time** is selected.
- 6 Press the **ENTER** () button again.
Result: The **clock** is selected.
- 7 Press the **◀** or **▶** button to move to the hour or minute. Set the hour or minute by pressing the **▼** or **▲** button.
- 8 Press the **ENTER** () button.
- 9 When you have finished, press the **EXIT** () button to exit.
- 10 Press the **INFO** () button to display the channel information and the current time.




Setting the Sleep Timer

ENG

You can set your TV to automatically turn off after a preset interval.




- 1 Press the **MENU** (☰) button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Setup**.
Result: The options available in the **Setup** group are displayed.
- 3 Press the **ENTER** (↵) button.
- 4 Press the ▼ or ▲ button to select **Time**.
- 5 Press the **ENTER** (↵) button.
Result: The **Time** is selected.
- 6 Press the ▼ or ▲ button to select **Sleep Timer**.
- 7 Select the preset time interval (Off, 30, 60, 90, 120, 150, 180) for staying on by pressing the ◀ or ▶ button.
- 8 Press the **ENTER** (↵) button.

- You can select a time period of between 30 and 180 minutes after the television automatically switches to Standby mode by pressing the **SLEEP** (⏻) button.

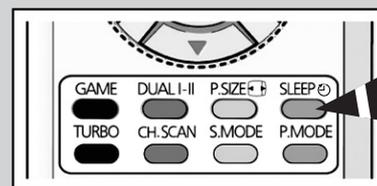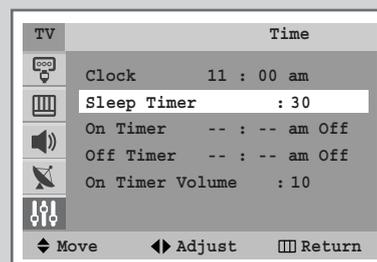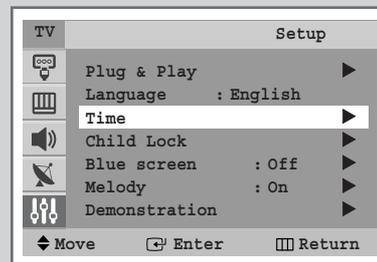

Switching the Television On and Off Automatically

ENG

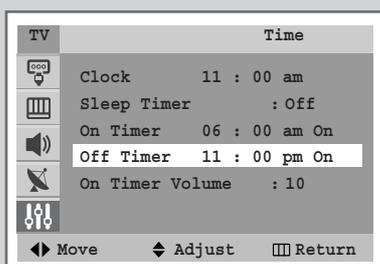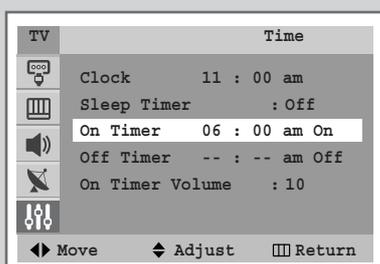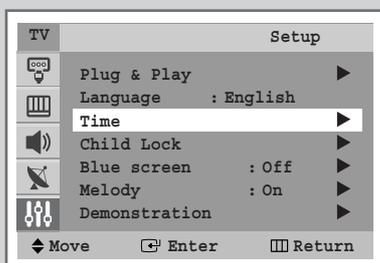

You can set the On/Off timers so that the television will:

- ◆ Switch on automatically and select the channel of your choice at the time you select
- ◆ Switch off automatically at the time you select

➤ The first step is to set the television's clock (refer to "Setting and Displaying the Current Time" on the page 30). If you have not yet set the clock, the message **Set the clock first** is displayed.

- 1 Press the **MENU** (□) button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Setup**.
Result: The options available in the **Setup** group are displayed.
- 3 Press the **ENTER** (⏏) button.
- 4 Press the ▼ or ▲ button to select **Time**.
- 5 Press the **ENTER** (⏏) button.
Result: The **Time** is selected.
- 6 Press the ▼ or ▲ button to select **On Timer**. Set the time at which you wish the television to be switched on automatically.
 - ◆ Press the ◀ or ▶ button to move to the hour or minute. Set these by pressing the ▼ or ▲ button.
 - ◆ Press the ◀ or ▶ button to move **Off** and then, press the ▼ or ▲ button to select **On**.
- 7 Press the ▼ or ▲ button to select **Off Timer**. In the same above, set the time at which you wish the television to be switched off automatically.

➤ Absent Power Off



When you set the timer "On", your television will eventually be turned off, if you do not operate any controls during the 3 hours after the TV is turned on by timer. This function is available in only the timer "On" mode (& the "OFF" timer should be in off condition) and will prevent a leakage accident or overheating, caused by your TV left on for a long time due to the timer "On"(when you are away on holiday, for example).

Setting the Preferred Volume Level

ENG







The preferred volume can be set for when the timer automatically turns on the TV.

- 1 Press the **MENU** (□□□) button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Setup**.
Result: The options available in the **Setup** group are displayed.
- 3 Press the **ENTER** (↵) button.
- 4 Press the ▼ or ▲ button to select **Time**
- 5 Press the **ENTER** (↵) button.
Result: The **Time** is selected.
- 6 Press the ▼ or ▲ button to select **On Timer Volume**.
- 7 Press the ◀ or ▶ button to adjust volume level.
- 8 When you have finished, press the **EXIT** (→) button.

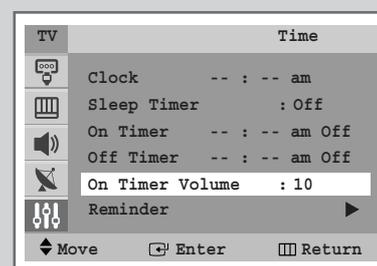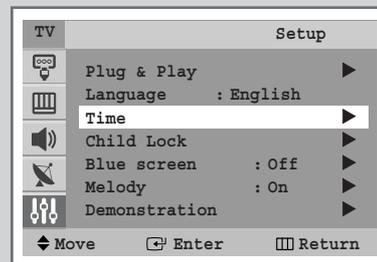

Setting the Reminder

ENG

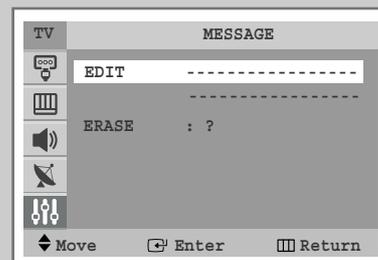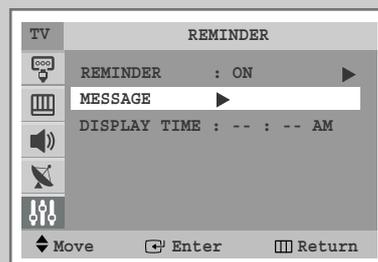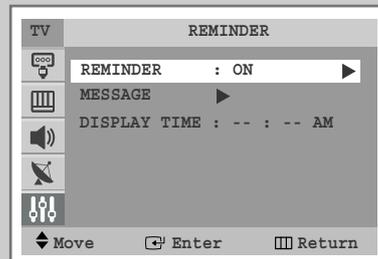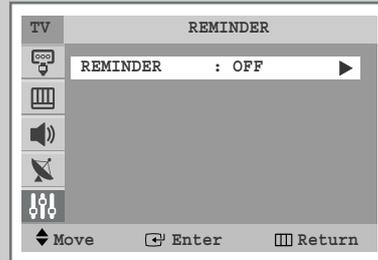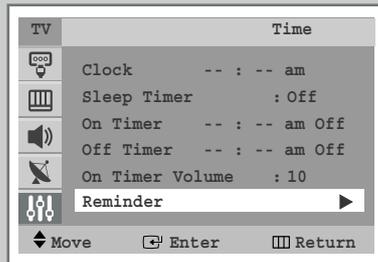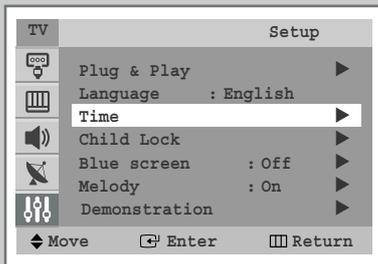

You can set Reminder which will be displayed at the time you have selected while watching the television.

➤ The first step is to set the television's clock (refer to "Setting and Displaying the Current Time" on page 29. If you have not yet set the clock, the message "Set the clock first" is displayed.

1 Press the **MENU** button.

3 Press the ▲ or ▼ button to select the "TIME", and press the ◀ or ▶ button.

Result: The "TIME" menu is displayed.

4 Press the ▲ or ▼ button to select the "REMINDER", and press the ◀ or ▶ button.

Result: The "REMINDER" menu is displayed with the "REMINDER" Selected.

5 Press the ◀ or ▶ button to set the mode to "ON".

Result: The "MESSAGE" and "DISP TIME" options are displayed. The present time is displayed at the left top corner.

6 Press the ▲ or ▼ button to select the "MESSAGE" and press ◀ or ▶ button.

Result: The "MESSAGE" menu is displayed with the "EDIT" selected

7 Press the ◀ or ▶ button to edit the message.

Setting the Reminder (continued...)

ENG

8 Set a message of your choice.

To...	Press the...
Select a letter or number	▲ or ▼ button.
Move to the next letter	▶ button.
Move to the previous letter	◀ button.

9 Press the ▲ or ▼ button to move to the next line.

10 Repeat step 8 to continue editing the message.

11 If you wish to erase the message, select "ERASE" by pressing the ▲ or ▼ button and then press ◀ or ▶ button.

12 When you have finished editing the message, press the MENU button to return back to "REMINDER" menu.



13 Press the ▲ or ▼ button to select the "DISP TIME".

14 Set the time at which you wish the message to be displayed.


To...	Press the...
Move to the hour or minute.	◀ or ▶ button.
Adjust the hour or minute	▲ or ▼ button.

15 When you have finished setting the message and display time, press the **EXIT** button or press the **MENU** button repeatedly to return to normal viewing.

- It is recommended that you set the message before setting the display time.
- The message is displayed on the screen at the selected time for 30 seconds. If you wish to cancel the message before 30 seconds, press "**MENU**" button.
- The message will not be displayed during Autostore, Manual store, PIP Channel Scanning, Standby mode, Demonstration, Plug & Play and while you are enjoying games.

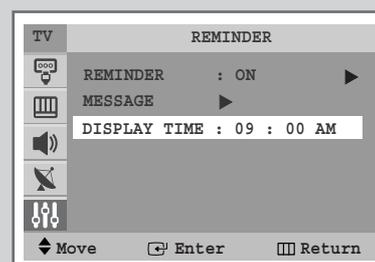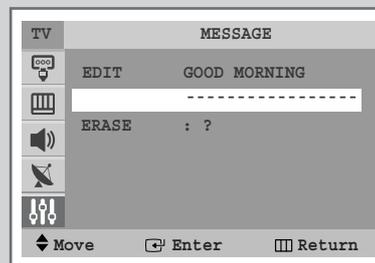

Using the LNA (Low Noise Amplifier) feature (depending on the model)

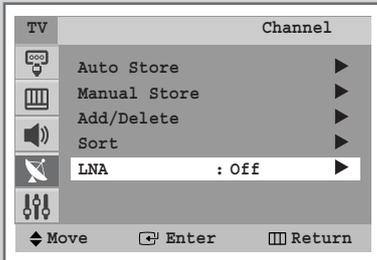

This function is very useful in the situation that the TV is used in weak signal. LNA amplifies the TV signal in the weak signal area, but not noise. This feature is working only weak signal condition, and that is memorized on current channel, additional.

- 1 Press the **MENU** (□□□) button.
Result: The main menu is displayed.

- 2 Press the ▼ or ▲ button to select **Channel**.
Result: The options available in the **Channel** group are displayed.

- 3 Press the **ENTER** (↵) button.

- 4 Press the ▼ or ▲ button to select **LNA**.

- 5 Press the **ENTER** (↵) button.

- 6 Press the ▼ or ▲ button to select **On**.

- 7 Press the **ENTER** (↵) button.

Settings for Pick 'n' Choose

You can save certain custom features depending on preferences for all the 200 Channels and for the external sources.

- 1 **Picture Standard** is saved for all the channels individually as Dynamic, Standard, Movie or Custom.

- 2 **Sound Standard** is saved for all the channels individually as Custom, Standard, Music, Movie or Speech.

- 3 The status of sound settings, such as Pseudo Stereo and Turbo Sound are saved as **ON/OFF** for all the channels individually.

- 4 In addition to Sound Setting, Volume level for all the channels can be saved individually as per your preference.

Activating the Child Lock





You can restrict viewing by locking the channels of your choice.

Example: You can prevent your children from watching unsuitable programmes.






- 1 Press the **MENU** (□□□) button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Setup**.
Result: The options available in the **Setup** group are displayed.
- 3 Press the **ENTER** (↵) button.
- 4 Press the ▼ or ▲ button to select the **Child Lock**. Press the **ENTER** (↵) button.
- 5 Press the **ENTER** (↵) button again.
- 6 Press the ▼ or ▲ button to select the **on**.
Result: The **Child Lock** menu is displayed.
➤ If you want to unlock a channel, set to **off**.
- 7 Press the **ENTER** (↵) button.
- 8 Press the ▼ or ▲ button to select the **Programme**. Select the number of the channel to be locked by pressing the ◀ or ▶ button.
- 9 Press the ▼ or ▲ button to select the **Lock**.
- 10 Press the **ENTER** (↵) button.
Result: **Locked** is displayed.
- 11 When you have finished, press the **EXIT** (→) or **MENU** (□□□) button repeatedly to return to normal viewing.

- If any channel is locked, you can not enter the **Channel** menu by using the control buttons on the television, and the message "Not available" is displayed. You can access by using the remote control only.

ENG

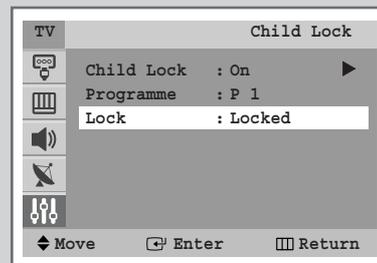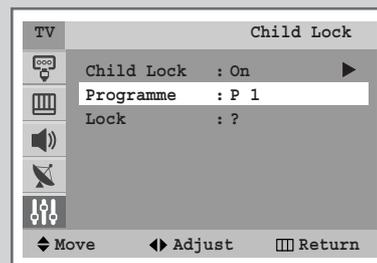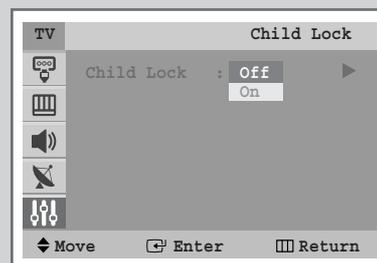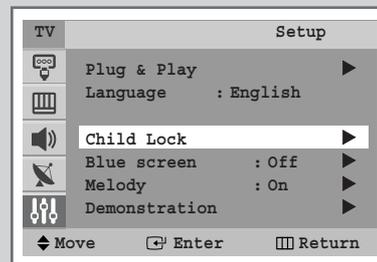

Viewing an External Signal Source (depending on the model)

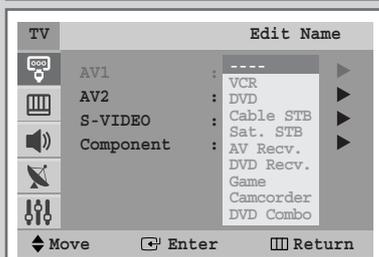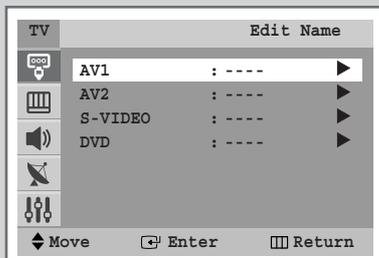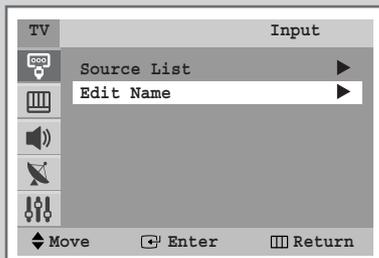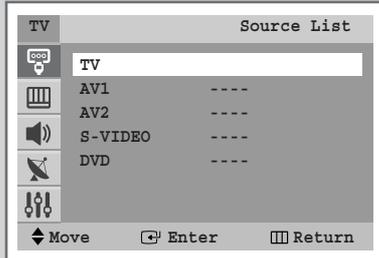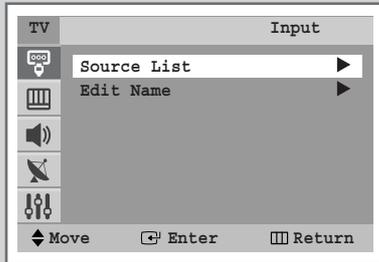

Use the remote control to switch between viewing signal from connected equipment, such as VCR, DVD, Set-Top-boxes and the TV source (broadcast or cable)

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **ENTER** () button to select **Input**.
Result: The options available in the **Input** group are displayed.
- 3 Press the **ENTER** () button again to select **Source List**.
Result: The options available in the **Source List** group are displayed.
- 4 Press the **▼** or **▲** button to select signal source, then press the **ENTER** () button.
 - When you connect equipment to the TV, you can choose between the following sets of jacks : AV1, AV2, S-VIDEO or **Component** on the TV's rear panel, and AV2 or S-VIDEO on the TV's side (or front) panel.
 - S-VIDEO and **Component** signal sources are depending on the model.
- 5 Press the **MENU** () button.
Result: The main menu is displayed.
- 6 Press the **ENTER** () button to select **Input**.
Result: The options available in the **Input** group are displayed.
- 7 Press the **▼** or **▲** button to select **Edit Name** . Press the **ENTER** () button.
Result: The options available in the **Edit Name** group are displayed.
- 8 Press the **▼** or **▲** button to select external device : AV1 – AV2 – S-VIDEO – **Component**.
- 9 Press the **ENTER** () button.
Result: The device names available are listed.
- 10 Select the name by pressing the **▼** or **▲** button. Press the **ENTER** () button.
- 11 Set other signal sources (AV1, AV2, S-VIDEO, **Component**) using the same method as listed above.







➤ You can also set these options simply by pressing the **VIDEO** () button. If you change the external source while viewing, pictures might take a short period of time to be switched.

Viewing the Picture In Picture (PIP) (depending on the model)

You can display a sub picture within the main picture of TV program or external A/V devices such as VCR or DVD. In this way you can watch TV program or monitor the video input from any connected devices while watching TV or other video input.







- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the ▼ or ▲ button to select **Picture**.
Result: The options available in the **Picture** group are displayed.
- 3 Press the **ENTER** () button.
- 4 Press the ▼ or ▲ button to select **PIP**. Press the **ENTER** () button.
- 5 Press the **ENTER** () button again.
- 6 Press the ▼ or ▲ button to **On**.
Result: The options available in the **PIP** group are displayed.
- 7 Press the **ENTER** () button.
➤ You can also activate the PIP simply by pressing the **PIP ON** button. To deactivate, press it again.
- 8 Press the ▼ or ▲ button to select **Source**.
- 9 Press the **ENTER** () button.
- 10 Press the ▼ or ▲ button to select a source of sub picture.
Result: The sources are displayed in the following order:
TV / AV1 / AV2 / S-Video
➤ In some PIP TV models, the PIP function will not operate if the same source to the main picture is selected for the sub-picture. When a TV channel is viewed on the main picture, PIP is not available for TV channels. If a TV source is selected, the message "Not available" will appear on the screen. The PIP picture can be viewed only when a source different from the main picture's is selected in the PIP window.
- 11 Press the **ENTER** () button.
- 12 Press the ▼ or ▲ button to select **Swap**.
- 13 Press the **ENTER** () button.
Result: The main picture and the sub picture are interchanged.
➤ You can also interchange the main picture and the sub picture simply by pressing the **SWAP** button.

ENG

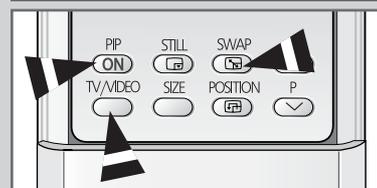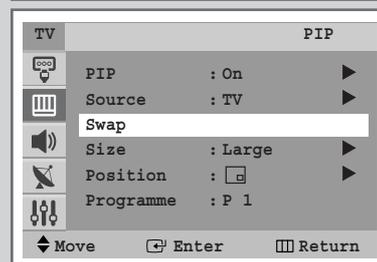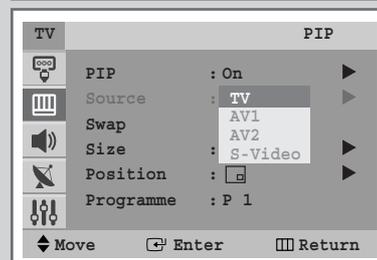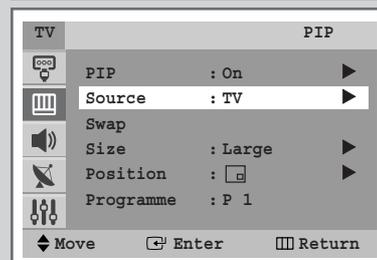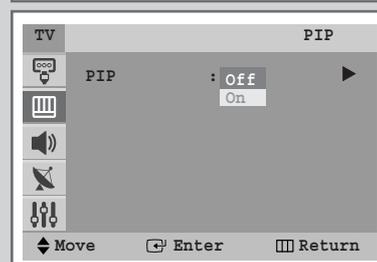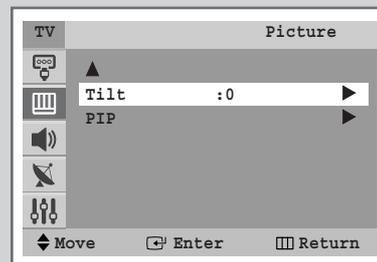

Viewing the Picture In Picture (PIP) (depending on the model) (continued)

ENG

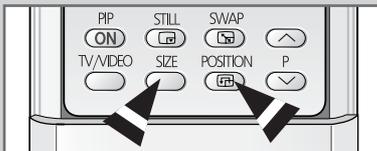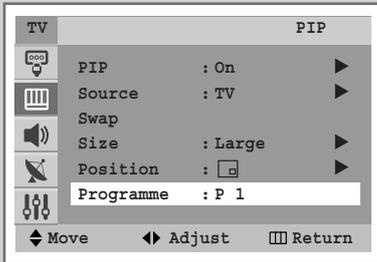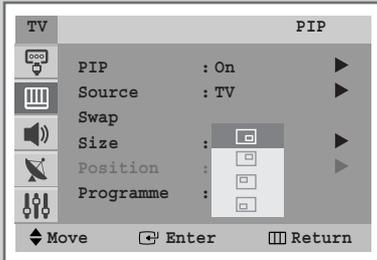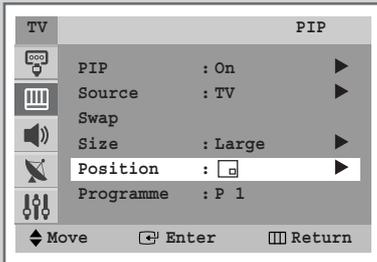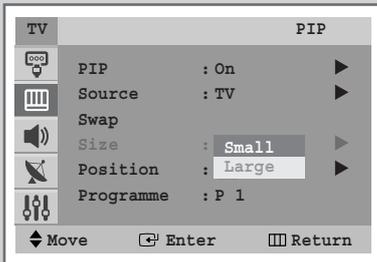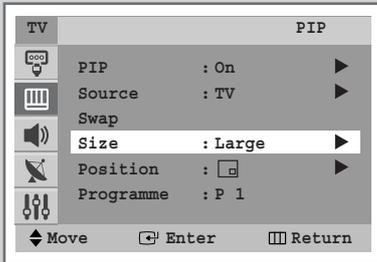

14 Press the ▼ or ▲ button to select **Size**.

15 Press the **ENTER** (⏎) button.

16 Select a size of sub picture by pressing the ▼ or ▲ button.

Result: The sizes are displayed in the following order:
Small - Large

 
17 Press the **ENTER** (⏎) button.

➤ You can select these options simply by pressing the **SIZE** button.

18 Press the ▼ or ▲ button to select **Position**.

19 Press the **ENTER** (⏎) button.

Result: The positions available are displayed.



➤ You can select these options simply by pressing the **Position** (⏎) button.

20 Select a position of the sub picture by pressing the ▼ or ▲ button. Press the **ENTER** (⏎) button.

21 Press the ▼ or ▲ button to select **Programme**. You can select the channel that you want to view through sub picture by pressing the ◀ or ▶ button.


- ◆ When the **Source** is set to **TV**, you can select the channel of sub picture.
- ◆ You can select the channel of the sub picture simply by pressing the ▼ or ▲ button.

Viewing the Picture In Picture (PIP) (depending on the model) (continued)

ENG





Easy functions of remote control

Buttons	Feature
PIP ON	Used to activate or deactivate the PIP function directly.
STILL	Used to freeze the sub picture.
SWAP	Used to interchange the main picture and the sub picture. ➤ When the main picture is in the Video mode and the sub picture is in the TV mode, you might not hear the sound of main picture when pressing the SWAP () button after changing the sub picture channel. At this time, reselect the channel of main picture.
TV/VIDEO	Used to assign a source of sub picture (TV, AV1, AV2 or S-VIDEO).
SIZE	Used to select a size of sub picture (Small or Large).
POSITION	Used to move the sub picture counterclockwise.
P ^ / v	Used to select the channel of sub picture.

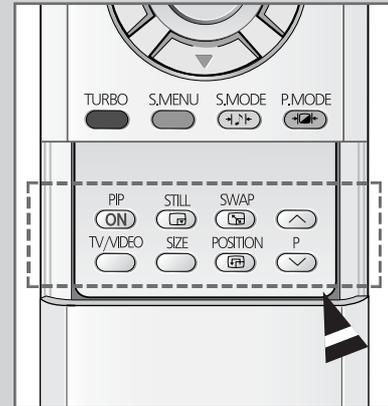

Enjoying Games (Depending on the Model)

ENG

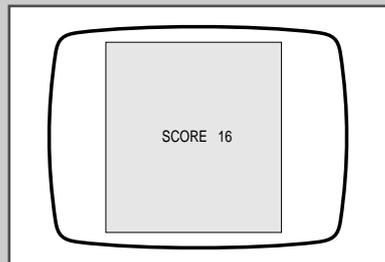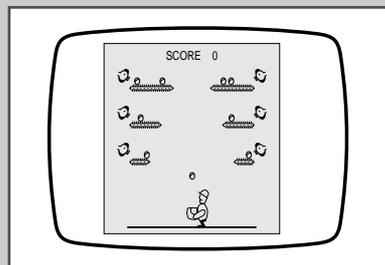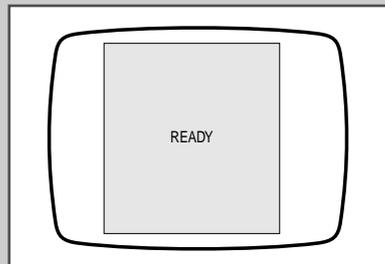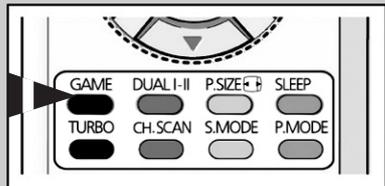

You can enjoy the game (*Chicken Farm*), programmed in this TV.

- 1 Press the **GAME** button to enter the Game mode.

Result: The READY window will be displayed.

- 2 Press the ◀ or ▶ button to run the game.

- 3 Move the farmer to catch eggs by using the ◀ or ▶ button. Every time the scores go up, the speed of game becomes faster bit by bit.

- 4 Every time you catch fifty eggs (i.e., 50, 100, 150 ...), if any broken egg exists, one egg can be restored. When five eggs are lost, the game will be over and simultaneously the final score window will be displayed.

- 5 If you want to stop during the game, press the **MENU** button. Then, the final score window will be displayed.


- 6 If you want to re-start the game, press the **MENU**, ◀ or ▶ button. Then, the final score window will be switched to the READY window.

- 7 To exit the Game mode, press the **GAME** button.

Connecting to the AV-1 or 2 Input/Outputs


➤ These figures show typical connector-jack panels. The actual configuration on your TV may be different, depending on your model.

➤ AV-1 is used for equipment with an RGB output, such as video game devices and video disc players or a VCR.

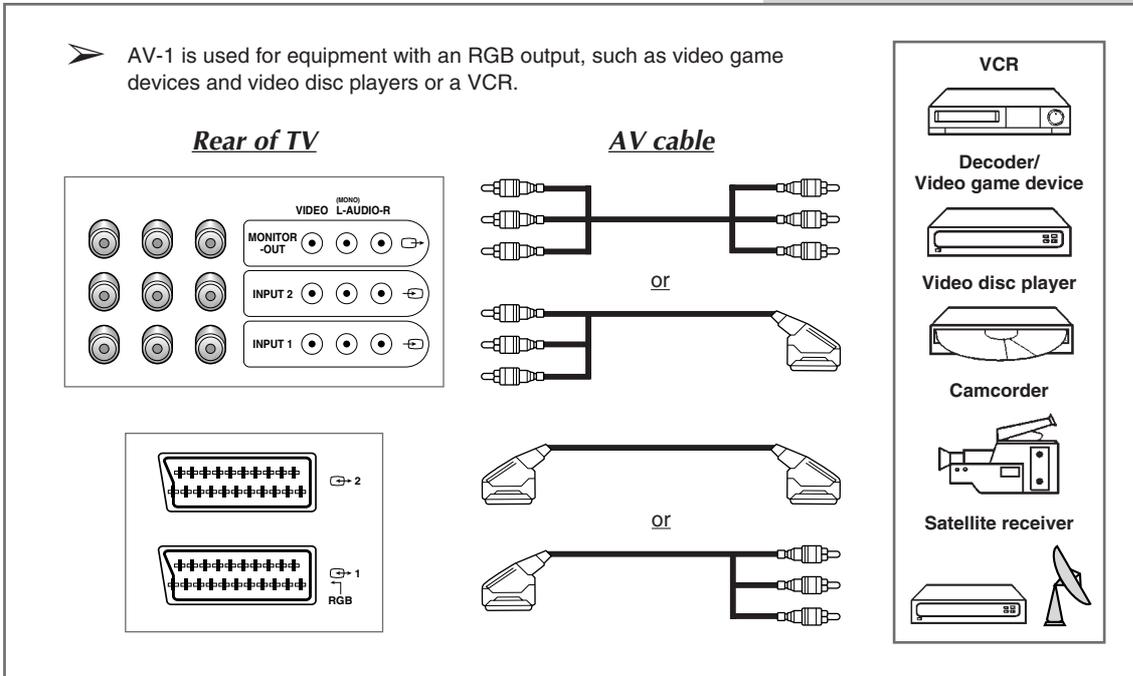

Connecting to the S-VIDEO Input (depending on the model)

➤ The S-VIDEO/RCA (AUDIO-L and R) connectors are used for equipment with an S-Video output, such as a camcorder or VCR.

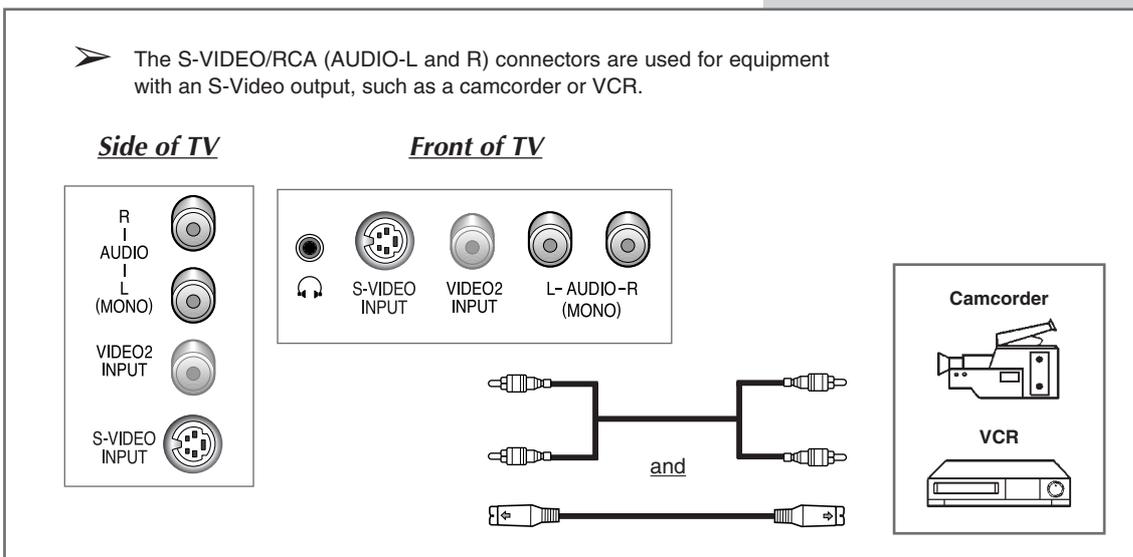


➤ When both the side AV and rear connectors are connected to external equipment, the side (or front) AV receives priority.

☞ Whenever you connect an audio or video system to your television, ensure that **all** elements are switched **off**. Refer to the documentation supplied with your equipment for detailed connection instructions and associated safety precautions.

Connecting to the DVD Input (depending on the model)

- The Component/RCA (AUDIO-L and R) connectors are used for equipment with a DVD output.


Rear of TV

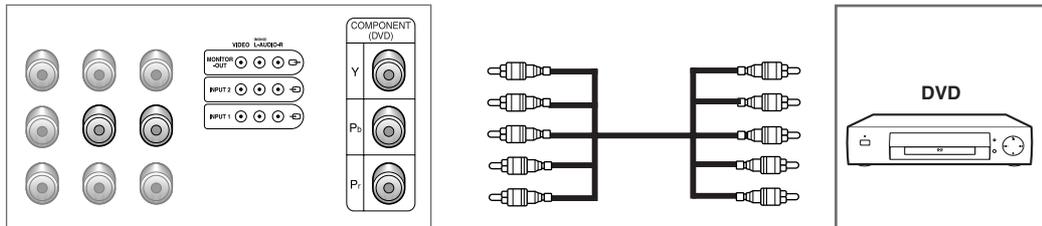

Connecting to the RCA Input (depending on the model)

- The RCA (VIDEO and AUDIO-L+R) connectors are used for equipment, such as camcorders, video disc players, and some video game devices.



Side of the TV

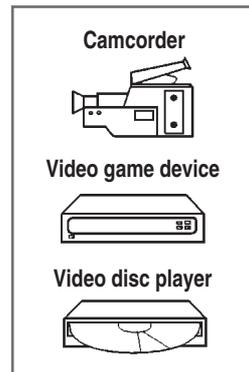

Connecting to the Audio Output (depending on the model)

- The "MONITOR OUT" (L-AUDIO-R) connectors are used for equipment, such as an audio system (to take full advantage of the Surround sound effect).

Rear of the TV

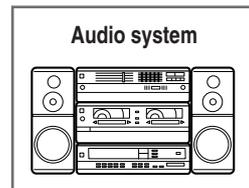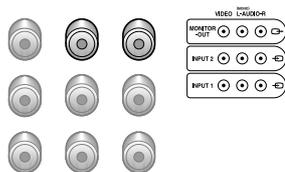

Connecting Headphones (depending on the model)

ENG

You can connect a set of headphones to your television if you wish to watch a television programme without disturbing the other people in the room.

- 1 Plug a set of headphones into the 3.5 mm mini-jack socket of the television.

Result: The sound is heard through the headphones.

- 2 When you wish to hear the sound through the speakers again, simply disconnect the headphones.

➤ Prolonged use of headphones at a high volume may damage your hearing.

Side of the TV



Viewing Pictures From External Sources (depending on the model)

Once you have connected up your various audio and video systems, you can view different sources by selecting the appropriate input.

- 1 Check that all the necessary connections have been made.
- 2 Switch your television on, then press the **VIDEO**() button repeatedly.

Result: The input sources are displayed in the following order:

- ◆ AV1 → AV2 → S-VIDEO (option) → Component (option) - (RCA model)
- ◆ AV1 → AV2 → S-VIDEO (option) - (SCART model)

➤ Depending on the source selected, the pictures may appear automatically.

➤ To watch television programmes again, press the **TV**() button and select the number of the channel required.



Automatic Degaussing to Remove Colour Patches

A degaussing coil is mounted around the picture tube, so you do not normally need to degauss the television manually.

If you move the television to a different position and color patches appear on the screen, you must:

- ◆ Switch the television off by pressing the “⏻” (On/Off) button on the front panel
- ◆ Unplug the television from the wall socket
- ◆ Leave the television power-off for about 30 minutes so that the automatic degauss function can be activated, and then press the “POWER (🔌)” button on the remote control.



If your television will be left unattended, press the “⏻” (On/Off) button to turn your television off.

Troubleshooting: Before Contacting Service Personnel

Before contacting Samsung after-sales service, perform the following simple checks.

If you cannot solve the problem using the instructions below, note the model and serial number of the television and contact your local dealer.

No sound or picture	<ul style="list-style-type: none"> ◆ Check that the mains lead has been connected to a wall socket. ◆ Check that you have pressed the “⏻” button (On/Off) and the POWER (🔌) button. ◆ Check the picture contrast and brightness settings. ◆ Check the volume.
Normal picture but no sound	<ul style="list-style-type: none"> ◆ Check the volume. ◆ Check whether the volume MUTE (🔇) button on the remote control has been pressed.
No picture or black and white picture	<ul style="list-style-type: none"> ◆ Adjust the colour settings. ◆ Check that the broadcast system selected is correct.
Sound and picture interference	<ul style="list-style-type: none"> ◆ Try to identify the electrical appliance that is affecting the television, then move it further away. ◆ Plug your television into a different mains socket.
Blurred or snowy picture, distorted sound	<ul style="list-style-type: none"> ◆ Check the direction, location and connections of your aerial. This interference often occurs due to the use of an indoor aerial.
Remote control malfunctions	<ul style="list-style-type: none"> ◆ Replace the remote control batteries. ◆ Clean the upper edge of the remote control (transmission window). ◆ Check the battery terminals.

Memo

ENG

Large empty rectangular box for writing the memo content.

– AFTER SALES SERVICE

- Do not hesitate to contact your retailer or service agent if a change in the performance of your product indicates that a faulty condition may be present.

