

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

**SAMSUNG ELECTRONICS**



World Wide Web  
<http://www.samsungmobile.com>

Printed in Korea  
Code No.:GH68-26395A  
English (IND). 10/2010. Rev. 1.1

# GT-M5650 user manual



# using this manual

This user manual has been specially designed to guide you through the functions and features of your mobile phone. To get started quickly, refer to “introducing your mobile phone,” “assembling and preparing your mobile phone,” and “using basic functions.”

## Instructional icons

---

Before you start, familiarise yourself with the icons you will see in this manual:



**Warning**—situations that could cause injury to yourself or others



CAUTION

**Caution**—situations that could cause damage to your phone or other equipment



**Note**—notes, usage tips, or additional information



**Refer to**—pages with related information; for example: ► p. 12 (represents “see page 12”)

→ **Followed by**—the order of options or menus you must select to perform a step; for example: In Menu mode, select **Messages** → **Create message** (represents **Messages**, followed by **Create message**)

[ ] **Square brackets**—phone keys; for example: [  ] (represents the Power/Menu exit key)

## Copyright information

---

Rights to all technologies and products that comprise this phone are the property of their respective owners:

- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide.  
Bluetooth QD ID: B015971

- Java™ is a trademark of Sun Microsystems, Inc.
- Windows Media Player® is a registered trademark of Microsoft Corporation.
-  and  are trademarks of SRS Labs, Inc. CS Headphone and WOW HD technologies are incorporated under licence from SRS Labs, Inc.
- Wi-Fi®, the Wi-Fi CERTIFIED logo, and the Wi-Fi logo are registered trademarks of the Wi-Fi Alliance.

CE0168!

# contents

<b>safety and usage information .....</b>	<b>1</b>
Safety warnings .....	1
Safety precautions .....	4
Important usage information .....	6
<b>introducing your mobile phone .....</b>	<b>12</b>
Unpack .....	12
Phone layout .....	13
Keys .....	14
Icons .....	15
<b>assembling and preparing your mobile phone .....</b>	<b>17</b>
Install the SIM or USIM card and battery ...	17
Charge the battery .....	19
Insert a memory card (optional) .....	20
Attach a hand strap (optional) .....	21

## using basic functions ..... 22

Turn your phone on and off .....	22
Use the touch screen .....	23
Access menus .....	24
Switch applications .....	24
Use widgets .....	25
Access help information .....	26
Customise your phone .....	26
Use basic call functions .....	28
Send and view messages .....	29
Add and find contacts .....	31
Use basic camera functions .....	32
Listen to music .....	34
Browse the web .....	36
Use the Google services .....	37

## using advanced functions ..... 39

Use advanced call functions .....	39
Use advanced phonebook functions .....	42
Use advanced messaging functions .....	43
Use advanced camera functions .....	45
Use advanced music functions .....	48

## using tools and applications ..... 53

Use the Bluetooth wireless feature .....	53
Activate and connect to a wireless LAN (WLAN) .....	55
Activate and send an SOS message .....	56
Activate the mobile tracker .....	57
Make fake calls .....	57
Record and play voice memos .....	58
Edit images .....	59

Print images .....	61
Upload photos and videos to the web .....	61
Use Java-powered games and applications .....	63
Synchronise data .....	64
Use RSS feeds .....	65
Create and view world clocks .....	66
Set and use alarms .....	66
Use the calculator .....	67
Convert currencies or measurements .....	67
Set a countdown timer .....	68
Use the stopwatch .....	68
Look up words in a dictionary .....	68
Create new tasks .....	68
Create new memos .....	69
Manage your calendar .....	69
<b>troubleshooting .....</b>	<b>a</b>

# safety and usage information

Comply with the following precautions to avoid dangerous or illegal situations and ensure peak performance of your mobile phone.



## Safety warnings

### Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

### Do not use your device during a thunderstorm

Your device may malfunction and your risk of electric shock is increased.



## Protect your hearing



Excessive exposure to sound at high volumes can cause hearing damage. Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.

## Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

## Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phones in a fire. Follow all local regulations when disposing of used batteries or phones.
- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

## Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

## Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry

flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

## Reduce the risk of repetitive motion injuries

While using your phone, hold the phone with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.

## Do not use the phone if the screen is cracked or broken

Broken glass or acrylic could cause injury to your hand and face. Bring the phone to a Samsung service centre to replace the screen. Damage caused by careless handling will void your manufacturer's warranty.



CAUTION

## Safety precautions

---

### Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

### Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

### Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

### Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

### Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

## Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

## Handle your phone carefully and sensibly

- Do not disassemble your phone due to a risk of electric shock.
- Do not allow your phone to get wet—liquids can cause serious damage and will change the colour of the label that indicates water damage inside the phone. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.
- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.

CAUTION

- If your phone has a camera or light, avoid using it close to the eyes of children or animals.
- Your phone may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

## Avoid interference with other electronic devices

Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.



## Important usage information

---

### Use your phone in the normal position

Avoid contact with your phone's internal antenna.

### Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

### Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.

- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

## Handle SIM cards and memory cards with care

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

## Ensure access to emergency services

Emergency calls from your phone may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

## Specific Absorption Rate (SAR) certification information

Your phone conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile phones that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 W/kg.

During testing, the maximum SAR recorded for this model was 0.746 W/kg. In normal use, the actual SAR is likely to be much lower, as the phone has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your phone reduces your overall exposure to RF energy.


For more information about the SAR and related EU standards, visit the Samsung mobile phone website.

## Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

 This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

## Correct disposal of batteries in this product



(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.



## Disclaimer

Some contents and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal noncommercial use. You may not use any content or services in a manner that has not been authorised by the content owner or service provider. Without limiting the foregoing, unless expressly authorised by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

THIRD PARTY CONTENT AND SERVICES ARE PROVIDED "AS IS." SAMSUNG DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIEDLY,

FOR ANY PURPOSE. SAMSUNG EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SAMSUNG DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL SAMSUNG BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES."

Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which Samsung has no control. Without limiting the generality of this disclaimer, Samsung expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.

Samsung is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

# introducing your mobile phone

In this section, learn about your mobile phone's layout, keys, and icons.

## Unpack


---

Check your product box for the following items:


- Mobile phone
  - Battery
  - Travel adapter (charger)
  - User manual
-  • The items supplied with your phone may vary depending on the software and accessories available in your region or offered by your service provider. You can obtain additional accessories from your local Samsung dealer.
- The supplied accessories perform best for your phone.

## Phone layout

The front of your phone includes the following keys and features:

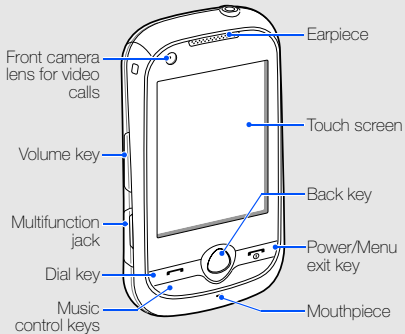


 


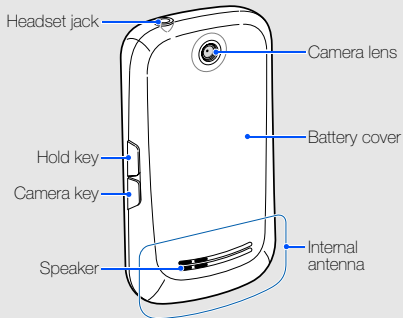




The rear of your phone includes the following keys and features:



You can lock the touch screen and keys to prevent any unwanted phone operations. To lock, press [🔒]. To unlock, press and hold [🔒], or touch and hold the lock icon on the screen.










## Keys












Key	Function
 Dial	Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers
 Back	In Menu mode, return to the previous level; Open the application switch window to access other applications without exiting the current application (press and hold)
 Power/ Menu exit	Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode
 Backward	Skip backward; Scan backward in a file (press and hold)






Key	Function
 Music player	In Idle mode, open the music library screen; Begin, pause, or resume playback
 Forward	Skip forward; Scan forward in a file (press and hold)
 Volume	Adjust the phone's volume; In Idle mode, press and hold the Volume key down to make a fake call
 Hold	Lock the touch screen and keys; Unlock the touch screen and keys (press and hold)
 Camera	In Idle mode, turn on the camera; In Camera mode, take a photo or record a video


## Icons

Learn about the icons that appear on your display.

Icon	Definition
	Signal strength
	SOS message feature activated
	GPRS network connected
	EDGE network connected
	UMTS network connected
	HSDPA network connected
	Voice call in progress
	Video call in progress
	Browsing the web

 Icon	Definition
	Connected to secured web page
	Call diverting activated
	Bluetooth activated
	Bluetooth hands-free car kit or headset connected
	Synchronised with PC
	Wi-Fi activated
	Alarm activated
	New text message (SMS)
	New multimedia message (MMS)
	New email message
	New voice mail message

Icon	Definition
	Memory card inserted
	Normal profile activated
	Silent profile activated
	Battery power level
	Current time

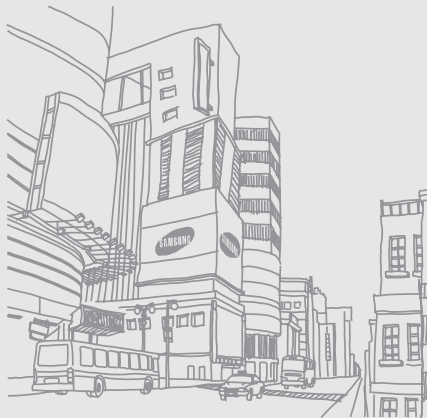

# assembling and preparing your mobile phone

Get started by assembling and setting up your mobile phone for its first use.


## Install the SIM or USIM card and battery


---

When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) card with subscription details, such as your personal identification number (PIN) and optional services. To use UMTS or HSDPA services, you can purchase a Universal Subscriber Identity Module (USIM) card.

To install the SIM or USIM card and battery,


1. Remove the battery cover.

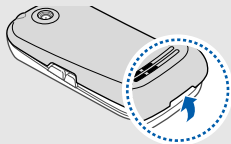

If the phone is on, press and hold [  ] to turn it off.




2. Insert the SIM or USIM card.

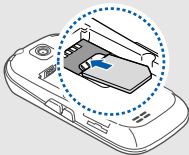


- Place the SIM or USIM card in the phone with the gold-coloured contacts facing down.
- Without inserting a SIM or USIM card, you can use your phone's non-network services and some menus.

3. Insert the battery.

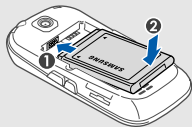


4. Replace the battery cover.

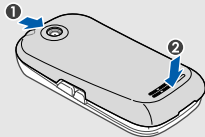

## Charge the battery


Before using the phone for the first time, you must charge the battery.

1. Open the cover to the multifunction jack on the side of the phone.
2. Plug the small end of the travel adapter into the multifunction jack.

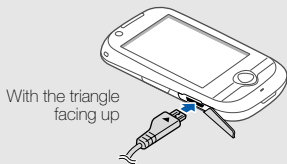

CAUTION

Improperly connecting the travel adapter can cause serious damage to the phone. Any damages by misuse are not covered by the warranty.

3. Plug the large end of the travel adapter into a power outlet.
4. When the battery is fully charged (the  icon is no longer moving), unplug the travel adapter from the power outlet.
5. Unplug the travel adapter from the phone.
6. Close the cover to the multifunction jack.



### About the low battery indicator

When your battery is low, the phone will emit a warning tone and a low battery message. The battery icon will also be empty and blinking. If the battery level becomes too low, the phone will automatically power off. Recharge your battery to continue using your phone.

## Insert a memory card (optional)


To store additional multimedia files, you must insert a memory card. Your phone accepts microSD™ or microSDHC™ memory cards up to 16 GB (depending on memory card manufacturer and type).



Formatting the memory card on a PC may cause incompatibility with your phone. Format the memory card only on the phone.

1. Remove the battery cover.

2. Insert a memory card with the label side facing up.

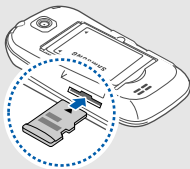

3. Push the memory card in the memory card slot until it locks in place.


4. Replace the battery cover.

To remove the memory card, push it gently until it disengages from the phone, and then pull the memory card out of the memory card slot.

## Attach a hand strap (optional)

---

1. Remove the battery cover.
2. Slide a hand strap through the slot and hook it over the small projection.

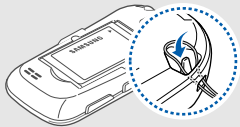

3. Replace the battery cover.



# using basic functions

Learn how to perform basic operations and use the main features of your mobile phone.

## Turn your phone on and off

---

To turn your phone on,

1. Press and hold [].
2. Enter your PIN and select **Confirm** (if necessary).

To turn your phone off, repeat step 1 above.

## Switch to the offline profile

By switching to the offline profile, you can use your phone's non-network services in areas where wireless devices are prohibited, such as aeroplane and hospitals.

To switch to the offline profile, in Menu mode, select **Settings** → **Phone profiles** → **Offline**.



Follow all posted warnings and directions from official personnel when in areas where wireless devices are prohibited.

## Use the touch screen

---

Your phone's touch screen lets you easily select items or perform functions. Learn basic actions to use the touch screen.




For the optimal use of the touch screen, remove the screen protection film before using your phone.


- Touch an icon to open a menu or launch an application.



- Drag your finger up or down to scroll through vertical lists.

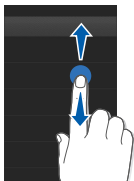


- Drag your finger left or right to scroll through horizontal lists.

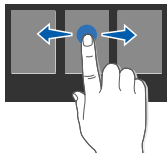

## Access menus

---

 To access your phone's menus,

1. In Idle mode, select **Menu** to access Menu mode.
2. Scroll left or right through the menu screens.
3. Select a menu or option.
4. Press the Back key to move up one level; Press [] to return to Idle mode.



### Customise Menu mode

You can organise applications in the Menu mode screens or set titles to each screen to match your preferences and needs.



This feature may be unavailable depending on the software of the phone.

1. In Idle mode, select **Menu**.

2. Select  to switch to Edit mode.
3. Customise the screens as desired.
  - To rename the menu screen, enter a title in the text input field at the top of the screen.
  - To rearrange applications, drag an application icon to the location you want.
4. Select **Save**.
  -  Select **Reset** to restore the default order of applications.

## Switch applications

---

Learn to switch to other applications from a menu, without closing the menu screen you are using.

1. While using a menu, press and hold the Back key.
 

The following applications are available:

  - **Call**: open the dialing screen

- **Music player:** launch the music player
  - **Messages:** access the **Messages** menu
  - **Internet:** launch the web browser
  - **Main menu:** access the main menus
2. Select an application.
  3. To close the current application, press the Back key.

## Use widgets

---

Learn to use widgets on the toolbar.



- Some of your widgets connect to web services. Selecting a web-based widget may incur additional charges.
- Available widgets may vary depending on your region or service provider.

## Open the widget toolbar

In Idle mode, select the arrow at the bottom left of the screen to open the widget toolbar. You can rearrange widgets on the widget toolbar or move them to the idle screen.

## Move the widgets to the idle screen

1. In Idle mode, scroll left or right to one of the idle screens.
2. Open the widget toolbar.
3. Drag a widget from the widget toolbar to the idle screen. You can position the widget anywhere on the screen.





## Change the widgets

1. In Menu mode, select **Settings** → **Display and light** → **Widget**.
2. Select the widgets you want to include to the widget toolbar and select **Save**.

## Access help information

Learn to access helpful information about your phone.

1. Open the widget toolbar.
2. Select  from the widget toolbar.
3. Rotate the phone anti-clockwise to landscape view.
4. Select a help topic to learn about an application or feature.
5. Scroll left or right to get more information. To return to the previous level, select .

## Customise your phone

---

Get more from your phone by customising it to match your preferences.

### Adjust the volume of the key tones

In Idle mode, press the Volume key up or down and adjust the key tone volume.

### Adjust the vibration intensity on the touch screen


You can adjust the intensity of the vibration when you tap the phone screen.

1. In Idle mode, press the Volume key.
2. Select **Vibration** and press the Volume key and adjust the intensity of the vibration.

## Switch to or from the silent profile

In Idle mode, select **Keypad** and touch and hold **#** to silence or unsilence your phone.

## Change your ringtone

1. In Menu mode, select **Settings** → **Phone profiles**.
2. Select  next to the profile you are using.



If you are using the silent or offline profile, you are not allowed to change the ringtone.

3. Select **Voice call ringtone** or **Video call ringtone**.
4. Select a ringtone from the list and select **Save**.
5. Select **Save**.

To switch to another profile, select it from the list and select **Save**.

## Select a wallpaper (Idle mode)

1. In Menu mode, select **Settings** → **Display and light** → **Wallpaper**.
2. Scroll left or right to an image.
3. Select **Set**.

## Select a skin colour (Menu mode)

1. In Menu mode, select **Settings** → **Display and light** → **My theme**.
2. Select a colour pattern.
3. Select **Save**.

## Lock your phone

1. In Menu mode, select **Settings** → **Security**.
2. Select **On** under **Phone lock**.
3. Enter a new 4- to 8-digit password and select **Confirm**.
4. Enter the new password again and select **Confirm**.



- The first time you access a menu that requires a password, you will be prompted to create and confirm a password.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.



## Use basic call functions

Learn to make or answer calls and use basic call functions.





During a call, your phone automatically locks the touch screen to prevent accidental inputs. To unlock, press and hold [⏏].

### Make a call

1. In Idle mode, select **Keypad** and enter an area code and a phone number.
2. Select  → **Voice call** or press [☎] to dial the number.  
For a video call, select  → **Video call**.
3. To end the call, press [⏏].

### Answer a call

1. When a call comes in, press [☎].

- For a video call, press [] and select **Show me** to allow the caller to see you via the front camera lens.
- To end the call, press [].

## Adjust the volume

To adjust the volume during a call, press the Volume key up or down.

## Use the speakerphone feature

- During a call, select **Speaker** → **Yes** to activate the speaker.
- To switch back to the earpiece, select **Speaker** again.



In noisy environments, you may have difficulty hearing the calls while using the speakerphone feature. For better performance, use the normal phone mode.

## Use the headset

By plugging the supplied headset into the headset jack, you can make and answer calls:

- To redial the last call, press and hold the headset button, and then press and hold it again.
- To answer a call, press the headset button.
- To end a call, press and hold the headset button.



Using the rubber earbuds that do not fit your ear holes may cause ear damage.

## Send and view messages

Learn to send or view text (SMS), multimedia (MMS), or email messages.

### Send a text or multimedia message

- In Menu mode, select **Messages** → **Create message** → **Message**.

2. Select **Tap to add recipient** → **Enter manually**.
3. Enter a recipient number and select **Done**.
4. Select **Tap to add text**.
5. Enter your message text and select **Done**.
  - ▶ Enter text

For sending as a text message, skip to step 7.  
For attaching multimedia, continue with step 6.
6. Select **Add media** and add an item.
7. Select **Send** to send the message.


## Send an email

1. In Menu mode, select **Messages** → **Create message** → **Email**.
2. Select **Tap to add recipient** → **Enter manually**.
3. Enter an email address and select **Done**.
4. Select **Tap to add subject**.



5. Enter a subject and select **Done**.
6. Select **Tap to add text**.
7. Enter your email text and select **Done**.
8. Select **Add files** and attach a file (if necessary).
9. Select **Send** to send the message.

## Enter text

When entering text, you can change the text input mode:

- To change case or switch to Number or Symbol mode, select **T9 Ab** or **Abc** at the bottom centre of the screen. Depending on your region, you may be able to access an input mode for your specific language.
- To switch between T9 and ABC modes, select **T9** (**T9** turns blue in T9 mode).
- To switch to Symbol mode, select .

Enter text in one of the following modes:

Mode	Function
ABC	Select an appropriate virtual key until the character you want appears on the display.
T9	<ol style="list-style-type: none"><li>1. Select appropriate virtual keys to enter an entire word.</li><li>2. When the word displays correctly, select  to insert a space. If the correct word does not display, select  to select an alternate word.</li></ol>
Number	Select an appropriate virtual key to enter a number.
Symbol	Select an appropriate virtual key to enter a symbol.

## View text or multimedia messages

1. In Menu mode, select **Messages** → **Inbox**.
2. Select a text or multimedia message.

## View an email

1. In Menu mode, select **Messages** → **Email inbox**.
2. Select an account.
3. Select **Download**.
4. Select an email or a header.
5. If you selected a header, select **Retrieve** to view the body of the email.


## Add and find contacts

Learn the basics of using the phonebook feature.



The memory location to save new contacts may be preset depending on your service provider. To change the memory location, in Idle mode, select **Phonebook** → **More** → **Settings** → **Memory in use** → **Save new contacts to** → a memory location.

## Add a new contact

1. In Idle mode, select **Keypad** and enter a phone number.
2. Select  → **Add to Phonebook** → **New**.
3. Select **Phone** or **SIM** (if necessary).
4. Enter contact information.
5. Select **Save** to add the contact to memory.

## Find a contact

1. In Idle mode, select **Phonebook**.
2. Select the search field, enter the first few letters of the name you want to find, and select **Done**. You can also drag  to select the first letter of the name.

3. Select the contact's name from the search list.





Once you have found a contact, you can:





- call the contact by selecting  → 
- edit the contact information by selecting **Edit**

## Use basic camera functions

Learn the basics to capture and view photos and videos.

### Capture photos



1. In Idle mode, press [] to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Aim the lens at the subject and make any adjustments.
  - To select the time delay, select .

- To set the exposure value, select .
  - To adjust the colour balance, select .
  - To zoom in or out, press the Volume key.
4. Press [] to take a photo.  
The photo is saved automatically.
- After capturing photos, select [] to view photos.

## View photos










In Menu mode, select **My files** → **Images** → **My photos** → a photo file.

To zoom in or out while viewing the photo file,

- select  and press the Volume key up or down.
- touch and hold the screen. When  appears, scroll up or down.

To exit the zoom screen, press the Back key.

## Capture videos

1. In Idle mode, press [] to turn on the camera.
  2. Rotate the phone anti-clockwise to landscape view.
  3. Select [] to switch to Recording mode.
  4. Aim the lens at the subject and make any adjustments.
    - To change the recording mode, select .
    - To select the time delay, select .
    - To set the exposure value, select .
    - To zoom in or out, press the Volume key.
  5. Press [] to start recording.
  6. Press  or [] to stop recording.  
The video is saved automatically.
- After capturing videos, select [] to view videos.



## View videos

In Menu mode, select **My files** → **Videos** → **My video clips** → a video file.

## Listen to music

Learn how to listen to music via the music player or FM radio.

### Listen to the FM radio



While listening to the radio, do not connect the travel adapter or PC data cable to your phone. The adapter or cable may interrupt the headset's function as a radio antenna.





1. Plug the supplied headset into the phone's headset jack.
2. In Menu mode, select **FM radio**.


3. Select **Yes** to start automatic tuning.  
The radio scans and saves available stations automatically.



The first time you turn on the FM radio, you will be prompted to start automatic tuning.

4. Control the FM radio using the following icons and keys:

Icon/Key	Function
	Fine-tune a radio station by 100 KHz; Select an available radio station (press and hold)
	Turn the FM radio on or off
	Open the favourite list ▶ p. 50
	Set the FM radio to retune frequencies for stations automatically when the current radio signal is weak

Icon/Key	Function
	Change the sound output
Volume	Adjust the volume

If you want to get information about the song you hear, select **More** → **Find music**. ► p. 51

- To turn off the FM radio, press [▶||].







## Listen to music files


Start by transferring files to your phone or memory card:

- Download from the wireless web. ► p. 36
- Download from a PC with the optional Samsung PC Studio. ► p. 48
- Receive via Bluetooth. ► p. 54
- Copy to your memory card. ► p. 48
- Synchronise with Windows Media Player 11. ► p. 49

After transferring music files to your phone or memory card,

- In Menu mode, select **Music player**.
- Select a music category → a music file.
- Control playback using the following icons and keys:

Icon/Key	Function
	Pause or resume playback
	Skip backward; Scan backward in a file (press and hold)
	Skip forward; Scan forward in a file (press and hold)
	Activate the 5.1 channel surround sound system when a headset is plugged
	Change the sound effect
	Activate Shuffle mode

Icon/Key	Function
	Change the repeat mode
Volume	Adjust the volume

1. When you touch the screen, the icons will be available.

## Browse the web








Learn to access and bookmark your favourite web pages.



- You may incur additional charges for accessing the web and downloading media.
- The browser menus may be labelled differently depending on your service provider.
- Available icons may vary depending on your region or service provider.

## Browse web pages

1. In Menu mode, select **Internet** → **Home** to launch your service provider's homepage.
2. Navigate web pages using the following icons:

Icon	Function
	Move backward or forward on a web page
	Stop loading the web page
	Refresh the current web page
	Change the view mode
	Open a list of saved bookmarks
	Change the web page to the landscape orientation
	Access a list of browser options

## Bookmark your favourite web pages

1. In Menu mode, select **Internet** → **Bookmarks**.
2. Select **Add**.
3. Enter a web address (URL) and a page title.
4. Select **Save**.

## Download media files

1. In Menu mode, select **Downloads**.
2. Search for a ringtone or picture and download it to the phone.

## Use the Google services

---

Learn how to use various Google services.



- Some services may be unavailable depending on your region or service provider.
- The steps you must select to use this feature may differ depending on your region or service provider.

## Connect to Google Search

1. In Menu mode, select **Google** → **Search**.
2. Enter a keyword in the search field.

## Connect to Google Mail

1. In Menu mode, select **Google** → **Mail**.
2. Set up your Google account and sign in.
3. Send or receive emails.

## Connect to Google Maps

To search the map,

1. In Menu mode, select **Google** → **Maps**.
2. Scroll through the map.
3. Zoom in or out on the location you want.

To search for a specific location,

1. In Menu mode, select **Google** → **Maps**.
2. Select **Menu** → **Search Map** and enter the address or the category of the business.

To get directions to a specific destination,

1. In Menu mode, select **Google** → **Maps**.
2. Select **Menu** → **Get Directions**.
3. Enter the addresses of the starting location and the ending location.
4. Select **Show directions** to view on the map.



# using advanced functions

Learn how to perform advanced operations and use additional features of your mobile phone.

## Use advanced call functions

---

Learn about your phone's additional calling capabilities.




### View and dial missed calls

Your phone will display calls you have missed on the display.

When you have one missed call, select the call from the event alert widget and select **Voice call** to dial.

When you have two missed calls or more, select the call from the event alert widget and select **Logs** → a missed call.

### Call a recently dialed number

1. In Idle mode, press [>] to display a list of recent numbers.
2. Scroll to the number you want and select  or press [>] to dial.

## Hold a call or retrieve a held call

Select **Hold** to place a call on hold or select **Retrieve** to retrieve a held call.

## Dial a second call

If your network supports this function, you can dial another number during a call:

1. Select **Hold** to place the first call on hold.
2. Enter the second number to dial and press [**↵**].
3. Select **Swap** to switch between the two calls.
4. To end the call on hold, select **End all** → **Held call** → **Done**.
5. To end the current call, press [**⏏**].


## Answer a second call

If your network supports this function, you can answer a second incoming call:


1. Press [**↵**] to answer the second call.  
The first call is automatically placed on hold.
2. Select **Swap** to switch between the calls.

## Make a multiparty call (conference call)

1. Call the first party you want to add to the multiparty call.
2. While connected to the first party, call the second party.  
The first party is automatically placed on hold.
3. When connected to the second party, select **Join**.




4. Repeat steps 2 and 3 to add more parties (if necessary).
5. To end the multiparty call, press [.

## Call an international number


1. In Idle mode, select **Keypad** and touch and hold **0** to insert the **+** character.
2. Enter the complete number you want to dial (country code, area code, and phone number), and then press [] to dial.

## Call a contact from the phonebook

You can call numbers directly from the phonebook using stored contacts. ► p. 32

1. In Idle mode, select **Phonebook**.
2. Select the contact you want.
3. Select  next to the number you want to dial →  (voice call) or  (video call).

## Reject a call

To reject an incoming call, press []. The caller will hear a busy tone.

To reject calls from certain numbers automatically, use the auto rejection. To activate the auto rejection and set up the reject list,

1. In Menu mode, select **Settings** → **Application settings** → **Call** → **All calls** → **Auto reject**.
2. Select **On** under **Activation**.
3. Select **Add number** under **Reject list**.
4. Select the number input field.
5. Enter a number to reject and select **Done** → **Save**.
6. Repeat steps 3-5 to add more numbers.
7. Select the check boxes next to the numbers.
8. Select **Save**.



## Use advanced phonebook functions

Learn to create your namecard, set favourite numbers, and create groups of contacts.

### Create your namecard

1. In Idle mode, select **Phonebook**.
2. Select **More** → **My namecard**.
3. Enter your personal details and select **Save**.



You can send your namecard by attaching it to a message or email or transferring it via the Bluetooth wireless feature.

### Set favourite numbers

1. In Idle mode, select **Phonebook**.
2. Select the **Contacts** drop-down menu and select **Favourites**.

3. Select **Add**.
4. Select a contact.  
The contact is saved to the favourite number list.



- You can call this contact by touching and holding the assigned number in the dialling screen.
- The first 5 favourite numbers will be assigned to the favourite contacts (👤) on the widget toolbar.

### Create a group of contacts




By creating groups of contacts, you can assign group names, ringtones, caller ID photos, and vibration types to each group or send messages or emails to an entire group. Start by creating a group:

1. In Idle mode, select **Phonebook**.
2. Select the **Contacts** drop-down menu and select **Groups**.

3. Select **Create group**.
4. Set a group name, the caller ID photo, a group ringtone, and vibration type.
5. Select **Save**.
6. Select **Yes** and add contacts to the group (if necessary).

## Make calls or send messages from photos

Your phone automatically adds contacts you frequently use to the photo contacts list. From the photo contacts, you can make calls or send messages.

1. In Menu mode, select **Photo contacts**.
2. Select a photo contact.
3. Select  to make a voice call, select  to make a video call, or select  to send a message.

## Use advanced messaging functions

Learn to create templates, use templates to create new messages, create message folders, and use the Instant messenger.

### Create a text template

1. In Menu mode, select **Messages** → **Templates** → **Text templates**.
2. Select **Create** to open a new template window.
3. Select **Tap to add text**.
4. Enter your text and select **Done**.
5. Select **Save**.

### Create a multimedia template


1. In Menu mode, select **Messages** → **Templates** → **Multimedia templates**.
2. Select **Create** to open a new template window.

3. Create a multimedia message, with a subject and desired attachments, to use as your template. ► p. 29
4. Select **Save**.

## Insert text templates in new messages

1. To start a new message, in Menu mode, select **Messages** → **Create message** → a message type.
2. Select **More** → **Insert** → **Text template** → a template.

## Create a message from a multimedia template

1. In Menu mode, select **Messages** → **Templates** → **Multimedia templates**.
2. Select  next to the template you want. Your template opens as a new multimedia message.

## Create a folder to manage messages

1. In Menu mode, select **Messages** → **My folders**.
2. Select **Create folder**.
3. Enter a new folder name and select **Done**.

Move messages from a message folder to your folders to manage them as your preferences.

## Use the Instant messenger

Learn to chat with your family or friends from any of the universal instant messengers, such as Windows Live Messenger and AOL Instant Messenger.



This feature may be unavailable depending on your region or service provider.

1. In Menu mode, select **Instant messenger**.
2. Select **Menu** → **Sign In**.
3. Enter your user ID and password, and select **Sign In**.




4. Chat with your family or friends instantly.

## Use advanced camera functions


 

---

Learn how to capture photos in various modes and customise camera settings.


 
 
### Capture photos in Smile shot mode


1. In Idle mode, press [] to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Select [] → **Smile shot**.
4. Make any necessary adjustments.
5. Press [].
6. Aim the camera lens at your subject.  
Your phone recognises people in an image and detects their smiles. When the subject smiles, the phone automatically takes a photo.

### Capture a series of photos


 


1. In Idle mode, press [] to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Select [] → **Continuous**.
4. Make any necessary adjustments.
5. Press and hold [] to take a series of photos.

### Capture panoramic photos





1. In Idle mode, press [] to turn on the camera.
2. Rotate the phone anti-clockwise to landscape view.
3. Select [] → **Panorama**.
4. Make any necessary adjustments.
5. Press [] to take the first photo.

- Slowly move the phone to the direction you want. When you align the small white frame with , the phone captures the next photo automatically.
- Repeat step 6 to complete the panoramic photo.




## Capture divided photos

- In Idle mode, press [] to turn on the camera.
- Rotate the phone anti-clockwise to landscape view.
- Select [] → **Mosaic**.
- Select an image layout and press [].
- Make any necessary adjustments.
- Press [] to take photos for each segment.


## Capture photos with decorative frames

- In Idle mode, press [] to turn on the camera.
- Rotate the phone anti-clockwise to landscape view.
- Select [] → **Frame**.
- Select a frame and press [].
- Make any necessary adjustments.
- Press [] to take a photo with the frame.

## Capture photos by using options preset for various scenes

- In Idle mode, press [] to turn on the camera.
- Rotate the phone anti-clockwise to landscape view.
- Select [] → a scene → **OK**.
- Make any necessary adjustments.
- Press [] to take a photo.

## Use camera options



Before capturing a photo, select  to access the following options:

Option	Function
Resolution	Change the resolution option
Effects	Apply a special effect
Exposure metering	Select a type of exposure metre
Image quality	Adjust the quality of your photos



Before capturing a video, select  to access the following options:

Option	Function
Resolution	Change the resolution option
Effects	Apply a special effect
Video quality	Adjust the quality of your video clips

## Customise camera settings

Before capturing a photo, select  →  to access the following:

Setting	Function
Guidelines	Change the preview screen
Review	Set the camera to switch to the review screen after capturing photos
Shutter sound	Select a sound to accompany the shutter action
Storage	Select a memory location to store new photos

Before capturing a video, select  →  to access the following:

 
Setting	Function
Guidelines	Change the preview screen

Setting	Function
Audio recording	Turn the audio on or off
Storage	Select a memory location to store new video clips

## Use advanced music functions


Learn to prepare music files, create playlists, and store radio stations.

### Copy music files via Samsung PC Studio



1. In Menu mode, select **Settings** → **Phone settings** → **PC connections** → **Samsung PC studio** or **Mass storage** → **Save**.
2. Press [] to return to Idle mode.
3. Using an optional PC data cable, connect the multifunction jack on your phone to a PC.

4. Run Samsung PC Studio and copy files from the PC to the phone.  
Refer to the Samsung PC Studio help for more information.

### Copy music files to a memory card

1. Insert a memory card.
2. In Menu mode, select **Settings** → **Phone settings** → **PC connections** → **Mass storage** → **Save**.
3. Press [] to return to Idle mode.
4. Using an optional PC data cable, connect the multifunction jack on your phone to a PC.  
When connected, a pop-up window will appear on the PC.
5. Open a folder to view files.
6. Copy files from the PC to the memory card.

## Synchronise your phone with Windows Media Player

1. In Menu mode, select **Settings** → **Phone settings** → **PC connections** → **Media player** → **Save**.
2. Press [, ] to return to Idle mode.
3. Using an optional PC data cable, connect the multifunction jack on your phone to a PC with Windows Media Player installed.  
When connected, a pop-up window will appear on the PC.
4. Open Windows Media Player to synchronise music files.
5. Edit or enter your phone's name in the pop-up window (if necessary).
6. Select and drag the music files you want to the sync list.
7. Start synchronisation.

## Create a playlist

1. In Menu mode, select **Music player** → **Playlists**.
2. Select **Create**.
3. Select the text input field.
4. Enter a title for your new playlist and select **Done**.
5. To assign an image to the playlist, select **Tap to edit** and select an image or capture a new photo.
6. Select **Save**.
7. Select the new playlist.
8. Select **Add** → **Tracks**.
9. Select the files you want to include and select **Add**.



## Customise your music player settings

1. In Menu mode, select **Music player**.
2. Select **Settings**.
3. Adjust the settings to customise your music player.

Option	Function
Background playing	Set whether to play music in the background when you end the music player
Music menu	Select music categories to display in the music library screen

4. Select **Save**.

## Store radio stations automatically

1. Plug the supplied headset into the phone's headset jack.
2. In Menu mode, select **FM radio**.
3. Press [**▶||**] to start the FM radio.
4. Select **More** → **Self-tuning**.
5. Select **Yes** to confirm (if necessary).  
The radio scans and saves available stations automatically.


## Set up your favourite radio station list

1. Plug the supplied headset into the phone's headset jack.
2. In Menu mode, select **FM radio**.
3. Press [**▶||**] to start the FM radio.

4. Select a radio station to add to the favourite list.
5. Tap **Add to Favourites**.

## Find information of music

Learn to access an online music service and get information about the songs you hear while on the move.

1. In Menu mode, select **Find music**.
2. Select **Find music** to connect to the server.
3. When the phone is successfully registered, select  to record a part of music you want to find.



Some service providers may not support this service and the database may not have information for all songs.

## Find music from the online music service

Learn to access an online music recommendation service and find songs.

In Menu mode, select **Find recommendation**. Your phone connects to the server. The service will search the database and suggest new songs based on the songs you have played most often.



- If the list of most played songs is empty or there is no recommendation that corresponds to the songs you have played most often, the service will suggest the most popular songs.
- While using the service, you can add your favourite music to your own wishlist for future purchase. To view your wishlist, in Menu mode, select **Find music** or **Find recommendation** → **Wish list**.

## Update information of music

Learn to update the information of your music, such as title or artist, to correctly identify and label your music files.

1. In Menu mode, select **Find tag**.
2. Select music files.
3. Select **Find**.

Your phone gets and update the information about the music files from an online music server.

## Use the Last.fm service

Learn to use the online music services provided by Last.fm. Using this service, you can access a variety of artist and event information. Also, the service will search for the music database and suggest new songs based on the songs you have listened to most recently.

1. In Menu mode, select **Last.fm**.
2. Select **OK** to confirm that you read legal information (if necessary).
3. Enter the user ID and password to log in to the Last.fm service.



If you do not have a Last.fm account, sign up for an account.

4. Search for new songs or find shows and reviews for your favourite artists.
5. Select **Last.fm Pick** from your music player to get music recommendation similar to what you are listening to.



You may incur additional charges for playing music if the scrobble feature is activated.

# using tools and applications

Learn how to work with your mobile phone's tools and additional applications.

## Use the Bluetooth wireless feature

Learn about your phone's ability to connect to other wireless devices for exchanging data and using hands-free features.

### Turn on the Bluetooth wireless feature

1. In Menu mode, select **Bluetooth**.
2. Select the circle in the centre to turn on the Bluetooth wireless feature.
3. To allow other devices to locate your phone, select **Settings** → **On** under **My phone's visibility** → a visibility option → **Save**.  
If you selected **Custom**, set duration that your phone is visible.
4. Select **Save**.

## Find and pair with other Bluetooth-enabled devices

1. In Menu mode, select **Bluetooth** → **Search**.
2. Select and drag a device icon into the centre.
3. Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and select **Done**.

When the owner of the other device enters the same code or accepts the connection, pairing is complete.



You may not need to enter a PIN depending on the device.

## Send data using the Bluetooth wireless feature

1. Select the file or item from one of your phone's applications that you want to send.
2. Select **Send via** or **Send URL via** → **Bluetooth** or select **More** → **Send namecard via** → **Bluetooth**.

## Receive data using the Bluetooth wireless feature

1. Enter the PIN for the Bluetooth wireless feature and select **OK** (if necessary).
2. Select **Yes** to confirm that you are willing to receive data from the device (if necessary).

## Activate and connect to a wireless LAN (WLAN)

---

Learn to activate and connect to a wireless LAN.



Your phone uses non-harmonised frequency and is intended for use in all European countries. The WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors in France.

### Activate a WLAN

1. In Menu mode, select **Wi-Fi**.
2. Select the circle in the centre to activate a WLAN.



The activated WLAN in the background will consume battery power. To preserve battery power, activate the WLAN only when needed.

### Search for and connect to a WLAN

1. In Menu mode, select **Wi-Fi** → **Refresh**.
2. Select a network icon → **Add** and add a connection profile.



- If the network you want needs an IP address, subnet mask, DNS, or gateway information, select **Advanced settings**.
- The WLAN security should be set as the selected network configuration.


3. In Menu mode, select **Internet** or **Communities**, or in Idle mode, select a web-based widget
4. Select and drag a network icon into the centre (if necessary).

Your phone connects to the network using the connected WLAN profile.



To access the internet via another method, change the connection profile to the desired method.

To connect to a WLAN using a WPS (Wi-Fi Protected Setup) access point,

1. In Menu mode, select **Wi-Fi** → **Refresh**.
2. Select a WPS icon () and select **Add**.
3. Select **WPS push button** or **WPS enter PIN** depending on the AP device type.
4. Select **Start** and press a WPS button on the AP device within 2 minutes.  
Or, enter a PIN on the AP device and select **Start** within 2 minutes.

## Activate and send an SOS message

When you have an emergency, you can send an SOS message asking for help.



This feature may be unavailable depending on your region or service provider.

1. In Menu mode, select **Messages** → **SOS messages** → **Sending options**.
2. Select **On** to turn on the SOS messaging feature.
3. Select the recipient field to open the recipient list.
4. Select the recipient input field.
5. Enter a phone number and select **Done**.
6. When you are finished selecting contacts, select **OK** to save the recipients.
7. Select the **Once** drop-down menu and select the number of times to repeat the SOS message.
8. Select **Save** → **Yes**.

To send an SOS message, the touch screen and the keys must be locked. Press the Volume key four times.



Once you send an SOS message, all phone functions will be suspended until you press and hold [🔒]. If you press [📞], phone functions will be available, but the keys will remain locked.

## Activate the mobile tracker

---

When someone inserts a new SIM or USIM card in your phone, the mobile tracker feature will automatically send the contact number to two recipients to help you locate and recover your phone. To activate the mobile tracker,

1. In Menu mode, select **Settings** → **Security** → **Mobile tracker**.

2. Enter your password and select **Confirm**.
3. Select **On** to turn on the mobile tracker.
4. Select the recipient field to open the recipient list.
5. Select the recipient input field.
6. Enter a phone number and select **Done**.
7. When you are finished selecting contacts, select **OK** to save the recipients.
8. Select the sender input field.
9. Enter the sender's name and select **Done**.
10. Select **Save** → **Accept**.

## Make fake calls

---



You can simulate an incoming call when you want to get out of meetings or unwanted conversations. You can also make it appear as if you are talking on the phone by playing back a recorded voice.



## Make a fake call

In Idle mode, press and hold the Volume key down.

## Record a voice



1. In Menu mode, select **Settings** → **Application settings** → **Call** → **Fake call**.
2. Select **On** under **Fake call voice**.
3. Select **Voice recorder**.
4. Select  to start recording.
5. Speak into the microphone.
6. When you are finished speaking, select .
7. Select **Set** → **Save** to set the recording as a response for the fake call.

## Record and play voice memos


---

Learn to operate your phone's voice recorder.

### Record a voice memo




1. In Menu mode, select **Voice recorder**.
2. Select  to start recording.
3. Speak your memo into the microphone.
4. When you are finished speaking, select . Your memo is saved automatically.

### Play a voice memo

1. In Menu mode, select **Voice recorder**.
2. Select  → a file.
3. Control playback using the following icons:

Icon	Function
	Pause playback


---

Icon	Function
	Resume playback
	Skip backward; Scan backward in a file (touch and hold)
	Skip forward; Scan forward in a file (touch and hold)

## Edit images

Learn to edit images and apply fun effects.

### Apply effects to images

1. In Menu mode, select **My files** → **Images** → **My photos** → a photo file.
2. Select .
3. Select **Edit** → **Effects** → an effect option (filter, style, warp, or partial blur).

4. Select a variation of the effect to apply and select **Done**.  
To apply a blur effect to a specific area of an image, draw a rectangle and select **Blur** → **Done**.
5. When you are finished, select **Files** → **Save as**.
6. Select a memory location (if necessary).
7. Enter a new file name for the image and select **Done**.

### Adjust an image

1. Open an image to be edited. Refer to steps 1-2 in “Apply effects to images.”
2. Select **Edit** → **Adjust** → an adjustment option (brightness, contrast, or colour).  
To adjust the image automatically, select **Auto level**.

3. Adjust the image as desired and select **Done**.
4. Save the edited image with a new file name.  
Refer to steps 5-7 in "Apply effects to images."

## Transform an image

1. Open an image to be edited. Refer to steps 1-2 in "Apply effects to images."
2. Select **Edit** → **Transform** → **Resize, Rotate, or Flip**.
3. Rotate or flip the image as desired and select **Done**.  
To resize the image, select a size and select **Save** → **Done**.
4. Save the edited image with a new file name.  
Refer to steps 5-7 in "Apply effects to images."

## Crop an image

1. Open an image to be edited. Refer to steps 1-2 in "Apply effects to images."
2. Select **Edit** → **Crop**.
3. Draw the rectangle over the area you want to crop and select **Crop** → **Done**.
4. Save the edited image with a new file name.  
Refer to steps 5-7 in "Apply effects to images."

## Insert a visual feature

1. Open an image to be edited. Refer to steps 1-2 in "Apply effects to images."
2. Select **Edit** → **Insert** → a visual feature (frame, image, clip art, emoticon, or text).
3. Select a visual feature, or enter text and select **Done**.

4. Move or resize the visual feature or text and select **Done**.
5. Save the edited image with a new file name. Refer to steps 5-7 in "Apply effects to images."

## Print images

---

Learn to print your images with a USB connection.

1. Connect the multifunction jack on your phone to a compatible printer.
2. Open an image. ► p. 33
3. Select **More** → **Print via** → **USB**.
4. Set print options and print the image.

## Upload photos and videos to the web

---

Learn to post your photos and videos to photo sharing websites and blogs.



**Communities** may be unavailable depending on your region or service provider.

## Set your favourite destination list

1. In Menu mode, select **Communities**.
2. Select **Yes** to set your favourite destination list (if necessary).
3. Select **Accept** to confirm that you agree to the general disclaimer.



The first time you access **Communities**, you will be prompted to confirm.

4. Select the destinations you want to add and select **Save**.

If you selected **Update lists**, new destination sites are added to the list automatically.



To edit the favourite destination list or update the lists, from the Communities screen, select **Settings** → **Preferred lists** → **Edit**.

## Upload a file

To upload photos and videos, you must have accounts of photo sharing websites and blogs.

1. In Menu mode, select **Communities**.
2. Select **Upload to web**.
3. Select a destination you want to post to.
4. Select **Tap to add** → a media file.
5. Enter the post details and select **Upload**.

6. Enter the user ID and password of the destination (if necessary).



You can also upload media files from **Camera** or **My files** by selecting  or **More** → **Upload to web**.

## View a file

1. In Menu mode, select **Communities**.
2. Select a website or blog to view files.
3. Enter the user ID and password of the destination (if necessary).

## Customise the Communities settings

1. In Menu mode, select **Communities**.
2. Select **Settings**.

### 3. Adjust the settings.

Setting	Function
Upload details	View details of your last upload
Preferred lists	Edit favourite destinations
Image resize	Change the image size to upload
Upload reservation	Set your phone to upload files to a destination automatically at the scheduled time
Account manager	Log in to a website or blog or log out
Communities profiles	Change the connection profile
Disclaimer	View the disclaimer information

## Use Java-powered games and applications

Learn to use games and applications powered by award-winning Java technology.



The download of Java games or Java applications may not be supported depending on the software of the phone.

### Download games or applications

1. In Menu mode, select **Games and more** → **More games**.  
Your phone connects to the website preset by your service provider.
2. Search for a game or application and download it to the phone.

## Play games

1. In Menu mode, select **Games and more**.
2. Select a game from the list and follow the on-screen instructions.



Available games may vary, depending on your region or service provider. Game controls and options may vary.

## Launch applications

1. In Menu mode, select **Games and more** → an application.
2. Select **More** to access a list of various options and settings for your application.

## Synchronise data

---

Learn to synchronise contacts, calendar events, tasks, and memos with the web server you have specified.

### Create a synchronisation profile

1. In Menu mode, select **Synchronise**.
2. Select **Add** and specify profile parameters.
3. When you are finished, select **Save**.

### Start synchronisation

1. In Menu mode, select **Synchronise**.
2. Select a synchronisation profile.
3. Select **Continue** to start synchronisation with the web server you have specified.

## Use RSS feeds

---

Learn to use RSS feeds to get the latest news and information from your favourite websites.

### Add an RSS feed address

1. In Menu mode, select **RSS reader**.
2. Select **Add**.
3. Select the address input field.
4. Enter the address of an RSS feed and select **Done**.
5. Select **OK**.
6. To add more feeds, repeat steps 2-5 above.

### Update and read RSS feeds

1. In Menu mode, select **RSS reader**.
2. Select **Update** to get the latest contents.

3. Select a feed category → an updated feed.



The auto update feature sets the phone to automatically update the RSS feeds at the specified interval. You can activate the auto update feature by selecting **More** → **Settings** → **Preferences** → **Auto update** → **Save**.

### Download multimedia

1. In Menu mode, select **RSS reader**.
2. Select a feed.
3. Select a post containing multimedia and select **More** → **Download**.  
You can also select **Download contents** to select files you want from the multimedia list of the feed.



To download the multimedia later, select **More** → **Add to wishlist**.



## Create and view world clocks

---

Learn to view the time in another region and set world clocks to appear on your display.

### Create a world clock

1. In Menu mode, select **World clock**.
2. Select **Add**.
3. Scroll through the world map and select a time zone you want.
4. To set daylight saving time, select **☀**.
5. Select **Add** to create your world clock.  
The world clock is set as the second clock.
6. Select **Add** to add more world clocks (step 3).

## Add a world clock to your display

With the dual clock widget, you can view clocks with two different time zones on your display.

After you have created world clocks,

1. In Menu mode, select **World clock**.
2. Select **Set as 2nd clock**.
3. Select the world clock you want to add.
4. Select **Set**.

## Set and use alarms

---

Learn to set and control alarms for important events.

### Set a new alarm

1. In Menu mode, select **Alarms**.
2. Select **Create alarm**.
3. Set alarm details.

4. Select **Save**.



The auto power-up feature sets the phone to automatically turn on and sound the alarm at the designated time if the phone is turned off.

## Stop an alarm

When the alarm sounds,

- Drag the slider to **Stop** to stop the alarm without snooze.
- Drag the slider to **Stop** to stop the alarm with snooze or drag the slider to **Snooze** to silence the alarm for the snooze period.

## Deactivate an alarm

1. In Menu mode, select **Alarms**.
2. Select **Off** next to the alarm you want to deactivate.

## Use the calculator

---

1. In Menu mode, select **Calculator**.
2. Use the keys that correspond to the calculator display to perform basic mathematical operations.

## Convert currencies or measurements

---

1. In Menu mode, select **Convertor** → a conversion type.
2. Enter the currencies or measurements and units in the appropriate fields.

## Set a countdown timer

---

1. In Menu mode, select **Timer**.
2. Set the length of time to count down.
3. Select **Start** to begin the countdown.
4. When the timer expires, drag the slider to **Stop** to stop the alert.

## Use the stopwatch

---

1. In Menu mode, select **Stopwatch**.
2. Select **Start** to begin the stopwatch.
3. Select **Lap** to record lap times.
4. When you are finished, select **Stop**.
5. Select **Reset** to clear recorded times.

## Look up words in a dictionary

---

Learn to look up English words in your dictionary.

1. In Menu mode, select **Dictionary**.
2. Select the search field.
3. Enter an English word and select **Done**.
4. Select the word you want.

## Create new tasks

---

1. In Menu mode, select **Task**.
2. Select **Create task**.
3. Enter the details of the task.
4. Select **Save**.

## Create new memos

---

1. In Menu mode, select **Memo**.
2. Select **Create memo**.
3. Enter your memo text and select **Done**.

## Manage your calendar

---

Learn to change the calendar view and create events.

### Change the calendar view

1. In Menu mode, select **Calendar**.
2. Select **More** → **View by day** or **View by week**.

## Create an event

1. In Menu mode, select **Calendar**.
2. Select **Create event** → an event type.
3. Enter the details of the event as required.
4. Select **Save**.

## View events

To view events of a specific date,

1. In Menu mode, select **Calendar**.
2. Select a date on the calendar.
3. Select an event to view its details.

To view all saved events,

1. In Menu mode, select **Calendar**.
2. Select **Event list** → an event type.
3. Select an event to view its details.

# troubleshooting

If you are having trouble with your mobile phone, try these troubleshooting procedures before contacting a service professional.

**When you turn on your phone or while you are using the phone, it prompts you to enter one of the following codes:**

Code	Try this to solve the problem:
Password	When the phone lock feature is enabled, you must enter the password you set for the phone.
PIN	When using the phone for the first time or when the PIN requirement is enabled, you must enter the PIN supplied with the SIM or USIM card. You can disable this feature by using the <b>PIN lock</b> menu.

Code	Try this to solve the problem:
PUK	Your SIM or USIM card is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.
PIN2	When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM or USIM card. For details, contact your service provider.

### The phone prompts you to insert the SIM card.

Ensure that the SIM or USIM card is installed correctly.

### Your phone displays “Service unavailable” or “Network error.”

- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.
- You cannot access some options without a subscription. Contact your service provider for more details.

### You enter a number, but the call is not dialed.

- Ensure that you have pressed the Dial key: [☎].
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

### Another caller cannot reach you.

- Ensure that your phone is turned on.
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

### Another caller cannot hear you speaking.

- Ensure that you are not covering the built-in microphone.
- Ensure that the microphone is close to your mouth.
- If using a headset, ensure that it is properly connected.

### The phone beeps and the battery icon flashes.

Your battery is low. Recharge or replace the battery to continue using the phone.

### **The audio quality of the call is poor.**

- Ensure that you are not blocking the phone's internal antenna.
- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.

### **You select a contact to call, but the call is not dialed.**

- Ensure that the correct number is stored in the contact list.
- Re-enter and save the number, if necessary.

### **The battery does not charge properly or sometimes the phone turns itself off.**

- The battery terminals may be dirty. Wipe both gold-coloured contacts with a clean, soft cloth and try charging the battery again.
- If the battery will no longer charge completely, dispose of the old battery properly and replace it with a new battery.

### **Your phone is hot to the touch.**

When you use applications that require more power, your phone may heat up.

This is normal and should not affect your phone's lifespan or performance.