 


SAMSUNG

WASHING MACHINE

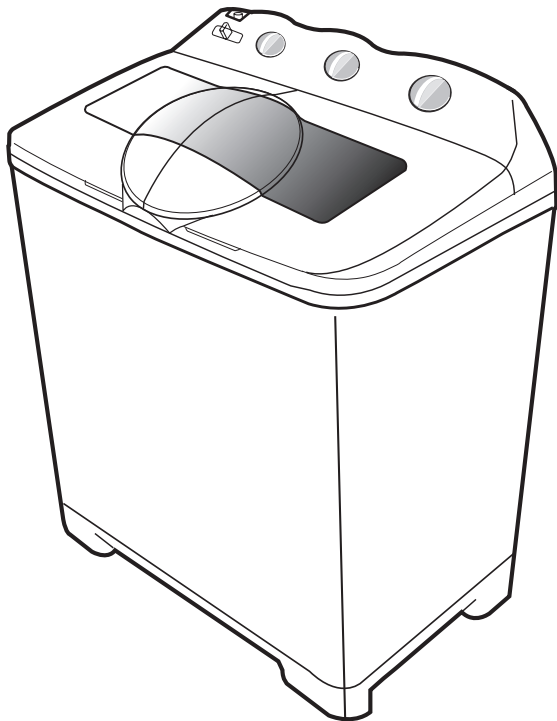

Before operating the unit, please read this manual thoroughly, and retain for future reference.


Owner's Instruction

WT8600/WT8700

TABLE OF CONTENTS

| | |
|-----------------------------------|---|
| DESCRIPTION OF PARTS | 2 |
| PRECAUTIONS | 2 |
| CONTROL PANEL | 3 |
| WASHING PROCEDURE | 3 |
| TO WASH | 3 |
| SPIN DRY | 4 |
| RINSING | 4 |
| OVERFLOW RINSE | 4 |
| ADDITIONAL RINSE | 4 |
| CLEANING THE MACHINE | 4 |
| CLEANING THE LINT FILTER | 4 |
| OVERFLOW FILTER | 4 |
| CLEANING THE WASH TUB | 4 |
| HOW TO CLEAN DETERGENT BOX | 5 |
| INSTALLATION | 5 |
| ENVIRONMENT | 5 |
| CONNECTING THE DRAIN HOSE | 5 |
| LAUNDRY GUIDE | 5 |
| WASHING TIME | 5 |
| SPIN DRY TIME | 5 |
| DETERGENT | 5 |
| MAINTENANCE | 6 |
| TROUBLESHOOTING | 6 |

 DESCRIPTION OF PARTS

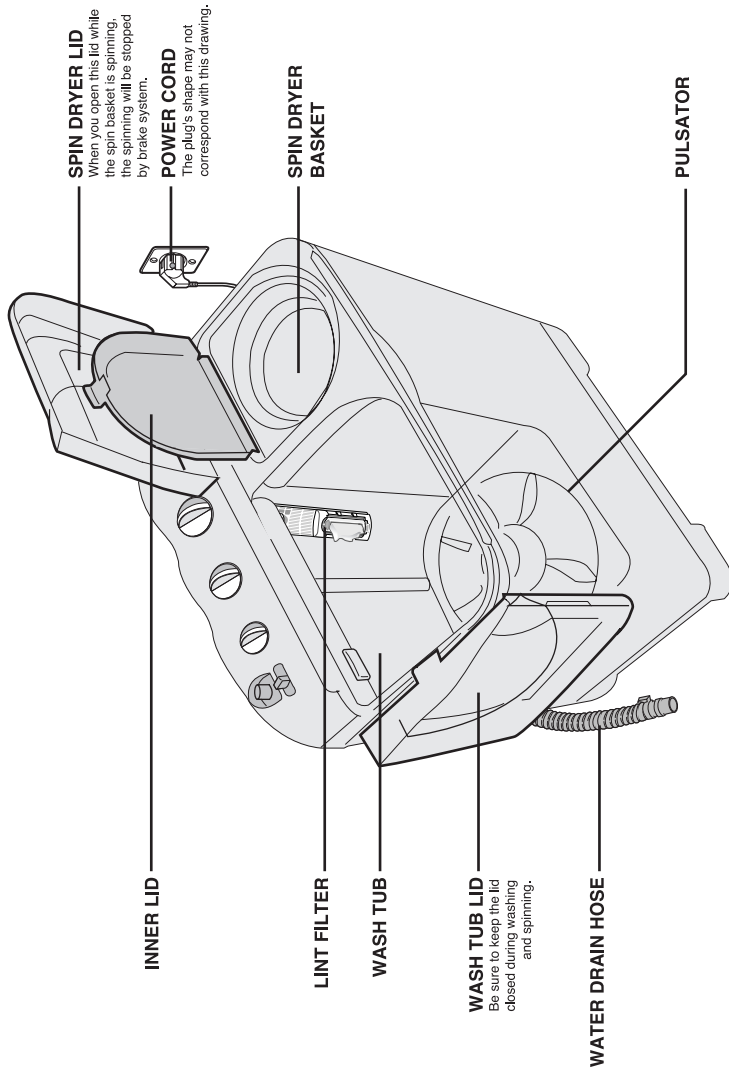

PRECAUTIONS

- Do not use adapter or extension cord to plug in your washing machine.
- Do not allow water to come in contact with electrical parts. (You may risk electric shock.)
- Do not attempt to repair or reconstruct the unit in case of trouble. (Ask company authorized service persons for repairs.)
- Do not expose the unit to high heat (direct sun light) and high humidity. (Heat can damage the external surfaces.)
- Do not open Inner Lid until Spin Tub has come to a complete stop. Even if Spin Tub rotation is slow it can cause injuries.

- When spinning always use the spinning cap pressing tightly against the clothes, maintaining horizontal level.
- Do not put clothes with gasoline, benzene, thinner, alcohol or other inflammable substances into wash tub and spin tub.
- Do not put hot objects, lighted candles or any flaming objects on or near the unit. (These are fire hazards.)
- Do not let sprays (insecticide, perfumes, etc.) come in contact with the switch controls. (It might cause timers to stuck-up or damage plastic parts.)
- Do not use vinyl chloride covers.

- Do not use detergent in excess of amount indicated in the package. (This will result in insufficient rinsing.)
- While the washing machine is in operation, do not insert hand, foot, or anything under the base.
- Do not step on the unit or put heavy things on it.
- Do not let the children peep into the wash tub or spin tub, to prevent them from falling in and getting injured.

- Do not allow cord to be pinched by the unit or by other heavy objects.
- When power cord and plug are damaged, contact nearest company authorized service center for repair.
- Unplug the unit when not in use. Pull by the plug and not by the cord. Always use dry hands.
- Do not use the washing machine if the power cord is damaged or if insertion into wall outlet is loose.
- Do not twist, bundle, severely bend or do other things that can damage the power cord.

CONTROL PANEL

1. WASH SELECTOR

- This is used to select wash action.

2. WASH TIMER

- This is used to set the wash time, 1-15 minutes.

3. CYCLE SELECTOR

 
- This is used to select the Washing / Rinsing or draining.

4. SPIN DRY TIMER

- This is used to set the spin time, 1-5 minutes.

5. WATER SELECTOR

- During washing, WATER SELECTOR KNOB should be selected to wash. During spin rinsing, WATER SELECTOR KNOB should be selected to spin.

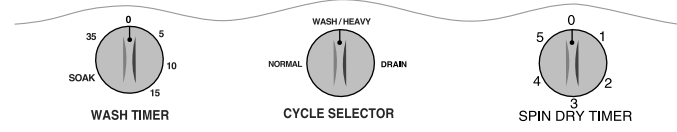


WASHING PROCEDURE


TO WASH

- Before starting washing, check the following;
Connect the water supply hose and open the water tap.
 - Lay the drain hose down toward a sinkhole. (In case no drain pump)
 - Place the drain hose in sink or bath. (In case drain pump)
 - Connect the power cord to the power supply outlet.

 - Set the CYCLE SELECTOR KNOB to the desired mode.



 
- Set the CYCLE SELECTOR KNOB to 'WASH/HEAVY'.



- Set the WATER SELECTOR KNOB to WASH.



 - Load laundry in the wash tub.

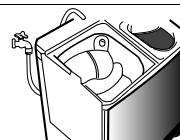


- Fill water in the wash tub and add the detergent.




- Set the WASH TIMER 1-35 minutes.

SOAK

  - Set the WASH TIMER to the point more than "15" for SOAK function.
- If the WASH TIMER is set to the point less than "15", it leads to WASH only. (No SOAK)
- Although the machine may stay still maximum 5 minutes, if the WASH TIMER is indicated over 15 minutes position, it is just in the process of soaking and not a breakdown.




 
 

- After washing, set the CYCLE SELECTOR KNOB to 'DRAIN' for drain.







9. Soak-Washing

- Place clothes into the WASH TUB.
- Turn on tap or use bucket to fill the WASH TUB with desired amount of water.
- Put detergent depending on the water volume and detergent package indications.
- Set WASH TIMER to point between "15" to "35" in the timer.
 - Soak-Washing automatically starts the wash (15 min.) after the soak (2 to 20 min.) is completed.
 - The SOAK function (20 min.) repeats the cycle that is 1.5 ~ 2.0 min. turning and the next 5 min. resting 3 times.



SPIN DRY

- | | |
|---|---|
| <p>1. Transfer the clothes into the spin basket and arrange the clothes evenly.</p>  | <p>2. Be sure to attach the safety cover and close the inner lid.</p>  |
| <p>3. Close the spin dryer lid.</p>  | <p>4. Set the SPIN DRY TIMER 1-5 minutes.</p>  |

     
 

 
 

RINSING

- | | |
|--|---|
| <p>1. Set the CYCLE SELECTOR KNOB to 'WASH HEAVY'.</p> |   |
| <p>2. Supply the proper amount of water as not to overflow the top of the washing tub.</p> | |
| <p>3. Set the WASH TIMER 2~3 minutes.</p> |  |
| <p>4. Drain the water. Set the CYCLE SELECTOR KNOB to 'DRAIN'.</p> |  |
| <p>5. Repeat this cycle until drain water is clean. (2~3 cycles)</p> | |

OVERFLOW RINSE

- | | |
|--|---|
| <p>1. Keep supplying water</p> <ul style="list-style-type: none"> Adjust water pressure to ensure that the amount of water supplied does not exceed that water drained. | <p>2. Set the WASH TIMER 6~8 minutes.</p>  |
| <p>3. As soon as the WASH TIMER shuts off, turn off the water tap.</p> | <p>4. Set the CYCLE SELECTOR KNOB to 'DRAIN'.</p>  |

ADDITIONAL RINSE

- | | |
|--|---|
| <p>1. After rinsing you can select this course for more effective rinse (Don't select only this course for rinse.) Load the laundry evenly into the spin basket.</p>  | <p>2. Set the WATER SELECTOR KNOB to SPIN and CYCLE SELECTOR KNOB to 'DRAIN'.</p>  |
| <p>3. Supply water for about 1 minute. Adjust the water flow to prevent overflow from the wash tub.</p>  | <p>4. After stopping water supply, cover the laundry with safety cover and close the inner lid.</p>  |
| <p>5. Close the spin dryer lid.</p>  | <p>6. Set the SPIN DRY TIMER 2~3 minutes.</p>  |

CLEANING THE MACHINE

 
CLEANING THE LINT FILTER

- If the dregs are filled up in the lint filter after finishing the wash, push down and pull it out as shown in figure. Remove the collected lint and rinse the filter net.



OVERFLOW FILTER

- Pull the upper side of the overflow filter with two fingers into the hole 'A' in the direction of arrow as shown in the figure.



CLEANING THE WASH TUB

- Wipe off strains on the cabinet and operation panel with soft cloth. Do not use benzene, thinners, cleanser, or wax, nor scrub the washer with a brush. Painted surfaces or plastic parts will be damaged.

HOW TO CLEAN DETERGENT BOX

1. Pull and remove the detergent box in the direction of the arrow.



2. Remove dirt with a brush and wash the box with water.



3. To put the detergent box in position, push the box in the reverse direction of the arrow.



INSTALLATION

ENVIRONMENT

Leave some space

- Space at least 15cm between the washer and the wall.

Place the washing machine on a sturdy flat surface.

- If the washing machine is placed on an uneven or weak surface, noise or vibration occurs. (Allowable is 2°)

Never install the washing machine near water.

 
- Do not place the washing machine in steamy rooms or where it is directly exposed to rain. Moisture may destroy the electrical insulation and cause an electrical shock hazard.

Avoid direct sunlight or heating devices.

- As plastic and electrical components are affected by direct heat, never place the washing machine near heaters, boilers, etc. Do not place under direct sunlight.


Precautions when installing.

- Place the washing machine on a sturdy flat surface.
- Never support the washing machine with a brick or a piece of wood for leveling. During spinning, the machine may be trembled more and even fallen down.

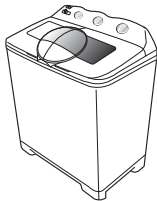

CONNECTING THE DRAIN HOSE

 - Insert the drain hose in the drain direction.



LAUNDRY GUIDE

WASHING TIME

| KINDS OF CLOTHING | WASHING TIME | WASHING SELECTION |
|--|------------------|-------------------|
| Extremely solid heavy fabric | 10 to 15 minutes | NORMAL |
| Linen, cotton, etc. | 8 to 15 minutes | |
| Ordinary clothes (underwear, etc.) | 7 minutes | WASH / HEAVY |
| Slightly solid synthetic fiber | 2 to 5 minutes | |
| 100% wool, mixed wool knitting, thin synthetic fiber with tags indicating hand washing | 2 to 5 minutes | |

SPIN DRY TIME

| TIME | TYPE OF LAUNDRY |
|---------|------------------------|
| 1 min | Thin (synthetic fiber) |
| 1~2 min | Wool |
| 3~5 min | Cotton |
| 5 min | Thick (cotton) |

DETERGENT

| AMOUNT OF DETERGENT | WATER LEVEL |
|---------------------|-------------|
| 45g | Low (45l) |
| 55g | Mid (55l) |
| 65g | High (65l) |

 
The amount of detergent is average.

Follow the instruction detergent printed on the package for amount of detergent. Choose the amount of detergent depending on the fabric type.

MAINTENANCE

When you load the laundry into the spin basket.


Press the laundry evenly and put the safety cover into the spin basket drum as shown in the figure.



To pick out the clothing which has fallen between the basket and tub.

For safety, pull the power supply plug out of the socket.

 1. Disassemble a screw from the spin dryer hatch.
2. The spin dryer hatch is fixed to the brim by the concave and convex parts at two places. Expand the concave and convex parts, and pull up the spin dryer hatch to remove it.
3. Remove the clothing.
4. Close the spin dryer hatch. Push in hatch firmly until the catch at the front is engaged securely.

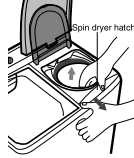

TROUBLESHOOTING

The washing machine does not work.

Check that the power cord is connected to a power outlet well. Power stoppage?

Clothes will not move freely.

Is the laundry overloaded?

Incomplete spinning

Is the laundry arranged evenly?

Incomplete draining

Is the filter clogged with lint?

The spin dryer basket will not run.

Is the spin dryer lid closed completely? Is laundry (socks, etc.) falling out of the spin dryer basket and clinging to the axle?

- See "To pick out..." on page 6

IF YOU NEED HELP

- Do not hesitate to call your local Samsung service center. They will be willing to help you. Be sure to give them your name, address, telephone number and the purpose of the call.



SPECIFICATIONS

| | |
|----------------------------|---|
| DIMENSIONS (W x D x H) mm | 820 x 490 x 980 |
| WATER PRESSURE | 0.05~0.78 MPa 0.5 ~ 8.0 kg-f/cm ² |
| WEIGHT (NET) | 33Kg |
| EXTRACTION EFFICIENCY | 50 % |
| STANDARD QUANTITY OF WATER | 65 l |
| RATING TIME | Washing 1Hour / Spinning 15minutes |

Code No.: DC68-01498A