



SGH-L258 User's Guide





Important safety precautions



Failure to comply with the following precautions may be dangerous or illegal.

Copyright information

- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide. Bluetooth QD ID: B012371
- Java™ is a trademark or registered trademark of Sun Microsystems, Inc.

Drive safely at all times

Do not use a hand-held phone while driving. Park your vehicle first.

Switch off the phone when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Be aware of special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

 
Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to your ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency calls

Key in the emergency number for your present location, then press .

Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

Accessories and batteries

Use only Samsung-approved batteries and accessories, such as headsets and PC data cables.

Use of any unauthorised accessories could damage you or your phone and may be dangerous.

- The phone could explode if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions.



At very high volumes, prolonged listening to a headset can damage your hearing.

Use of authorised software

Use only Samsung-authorised software. The use of any unauthorised software could damage your phone.

Qualified service

Only qualified service personnel may repair your phone.

For more detailed safety information, see "Health and safety information" on page 46.

About this Guide

This User's Guide provides you with condensed information about how to use your phone.

In this guide, the following instruction icons appear:




Indicates that you need to pay careful attention to the subsequent information regarding safety or phone features.



Indicates that you need to press the Navigation keys to scroll to the specified option and then select it.



Indicates a key on the phone.
For example, []



- **Touch screen**

Your phone has a touch-sensitive display. You can access a desired function with a touch on the screen.

Special features of your phone



- **Camera and camcorder**

Use the camera module on your phone to take a photo or record a video.



- **Music player**

Play music files using your phone as a music player. You can use other phone functions while listening to music.



- **FM radio**

Listen to your favourite radio stations anytime, anywhere.



- **Image editor**

Edit or decorate your photos.



- **Photo printing**

Print your photos to preserve your best moments forever.



- **Offline mode**

Switch your phone to Offline mode to use its non-wireless functions while on an aeroplane.



- **Bluetooth**

Transfer media files and personal data, and connect to other devices using wireless Bluetooth technology.



- **SOS message**

Send SOS messages to your family or friends for help in an emergency.

Contents

Unpack 6

Make sure you have each item

Get started 6

First steps to operating your phone

Assemble and charge the phone	6
Power on or off.....	7
Phone layout.....	8
Keys and icons	9
Access menu functions	12
Enter text	13
Customise your phone	18

Step outside phone 20

Begin with call functions, camera, music player, web browser, and other special features

Make or answer calls	20
Use the camera	22

Play music.....	23
Listen to the FM radio	25
Browse the web	26
Use Phonebook	27
Send messages	27
View messages	29
Use Bluetooth	30
Use Sketch memo	31

Menu functions 33

All menu options listed

Health and safety information 46

Overview of menu functions

To access Menu mode, press <☰> in Idle mode.

1 Call log

- 1 Recent contacts
- 2 Missed calls
- 3 Dialled calls
- 4 Received calls
- 5 Delete all
- 6 Area code
- 7 Call time
- 8 Call costs¹

2 Phonebook

- 1 Contact list
- 2 FDN contacts¹
- 3 Create contact
- 4 Group
- 5 Speed dial
- 6 My namecard
- 7 Own number
- 8 Management
- 9 Service number¹

3 Music

4 Browser

- 1 Home
- 2 Anysearch
- 3 Fun club
- 4 Bookmarks
- 5 Enter URL
- 6 Clear cache
- 7 Profile settings
- 8 Current profile

5 Messages

- 1 Create new message
- 2 My messages
- 3 Templates
- 4 Delete all
- 5 Settings
- 6 SOS messages
- 7 Broadcast messages
- 8 Message count
- 9 Memory status

6 My files

- 1 Images
- 2 Videos
- 3 Music

6 My files

- 4 Sounds
- 5 Other files
- 6 Memory card²
- 7 Memory status

7 Planner

- 1 Calendar
- 2 Memo
- 3 Sketch memo
- 4 World clock
- 5 Calculator
- 6 Converter
- 7 Timer
- 8 Stopwatch

8 Camera

- 1 Take a photo
- 2 Record video
- 3 Go to My photos
- 4 Go to My video clips

9 FM radio

* Applications

- 1 Voice recorder
- 2 Image editor
- 3 Bluetooth
- 4 Java world
- 5 SIM application toolkit¹

0 Alarm

Settings

- 1 Time and date
- 2 Phone settings
- 3 Display settings
- 4 Sound settings
- 5 Touch settings
- 6 Light settings
- 7 Network services
- 8 Security
- 9 Memory status
- 10 Reset settings
- 11 Key management

1. Available only if supported by your SIM card.

2. Available only if a memory card is inserted.

Unpack

Make sure you have each item

- Phone
- Travel adapter
- Battery
- User's Guide
- Stylus pen

You can obtain various accessories from your local Samsung dealer.

 


- The items supplied with your phone and the accessories available at your Samsung dealer may vary, depending on your country or service provider.
- Use the purchased accessories with only Samsung-authorized devices. The use of these accessories with other devices could cause problems and any repair costs would not be covered by the warranty.

Get started

First steps to operating your phone

Assemble and charge the phone

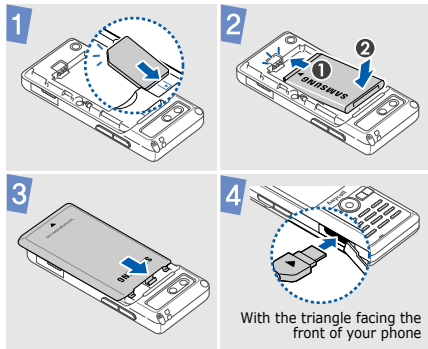





Improperly connecting the adapter can cause serious damage to the phone. Any damages by misuse are not covered by the warranty.



 
FRONT

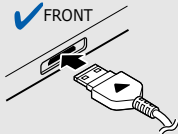

FRONT

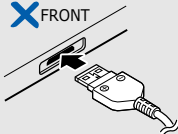 


Removing the battery cover

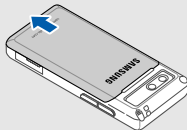 


Power on or off

Switch on

 
1. Press and hold [].
2. If necessary, enter the PIN and press <→>.

Switch off


Press and hold [].

Phone layout

Front view

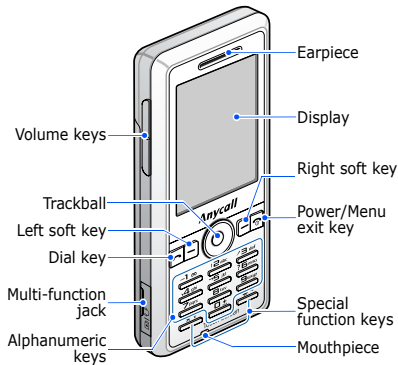

Rear view

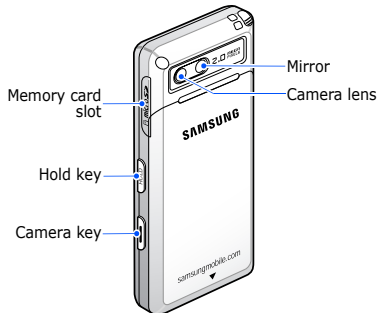 

You can lock the keypad to prevent any unwanted phone operations from accidentally pressing any of the keys. In Idle mode, press **[HOLD]**. To unlock the keypad, press **[]** and then **[*]**.

Keys and icons

Keys



Perform the function indicated on the bottom line of the display.



In Idle mode, scroll up to access My menu mode and scroll down, left, or right to access your favourite menus directly.

In Idle mode, press to launch the web browser.

In Menu mode, scroll through menu options, select the highlighted menu option or confirm input.



Make or answer a call.

In Idle mode, retrieve the numbers recently dialled, missed, or received.



Press and hold to switch the phone on or off.

End a call.

In Menu mode, cancel input and return the phone to Idle mode.



Enter numbers, letters, and some special characters.

In Idle mode, press and hold [1] to access your voicemail server. Press and hold [0] to enter an international call prefix.



Enter special characters or perform special functions.



In Idle mode, press and hold [#] to activate or deactivate Silent mode. Press and hold [*] to enter a pause between numbers.



Adjust the phone volume.



Lock the exposed keys and screen.



In Idle mode, enter the **Camera** menu. Press and hold to turn on the camera.

In Camera mode, take a photo or record a video.

Icons

The following icons may appear on the top line of the screen to indicate your phone's status. Depending on your country or service provider, the icons shown on the display may vary. You can change settings or open a menu by tapping some icons.



Signal strength














Call in progress









 


Out of your service area or Offline mode









Alarm set

	New message: <ul style="list-style-type: none"> : Text message : Multimedia message : Email : Voicemail
	Call diverting active
	Bluetooth active
	Synchronised with PC
	GPRS (2.5G) network
	EDGE network
	Home Zone

	Office Zone
	Music playback in progress
	Music playback paused
	FM radio on
	Memory card inserted
	Bluetooth hands-free car kit or headset connected
	SOS message feature active
	Silent mode (Vibration)
	Silent mode (Mute)



Ringer type





- None: Melody
-  : Increasing melody
-  : Vibration
-  : Melody and vibration
-  : Increasing and vibration
-  : Vibration then melody
-  : Melody then vibration



Battery power level

Access menu functions


Select an option

1. Tap a desired icon.
2. Tap the left or right arrow to scroll left or right.
Tap and drag the scroll bar to scroll up or down.
3. Tap a displayed option or function.
4. Tap  or  to confirm the function displayed or option highlighted.
5. Tap  to move up one level.
Press [>] to return to Idle mode.

Use menu numbers

Press the number key corresponding to the option you want.

Enter text

You can use both the touch screen and the keypad to enter characters. To use the touch screen, tap . To use the keypad, press any alphanumeric or special function key.

Using the keypad

Change the text input mode	In the text entry screen, press [#].
Pinyin mode	<p>To enter a word:</p> <ol style="list-style-type: none">1. Press the keys corresponding to the Chinese phonetic spelling, pinyin.2. Scroll left or right to select alternative pinyins.

3. Press [*] for tones.

4. If necessary, scroll up or down to find the character you want.

5. Press the trackball. Numbers are added to each character.

6. Press the number key corresponding to the character.

Predictive text

When you enter a character, your phone displays additional characters that are commonly used to make words and phrases. This helps you enter phrases or words with minimal key presses.

Stroke mode

To enter a word:

1. Press the keys corresponding to a character's component strokes.
2. If necessary, scroll up or down to find the character you want.
3. Press the trackball. Numbers are added to each character.
4. Press the number key corresponding to the character you want.

Predictive text

When you enter a character, your phone displays additional characters that are commonly used to make words and phrases. This helps you enter phrases or words with minimal key presses.

ABC mode

To enter a word:

Press the appropriate key until the character you want appears on the display.



English word mode	<p>To enter a word:</p> <ol style="list-style-type: none"> 1. Press [2] to [9] to start entering a word. 2. Enter the whole word before editing or deleting characters. 3. When the word displays correctly, press [0] to insert a space. Otherwise, scroll down to select a word from the word choices.
Number mode	Press the keys corresponding to the digits you want.

Symbol mode	Press the keys corresponding to the symbols you want.
Other operations	<ul style="list-style-type: none"> • Press [1] to enter punctuation marks or special characters in ABC mode and English word mode. • Press [*] to change case in ABC mode or English word mode. • Press [0] to insert a space. • Press the Navigation keys to move the cursor. • Press [□] to delete characters one by one. • Press and hold [□] to clear the entire display.

 
Using the touch screen

Change the text input mode





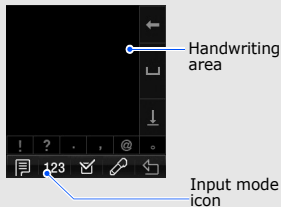

In the text entry screen, tap:

-  to switch to Virtual keypad mode.
-  to switch to Handwriting mode.

 

Handwriting mode



To enter a word:

1. Tap the input mode icon to select the mode you want.
 - : English
 - : Pinyin
 - : S Stroke
 - : T Stroke
 - : Number
 - : Symbol
2. Write a character at a time on the screen.
3. For handwriting tips, see page 17.
4. Tap one of the choices to enter it into text.


Other operations:

- To cancel the input, draw .
- To insert a space, draw .



These operations are not available in Pinyin mode.

 Virtual keypad mode



Input mode icon

To enter a word:

1. Tap the input mode icon to select the mode you want.
2. Tap the character you want.


Handwriting tips

A		N	
B		O	
C		P	
D		Q	
E		R	
F		S	
G		T	
H		U	
I		V	
J		W	
K		X	
L		Y	
M		Z	



a	ᵃ	n	ᵐ ᵑ ᵒ
b	ᵇ ᵇ²	o	ᵒ ᵒ¹ ᵒ
c	ᶜ	p	ᵖ ᵖ²
d	ᵀ ᵀ² ᵀ¹ ᵀ¹²	q	ᵑ ᵑ¹ ᵀᵖ ᵀᵖ¹
e	ᵉ	r	ᵣ
f	ᶠ	s	ᵀ
g	ᵍ ᵍ	t	ᵀ² ᵀ¹ ᵀ²
h	ᵂ ᵂ¹ ᵂ	u	ᵁ
i	ᵢ¹ ᵢ² ᵢ	v	ᵁ
j	ᵢ² ᵢ¹	w	ᵁ
k	ᵏ² ᵏ²¹ ᵏ²²	x	ᵁ² ᵁ²¹ ᵁ²² ᵁ²
l	ᵁ¹ ᵁ	y	ᵁ² ᵁ²¹ ᵁ
m	ᵐ ᵐ	z	ᵁ² ᵁ²

Customise your phone

Display language

1. In Idle mode, tap  → **Settings** → **Phone settings** → **Language** → **Display**.
2. Select a language.



Call ringer melody

1. In Idle mode, tap  → **Ring tone**.
2. Scroll left or right.
3. Select a ringtone.
4. Tap .


Key tone volume

In Idle mode, press [Volume] to adjust the key tone volume.


Idle mode wallpaper

1. In Idle mode, tap  → **Settings** → **Display settings** → **Wallpaper** → **Wallpaper**.
2. Select an image category.
3. Select an image.
4. Tap .


Menu mode skin colour

1. In Idle mode, tap  → **Settings** → **Display settings** → **Skin**.
2. Select a colour pattern.


 

Menu shortcuts

1. In Idle mode, tap  → **Settings** → **Phone settings** → **Shortcuts**.
2. Select a key.
3. Select a menu to be assigned to the key.

Silent mode

You can switch the phone to Silent mode to avoid disturbing other people. In Idle mode, tap and hold , or press and hold [**#**].

Phone lock





1. In Idle mode, tap  → **Settings** → **Security** → **Phone lock**.
2. Select **Enable**.
3. Enter a new 4- to 8-digit password and tap .
4. Enter the new password again and tap .

Step outside phone



Begin with call functions, camera, music player, web browser, and other special features

Make or answer calls


Make a call

1. In Idle mode, enter an area code and phone number and press [].
Alternatively, tap  to open the onscreen keypad and enter the phone number. And then, tap . Press [Volume] to adjust the volume during a call.
2. Press [>] to end the call.

Answer a call

1. When the phone rings, press [.
2. Press [] to end the call.


Use the speakerphone feature

During a call, press the trackball and tap  to activate the speaker.

Press the trackball again to switch back to the earpiece.

Make a multi-party call

1. During a call, call the second participant.
The first call is put on hold.
2. Press <**Options**> and select **Join**.
3. Repeat step 1 and 2 to add more participants.

4. During a multi-party call:
 - Press <**Options**> and select **Split** to have a private conversation with one participant.
 - Press <**Options**> and select **Remove** to drop one participant.
5. Press [] to end the multi-party call.

Use the camera



Take a photo

1. In Idle mode, press and hold [Camera] to turn on the camera.
2. Aim the lens at the subject and make any desired adjustments.
3. Press the trackball or [Camera] to take a photo. The photo is saved automatically.
4. Press <📷> to take another photo.

View a photo

1. In Idle mode, press [Camera] and select **Go to My photos**.
2. Select the photo you want.

Record a video

1. In Idle mode, press [Camera] and select **Record video**.
2. Press the trackball or [Camera] to start recording.
3. Press [Camera] or tap  to stop recording. The video is saved automatically.
4. Tap  to record another video.

View a video

1. In Idle mode, press [Camera] and select **Go to My video clips**.
2. Select the video you want.


Play music

Prepare music files





Use these methods:

- Download from the wireless web.
- Download from a PC using the optional Samsung PC Studio. See Samsung PC Studio User's Guide.
- Receive via Bluetooth.
- Copy to a memory card and insert the card into the phone.
- Copy to a memory card. See the next section.


 



Copy music files to a memory card



 
 



1. Insert a memory card into the phone.
2. In Idle mode, tap  → **Settings** → **Phone settings** → **USB settings** → **Mass storage**.
3. Connect your phone and PC with an optional PC data cable.
4. Select **Open folder to view files** when a pop-up window appears on your PC.
5. Copy files from the PC to the memory card.
6. When you have finished, disconnect the phone from the PC.

Create a playlist

1. In Idle mode, tap  → **Music**.
2. Tap  → **Add music from** → a memory location.
3. Press the trackball or tap  to select files and tap .




Play music files






1. From the music player screen, press the trackball or tap .
2. During playback, use the following actions:
 - Press the trackball, or tap  or  to pause or resume playback.
 - Scroll left or tap  to return to the previous file. Tap and hold  to scan backward in a file.

- Scroll right or tap  to skip to the next file. Tap and hold  to scan forward in a file.
 - Tap , , or  to change the repeat mode.
 - Tap  to play tracks in random order.
 - Tap  to display the volume adjustment indicator.
 - Scroll up to open the playlist.
 - Press [Volume] to adjust the volume.
3. Scroll down to stop playback.

Listen to the FM radio


 
Listen to the radio

1. Plug the connector of the supplied headset into the multi-function jack on the phone.
2. In Idle mode, tap  → **FM radio**.
3. Press the trackball or tap  to turn on the radio.
4. When you turn on the FM radio for the first time, tap  to start automatic tuning.
Available radio stations are automatically saved.



5. Scroll up or down to find the radio station you want.
Alternatively, scroll left or right to select a stored radio station.
6. While listening to the radio, use the following icons:
 -  or  - : open the saved station list.
 - : display the volume adjustment indicator.
7. Press the trackball or tap  to turn off the radio.

Store radio stations

By automatic tuning:

1. From the radio screen, tap  → **Self-tuning**.
2. Tap  to confirm. Available radio stations are automatically saved.

By manual setup:


 
 



1. From the radio screen, scroll up or down to find the radio station you want.
2. Tap  → **Add**.
3. Tap .

Browse the web

Launch the web browser



In Idle mode, press the trackball and tap **Home**. The homepage of your service provider opens.

Navigate the web


- To scroll through browser items, scroll up or down.
- To select an item, press the trackball or tap .
- To return to the previous page, tap  or press .
- To access browser options, tap .
- To access other phone menus, tap .
- To return to the homepage, press and hold .


Use Phonebook

Add a contact

1. In Idle mode, enter a phone number and tap .
2. Tap **Save** → a memory location → **New**.
3. For **Phone**, select a number type.
4. Specify contact information.
5. Tap  → **Save** to save the contact.



Find a contact

1. In Idle mode, tap .
2. Enter the first few letters of the name you want.


-
3. Select a contact.
 4. Scroll to a number and press [] to dial, or tap any field to edit contact information.


Send messages

Send a text message


1. In Idle mode, tap .
2. Enter the message text.
3. Tap  → **Save and send** or **Send only**.
4. Enter destination numbers.
5. Press the trackball to send the message.


Send a multimedia message

1. In Idle mode, tap  → **Messages** → **Create new message** → **Multimedia message**.
2. Tap **Subject**.
3. Enter the message subject and press the trackball.
4. Tap **Image or video** and add an image or a video clip.
5. Tap **Music or sound** and add a music file or a sound clip.
6. Tap **Text**.

7. Enter the message text and press the trackball.
8. Tap  → **Send**.
9. Enter destination numbers or email addresses.
10. Press the trackball to send the message.


Send an email

1. In Idle mode, tap  → **Messages** → **Create new message** → **Email**.
2. Tap **Subject**.
3. Enter the email subject and press the trackball.


-
4. Tap **Message**.
 5. Enter the email text and press the trackball.
 6. Tap **File attach**.
 7. Add media files, contacts, calendar items, or other files.
 8. Tap  → **Send**.
 9. Enter email addresses.
 10. Press the trackball to send the email.

View messages


 
View a text message

1. In Idle mode, tap  → **Messages** → **My messages** → **Inbox**.
2. Select a text message.

View a multimedia message

1. In Idle mode, tap  → **Messages** → **My messages** → **Inbox**.
2. Select a multimedia message.


View an email

1. In Idle mode, tap  → **Messages** → **My messages** → **Email inbox**.
2. Tap **Check new mail**.
3. Select an email or a header.
4. If you selected a header, tap  → **Retrieve** to view the body of the email.


Use Bluetooth

Your phone is equipped with Bluetooth technology, enabling you to connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone remotely.


 
Turn on Bluetooth

1. In Idle mode, tap  → **Applications** → **Bluetooth** → **Activation** → **On**.
2. Tap **My phone's visibility** → **On** to allow other devices to locate your phone.

 

Search for and pair with a Bluetooth device

1. In Idle mode, tap  → **Search new device**.
2. Select a device.
3. Enter a Bluetooth PIN or the other device's Bluetooth PIN, if it has one, and tap →.
When the owner of the other device enters the same code, pairing is complete.

Send data




1. Access an application, such as **Phonebook**, **My files**, **Calendar**, **Memo**, or **Sketch memo**.
2. Select an item.
3. Tap  → **Send via** → **Bluetooth**.
4. For sending a contact, select which data you want to send.
5. Search for and select a device.
6. If necessary, enter a Bluetooth PIN and tap .





Receive data

1. If necessary, enter the Bluetooth PIN and tap .
2. Tap  to confirm that you are willing to receive.

Use Sketch memo

Create a new sketch memo

1. In Idle mode, tap .
2. Draw a sketch using the stylus pen on the screen. You can use the following sketch tools on the screen:
 - : use a pen.
 - : use a brush.

- : erase the drawing as you move the pen.
- : cancel your last action.
- : change the line thickness. This option is not available when you use a brush.
- : change the pen or brush colour.

3. Tap .

Menu functions

All menu options listed

This section provides brief explanations of menu functions on your phone.

Call log

Menu	Description
Recent contacts, Missed calls, Dialled calls, Received calls	Check the most recent calls dialled, received, or missed.
Delete all	Delete all of the records in each call type.

Menu	Description
Area code	Find and retrieve area and country codes to quickly and easily dial phone numbers.
Call time	Check the time record for calls made and received.
Call costs	Check the cost of your calls, if supported by your SIM card.

Phonebook

Menu	Description
Contact list	Search for contact information stored in Phonebook.

Menu	Description
FDN contacts	Create a list of contacts to be used in FDN (Fixed Dialling Number) mode, in which the phone allows outgoing calls only to the specified phone numbers, if your SIM card supports this feature.
Create contact	Add a new contact to Phonebook.
Group	Organise your contacts in caller groups.
Speed dial	Assign a speed dial number for your most frequently dialled numbers.
My namecard	Create a name card and send it to other people.

Menu	Description
Own number	Check your phone numbers, or assign a name to each of the numbers.
Management	Manage contacts in Phonebook or change the default settings for Phonebook.
Service number	View the SDN (Service Dialling Number) list assigned by your service provider, if supported by your SIM card.

Music

Listen to music. You can also make your own music playlists.

Browser

Menu	Description
Home	Connect your phone to the network and load the homepage of the wireless web service provider.
Anysearch	Use this Java-based application to search for various information from the wireless web. Your phone's skin colour, menu background image, and keytone settings do not affect this application.

Menu	Description
Fun club ¹	Access Samsung Fun Club, the preset website providing Samsung mobile phone users with attractive download services of up-to-date ringtones and wallpapers.
Bookmarks	Save URL addresses in order to quickly access web pages.
Enter URL	Enter a URL address and access the associated web page.
Clear cache	Clear the cache, which is a temporary memory site that stores recently accessed web pages.

Menu	Description
Profile settings	Set up connection profiles for the web browser.
Current profile	Select a connection profile to be used for accessing the wireless web.

1. All rights and responsibilities for the Java-based games embedded in your phone and media contents provided by Samsung Fun Club, such as images, sounds, and Java applications, belong to their respective owners.

Messages

Menu	Description
Create new message	Create and send text, multimedia, or email messages.
My messages	Access messages that you have received, sent, or that have failed during sending.
Templates	Make and use templates of frequently used messages or passages.
Delete all	Delete messages in each message folder all at once.
Settings	Set up various options for using the messaging services.

Menu	Description
SOS messages	Specify options for sending and receiving an SOS message. You can send an SOS message by pressing [Volume] 4 times in idle mode, when the exposed keys are locked.
Broadcast messages	Change the settings for receiving broadcast messages.
Message count	View the number of text, multimedia, or email messages sent or received per month. You can also delete records for each message type.

Menu	Description
Memory status	Check information about the memory currently in use.

My files

Menu	Description
Images, Videos, Music, Sounds, Other files	Access media files and other files.
Memory card	Access the files stored on a memory card. This menu is only available when you insert a memory card into the phone.

Menu	Description
Memory status	Check information about the memory currently in use.

Planner

Menu	Description
Calendar	Keep track of your schedule.
Memo	Make memos for things that are important and manage them.
Sketch memo	Create memos by drawing a sketch using the stylus pen on the touch screen.

Menu	Description
World clock	Set your local time zone and find out the current time in another part of the world.
Calculator	Perform arithmetic functions.
Converter	Do conversions, such as length and temperature.
Timer	Set a period of time for the phone to count down.
Stopwatch	Measure elapsed time.

Camera

Menu	Description
Take a photo	Take photos in various modes.
Record video	Record a video of what is displayed on the camera screen.
Go to My photos	Access the list of photos you have taken.
Go to My video clips	Access the list of videos you have recorded.

FM radio

Listen to music or news via the FM radio on your phone.

Applications

Menu	Description
Voice recorder	Record voice memos and any other sounds.
Image editor	Edit your photos using various editing tools.
Bluetooth	Connect the phone wirelessly to other Bluetooth devices.
Java world ¹	Access Java games and applications.

Menu	Description
SIM application toolkit	Use a variety of additional services offered by your service provider. Depending on your SIM card, this menu may be available but labelled differently.

1. All rights and responsibilities for the Java-based games embedded in your phone and media contents provided by Samsung Fun Club, such as images, sounds, and Java applications, belong to their respective owners.

Alarm

Set a wake-up call to wake you up in the morning or an alarm to alert you to an event at a specific time.

Settings

Menu	Description
Time and date	Change the time and date displayed on your phone.
Phone settings → Language	Select a language for the display text. Also, select Fuzzy pinyin pairs so that you can easily enter characters that are similar in phonetic spelling.
Phone settings → Greeting message	Enter the greeting that is displayed briefly when the phone is switched on.
Phone settings → Shortcuts	Use the trackball as shortcuts to access specific menus directly from Idle mode. Scrolling up is fixed as a shortcut to My menu mode.

Menu	Description
Phone settings → My menu	Set up a menu of your own using your favourite menu items, which can be easily accessed by scrolling up the trackball in Idle mode.
Phone settings → Advanced shortcuts	Activate the advanced shortcut feature, which allows you to access SMS, alarm, calendar, and converter applications from the dialling screen. This menu may not be available, depending on the font type on the dialling screen.
Phone settings → Volume key	Set how the phone reacts if you press and hold [Volume] when a call comes in.

Menu	Description
Phone settings → USB settings	Select a USB mode that will be used when you connect your phone to another device via USB interface.
Phone settings → Extra settings	Change additional settings for using the phone.
Phone settings → Offline mode	Switch the phone to Offline mode, in which the phone functions requiring network connection are deactivated.
Display settings → Wallpaper	Change the background image that is displayed in Idle mode.
Display settings → Main menu style	Select a display style for the main menu screen.

Menu	Description
Display settings → Text display	Change the display settings for the text displayed on the idle screen.
Display settings → Skin	Select a skin colour pattern for Menu mode.
Display settings → Brightness	Adjust the brightness of the display for varying lighting conditions.
Display settings → Dialling display	Customise the settings for the display while dialling.
Display settings → Calendar	Display the calendar of the current month on the idle screen. This menu may not be available depending on the wallpaper type.

Menu	Description
Display settings → Show caller ID	Set the phone to display or block caller information on all missed calls and incoming messages.
Sound settings → Incoming call	Change the sound settings for incoming calls.
Sound settings → Keypad tone	Select the tone that the phone sounds when you press a key. This menu may not be available, depending on the font type on the dialling screen.
Sound settings → Message tone	Change the sound settings for incoming messages individually according to message type.

Menu	Description
Sound settings → Touch tone	Set your phone to sound when you touch the screen.
Sound settings → Power-on/off tone	Set your phone to sound when it is switched on or off.
Sound settings → On-time alarm	Set the phone to sound an alert every hour on the hour.
Sound settings → Silent mode	Set how the phone acts to alert you to a specific event while in Silent mode.
Sound settings → Extra tones	Customise additional tones for the phone.

Menu	Description
Touch settings → Calibration	Calibrate your phone's touch screen by tapping the cross hair object firmly and precisely.
Touch settings → Hand writing	Customise settings for using hand writing input mode.
Light settings → Backlight time	Select the length of time the backlight or display stays on when the phone is not used.
Light settings → Keypad light	Set how the phone controls the use of the keypad light.
Network services → Call diverting	Set the phone to reroute incoming calls to a phone number that you specify.

Menu	Description
Network services → Call barring	Set the phone to restrict calls.
Network services → Call waiting	Set the phone to inform you when someone is calling you while on another call.
Network services → Network selection	Select the network to be used while roaming outside of your home area, or let the network be chosen automatically.
Network services → Caller ID	Set the phone to hide your phone number from the person you are calling.

Menu	Description
Network services → Voice mail server	Store the number of the voicemail server and access your voicemails.
Network services → Band selection	Change to an appropriate band when you travel abroad.
Security → PIN check	Activate your PIN to protect your SIM card against unauthorised use.
Security → Change PIN	Change the PIN.
Security → Phone lock	Activate your phone password to protect your phone against unauthorised use.

Menu	Description
Security → Change password	Change the phone password.
Security → Privacy	Lock access to call records, contacts, messages, files, or all menu functions on the phone.
Security → SIM lock	Set the phone to work only with the current SIM card by assigning a SIM lock password.
Security → FDN mode	Set the phone to restrict calls to a limited set of phone numbers, if supported by your SIM card.

Menu	Description
Security → Change PIN2	Change your current PIN2, if supported by your SIM card.
Memory status	Check information about the memory currently in use.
Reset settings	Reset the phone's settings you have changed.
Key management	Manage the licence keys you have acquired to activate media files locked by DRM systems.

Health and safety information

SAR certification information

This phone meets European Union (EU) requirements concerning exposure to radio waves.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured to not exceed the limits for exposure to radio-frequency (RF) energy, as recommended by the EU Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through the periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit recommended by the EU Council is 2.0 W/kg.¹

SAR tests are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

-
1. The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. The SAR values may vary, depending on national reporting requirements and the network band.

Precautions when using batteries

- Never use a charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power. Talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the service provider.
- Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries, and recharge your battery only with Samsung-approved chargers. Disconnect the charger from the power source when it is not in use.
Do not leave the battery connected to a charger for

more than a week, since overcharging may shorten its life.

- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0° C (32° F).
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and – terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Road safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When you are driving a car, driving is your first responsibility. When using your wireless phone while driving, follow local regulations in the country or region you are in.

Operating environment

Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used

in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research. If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other medical devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy.

Your physician may be able to assist you in obtaining this information.

Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Switch off your phone in any facility where posted notices require you to do so.

Potentially explosive environments

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.


Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency calls

This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies.

To make or receive calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. Switch on the phone.
2. Key in the emergency number for your present location. Emergency numbers vary by location.
3. Press [].

Certain features like Call Barring may need to be deactivated before you can make an emergency call. Consult this document and your local cellular service provider.

Other important safety information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. Improperly installed wireless equipment could result in serious injury if the air bag inflates.
- Switch off your phone before boarding an aircraft. It is dangerous and illegal to use wireless phones in an aircraft because they can interfere with the operation of the aircraft.

- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Care and maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep your phone and all its parts and accessories out of the reach of small children and pets. They may accidentally damage these things or choke on small parts.
- Keep the phone dry. Precipitation, humidity, and liquids contain minerals that corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Wipe it with a soft cloth.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, stove, or radiator. The phone may explode when overheated.
- When the phone or battery gets wet, the label indicating water damage inside the phone changes colour. In this case, phone repairs are no longer

guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.

- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

- * Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
- * Depending on your country, your phone and accessories may appear different from the illustrations in this guide.

SAMSUNG ELECTRONICS

