

Mobile Phone user manual

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

Bluetooth QD ID : B014942

www.samsungmobile.com

Printed in Korea
Code No.: GH68-22632A
English (HK), 03/2009, Rev. 1.0



Safety warnings

Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phones in a fire. Follow all local regulations when disposing used batteries or phones.
- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

Reduce the risk of repetitive motion injuries

When sending text messages or playing games on your phone, hold the phone with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.



Safety precautions

Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury. In case of headsets, mono headsets are not available. Use stereo headsets only.

Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

Handle SIM cards and memory cards with care

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Handle your phone carefully and sensibly

- Do not allow your phone to get wet—liquids can cause serious damage. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.
- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.

Ensure access to emergency services

Emergency calls from your phone may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

Specific Absorption Rate (SAR) certification information

Your phone conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile phones that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 watts per kilogram of body tissue.

- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.
- If your phone has a camera flash or light, avoid using it close to the eyes of children or animals.
- Your phone may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

 
Avoid interference with other electronic devices

Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.



Use your phone in the normal position


Avoid contact with your phone's internal antenna.




Internal antenna

Allow only qualified personnel to service your phone

 Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

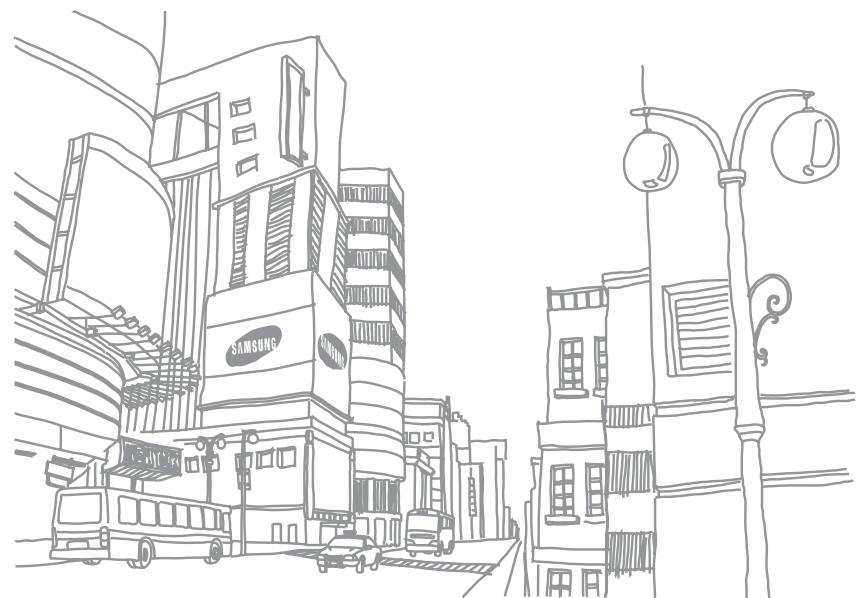

Phone layout

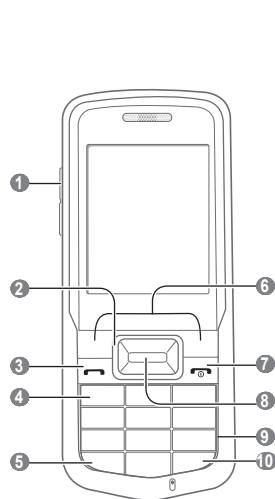 

1 Volume key
In Idle mode, adjust the key tone volume; Send an SOS message
▶ Activate and send an SOS message

2 4-way navigation key
In Idle mode, access user-defined menus; In Menu mode, scroll through menu options

3 Dial key
Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers

4 Voice mail service key
In Idle mode, access voice mails (press and hold)

5 Keypad lock key
In Idle mode, lock the keys. (Press and hold)

6 Softkeys
Perform actions indicated at the bottom of the display

7 Power/Menu exit key
Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode

8 Web access/Confirm key
In Idle mode, access the web browser menus; In Menu mode, select the highlighted menu option or confirm an input

9 Alphanumeric keys


10 Silent profile key
In Idle mode, activate or deactivate the Silent profile (press and hold)

Your phone displays the following status indicators on the top of the screen:


Icon	Description
	Signal strength
	GPRS network connected
	EDGE network connected
	Call in progress
	Call diverting active
	SOS message feature activated
	Alarm activated
	Bluetooth activated
	New text message (SMS)
	New multimedia message (MMS)
	New e-mail message
	FM radio on
	Music playback in progress
	Memory card inserted
	Normal profile activated
	Battery power level

Install the SIM card and battery

 1. Remove the battery cover and insert the SIM card.

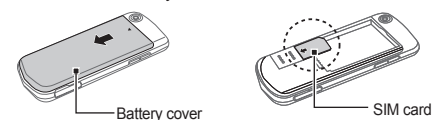

 2. Insert the battery and replace the battery cover.

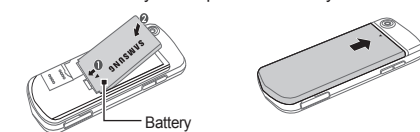

Charge the battery

1. Plug the supplied travel adapter.



2. When charging is finished, unplug the travel adapter.

Do not remove the battery from the phone before unplugging the travel adapter first. Otherwise, the phone may be damaged.

Instructional icons

	Note: notes, usage tips, or additional information
	Followed by: the order of options or menus you must select to perform a step; for example: Press <Menu> → Messages (represents Menu, followed by Messages)
	Square brackets: phone keys; for example: [Power] (represents the Power/Menu exit key)
	Angled brackets: softkeys that control different functions at each screen; for example: <OK> (represents the OK softkey)

Turn your phone on or off

1. To turn your phone on, press and hold [Power].
2. To turn your phone off, press and hold [Power].

Access menus

To access your phone's menus,

1. In Idle mode, press <Menu> to access Menu mode.
2. Use the navigation key to scroll to a menu or option.
3. Press <Yes>, <Save>, or the Confirm key to confirm the highlighted option.

When you access a menu requiring the PIN2, you must enter the PIN2 supplied by the SIM card. For details, contact your service provider.

Symbol mode

Press the appropriate alphanumeric key to select a symbol.

- To move the cursor, press the navigation key.
- To delete characters one by one, press <Clear>. To delete all of the characters, press and hold <Clear>.
- To insert a space between characters, press [0].
- To enter punctuation marks, press [1].

Add a new contact

1. In Idle mode, enter a phone number and press <Options> → Save.
2. Select a memory location (phone or SIM) → New.
2. Select a number type (if necessary).
3. Enter contact information.
4. Press <Options> → Save to add the contact to memory.

Send and view messages

To send a text message

1. In Menu mode, select Messages → Create new message → Message.
2. Enter a destination number.
3. Scroll down and enter the message text.
4. Press <Options> → Send to send the message.

Make a call

1. In Idle mode, enter an area code and a phone number.
2. Press [Power] to dial the number.
3. To end the call, press [Power].

Answer a call

1. When a call comes in, press [Power].
2. To end the call, press [Power].

Adjust the volume

To adjust the volume of the ringtone

1. In Menu mode, select Settings → Phone profiles.
2. Scroll to the phone profile you are using.
3. Press <Options> → Edit.
4. Select Incoming calls → Call alert volume.
5. Scroll left or right to adjust the volume level.
6. Press <Save>.

To adjust the volume of voice during a call

While a call is in progress, press the volume key up or down to adjust the earpiece volume.

Change your ringtone

1. In Menu mode, select Settings → Phone profiles.
2. Scroll to the phone profile you are using.
3. Press <Options> → Edit.

To view text messages

1. In Menu mode, select Messages → Inbox.
2. Select a text message.

Activate and send an SOS message

In an emergency, you can send SOS messages to your family or friends for help.

To activate the SOS message

1. In Menu mode, select Messages → SOS messages → Sending options.
2. Scroll left or right to On.
3. Scroll down and press the Confirm key to open the recipient list.
4. Press the Confirm key to open your contact list.
5. Scroll to a contact and press the Confirm key.
6. Select a number (if necessary).
7. When you are finished selecting contacts, press <Options> → Add to return to the recipient list.
8. Press <Options> → Save to save the recipients.
9. Scroll down and set the number of times to repeat the SOS message.
10. Press <Save> → Yes.

To send an SOS message

1. With the keys locked, press the volume key four times to send an SOS message to preset numbers. The phone switches to SOS mode and sends the preset SOS message.
2. To exit SOS mode, press [Power].

4. Select Incoming calls → Voice call ringtone.

5. Select a ringtone category → a ringtone.
6. Press <Save>.

Call a recently dialed number

1. In Idle mode, press [Power].
2. Scroll left or right to select a call type.
3. Scroll up or down to select a number or name.
4. Press the Confirm key to view details of the call or [Power] to dial the number.

Enter text

To change the text input mode

- Press [*] to switch to an input mode; press and hold [*] to select an input mode.
- Press [*] to change case or switch to Number mode.
- Press and hold [#] to switch to Symbol mode.

Pinyin mode

1. Press the appropriate alphanumeric keys to enter pinyins.
2. Scroll left or right to a pinyin.
3. Press the Confirm key. A number appears by each character.
4. Scroll up or down to a character.
5. Press an alphanumeric key to enter the corresponding character.
6. When you are finished, press <Back> to return to your message.

Use the camera

Capture photos

1. In Menu mode, select Camera.
2. Aim the lens at the subject and make any adjustments.
3. Press the Confirm key to take a photo.
4. Press <Back> to take another photo (step 2).

View photos

In Menu mode, select My files → Images → My photos → a photo file.

Set and use alarms

To set a new alarm

1. In Menu mode, select Alarms.
2. Scroll to an empty alarm location and press the Confirm key.
3. Set alarm details.
4. Press <Save>.

To stop an alarm

When the alarm sounds,

- Press any key to stop an alarm without snooze.
- Press <OK> or the Confirm key to stop an alarm with snooze, or press <Snooze> or any key to silence the alarm for the snooze period.

S Stroke mode

1. Press [1] through [5] to enter strokes. Press [6] when you are unsure which stroke to enter. This will insert a placeholder.
2. Press the Confirm key. A number appears by each character.
3. Scroll up or down to a character.
4. Press an alphanumeric key to enter the corresponding character.
5. When you are finished, press <Back> to return to your message.

T Stroke mode

1. Press [1] through [5] to enter strokes. Press [6] when you are unsure which stroke to enter. This will insert a placeholder.
2. Press the Confirm key. A number appears by each character.
3. Scroll up or down to a character.
4. Press an alphanumeric key to enter the corresponding character.
5. When you are finished, press <Back> to return to your message.

ABC mode

Press the appropriate alphanumeric key until the character you want appears on the display.

Number mode

Press the appropriate alphanumeric key to enter a number.

To deactivate an alarm

1. In Menu mode, select Alarms.
2. Scroll to the alarm you want to deactivate and press the Confirm key.
3. Scroll left or right to Off.
4. Press <Save>.

Listen to music

1. In Menu mode, select Music.
2. Select a music category → a music file.
3. Control playback using the following keys:

Keys	Function
OK	Pause or resume playback
Volume	Adjust the volume up or down
Navigation	<ul style="list-style-type: none"> • Left: Restart playback; Skip backward (press within 3 seconds); Scan backward in a file (press and hold) • Right: Skip forward; Scan forward in a file (press and hold) • Up: Open the playlist • Down: Stop playback