

SGH-G808  
user manual



# using this manual

This user manual has been specially designed to guide you through the functions and features of your mobile phone. To get started quickly, refer to “introducing your mobile phone,” “assembling and preparing your mobile phone,” and “using basic functions.”

## Instructional icons

---

Before you start, familiarise yourself with the icons you will see in this manual:



WARNING

**Warning**—situations that could cause injury to yourself or others



CAUTION

**Caution**—situations that could cause damage to your phone or other equipment



**Note**—notes, usage tips, or additional information



**Refer to**—pages with related information; for example: ► p.12 (represents “see page 12”)

- **Followed by**—the order of options or menus you must select to perform a step; for example: Press <Menu> → **Messages** → **Create message** (represents **Menu**, followed by **Messages**, followed by **Create message**)
- [ ] **Square brackets**—phone keys; for example: [  ] (represents the Power/Menu exit key)
- < > **Angled brackets**—softkeys that control different functions at each screen; for example: <OK> (represents the **OK** softkey)

## Copyright information

---

Rights to all technologies and products that comprise this device are the property of their respective owners:

- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide—Bluetooth QD ID: B013308.
- Java™ is a trademark of Sun Microsystems, Inc.
- Windows Media Player® is a registered trademark of Microsoft Corporation.

# contents

<b>safety and usage information</b>	<b>2</b>
Safety warnings .....	2
Safety precautions .....	4
Important usage information .....	7
<b>introducing your mobile phone</b>	<b>9</b>
Unpack .....	9
Phone layout .....	10
Keys .....	11
Display .....	12
Icons .....	12
<b>assembling and preparing your mobile phone</b>	<b>15</b>
Install the SIM card and battery .....	15
Charge the battery .....	17
Insert a memory card (optional) .....	18
<b>using basic functions</b>	<b>19</b>
Turn your phone on and off .....	19

Access menus .....	20	Edit images .....	40
Customise your phone .....	20	Edit videos .....	42
Use basic call functions .....	21	Use RSS reader .....	46
Send and view messages .....	22	Upload photos and videos to the web .....	47
Add and find contacts .....	25	Use Java-powered games and applications .....	48
Use basic camera functions .....	26	Create and view world clocks .....	48
Listen to music .....	27	Set and use alarms .....	49
Browse the web .....	28	Use the calculator .....	50
<b>using advanced functions</b> .....	<b>30</b>	Convert currencies or measurements .....	50
Use advanced call functions .....	30	Set a countdown timer .....	51
Use advanced Phonebook functions .....	32	Use the stopwatch .....	51
Use advanced messaging functions .....	33	Create a new task .....	51
Use advanced music functions .....	34	Create a text memo .....	51
<b>using tools and applications</b> .....	<b>37</b>	Manage your calendar .....	52
Use the Bluetooth wireless feature .....	37	<b>overview of menu functions</b> .....	<b>a</b>
Activate mobile tracker .....	38	<b>troubleshooting</b> .....	<b>b</b>
Record and play voice memos .....	39		

# safety and usage information

Comply with the following precautions to avoid dangerous or illegal situations and ensure peak performance of your mobile phone.



## Safety warnings

---

### Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

### Protect your hearing



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

## Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

## Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries in a fire. Follow all local regulations when disposing used batteries.

- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

## Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

## Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

## Reduce the risk of repetitive motion injuries

When sending text messages or playing games on your phone, hold the phone with a relaxed grip, press the buttons lightly, use special features that reduce the number of buttons you have to press (such as templates and predictive text), and take frequent breaks.



## Safety precautions

---

### Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

### Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

### Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

## Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

## Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

## Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/115° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

## Handle your phone carefully and sensibly

- Do not allow your phone to get wet—liquids can cause serious damage. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.

CAUTION

- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.
- Avoid using the phone's camera flash or light close to the eyes of children or animals.
- Your phone and memory cards may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

## Avoid interference with other electronic devices

Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.

# CAUTION



## Important usage information

### Use your phone in the normal position

Avoid contact with your phone's internal antenna.

### Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

### Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.

- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

### Handle SIM cards and memory cards with care

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

## Ensure access to emergency services

Emergency calls from your phone may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

## Specific Absorption Rate (SAR) certification information

Your phone conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile phones that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 watts per kilogram of body tissue.

# introducing your mobile phone

In this section, learn about your mobile phone's layout, keys, display, and icons.

## Unpack

---

Check your product box for the following items:

- Mobile phone
- Battery
- Travel adapter (charger)
- User manual




The items supplied with your phone may vary depending on the software and accessories available in your region or offered by your service provider.

You can obtain additional accessories from your local Samsung dealer.


Use only Samsung-approved software. Pirated or illegal software may cause damage or malfunctions that are not covered by manufacturer's warranty.

## Phone layout

The front of your phone includes the following keys and features:

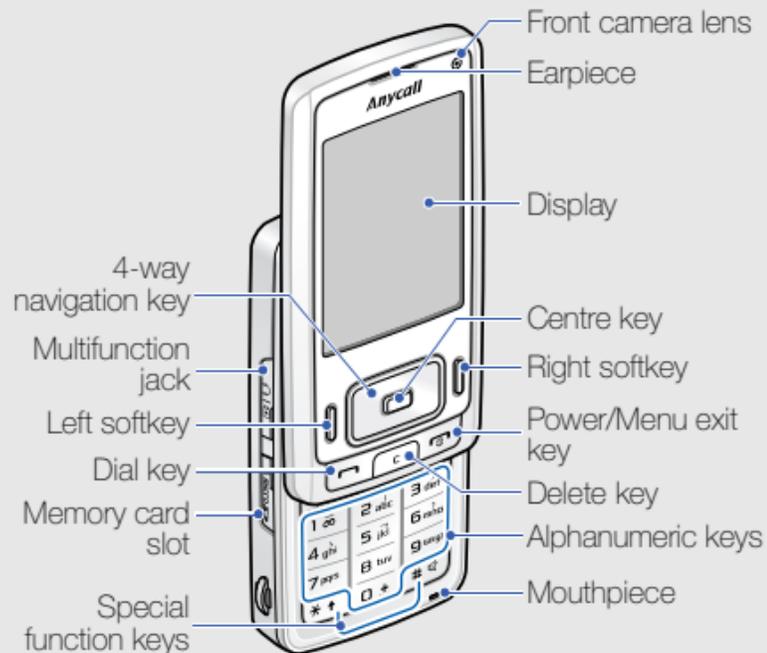


The rear of your phone includes the following keys and features:

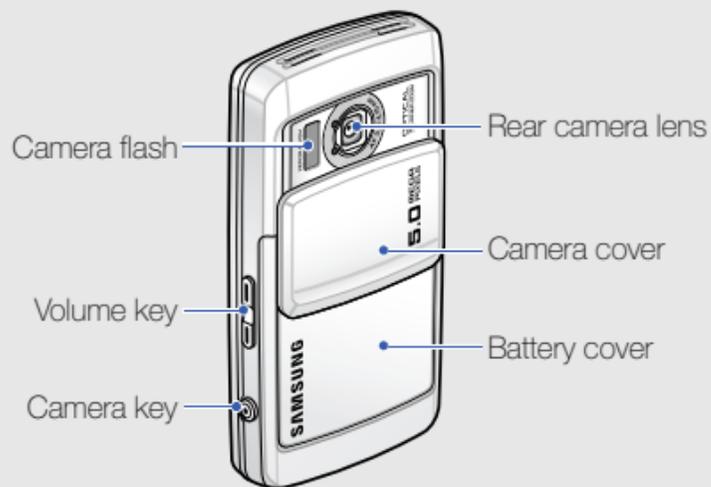

Closing the phone automatically locks the exposed keys to prevent you from accidentally pressing them. To unlock these keys, press **<Unlock>** → **<OK>**.


# Keys

 Key	Function
 Softkeys	Perform actions indicated at the bottom of the display
 Navigation	In Idle mode, access user-defined menus (left/right/up/down); In Menu mode, scroll through menu options
 Centre	In Menu mode, select the highlighted menu option or confirm an input
 Dial	Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers
 Delete	Delete characters or items in an application
 Power/ Menu exit	Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode

Key	Function
 Alpha- numeric	Enter numbers, letters and special characters; In Idle mode, press and hold [1] to access voice mails and [0] to enter an international call prefix
 * + # #	Enter special characters or perform special functions; In Idle mode, press and hold [#] for Silent profile; Press and hold [*] to enter a pause between numbers
 Volume	Adjust the phone's volume
 Camera	In Idle mode, turn on the camera (press and hold); In Camera mode, take a photo or record a video

## Display

Your phone's display consists of three areas:

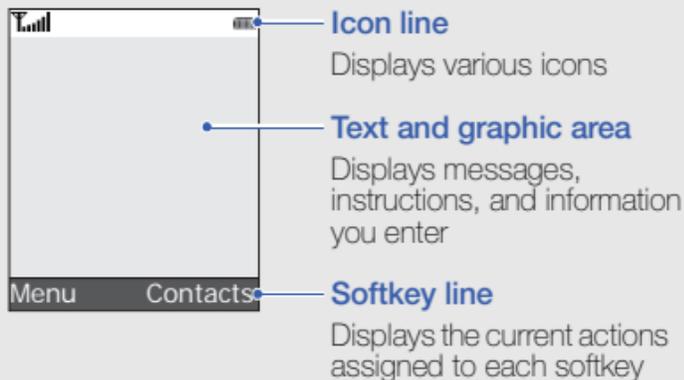

### Icon line

Displays various icons

### Text and graphic area

Displays messages, instructions, and information you enter

### Softkey line

Displays the current actions assigned to each softkey

## Icons

Learn about the icons that appear on your display.

Icon	Definition
	Signal strength
	GPRS network connected
	GPRS network connecting
	EDGE network connected
	EDGE network connecting
	HSDPA network connected
	HSDPA network connecting
	Voice call in progress
	No service available

Icon	Definition
	Video call in progress
	Memory card inserted
	Alarm activated
	Browsing Internet
	Roaming (outside of normal service area)
	Call diverting activated
	Bluetooth activated
	Bluetooth hands-free kit or headset connected
	Synchronised with PC
	Music playback in progress
	Music playback paused

Icon	Definition
	New text message (SMS)
	New multimedia message (MMS)
	New email message
	New voice mail message
	New push message
	New configuration message
	Text message full
	Multimedia message full
	Email message full
	Voice mail message full
	Push message full

Icon	Definition
	Configuration message full
	FM radio on
	Normal profile activated
	Silent profile activated
	Driving profile activated
	Meeting profile activated
	Outdoor profile activated
	Offline profile activated
	Battery power level



# assembling and preparing your mobile phone


Get started by assembling and setting up your mobile phone for its first use.

## Install the SIM card and battery

When you subscribe to a cellular service, you will receive a Subscriber Identity Module, or SIM card, with subscription details, such as your personal identification number (PIN) and optional services.


To install the SIM card and battery,

1. Remove the battery cover.

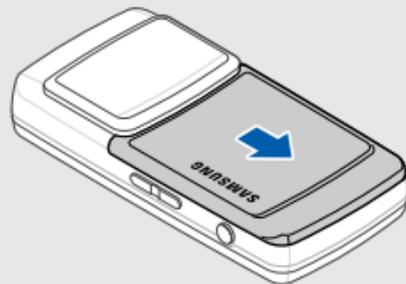


If the phone is on, press and hold [  ] to turn it off.

2. Insert the SIM card.

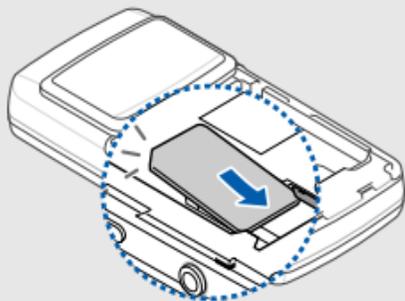


Place the card in the phone with the gold-coloured contacts facing down.

3. Insert the battery.

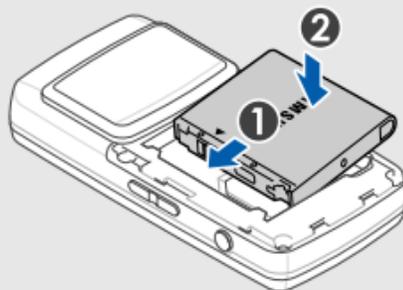

4. Replace the battery cover.

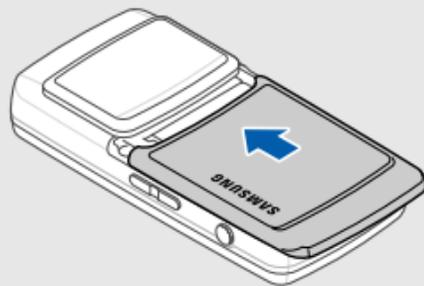


## Charge the battery

Before using the phone for the first time, you must charge the battery.

1. Open the cover to the multifunction jack on the side of the phone.





2. Plug the small end of the travel adapter into the jack.

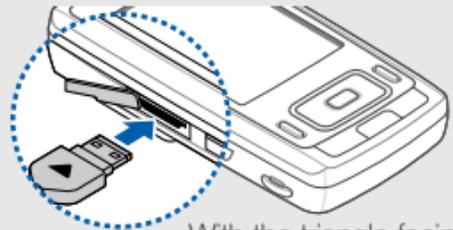

With the triangle facing the front of your phone



Improperly connecting the adapter can cause serious damage to the phone. Any damages by misuse are not covered by the warranty.

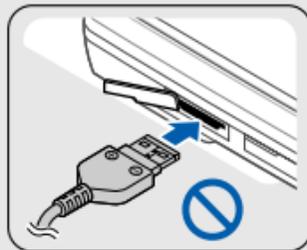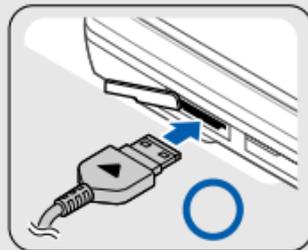

3. Plug the large end of the travel adapter into a power outlet.
4. When the battery is fully charged (the  icon is no longer moving), unplug the travel adapter from the power outlet.
5. Unplug the adapter from the phone.
6. Close the cover to the multifunction jack.



### About the low battery indicator


When your battery is low, the phone will emit a warning tone and a low battery message. The battery icon will also be empty and blinking. If the battery level becomes too low, the phone will automatically power off. Recharge your battery to continue using your phone.

### Insert a memory card (optional)

To store additional multimedia files, you must insert a memory card. Your phone accepts microSD™ memory cards up to 4 GB (depending on memory card manufacturer and type).

1. Open the cover to the memory card slot on the side of the phone.

2. Insert a memory card with the label side facing up.

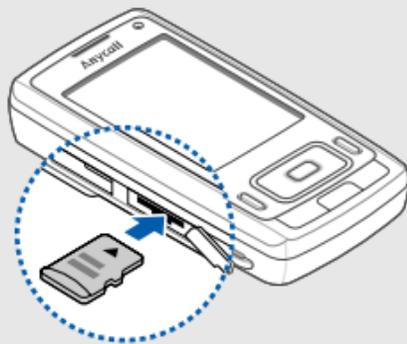

3. Push the card in the slot until it locks in place.

To remove the memory card, push it gently until it disengages from the phone, and then pull the card out of the slot.

# using basic functions

Learn how to perform basic operations and use the main features of your mobile phone.

## Turn your phone on and off

---

To turn your phone on,

1. Slide open the phone.
2. Press and hold [].
3. Enter your PIN and press <OK> (if necessary).

To turn your phone off, repeat steps 1 and 2 above.

## Switch to Offline profile

By switching to Offline profile, you can use your phone's non-network services in areas where wireless devices are prohibited, such as aeroplanes and hospitals.

To switch to Offline profile, press <Menu> → **Settings** → **Phone profiles** → **Offline**.



Follow all posted warnings and directions from official personnel when in areas where wireless devices are prohibited.

## Access menus

---

To access your phone's menus,

1. Press a softkey for the menu you want.
2. Use the navigation key to scroll to a menu or option.
3. Press <Select>, <OK>, or the Centre key to confirm the highlighted option.
4. Press <Back> to move up one level; Press [>] to return to Idle mode.

## Customise your phone

---

Get more from your phone by customising it to match your preferences.

### Adjust the volume of the key tones

In Idle mode, press the Volume key up or down to adjust the key tone volume.

### Switch to or from Silent profile

In Idle mode, press and hold [#] to silence or un silence your phone.

### Change your ringtone

1. In Idle mode, press <Menu> → **Settings** → **Phone profiles**.
2. Scroll a profile.
3. Press <Options> → **Edit** → **Voice call ringtone** or **Video call ringtone**.
4. Select a ringtone category → a ringtone.
5. Press <Options> → **Save**.

### Select a wallpaper (Idle mode)

1. In Idle mode, press <Menu> → **Settings** → **Display & light settings** → **Display settings** → **Wallpaper**.

2. Select **Pictures** → an image category → an image.
3. Press <**Set**>.

## Set menu shortcuts

1. In Idle mode, press <**Menu**> → **Settings** → **Phone settings** → **Shortcuts**.
2. Select a key to use as a shortcut.
3. Select a menu to assign to the shortcut key.

## Lock your phone

1. In Idle mode, press <**Menu**> → **Settings** → **Security** → **Phone lock**.
2. Select **On**.
3. Enter a new 4- to 8-digit password and press <**Confirm**>.
4. Enter the new password again and press <**Confirm**>.

## Use basic call functions

---

Learn to make or answer calls and use basic call functions.

### Make a call

1. In Idle mode, enter an area code and a phone number.
2. Press [>] to dial the number.  
For a video call, press <**Options**> → **Vidoe call**.
3. To end the call, press [>].

### Answer a call

1. When a call comes in, press [>].  
For a video call, press <**Show me**>.
2. To end the call, press [>].

## Adjust the volume

To adjust the volume during a call, press the Volume key up or down.

## Use the speakerphone feature

1. During a call, press the Centre key → **<Yes>** to activate the speaker.
2. To switch back to the earpiece, press the Centre key again.

## Use the headset

By connecting the supplied headset to the multifunction jack, you can make and answer calls:

- To redial the last call, press the headset button, and then press again and hold.
- To answer a call, press and hold the headset button.
- To end a call, press and hold the headset button.

## Send and view messages

---

Learn to send and view text (SMS), multimedia (MMS), and email messages.

### Send a text or multimedia message

1. In Idle mode, press **<Menu>** → **Messages** → **Create message** → **Message**.
2. Enter your message text. ► p. 23  
For sending as a text message, skip to step 7.  
For attaching multimedia, continue with step 3.
3. Press **<Options>** → **Add item** → an item type.
4. Select the item you want to add and press **Select**.
5. Press **<Options>** → **Add subject**.
6. Enter a subject.
7. Scroll up and enter a destination number.

8. Press <Options> → **Send** to send the message.

## Send an email

1. In Idle mode, press <Menu> → **Messages** → **Create message** → **Email**.
2. Enter your email text.
3. Scroll up and enter a subject.
4. Scroll up and enter an email address.
5. Press <Options> → **Send** to send the message.

## Enter text

When entering text, you can change the text input mode:

- Press [#] to change the text input mode.

- Press [\*] to change case in ABC mode or T9 mode.
- Press and hold [\*] to switch to Symbol mode.

Enter text in one of the following modes:

Mode	Function
Pinyin	<ol style="list-style-type: none"><li>1. Press the appropriate alphanumeric keys to enter pinyins.</li><li>2. Scroll left or right to select a pinyin.</li><li>3. Press the Centre key. A number appears by each character.</li><li>4. Scroll up or down to select a character.</li><li>5. Press an alphanumeric key to enter the corresponding character.</li><li>6. When you are finished, press &lt;Back&gt; to return to your message.</li></ol>

Mode	Function
Stroke	<ol style="list-style-type: none"> <li>1. Press [1] through [5] to enter strokes. Press [6] when you are unsure which stroke to enter. This will insert a placeholder.</li> <li>2. Press the Centre key. A number appears by each character.</li> <li>3. Scroll up or down to select a character.</li> <li>4. Press an alphanumeric key to enter the corresponding character.</li> <li>5. When you are finished, press &lt;Back&gt; to return to your message.</li> </ol>
ABC	Press the appropriate alphanumeric key until the character you want appears on the display.

Mode	Function
T9	<ol style="list-style-type: none"> <li>1. Press the appropriate alphanumeric keys to enter an entire word.</li> <li>2. When the word displays correctly, press [#] to insert a space. If the correct word does not display, select an alternate word from the list that appears.</li> </ol>
Number	Press the appropriate alphanumeric key to enter a number.
Symbol	Press the appropriate alphanumeric key to select a symbol.

## View text or multimedia messages

1. In Idle mode, press <Menu> → **Messages** → **Inbox**.
2. Select a text or multimedia message.

## View an email

1. In Idle mode, press <Menu> → **Messages** → **Email inbox**.
2. Press <Options> → **Download**.
3. Select an email or a header.
4. If you selected a header, press <Options> → **Retrieve** to view the body of the email.

## Add and find contacts

---

Learn the basics of using the Phonebook feature.

### Add a new contact

1. In Idle mode, enter a phone number and press <Options>.
2. Select **Add to Phonebook** → a memory location (phone or SIM) → **New**.

3. Select a number type (if necessary).
4. Enter contact information.
5. Press <Options> → **Save** or <Save> to add the contact to memory.

### Find a contact

1. In Idle mode, press <Menu> → **Phonebook**. You can also press <Contacts> in Idle mode.
2. Enter the first few letters of the name you want to find.
3. Select the contact's name from the search list.



Once you have found a contact, you can:

- call the contact by pressing [↵]
- edit the contact's information by pressing <Options> → **Edit**

## Use basic camera functions

---

Learn the basics to capture and view photos and videos.

### Capture photos

1. In Idle mode, open the camera cover.  
The camera starts automatically.
2. Rotate the phone counter-clockwise to landscape view.
3. Aim the lens at the subject and make any adjustments.
4. Press the Camera key to take a photo.  
The photo is saved automatically.
5. Press <📷> or the Camera key to take another photo (step 3).

### View photos

In Idle mode, press <Menu> → **My files** → **Images** → **My photos** → a photo file.

### Capture videos

1. In Idle mode, open the camera cover.  
The camera starts automatically.
2. Press <📷> and scroll to 📹.
3. Select **Camcorder** to switch to Recording mode.
4. Rotate the phone counter-clockwise to landscape view.
5. Aim the lens at the subject and make any adjustments.
6. Press the Camera key to start recording.

7. Press <[Camera icon]> or the Camera key to stop recording.  
The video is saved automatically.
8. Press <[Camera icon]> or the Camera key to record another video (step 5).

## View videos

In Idle mode, press <Menu> → **My files** → **Videos** → **My video clips** → a video file.

## Listen to music

---

Learn how to listen to music via the music player or FM radio.

### Listen to the FM radio

1. Plug the supplied headset into the phone's multifunction jack.

2. In Idle mode, press <Menu> → **Applications** → **FM radio**.
3. Press <Yes> to start automatic tuning.  
The radio scans and saves available stations automatically.
4. Scroll up or down to select a radio station.
5. To turn the radio off, press the Centre key.

### Listen to music files

Start by transferring files to your phone or memory card:

- Download from the wireless web. ► Browse the web
- Download from a PC with the optional Samsung PC Studio. ► Samsung PC Studio user manual
- Receive via Bluetooth. ► p. 38

- Copy to your memory card. ► p. 35
- Synchronise with Windows Media Player 11.  
► p. 35

After transferring music files to your phone or memory card,

1. In Idle mode, press <Menu> → **Music Player**.
2. Select a music category → a music file.
3. Control playback using the following keys:

Key	Function
Centre	Pause or resume playback
Volume	Adjust the volume up or down
Navigation	<ul style="list-style-type: none"> <li>• Left: Skip backward; Scan backward in a file (press and hold)</li> <li>• Right: Skip forward; Scan forward in a file (press and hold)</li> <li>• Up: Open the playlist</li> <li>• Down: Stop playback</li> </ul>

## Browse the web

Learn to access and bookmark your favourite web pages.

### Browse web pages

1. In Idle mode, press <Menu> → **Internet** → **Go to homepage**.
2. Navigate web pages using the following keys:

Key	Function
Navigation	Scroll up or down on a web page
Centre	Select an item
<Back>	Return to previous page
<Options>	Access a list of browser options

## Bookmark your favourite web pages

1. Press <Menu> → Internet → Bookmarks → <Options> → Add bookmark.
2. Enter a page title and a web address (URL).
3. Press <Save>.



# using advanced functions

Learn how to perform advanced operations and use additional features of your mobile phone.

## Use advanced call functions

---

Learn about your phone's additional calling capabilities.

### View and dial missed calls

Your phone will display calls you have missed on the display. To dial the number of a missed call,

1. Press <**View**>.
2. Scroll to the missed call you want to dial.
3. Press [>] to dial.

### Call a recently dialed number

1. In Idle mode, press [>] to display a list of recent numbers.
2. Scroll to the number you want and press [>] to dial.

## Hold a call or retrieve a held call

Press <**Hold**> to place a call on hold or press <**Retrieve**> to retrieve a held call.

## Dial a second call

If your network supports this function, you can dial another number during a call:

1. Press <**Hold**> to put the first call on hold.
2. Enter the second number to dial and press [**↵**].
3. Press <**Swap**> to switch between the two calls.
4. To end the call on hold, press <**Options**> → **End held call**.
5. To end the current call, press [**ⓧ**].

## Answer a second call

If your network supports this function, you can answer a second incoming call:

1. Press [**↵**] to answer the second call.  
The first call is automatically placed on hold.
2. Press <**Swap**> to switch between the calls.

## Make a multiparty call (conference call)

1. Call the first party you want to add to the multiparty call.
2. While connected to the first party, call the second party.  
The first party is automatically placed on hold.
3. When connected to the second party, press <**Options**> → **Join**.

- Repeat steps 1 and 2 to add more parties (if necessary).
- To end the multiparty call, press [⏏].

## Call an international number

- In Idle mode, press and hold [0] to insert the + character.
- Enter the complete number you want to dial (country code, area code, and phone number), and then press [⏏] to dial.

## Call a contact from the Phonebook

You can call numbers directly from the Phonebook using stored contacts. ► p. 25

- In Idle mode, press <Menu> → **Phonebook**.  
You can also press <Contacts> in Idle mode.
- Scroll to the number you want to dial and press [⏏] to dial.

## Use advanced Phonebook functions

Learn to create namecards, set speed dial numbers, and create groups of contacts.

### Create a namecard

- In Idle mode, press <Menu> → **Phonebook**.  
You can also press <Contacts> in Idle mode.
- Press <Options> → **My name card**.
- Enter your personal details and press the Centre key.



You can send your namecard by attaching it to a message or email or transferring it via the Bluetooth wireless feature.

### Set speed dial numbers

- In Idle mode, press <Menu> → **Phonebook**.  
You can also press <Contacts> in Idle mode.

2. Scroll to a contact.
3. Press <Options> → **Assign speed dial**.
4. Scroll to a number you want to set (2-9) and press <Select>.



You can now call this contact from Idle mode by pressing and holding the assigned speed dial number.

## Create a group of contacts

By creating groups of contacts, you can assign ringtones and caller ID photos to each group or send messages and emails to an entire group. Start by creating a group:

1. In Idle mode, press <Menu> → **Phonebook**.  
You can also press <Contacts> in Idle mode.
2. Scroll right to select **Groups**.
3. Press <Options> → **Create group**.

4. Enter a group name and press the Centre key.
5. Press <Options> → **Group settings**.
6. To set the caller ID image, press <Select> → an image category → an image → **Select**.
7. To set a group ringtone, scroll down and press the Centre key → a ringtone category → a ringtone → **Select**.
8. Press <Options> → **Save**.

## Use advanced messaging functions

---

Learn to create templates and use templates to create new messages.

### Create a text template

1. In Idle mode, press <Menu> → **Messages** → **Templates** → **Text templates**.

2. Press <**Create**> to open a new template window.
3. Enter your text and press the Centre key to save the template.

## Create a multimedia template

1. Create a multimedia message, with a subject and desired attachments, to use as your template. ► p. 22
2. From the message screen, press <**Options**> → **Save as template**.  
The message is now saved as a multimedia template with a preset name, such as 'Birthday.'

## Insert text templates in new messages

1. To start a new message, press <**Menu**> → **Messages** → **Create message** → a message type.

2. Press <**Options**> → **Insert** → **Text template**.
3. Select a template to insert the template text into your message.

## Create a message from a multimedia template

1. In Idle mode, press <**Menu**> → **Messages** → **Templates** → **Multimedia templates**.
2. Scroll to the template you want and press <**Options**> → **Send**.  
Your template opens as a new multimedia message.

## Use advanced music functions

---

Learn to prepare music files, create playlists, and store radio stations.

## Synchronise your phone with Windows Media Player

1. In Idle mode, press <Menu> → **Settings** → **Phone settings** → **PC connections** → **Media player**.
2. Press [>] to return to Idle mode.
3. Using an optional PC data cable, connect the multifunction jack on your phone to a PC with Windows Media Player installed.  
When connected, a pop-up window will appear on the PC.
4. Select **Sync digital media files to this device** in the pop-up window on the PC.
5. Edit or enter your phone's name in the pop-up window (optional), and then click **Finish**.

## Copy music files to a memory card

1. Insert a memory card.
2. In Idle mode, press <Menu> → **Settings** → **Phone settings** → **PC connections** → **Mass storage**.
3. Press [>] to return to Idle mode.
4. Using an optional PC data cable, connect the multifunction jack on your phone to a PC.  
When connected, a pop-up window will appear on the PC.
5. Select **Open folder to view files** in the pop-up window on the PC.
6. Copy files from the PC to the memory card.

## Create a playlist

1. In Idle mode, press **<Menu>** → **Music Player** → **Playlists**.
2. Press **<Options>** → **Create playlist**.
3. Enter a title for your new playlist and press the Centre key.
4. Select the new playlist.
5. Press **<Options>** → **Add** → **Files**.
6. Select the files you want to include and press **<OK>**.

## Customise your music player settings

Learn to adjust the playback and sound settings for your music player.

1. In Idle mode, press **<Menu>** → **Music Player**.
2. Press **<Options>** → **Player settings**.

3. Adjust the settings to customise your music player.
4. Press **<Save>**.

## Store radio stations automatically

1. Plug the supplied headset into the phone's multifunction jack.
2. In Idle mode, press **<Menu>** → **Applications** → **FM radio**.
3. Press **<Options>** → **Self-tuning**.
4. Press **<Yes>** to confirm (if necessary).  
The radio scans and saves available stations automatically.

# using tools and applications

Learn how to work with your mobile phone's tools and additional applications.

## Use the Bluetooth wireless feature

---

Learn about your phone's ability to connect to other wireless devices for exchanging data and using hands-free features.

### Turn on the Bluetooth wireless feature

1. In Idle mode, press **<Menu>** → **Settings** → **Network settings** → **Bluetooth** → **Activation** → **On**.
2. To allow other devices to locate your phone, select **My phone's visibility** → **On**.

### Find and pair with other Bluetooth-enabled devices

1. In Idle mode, press **<Menu>** → **Settings** → **Network settings** → **Bluetooth** → **My devices** → **Search new device**.

2. Scroll to a device and press **<Select>**.
3. Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and press **<OK>**.

When the owner of the other device enters the same code or accepts the connection, pairing is complete.

## Send data using the Bluetooth wireless feature

1. Select the file or item from one of your phone's applications that you want to send.
2. Press **<Options>** → **Send name card via** or **Send via** → **Bluetooth**.

## Receive data using the Bluetooth wireless feature

1. Enter the PIN for the Bluetooth wireless feature and press **<OK>** (if necessary).
2. Press **<Yes>** to confirm that you are willing to receive data from the device (if necessary).

## Activate mobile tracker

---

When someone inserts a new SIM card in your phone, the mobile tracker feature will automatically send the contact number to two recipients to help you locate and recover your phone. To activate mobile tracker,

1. In Idle mode, press **<Menu>** → **Settings** → **Security** → **Mobile tracker**.

2. Enter your password and press **<Confirm>**.



The first time you access mobile tracker, you will be prompted to create and confirm a password.

3. Scroll right to turn on the mobile tracker.
4. Scroll down and press the Centre key to open the recipients list.
5. Press **<Options>** → **Phonebook** to open your contact list.
6. Scroll to a contact and press **<View>** → **<Select>**.
7. When you are finished selecting contacts, press **<Options>** → **OK** to return to the recipients list.
8. Scroll down and enter the sender's name.
9. Press **<Options>** → **Save** → **<Agree>**.

## Record and play voice memos

---

Learn to operate your phone's voice recorder.

### Record a voice memo

1. In Idle mode, press **<Menu>** → **Applications** → **Voice recorder**.
2. Press the Centre key to start recording.
3. Speak your memo into the microphone (up to 1 hour).
4. When you are finished speaking, press the Navigation key down.  
Your memo is saved automatically.

### Play a voice memo

1. From the voice recorder screen, press **<Options>** → **My voice clips**.
2. Select a file.

- Control the playback using the following keys:

Key	Function
Centre	Pause or resume playback
Volume	Adjust the volume up or down
Navigation	<ul style="list-style-type: none"> <li>• Left: Scan backward in a file</li> <li>• Right: Scan forward in a file</li> <li>• Down: Stop playback</li> </ul>

## Edit images

Learn to edit images and apply fun effects.

### Apply effects to images

- In Idle mode, press <Menu> → **Applications** → **Image editor**.
- Press <Options> → **New image**.
- Select an image category → an image.

- Press <Options> → **Effects** → an effect option.
- Select a variation of the effect to apply and press <Done>.
- When done with effects, press <Options> → **Save as**.
- Enter a new file name for the image press the Centre key.

### Adjust an image

- In Idle mode, press <Menu> → **Applications** → **Image editor**.
- Press <Options> → **New image**.
- Select an image category → an image.
- Press <Options> → **Adjust** → an adjustment option (brightness, contrast, or colour).
- Using the navigation key, adjust the image as desired and press <Done>.

6. Press **<Options>** → **Save as**.
7. Enter a new file name for the image and press the Centre key.

## Transform an image

1. In Idle mode, press **<Menu>** → **Applications** → **Image editor**.
2. Press **<Options>** → **New image**.
3. Select an image category → an image.
4. Press **<Options>** → **Transform** → **Resize**, **Rotate**, or **Flip** → a transforming option.
5. Using the navigation key, resize, rotate or flip the image as desired and press **<Done>**.
6. Press **<Options>** → **Save as**.
7. Enter a new file name for the image and press the Centre key.

## Insert a visual feature

1. In Idle mode, press **<Menu>** → **Applications** → **Image editor**.
2. Press **<Options>** → **New image**.
3. Select an image category → an image.
4. Press **<Options>** → **Insert** → a visual feature (frame, clip art, or emoticon).
5. Select a visual feature to add and press **<Select>**.
6. Using the navigation key move the added image (if necessary).
7. Press **<Done>** or **<Options>** → **Done**.
8. Press **<Options>** → **Save as**.
9. Enter a new file name for the image and press the Centre key.

## Edit videos

---

Learn to edit video files and apply visual effects.

### Trim any segment

1. In Idle mode, press <Menu> → **Applications** → **Video editor**.
2. Press <Options> → **Import** → **Image** or **Video**.
3. Select an image or video category → an image or video.
4. Press <Select>.  
For an image, select the duration that the image displays.
5. Repeat steps 2, 3, and 4 above to add more images or videos.
6. Press <Options> → **Trim**.

7. Scroll right and press <Start mark> at the point where you want the new video to begin.
8. Scroll right and press <End mark> at the point where you want the new video to end.
9. Press <Trim> to select the segment you want. Press <Options> → **Preview** to check the file (if necessary).
10. Press <Options> → **Save**.
11. Enter a new file name for the video and press <Save>.

### Split videos

1. In Idle mode, press <Menu> → **Applications** → **Video editor**.
2. Press <Options> → **Import** → **Image** or **Video**.
3. Select an image or video category → an image or video.

4. Press **<Select>**.  
For an image, select the duration that the image displays.
5. Repeat steps 2, 3, and 4 above to add more images or videos.
6. Press **<Options>** → **Split**.
7. Scroll left or right and press **<Split>** to divide the file into two clips.
8. Insert an image or video as desired between the clips.  
Press **<Options>** → **Preview** to check the file (if necessary).
9. Press **<Options>** → **Save**.
10. Enter a new file name for the video and press **<Save>**.

## Apply effects

1. In Idle mode, press **<Menu>** → **Applications** → **Video editor**.
2. Press **<Options>** → **Import** → **Image** or **Video**.
3. Select an image or video category → an image or video.
4. Press **<Select>**.  
For an image, select the duration that the image displays.
5. Repeat steps 2, 3, and 4 above to add more images or videos.
6. Press **<Options>** → **Effects**.
7. Scroll to a variation of the effect to apply and press the Centre key.  
Press **<Options>** → **Preview** to check the file (if necessary).

8. Press **<Options>** → **Save**.
9. Enter a new file name for the video and press **<Save>**.

## Insert texts

1. In Idle mode, press **<Menu>** → **Applications** → **Video editor**.
2. Press **<Options>** → **Import** → **Image** or **Video**.
3. Select an image or video category → an image or video.
4. Press **<Select>**.  
For an image, select the duration that the image displays.
5. Repeat steps 2, 3, and 4 above to add more images or videos.
6. Press **<Options>** → **Inset text** or **Insert** → **Text**.

7. Scroll right and press **<Start mark>** at the point where you want the text to be displayed.
8. Scroll right and press **<End mark>** at the point where you want the text to be disappeared.
9. Press **<Select>** to select the segment the text displays.
10. Enter a text to insert and press **<OK>**.  
Press **<Options>** → **Preview** to check the file (if necessary).
11. Press **<Options>** → **Save**.
12. Enter a new file name for the video and press **<Save>**.

## Add soundtrack

1. In Idle mode, press **<Menu>** → **Applications** → **Video editor**.
2. Press **<Options>** → **Import** → **Image** or **Video**.

3. Select an image or video category → an image or video.
4. Press <Select>. For an image, select the duration that the image displays.
5. Repeat steps 2, 3, and 4 above to add more images or vide files.
6. Scroll down to **Additional audio track** and press <Options> → **Import sound**.
7. Select a sound category → a sound.
8. Press <Select>. Press <Options> → **Preview** to check the file (if necessary).
9. Press <Options> → **Save**.
10. Enter a new file name for the video and press <Save>.

## Convert file formats

1. In Idle mode, press <Menu> → **Applications** → **Video editor**.
2. Press <Options> → **Import** → **Image** or **Video**.
3. Select an image or video category → an image or video.
4. Press <Select>. For an image, select the duration that the image displays.
5. Repeat steps 2, 3, and 4 above to add more images or vide files.
6. Press <Options> → **Export**.
7. Enter a new file name for the video and press <Export>. The file converts to a 3gp format.
8. Press <Yes> to check the file (if necessary).

## Use RSS reader

---

Learn to use RSS reader to get the latest news and information from your favourite websites.

### Create feeds

1. In Idle mode, press **<Menu>** → **Applications** → **RSS reader** → **My feeds**.
2. Select **Get feed**.
3. Enter a web address to subscribe to web feeds and press **<OK>**.
4. Select the feed category you want and check through the details.
5. Press **<Subscribe>** to save.
6. Press **<Options>** → **Add new feed** to add more feeds.
7. Repeat steps 3, 4, and 5 above.

### Read latest contents

1. In Idle mode, press **<Menu>** → **Applications** → **RSS reader** → **My feeds**.
2. Press **<Options>** → **Update feed** → **Selected** or **All** to get the latest contents (if necessary).
3. Select a feed category → an updated feed.

### Find new feeds

1. In Idle mode, press **<Menu>** → **Applications** → **RSS reader** → **Search**.
2. Enter a web address to search to web feeds and press **<Search>**.
3. Select the feed category you want and check through the details.
4. Press **<Subscribe>** to save in **My feeds**.

## Customise your RSS reader settings

1. In Idle mode, press **<Menu>** → **Applications** → **RSS reader** → **Settings**.
2. Change the settings to customise your RSS reader.
3. Press **<Save>**.

## Upload photos and videos to the web

---

Learn to post your photos and videos to photo sharing websites and blogs.

## Activate the ShoZu account

1. In Idle mode, press **<Menu>** → **Settings** → **Application settings** → **MobileBlog settings** → **ShoZu activation**.

2. Select **On**.
3. Press **<Yes>** to confirm.
4. Follow the onscreen instructions to activate the account.

## Create a new destination

1. In Idle mode, **<Menu>** → **Settings** → **Application settings** → **MobileBlog settings** → **Destinations**.
2. Press **<Options>** → **Create new**.
3. Follow the onscreen instructions to add a new destination site.
4. Repeat steps 2 and 3 above to add more destinations.

## Upload a file

1. From an application, such as **My files** or **Camera**, select a media file or take a new photo.
2. Press **<Options>** → **Upload to web**.
3. Select a destination you want to post to.
4. Enter a new file name and information and press **<Upload>**.

## Use Java-powered games and applications

---

Learn to use games and applications powered by award-winning Java technology.

### Play games

1. In Idle mode, press **<Menu>** → **My files** → **Games and more**.

2. Select a game from the list and follow the onscreen instructions.



Available games may vary, depending on your service provider or region. Game controls and options may vary.

## Launch applications

1. In Idle mode, press **<Menu>** → **My files** → **Games and more** → an application.
2. Press **<Options>** to access a list of various options and settings for your application.

## Create and view world clocks

---

Learn to view the time in another region or city and set world clocks to appear on your display.

## Create a world clock

1. In Idle mode, press **<Menu>** → **Applications** → **World clock**.
2. Press **<Options>** → **Add**.
3. Scroll left or right to select a time zone.
4. To set daylight saving time, scroll down and press the Centre key.
5. Press **<OK>** to create your world clock.

## Add a world clock to your display

In Dual Clock Display mode, you can view clocks with two different time zones on your display.

After you have created a world clock,

1. In Idle mode, press **<Menu>** → **Applications** → **World clock**.

2. Scroll to the world clock you want to add and press **<Options>** → **Display settings**.
3. Scroll left or right to select **Dual**.
4. Scroll down, and then scroll left or right to select a dual clock style.
5. Press **<Save>**.

## Set and use alarms

---

Learn to set and control alarms for important events.

### Set a new alarm

1. In Idle mode, press **<Menu>** → **Alarms**.
2. Scroll to an empty alarm slot and press the Centre key.
3. Set alarm details.

4. Press the Centre key.



The auto power-up feature sets the phone to automatically turn on and sound the alarm at the designated time if the phone is turned off.

## Stop an alarm

When the alarm sounds,

- Press any key to stop an alarm without snooze.
- Press <OK> or the Centre key to stop an alarm with snooze or press any key to silence the alarm for the snooze period.

## Deactivate an alarm

1. In Idle mode, press <Menu> → **Alarms**.
2. Scroll to the alarm you want to deactivate and press the Centre key.

3. Scroll to **Alarm activation** and select **Off**.

4. Press the Centre key.

## Use the calculator

---

1. In Idle mode, press <Menu> → **Applications** → **Calculator**.
2. Use the keys that correspond to the calculator display to perform basic mathematical operations.

## Convert currencies or measurements

---

1. In Idle mode, press <Menu> → **Applications** → **Converter** → a conversion type.
2. Enter the currencies or measurements and units in the appropriate fields.

## Set a countdown timer

---

1. In Idle mode, press **<Menu>** → **Applications** → **Timer**.
2. Press **<Set>**.
3. Enter hours or minutes to count down and press **<OK>**.
4. Press the Centre key to begin or pause the countdown.
5. When the timer expires, press **<OK>** to stop the alert.

## Use the stopwatch

---

1. In Idle mode, press **<Menu>** → **Applications** → **Stopwatch**.
2. Press the Centre key to begin and record lap times (up to 50).

3. When you are finished, press **<Stop>**.
4. Press **<Reset>** to clear recorded times.

## Create a new task

---

1. In Idle mode, press **<Menu>** → **Applications** → **Task**.
2. Press **<Options>** → **Create**.
3. Enter the details of the task and press the Centre key.

## Create a text memo

---

1. In Idle mode, press **<Menu>** → **Applications** → **Memo**.
2. Press **<Options>** → **Create**.
3. Enter your memo text and press the Centre key.

## Manage your calendar

---

Learn to change the calendar view and create events.

### Change the calendar view

1. In Idle mode, press **<Menu>** → **Calendar**.
2. Press **<Options>** → **View by** → **Day** or **Week**.

### Create an event

1. In Idle mode, press **<Menu>** → **Calendar**.
2. Press **<Options>** → **Create** → an event type.
3. Enter the details of the event as required press **<Options>** → **Save**.



# overview of menu functions

To access Menu mode, press <Menu> in Idle mode.

## 1 Call log

## 2 Phonebook

## 3 Music Player

## 4 Internet

- 1 Go to homepage
- 2 Enter URL
- 3 Bookmarks
- 4 Saved pages
- 5 History
- 6 Advanced
- 7 Browser settings

## 5 Messages

- 1 Create message
- 2 Inbox
- 3 Email inbox
- 4 Drafts
- 5 Outbox
- 6 Sentbox
- 7 My folders
- 8 Templates
- 9 Delete by folders
- 10 Settings
- 11 Memory status

## 6 My files

- Images
- Videos
- Sounds
- Games and more
- Other files
- Memory status

## 7 Calendar

## 8 Camera

## 9 Google

- 1 Google search
- 2 Gmail

## 10 Applications

- 1 Voice recorder
- 2 Video editor
- 3 Image editor
- 4 FM radio
- 5 RSS reader
- 6 Memo
- 7 Task
- 8 World clock
- 9 Calculator
- 10 Converter
- 11 Timer
- 12 Stopwatch
- 13 SIM application toolkit<sup>1</sup>

## 11 Alarms

## 12 Settings

- 1 Phone profiles
- 2 Time & date
- 3 Display & light settings
- 4 Phone settings
- 5 Call settings
- 6 Security
- 7 Application settings
- 8 Network settings
- 9 Memory settings
- 10 Master reset

1. Available only if supported by your SIM card.

# troubleshooting

If you are having trouble with your mobile phone, try these troubleshooting procedures before contacting a service professional.

**When you turn on your phone, the following messages may appear:**

Message	Try this to solve the problem:
Please insert SIM card	Ensure that the SIM card is installed correctly.
Phone lock	When the phone lock feature is enabled, you must enter the password you set for the phone.

Message	Try this to solve the problem:
PIN lock	When using the phone for the first time or when the PIN requirement is enabled, you must enter the PIN supplied with the SIM card. You can disable this feature by using the PIN lock menu.
PUK lock	Your SIM card is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.

### **Your phone displays “No service” or “Network failure.”**

- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.
- You cannot access some options without a subscription. Contact your service provider for more details.

### **You enter a number, but the call is not dialed.**

- Ensure that you have pressed the Dial key: [☎].
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

### **Another caller cannot reach you.**

- Ensure that your phone is turned on.

- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

### **Another caller cannot hear you speaking.**

- Ensure that you are not covering the built-in microphone.
- Ensure that the microphone is close to your mouth.
- If using a headset, ensure that it is properly connected.

### **The phone beeps and the battery icon flashes.**

Your battery is low. Recharge or replace the battery to continue using the phone.

### **The audio quality of the call is poor.**

- Ensure that you are not blocking the phone's internal antenna.

- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.

### **You select a contact to call, but the call is not dialed.**

- Ensure that the correct number is stored in the contact list.
- Re-enter and save the number, if necessary.

### **The battery does not charge properly or sometimes the phone turns itself off.**

- The battery terminals may be dirty. Wipe both gold-coloured contacts with a clean, soft cloth and try charging the battery again.
- If the battery will no longer charge completely, dispose of the old battery properly and replace it with a new battery.



Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

**SAMSUNG ELECTRONICS**



World Wide Web  
<http://www.samsungmobile.com>

Printed in Korea  
Code No.:GH68-17180A  
English. 01/2008. Rev. 1.0