

user manual



Safety warnings

Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

Protect your hearing

Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phone in a fire. Follow all local regulations when disposing used batteries or phone.
- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.

Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

Reduce the risk of repetitive motion injuries

While using your phone, hold the phone with a relaxed grip, press the buttons lightly, use special features that reduce the number of buttons you have to press (such as templates and predictive text), and take frequent breaks.

* Please read this manual carefully before using your phone to ensure safe and correct use.

* The descriptions in this manual are based on the default settings of your phone.

* Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

www.samsungmobile.com

Printed in China
Code No.:GH68-22629A
English (HK), 04/2009, Rev. 1.0



Safety precautions

Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury. In case of headsets, mono headsets are not available. Use stereo headsets only.

Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

Ensure access to emergency services

Emergency calls from your phone may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

Specific Absorption Rate (SAR) certification information

Your phone conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile phones that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 2.0 watts per kilogram of body tissue.

Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/ 113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Handle your phone carefully and sensibly

- Do not allow your phone to get wet—liquids can cause serious damage. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.
- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.
- If your phone has a camera flash or light, avoid using it close to the eyes of children or animals.
- Your phone may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

Avoid interference with other electronic devices

 
Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.



Important usage information

Use your phone in the normal position

- Avoid contact with your phone's internal antenna.

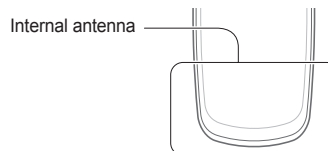

- The keypad of your phone is detachable. Use caution when holding your phone and be careful not to injure your finger or damage your fingernails when removing the keypad.

Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

 
Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

Handle SIM cards and memory cards with care

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

Phone layout

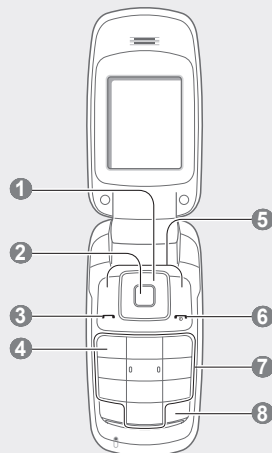

1

4-way navigation key

In Idle mode, access user-defined menus (up/down/left/right); In Menu mode, scroll through menu options
▶ Activate the torch light

2

Web access/Confirm key

In Idle mode, launch the web browser; In Menu mode, select the highlighted menu option or confirm an input

3

Dial key

Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers

4

Voice mail service key

In Idle mode, access voice mails (press and hold)

5

Softkeys

Perform actions indicated at the bottom of the display

6

Power/Menu exit key

Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode

7

Alphanumeric keys

8

Silent profile key


In Idle mode, activate or deactivate the silent profile (press and hold)

Your phone displays the following status indicators on the top of the screen:


Icon	Description
	Signal strength
	Call in progress
	New message
	FM radio on
	Alarm activated
	Normal profile activated
	Silent profile activated
	Battery power level

Install the SIM card and battery

 1. Remove the battery cover and insert the SIM card.

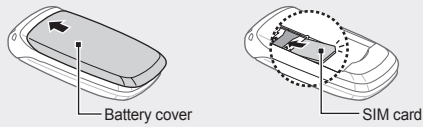


 2. Insert the battery and replace the battery cover.

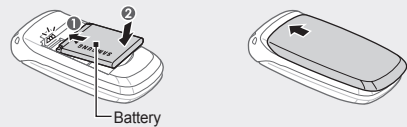

Charge the battery

 1. Plug the supplied travel adapter.
2. When charging is finished, unplug the travel adapter.

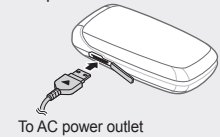

Do not remove the battery from the phone before unplugging the travel adapter first. Otherwise, the phone may be damaged. Your phone does not support USB connections. Use the supplied USB cable only for charging the phone.

Call a recently dialed number

1. In Idle mode, press [↔].
2. Scroll left or right to a call type.
3. Scroll up or down to a number or name.
4. Press the Confirm key to view details of the call or [↔] to dial the number.

Enter text

To change the text input mode

- Press [#] to switch to an input mode; press and hold [#] to select an input mode.
- Press [*] to change case in English input modes.
- Press and hold [*] to switch to Symbol mode.

Pinyin mode

1. Press the appropriate alphanumeric keys to enter pinyins.
2. Scroll left or right to a pinyin.
3. Press the Confirm key. A number appears by each character.
4. Scroll up or down to a character.
5. Press an alphanumeric key to enter the corresponding character.
6. When you are finished, press <Back> to return to your message.

Send and view messages

To send a text message

1. In Menu mode, select **Messages** → **Create new message**.
2. Enter a destination number.
3. Scroll down and enter the message text.
4. Press the Confirm key to send the message.

To view text messages

1. In Menu mode, select **Messages** → **Inbox**.
2. Select a text message.

Restrict your outgoing calls

1. In Menu mode, select **Settings** → **Application** → **Call** → **All calls** → **Call time limit**.
2. Scroll left or right to **On**.
3. Scroll down to **Time limit** and set the call time.
4. Press <Save>.

During an outgoing call, the phone will beep several times before you reach the time limit and the call will be automatically disconnected at the time limit.

Instructional icons



Note: notes, usage tips, or additional information



Followed by: the order of options or menu you must select to perform a step; for example: In Menu mode, select **Messages** → (represents **Messages**, followed by **Create new message**)



Square brackets: phone keys; for example: [↔] (represents the Power/Menu exit key)



Angled brackets: softkeys that control different functions at each screen; for example: <OK> (represents the OK softkey)

Turn your phone on or off

To turn your phone on,

1. Open the phone.
2. Press and hold [↔].
3. Enter our PIN and press <Confirm> (if necessary).

To turn your phone off, repeat step 1 and 2 above.

Access menus

To access your phone's menus,

1. In Idle mode, press <Menu> to access Menu mode.
2. Use the Navigation key to scroll to a menu or option.
3. Press <Select>, <Save>, or the Confirm key to confirm the highlighted option.
4. Press <Back> to move up one level; Press [↔] to return to Idle mode.



When you access a menu requiring the PIN2, you must enter the PIN2 supplied by the SIM card. For details, contact your service provider.

Make a call

1. In Idle mode, enter an area code and a phone number.
2. Press [↔] to dial the number.
3. To end the call, press [↔].

Answer a call

1. When a call comes in, press [↔].
2. To end the call, press [↔].

Adjust the volume

To adjust the volume of the ringtone

1. In Menu mode, select **Settings** → **Profiles**.
2. Scroll to the phone profile you are using.
3. Press <Options> → **Edit**.
4. Select **Volume**.
5. Scroll left or right to adjust the volume level.
6. Press <Save>.
7. Press <Back> → <Options> → **Save**.

To adjust the volume of voice during a call

While a call is in progress, press the Navigation key up or down to adjust the earpiece volume.

Change your ringtone

1. In Menu mode, select **Settings** → **Profiles**.
2. Scroll to the phone profile you are using.
3. Press <Options> → **Edit**.
4. Select **Voice call ringtone**.
5. Scroll to a ringtone.
6. Press <Save>.
7. Press <Back> → <Options> → **Save**.

Add and find contacts



Your phone is preset to save contact to the phone memory. To change the memory location, in Menu mode, select **Settings** → **Application** → **Phonebook** → **Save new contacts to** → a memory location.

To add a new contact

1. In Idle mode, enter a phone number and press <Options> → **Create contact**.
2. Select a number type.
3. Enter contact information.
4. Press the Confirm key to add the contact to memory.

To find a contact

1. In Menu mode, select **Phonebook** → **Contact list**.
2. Enter the first few letters of the name you want to find.
3. Select the contact's name from the search list.

S Stroke mode

1. Press [1] through [5] to enter strokes. Press [6] when you are unsure which stroke to enter. This will insert a placeholder.
2. Press the Confirm key. A number appears by each character.
3. Scroll up or down to a character.
4. Press an alphanumeric key to enter the corresponding character.
5. When you are finished, press <Back> to return to your message.

T Stroke mode

1. Press [1] through [5] to enter strokes. Press [6] when you are unsure which stroke to enter. This will insert a placeholder.
2. Press the Confirm key. A number appears by each character.
3. Scroll up or down to a character.
4. Press an alphanumeric key to enter the corresponding character.
5. When you are finished, press <Back> to return to your message.

123 mode

Press the appropriate alphanumeric key to enter a number.

Symbol mode

Press the appropriate alphanumeric key to select a symbol.

English word mode

1. Press the appropriate alphanumeric keys to enter an entire word.
2. When the word displays correctly, press [0] to insert a space. If the correct word does not display, press the Navigation key down to select an alternate word.

ABC mode

Press the appropriate alphanumeric key until the character you want appears on the display.



- To move the cursor, press the Navigation key.
- To delete characters one by one, press <Clear>. To delete all of the characters, press and hold <Clear>.
- To insert a space between characters, press [0].
- To enter punctuation marks in English input modes, press [1].

Activate the mobile tracker

This feature helps track your phone when it is stolen or when someone tries to use your phone using other SIM card, the phone will automatically send the preset tracking message to family or friends. This feature may be unavailable due to certain features supported by your service provider.

1. In Menu mode, select **Settings** → **Security** → **Mobile tracker**.
2. Enter your password and press <OK>.



The first time you access **Mobile tracker**, you will be prompted to create and confirm a password.

3. Scroll left or right to **On**.
4. Scroll down and press the Confirm key to open the recipient list.
5. Press the Confirm key to open your contact list.
6. Scroll to a contact and press the Confirm key.
7. Select a number (if necessary).
8. Press <Options> → **Select** to return to the recipient list.
9. Press the Confirm key to save the recipients.
10. Scroll down and enter the senders name.
11. Press the Confirm key → <Accept>.

Set and use alarms

To set a new alarm

1. In Menu mode, select **Alarms**.
2. Select an empty alarm location.
3. Set alarm details.
4. Press <Save>.

To stop an alarm

When the alarm sounds,

- Press <OK> any key to stop an alarm without snooze.
- Press <OK> or the Confirm key to stop an alarm with snooze, or press <Snooze> or any key to silence the alarm for the snooze period.

To deactivate an alarm

1. In Menu mode, select **Alarms**.
2. Select the alarm you want to deactivate.
3. Scroll left or right to **Off**.
4. Press <Save>.



If you have removed the battery after setting an alarm, the alarm will be deactivated.

Listen to the FM radio

1. Plug the supplied headset into the phone.
2. In Menu mode, select **FM radio**.
3. Press the Confirm key to start the radio.
4. Press <Yes> to start automatic tuning.
The radio scans and saves available stations automatically.
5. Scroll up or down to a radio station.
6. To turn off the FM radio, press the Confirm key.



The first time you access **FM radio**, you will be prompted to start automatic tuning.



Unable to use features related to memory card while listening to FM radio.

Activate the torch light

The torch light feature helps you see in dark places by making the display and backlight as bright as possible.

To activate the torch light, press and hold the Navigation key up in Idle mode.

To deactivate the torch light, press <Back> or [↔].