



SGH-CC03
User's Guide

 
- Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
- Depending on your country, your phone and accessories may appear different from the illustrations in this guide.

World Wide Web
http://www.samsungmobile.com


Printed in Korea
Code No.: GH68-18090A
English. 03/2008. Rev.1.0

Installing the SIM card and battery

- Remove the battery cover and insert the SIM card.

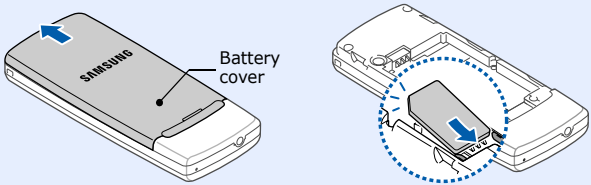


 - Install the battery and reattach the cover.

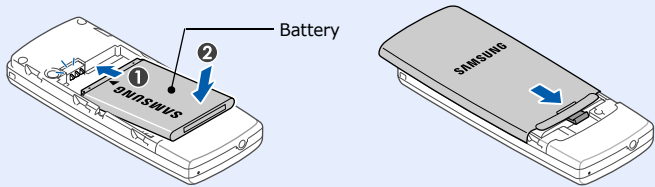


Charging the battery

 - Plug the supplied travel adapter.

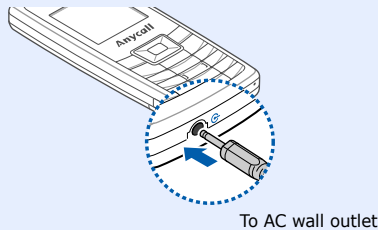


 - When charging is finished, unplug the adapter.

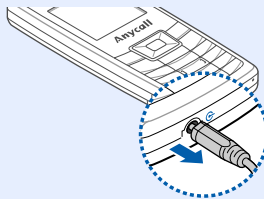

Note: Do not remove the battery from the phone without unplugging the adapter first. Otherwise, the phone may be damaged.

 Phone layout and key functions

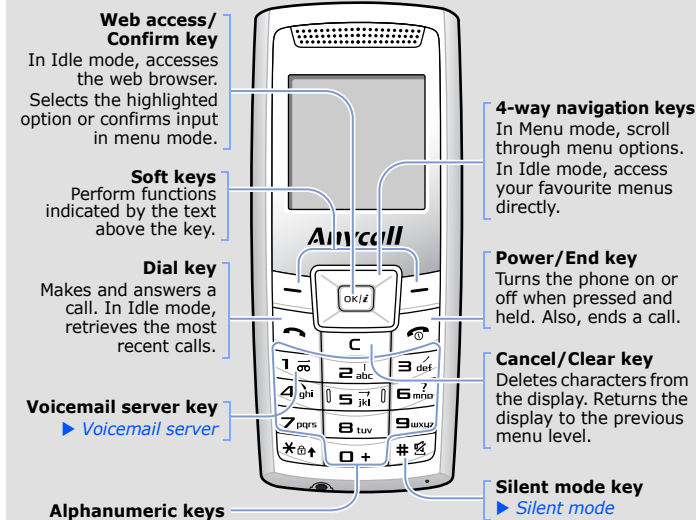

Silent mode

Press and hold ***** in Idle mode to disable all sounds on the phone. To exit, press and hold this key again.

Voicemail server

 
Press and hold **1** in Idle mode to access your voicemail server.

Keypad lock mode

Press and hold ***** in Idle mode then the **Yes** soft key to lock the keypad. To unlock, press the Unlock soft key and then *****.

Display

Your phone is in Idle mode when you are not on a call or using a menu. You must be in Idle mode to dial a phone number.

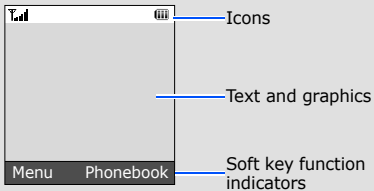


Your phone displays the following status indicators on the top of the screen:

Icon	Description
	Signal strength
	Call in progress
	Out of your service area; you cannot make or receive calls except for emergency calls
	GPRS network
	Alarm set
	Silent mode (Mute)
	Silent mode (Vibration)
	Ringer type - None: Melody : Vibration : Vibration then melody
	Home Zone, if registered for the appropriate service
	Call diverting feature active
	New message or voicemail
	Battery power level

Using the menus

In Idle mode, press the **Menu** soft key to enter the main menu.

 Labels at the bottom corners of the display show the current soft key functions. Press the left soft key (**Back**) or right soft key (**OK**) to perform the function indicated.

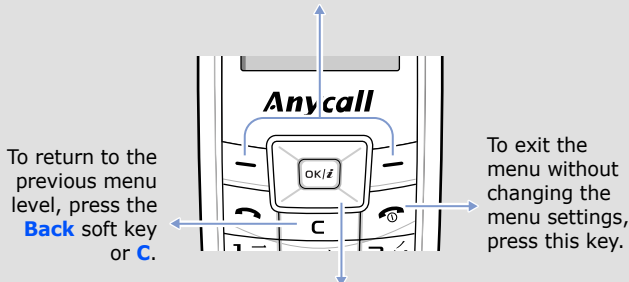

Use the 4-way navigation keys to scroll up, down, left, or right through the menu system, highlight menu items, change feature settings, and play games.

To select or modify a menu or feature:

- In Idle mode, press the **Menu** soft key.
- Press the Navigation keys to reach a desired menu and then press the **Select** soft key or **OK**.
- If the menu contains any submenus, locate the one you want by pressing the Navigation keys. Press the **Select** soft key or **OK** to enter the submenu.
If the selected menu contains additional submenus, repeat this step.
- Press the Navigation keys to find the setting of your choice.
- Press the **Select** soft key or **OK** to confirm your chosen setting.

Switching on or off the phone

- Press and hold for more than one second to switch on the phone.
- If the time & date message appears, press the **Yes** soft key and set the time and date by following the onscreen instructions.
- Press and hold for more than two seconds to switch off the phone.

Changing the display language

- In Idle mode, press the **Menu** soft key.
- Select **Settings** → **Phone settings** → **Language**.
- Select a language.

Making a call

- In Idle mode, enter an area code and phone number, and press .
- Press to end the call.

Answering a call

- When the phone rings, press the **Accept** soft key or to answer a call.
Press to reject the call.
- Press to end the call.

Menu map

1. Call log 1.1 Missed calls 1.2 Received calls 1.3 Dialed calls 1.4 Delete all 1.5 Call time 1.6 Call cost*	4.7 Silent mode 4.8 Alerts on call	8. Phonebook 8.1 Find name 8.2 FDN list 8.3 Add entry 8.4 Speed-dial list 8.5 Information 8.6 Own number 8.7 Management 8.8 SDN*
2. Network services 2.1 Call diverting 2.2 Call barring 2.3 Call waiting 2.4 Network selection 2.5 Caller ID	5. Messages 5.1 Text messages 5.2 Push messages 5.3 Preset messages 5.4 Voice mail 5.5 Broadcast 5.6 Settings 5.7 Memory status	9. Phone settings 9.1 Display settings 9.2 Greeting message 9.3 Language 9.4 Security 9.5 Auto redial 9.6 Voice clarity 9.7 Anykey answer 9.8 Auto keypad lock 9.9 Reset settings
3. Applications 3.1 SIM-AT*	6. Fun box 6.1 WWW services 6.2 Fun club 6.3 Media box	
4. Sound settings 4.1 Incoming calls 4.2 Message 4.3 Power on/off 4.4 Connection tone 4.5 Keypad tone 4.6 Minute minder	7. Organizer 7.1 Clock 7.2 Alarm 7.3 Calculator 7.4 Converter	

* Shows only if supported by your SIM card.

Adjusting the volume

- In Idle mode, press the **Menu** soft key.
- Select **Sound settings** → **Incoming calls** → **Ring volume**.
- Press **Up** or **Down** to adjust the volume level.
- Press the **OK** soft key.

While a call is in progress, press **Up** or **Down** to adjust the earpiece volume.

Changing a ringtone for calls

- In Idle mode, press the **Menu** soft key.
- Select **Sound settings** → **Incoming calls** → **Default ring tones**.
- Select a ringtone and press the **Yes** soft key.

Redialling recent numbers

- In Idle mode, press .
- Press **Up** or **Down** to scroll to the number you want.
- Press to dial the number.

Entering text

Changing the text input mode

In a text input field, press the right soft key and select the input mode you want:

- : CHN T stroke
- : English
- : Quick english
- : Number
- None: Symbolic / My words

Depending on the selected language, the available input modes vary. To get help information on each input mode, select **Help**.

Chinese stroke mode

- Press the keys that corresponds to a character's component strokes.
Example: To enter "力", press **5** for 丿 and **3** for 勹.
- If you cannot find the character you want, press **Up** or **Down** to scroll through the word choices.
- Press the number key corresponding to the character.

Quick English mode

- Press keys **2** to **9** to start entering a word. Press each key only once for one letter.

The word you are entering appears on the display. It may change with each keypress. Finish entering the word before editing or deleting any keystrokes.

Example: To enter “Hello” in Quick English mode, press **4**, **3**, **5**, **5**, and **6**.
- Press **#** to insert a space and enter the next word.

Otherwise, press **0** to display alternative word choices.

English mode

Press the keys labelled with the letter you want once for the first letter, twice for the second letter, and so on.

For example, press **2** three times to enter “C” and **5** two times to enter “K.”

Number mode

Press the keys corresponding to the digits you want.

Symbolic mode

Press the number keys corresponding to the symbol you want and press the **OK** soft key. You can press **Up** or **Down** to display more symbols.

Menu	Description
Menu > Sound settings > Minute minder	Set the phone to beep every minute during a call to keep you informed of the length of your call.
Menu > Sound settings > Silent mode	Set how the phone acts to alert you to a specific event while in Silent mode.
Menu > Sound settings > Alerts on call	Set the phone to alert you when you receive a new message or when the time for an alarm comes during a call.
Menu > Messages > Text messages > Create	Create and send messages to other mobile phones.
Menu > Messages > Text messages > Inbox, Draft, Outbox, or Sentbox	View the messages that you have received, sent, or that have failed during sending.
Menu > Messages > Text messages > Emoticon templates	Preset templates of frequently used emoticons.
Menu > Messages > Text messages > Delete all	Delete messages in each message box, or all messages at once.
Menu > Messages > Push messages	Change the settings for the service, and access or delete push messages.

Menu	Description
Menu > Phone settings > Reset settings	Reset the phone to the factory default settings.

Important safety precautions

Read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal.

Drive safely at all times

Do not use a hand-held phone while driving; park your vehicle first.

Switching off when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switching off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switching off near all medical equipment

Hospitals and health care facilities may be using equipment that could be sensitive to external RF energy. Follow any regulations or rules in force.

My Words mode

You can set up a list of phrases you use frequently in order to quickly enter characters.

- Select **Add Word**.
- Enter the phrase you want and press the **OK** soft key.
- Enter the name for the phrase in English mode and press the **OK** soft key.
- To insert an added phrase, select it from the My Words list.

Tips for entering text

- To move the cursor, press the Navigation keys.
- To delete characters one by one, press **C**. To delete all of the characters, press and hold **C**.
- To insert a space between characters, press **#**.
- To change case in Quick English mode or English mode, press *****.
- To enter punctuation marks in Quick English mode or English mode, press **1**.

Sending an SMS message

- In Idle mode, press **Left**.

Menu	Description
Menu > Messages > Preset messages	Preset templates of frequently used messages.
Menu > Messages > Voice mail	Access your voicemail server and listen to messages on the network.
Menu > Messages > Broadcast	Change settings for the service and access broadcast messages.
Menu > Messages > Settings	Set options for using messaging services.
Menu > Messages > Memory status	Check memory information for messages.
Menu > Fun box > WWW services	Launch and configure the web services.
Menu > Fun box > Fun club	Access the Samsung Fun Club website providing Samsung mobile phone users with download services.
Menu > Fun box > Media box	Access images, sounds in your phone’s memory.
Menu > Organizer > Clock	Set the current time and date manually and set your local time zone.
Menu > Organizer > Alarm	Set an alarm to sound at a specific time.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Special regulations

Follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it.

Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to your ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency calls

Key in the emergency number for your present location, then press . Do not end the call until given permission to do so.

Small children and your phone

Keep the phone and all its parts including accessories out of reach of small children.

Accessories and batteries

- Enter the message text.
- Press the **Options** soft key and add items using the following options:
 - Add media**: add sounds, images, or animated images.
 - Add emoticon**: add emoticons.
 - Add from address book**: add Phonebook contacts.
 - Add from bookmarks**: add bookmark items.
 - Preset messages**: add text templates.
- Press the **Options** soft key and select **Send**.
- Select an empty location.
- Enter a destination number and press the **OK** soft key.
- Press the **Send** soft key to send the message.

Quick feature reference

This section provides brief explanations of features on your phone.

Menu	Description
Menu > Call log > Missed calls, Received calls, or Dialed calls	View the most recent calls you have dialled, received, or missed.
Menu > Organizer > Calculator	Perform basic arithmetic functions.
Menu > Organizer > Converter	Do conversions such as length and temperature.
Menu > Phonebook > Find name	Search for contacts in Phonebook.
Menu > Phonebook > FDN list	Access a list of contacts to be used in FDN (Fixed Dialling Number) mode, in which the phone allows outgoing calls only to the specified phone numbers.
Menu > Phonebook > Add entry	Add a new contact to Phonebook.
Menu > Phonebook > Speed-dial list	Assign speed dial numbers (2 to 9) for eight of your most frequently dialled numbers.
Menu > Phonebook > Information	Find and retrieve area and country codes to quickly and easily dial phone numbers.
Menu > Phonebook > Own number	Check your phone numbers or assign a name to them.
Menu > Phonebook > Management	Copy all contacts on the SIM card to the phone’s memory, or delete all Phonebook contacts. You can also check memory information for Phonebook contacts.

Use only Samsung-approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorised accessories could damage your phone and may be dangerous.

CAUTION	Risk of explosion if a battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
	At very high volume, prolonged listening to a headset can damage your hearing.

Use of authorised software

Use only Samsung-authorised software. The use of any unauthorised software could damage your phone.

Qualified service

Only qualified service personnel may repair your phone.

Menu	Description
Menu > Call log > Delete all	Delete the call logs in each call type, or all logs at once.
Menu > Call log > Call time	View the duration of recent calls you have dialled and received. Also reset the time counter.
Menu > Call log > Call cost	View the cost of your calls.
Menu > Network services	Access network services offered by your service provider.
Menu > Applications > SIM AT	Use a variety of additional services offered by your service provider.
Menu > Sound settings > Incoming calls	Select a ringtone for incoming calls, a volume level, or an alert type.
Menu > Sound settings > Messages	Select the alert ringtone or an alert type for incoming SMS and broadcast messages, or set how often you are informed of a new message.
Menu > Sound settings > Power on/off	Set the phone to sound when it is switched on or off.
Menu > Sound settings > Connection tone	Set the phone to beep when a call is connected to the system.
Menu > Sound settings > Keypad tone	Select a tone which the phone sounds when you press a key or adjust the key tone volume.

Menu	Description
Menu > Phonebook > SDN	Access the list of service numbers assigned by your service provider.
Menu > Phone settings > Display settings	Change settings for the display and backlight.
Menu > Phone settings > Greeting message	Enter the greeting message to be displayed when the phone is switched on.
Menu > Phone settings > Language	Select a language to be used for the display text.
Menu > Phone settings > Security	Protect the phone against unauthorised use.
Menu > Phone settings > Auto redial	Set the phone to make up to ten attempts to redial a phone number after an unsuccessful call.
Menu > Phone settings > Voice clarity	Remove extraneous noise and increase a call quality, so that the other person can hear you clearly.
Menu > Phone settings > Anykey answer	Answer an incoming call by pressing any key, except for the Spk. on/Spk. off soft key and  .
Menu > Phone settings > Auto keypad lock	Set the phone to automatically lock the keypad in times of inactivity.

SAR information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the European Union (EU) Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless phones employs a unit of measurement known as Specific Absorption Rate (SAR).