



SGH-B308 User's Guide

- Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
- Depending on your country, your phone and accessories may appear different from the illustrations in this guide.


World Wide Web
<http://www.samsungmobile.com>

Printed in Korea
Code No.: GH68-18908A
English. 07/2008. Rev. 1.0

Silent mode Press and hold # in Idle mode to disable all sounds on the phone. To exit, press and hold this key again.

Display

Your phone is in Idle mode when you are not on a call or using a menu. You must be in Idle mode to dial a phone number.

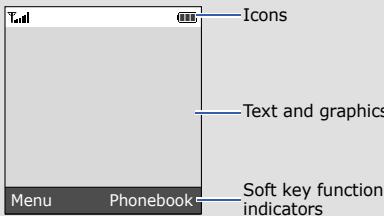


Your phone displays the following status indicators on the top of the screen:

| Icon | Description |
|------|---|
| | Signal strength |
| | Call in progress |
| | Out of your service area; you cannot make or receive calls except for emergency calls |
| | GPRS network |
| | Roaming network |
| | Call ringer set to vibrate |
| | Silent mode |
| | Mute mode, during a call |
| | Call diverting feature active |
| | New text or multimedia message |
| | New voice mail message |
| | Alarm set |
| | Battery power level |

Using the menus

In Idle mode, press the **Menu** soft key to enter the main menu.

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key (–) or right soft key (–) to perform the function indicated.

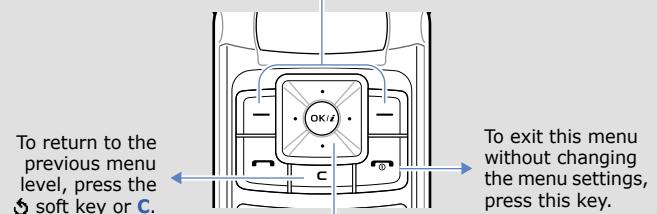

Use the 4-way navigation keys as shortcuts to access your favourite menus.

- In Idle mode, press the **Menu** soft key.
- Select **Phone settings** → **Short cut**.
- Select a key.
- Select a menu to be assigned to the key.

To select or modify a menu or feature:


- In Idle mode, press the **Menu** soft key.
- Press the Navigation keys to reach a desired menu and then press the **Select** soft key or .
- If the menu contains any submenus, locate the one you want by pressing the Navigation keys. Press the **Select** soft key or to enter the submenu. If the selected menu contains additional submenus, repeat this step.
- Press the Navigation keys to find the setting of your choice.
- Press the **Select** soft key or to confirm your chosen setting.

Shortcut numbers

You can quickly access the menu you want by using shortcut numbers. The shortcut number displays in front of the menu name in Menu mode.

Installing the SIM card and battery

- Remove the battery cover and insert the SIM card.

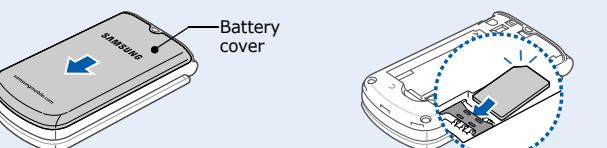


- Install the battery and reattach the cover.




Charging the battery

- Plug the supplied travel adapter.

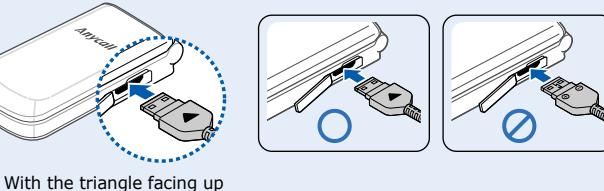


- When charging is finished, unplug the adapter.

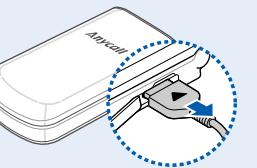

Note: Do not remove the battery from the phone without unplugging the adapter first. Otherwise, the phone may be damaged.

Phone layout and key functions

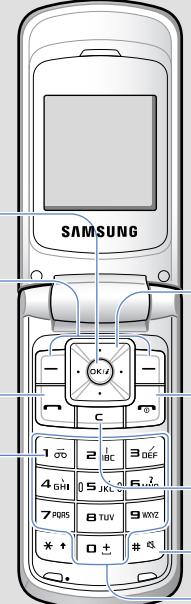

Web access/Confirm key
In Idle mode, accesses the web browser. In Menu mode, selects the highlighted option or confirms input.

Soft keys
Perform functions indicated by the text above the key.

Dial key
Makes and answers a call. In Idle mode, retrieves the most recent calls.

Cancel/Clear key
Deletes characters from the display. Returns the display to the previous menu level.

Alphanumeric keys

4-way navigation keys
In Idle mode, access your favourite menus directly. In Menu mode, scroll through menu options.

Power/End key
Turns the phone on or off when held down. Also ends a call.

Cancel/Clear key
Deletes characters from the display. Returns the display to the previous menu level.

Silent mode key
▶ *Silent mode*

- Press to end the call.

Adjusting the volume

- In Idle mode, press the **Menu** soft key.

- Select **Sound settings** → **Ring volume**.

- Press **Up** or **Down** to adjust the volume level.

- Press the **OK** soft key.

While a call is in progress, press **Up** or **Down** to adjust the earpiece volume.

Changing a ringtone for calls

- In Idle mode, press the **Menu** soft key.

- Select **Sound settings** → **Ring tone**.

- Select a ringtone.

Redialling recent numbers

- In Idle mode, press .

- Press **Up** or **Down** to scroll to the number you want.

- Press to dial the number.

Entering text

Changing the text input mode

- Press and hold # and select a mode; press # to switch between modes.
- Press and hold * to switch to Symbol mode.

Pinyin mode

- Press the keys corresponding to the phonetic spelling, pinyin, referring to the letters printed on the keys.
Example: To enter "你", press 6 and 4 to enter "ni."
- Press **Left** or **Right** to select alternative pinyins for the keys you pressed.
- If you cannot find the character you want, press **Up** or **Down** to scroll through the word choices.
- Press or * to activate the character selection field.
- Press the number key corresponding to the character you want.
Otherwise, press **Left** or **Right** to scroll to a character and press .

Menu map

| | | |
|----------------------------|--|-----------------------|
| 1. SIM AT* | 4.8 Folder tone | 7.6 Voice memo |
| 2. Call records | 4.9 Power on/off | 7.7 Currency exchange |
| 2.1 Missed calls | 4.0 Extra tones | 8. Phonebook |
| 2.2 Received calls | | 8.1 Search |
| 2.3 Dialled calls | | 8.2 New entry |
| 2.4 Delete all | | 8.3 Group search |
| 2.5 Call time | | 8.4 Edit group |
| 2.6 Call cost* | | 8.5 Speed dial |
| 3. Network services | 5.4 Configuration messages | 8.6 Copy all |
| 3.1 Call diverting | 6.1 WAP browser | 8.7 Delete all |
| 3.2 Call barring | 6.2 FM Radio | 8.8 Memory status |
| 3.3 Call waiting | 6.3 Games | |
| 3.4 Network selection | 6.4 Sounds | |
| 3.5 Caller ID | 6.5 Images | |
| 3.6 Closed user group | 6.6 Delete all | |
| 4. Sound settings | 6.7 Memory status | |
| 4.1 Ring tone | 9. Phone settings | |
| 4.2 Ring volume | 9.1 Display settings | |
| 4.3 Alert type | 9.2 Greeting message | |
| 4.4 Keypad tone | 9.3 Own number | |
| 4.5 Keypad volume | 9.4 Language | |
| 4.6 Message tone | 9.5 Security | |
| 4.7 Alert on call | 9.6 Extra settings | |
| | 9.7 Short cut | |
| | 9.8 Connection settings | |
| | 9.9 Reset settings | |
| | * Show only if supported by your SIM card. | |
| 7. Organiser | 7.5 To do list | |
| 7.1 Alarm | | |
| 7.2 Calendar | | |
| 7.3 Time & Date | | |
| 7.4 Calculator | | |
| 7.5 To do list | | |

Stroke mode

- Press the keys that corresponds to a character's component strokes.
Example: To enter "力", press **5** for → and **3** for ↘.
- If you cannot find the character you want, press **Up** or **Down** to scroll through the word choices.
- Press the number key corresponding to the character.
Otherwise, press **Left** or **Right** to scroll to a character and press **OK**.

Quick English mode

- Press keys **2** to **9** to start entering a word. Press each key only once for one letter.
The word you are entering appears on the display. It may change with each keypress. Finish entering the word before editing or deleting any keystrokes.
Example: To enter "Hello" in Quick English mode, press **4**, **3**, **5**, **5**, and **6**.
- Press **0** to insert a space and enter the next word.
Otherwise, press **Up** or **Down** to display alternative word choices.

| Menu | Description |
|--|--|
| Menu > Sound settings > Ring tone or Ring volume | Select a ringtone for incoming calls or a volume level. |
| Menu > Sound settings > Alert type | Select an alert type for the call ringer. |
| Menu > Sound settings > Keypad tone or Keypad volume | Select a tone which the phone sounds or a volume level when you press a key. |
| Menu > Sound settings > Message tone | Select the alert ringtone for incoming SMS, MMS, and broadcast messages, or set how often you are informed of a new message. |
| Menu > Sound settings > Alert on call | Set the phone to alert you when you receive a new message or when the time for an alarm comes during a call. |
| Menu > Sound settings > Folder tone | Select the tone that the phone sounds when you open or close the phone. |
| Menu > Sound settings > Power on/off | Set the phone to sound when it is switched on or off. |
| Menu > Sound settings > Extra tones | Set additional tones for the phone. |
| Menu > Messages > Text messages or Multimedia messages > Inbox, Outbox, or Draft | Read received, sent, or saved messages. |

| Menu | Description |
|---|--|
| Phonebook > Delete all | Delete all contacts stored in the phone's memory, on the SIM card, or both. |
| Phonebook > Memory status | View the total number of contacts in the phone's memory or on the SIM card. |
| Menu > Phone settings > Display settings | Change settings for the display and backlight. |
| Menu > Phone settings > Greeting message | Enter the greeting message to be displayed when the phone is switched on. |
| Menu > Phone settings > Own number | Check your phone numbers or assign a name to them. |
| Menu > Phone settings > Language | Select a language to be used for the display text. |
| Menu > Phone settings > Security | Protect the phone against unauthorised use. |
| Menu > Phone settings > Security > Mobile tracker | Track your phone when it is stolen or lost. When someone tries to use your phone with other SIM card, the phone will automatically send the preset tracking message to your family or friends. This feature may be unavailable due to certain features supported by your service provider. |
| Menu > Phone settings > Extra settings | Set the automatic redialling feature or the answering method. |
| Menu > Phone settings > Short cut | Set the Navigation keys as shortcuts to access your favourite menus directly. |

English mode

Press the keys labelled with the letter you want once for the first letter, twice for the second letter, and so on.
For example, press **2** three times to enter "C" and **5** two times to enter "K."

Number mode

Press the keys corresponding to the digits you want.

Symbol mode

Press the number keys corresponding to the symbol you want and press the **OK** soft key. You can press **Up** or **Down** to display more symbols.

My Words mode

You can set up a list of phrases you use frequently in order to quickly enter characters.

- Select **Add Word**.
- Enter the phrase you want and press the **OK** soft key.
- Enter the name for the phrase in English mode and press the **OK** soft key.
- To insert an added phrase, select it from the My Words list.

Tips for entering text

- To move the cursor, press **Left** or **Right**.
- To delete characters one by one, press **C**. To delete all of the characters, press and hold **C**.
- To insert a space between characters, press **0**.
- To change case in Quick English mode or English mode, press *****.
- To enter punctuation marks in Quick English mode or English mode, press **1**.

Sending an SMS message

- In Idle mode, press the **Menu** soft key.
- Select **Messages** → **Text messages** → **Write new**.
- Enter the message text.
- Press the **Options** soft key and add items using the following options:
 - Add objects**: add sounds, images, or animated images.
 - Add templates**: add text templates.
 - Add emoticon**: add emoticons.
 - Add phonebook**: add phonebook contacts.
 - Add bookmark**: add bookmark items.

- Press the **Options** soft key and select **Send only** or **Save and send**.
- If you select **Save and send**, select a memory location.
- Enter destination numbers.
- Press **OK** to send the message.

Quick feature reference

This section provides brief explanations of features on your phone.

| Menu | Description |
|--|---|
| Menu > SIM AT | Use a variety of additional services offered by your service provider. |
| Menu > Call records > Missed calls, Received calls, or Dialled calls | View the most recent calls you have dialled, received, or missed. |
| Menu > Call records > Delete all | Delete the call logs in each call type or all logs at once. |
| Menu > Call records > Call time | View the duration of recent calls you have dialled and received. Also reset the time counter. |
| Menu > Call records > Call cost | View the cost of your calls. |
| Menu > Network services | Access network services offered by your service provider. |

| Menu | Description |
|--------------------------------------|--|
| Menu > Organiser > Calendar | Keep track of daily or monthly schedule. |
| Menu > Organiser > Time & Date | Set the current time and date manually and set your local time zone. |
| Menu > Organiser > Calculator | Perform basic arithmetic functions. |
| Menu > Organiser > To do list | Create a list of tasks and assign a deadline to each task. |
| Menu > Organiser > Voice memo | Record voice memos and listen to them. |
| Menu > Organiser > Currency exchange | Do currency conversions. |
| Phonebook > Search | Search for contacts in Phonebook. |
| Phonebook > New entry | Add a new contact to Phonebook. |
| Phonebook > Group search | Search for contacts in caller groups. |
| Phonebook > Edit group | Select a ringtone and image for incoming calls and messages from members of a group. Also change the group name. |
| Phonebook > Speed dial | Assign speed dial numbers for your most frequently dialled numbers. |
| Phonebook > Copy all | Copy all contacts stored in the phone memory to the SIM card, or vice versa. |

| Menu | Description |
|---|---|
| Menu > Phone settings > Connection settings | Create and customise the profiles containing the settings for connecting your phone to the network. |
| Menu > Phone settings > Reset settings | Reset the phone to the factory default settings. |

Important safety precautions

Read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal.

Drive safely at all times

Do not use a hand-held phone while driving; park your vehicle first.

Switching off when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switching off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switching off near all medical equipment

Hospitals and health care facilities may be using equipment that could be sensitive to external RF energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Special regulations

Follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it.

Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to your ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency calls

Key in the emergency number for your present location, then press **OK**. Do not end the call until given permission to do so.

Small children and your phone

Keep the phone and all its parts including accessories out of reach of small children.

Accessories and batteries

Use only Samsung-approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorised accessories could damage your phone and may be dangerous.

Caution Risk of explosion if a battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.



At very high volume, prolonged listening to a headset can damage your hearing.

Qualified service

Only qualified service personnel may repair your phone.

Use of authorised software

Use only Samsung-authorised software. The use of any unauthorised software could damage your phone.

SAR information

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the European Union (EU) Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards that were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit set by the EU Council is 2.0W/kg.