




Slim with clarity of sound

Mono Headset

HM3100

  **Bluetooth®**

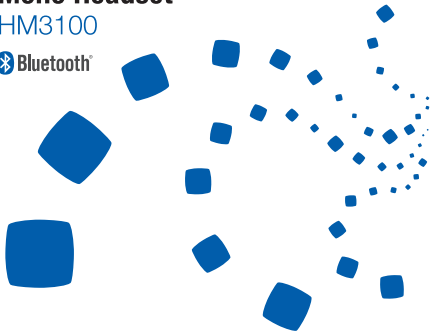

繁體中文	1
English.....	25

目錄

開始使用

耳機概述	3
按鈕功能	4
耳機充電	5
佩戴耳機	9

使用耳機

開關耳機	10
配對及連接耳機	11
透過使用中配對功能進行配對	14
使用通話功能	15

附錄

常見問題	20
保用及更換零件	22
規格	23

開始使用全新的藍牙耳機之前，請先閱讀本使用手冊。

Bluetooth® 為 Bluetooth SIG, Inc. 的註冊商標 –

Bluetooth QD ID：B16563

有關藍牙的更多資訊，請瀏覽 www.bluetooth.com。



安全注意事項

- 切勿因任何原因拆開或改裝耳機。否則，可能導致耳機故障或著火。請將耳機送到認可的維修中心維修。
- 若在駕車時使用耳機，請遵守所在地區的法例。
- 避免將耳機存放於高溫環境 (50 °C/122 °F 以上)，例如高溫車輛內或陽光直接照射的地方，因為這樣會破壞性能並且減少電池的使用壽命。
- 切勿讓耳機或任何零件接觸雨水或其他液體。

 


長時間聆聽過大音量，可導致聽覺受損。將耳機配對後，請先降低音量，並只使用所需的最低音量設定，聆聽手機通話。

開始使用

本節說明正確使用藍牙耳機時的注意事項。

耳機概述

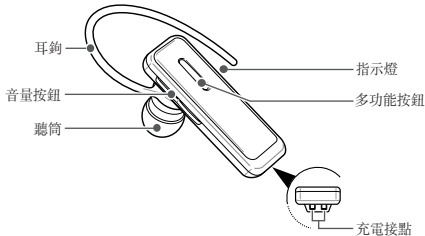

- 請確定耳機是否隨附下列配件：旅行充電器、充電架、橡皮耳墊、耳鉤以及使用者手冊。
- 耳機隨附的物品可能視地區而有所不同，也可能與此手冊中顯示的圖片不同。

按鈕功能

多功能按鈕

- 按住可開啓或關閉耳機。
- 按住可進入配對模式。
- 按下可撥出或接聽電話。
- 按下可結束通話。

增加或降低音量按鈕

- 按下可調校音量。
- 按住可開啓或關閉話筒。
- 在配對模式中，按住增加音量按鈕可啓用多點功能。
- 在配對模式中，按住降低音量按鈕可停用多點功能。

 


如果耳機的音量達到最低或最高水平，您會聽到警報聲。

耳機充電


本耳機內置不可拆除的充電式電池。首次使用耳機前，必須將電池充滿。

- 1 將耳機插入充電架。



- 2 打開充電架後面的充電插孔蓋子。

 - 3** 將旅行充電器較小的一端插入充電插孔。

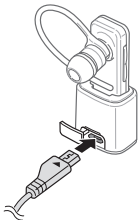

- 4** 將旅行充電器較大的一端插入電源插座。
充電期間，指示燈會變成紅色。若充電尚未開始，請將旅行充電器的插頭拔掉並再次插上。

- 5 耳機充滿電後，指示燈會變為藍色。請將旅行充電器的插頭從電源插座拔掉並將耳機從充電架取下。



- 請只使用 **Samsung** 認可的旅行充電器。未經授權的旅行充電器，可能會導致爆炸或使耳機受損。
- 電池是消耗部件，因此會因充電或放電而逐漸耗損。
- 充電時，耳機會進入充電模式並停用其他功能。

當電池電量不足時

耳機會嗶嗶作響，並且指示燈會發出紅色閃光。請將電池重新充電。若在通話過程中耳機電源關閉，通話將會自動切換至手機。


檢查電池電量

請同時按住多功能按鈕與降低音量按鈕。視乎電池電量而定，指示燈會以下列其中一種色彩閃爍 5 次：

電池電量	指示燈色彩
高於 80%	藍色
80~20%	紫色
低於 20%	紅色

佩戴耳機

 將耳機佩戴在耳朵上。視乎耳機佩戴於哪一邊耳朵，簡單地調整相應的耳鉤。

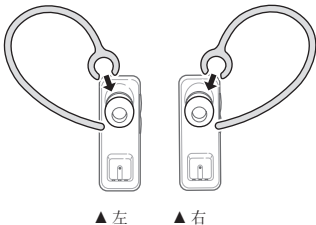

使用耳機

本節說明如何開啓耳機電源及配對和連接至手機，以及各種功能的使用。



- 可用的功能和特性可能會視乎手機的類型而有所不同。
- 某些裝置，特別是未經 Bluetooth SIG 測試或認可的裝置，可能與您的耳機不兼容。

開關耳機

- 若要開啓耳機電源，按住多功能按鈕 **4 秒**。藍色指示燈會閃爍 **4 次**。
- 若要關閉耳機電源，按住多功能按鈕 **4 秒**。藍色指示燈變為紅色時，指示燈便會關閉。

配對及連接耳機

配對過程將會為兩個可使用藍牙的裝置 (例如藍牙手機和藍牙耳機) 之間，建立獨一無二的加密無線連接。

若要將耳機搭配其他藍牙裝置使用，必須先讓兩個裝置進行配對。嘗試配對耳機和手機時，應將耳機與手機適當地靠近。配對完成後，您就可以連接這兩個裝置。

將耳機與手機配對及連接

- 1 進入配對模式。
 - 關閉耳機電源。按住多功能按鈕 8 秒，直到藍色指示燈恒亮。
 - 第一次啟動耳機時，耳機會立即進入配對模式。
- 2 啓用手機的藍牙功能，並搜尋耳機 (請參閱手機使用者手冊)。
- 3 從手機找到的裝置清單中選擇耳機 (HM3100)。

4 輸入藍牙 PIN 碼 (0000，4 個 0)，將耳機配對並連接至您的手機。



耳機支援簡單配對功能，耳機可以在無需請求 PIN 碼的情況下與手機配對。與藍牙 2.1 版本或更新版本相容的手機，皆可使用此項功能。

也可以透過使用中配對功能來配對耳機，請參閱第 14 頁。

連接兩部藍牙手機

啟用多點功能後，您的耳機便能同時連接兩部藍牙手機。

- 1** 連接第一部藍牙手機後，關閉耳機電源。
按住多功能按鈕 8 秒，直到藍色指示燈恒亮。
- 2** 按住增加音量按鈕以啟用多點功能。
- 3** 在第二部藍牙手機上啟用藍牙功能，並搜尋耳機 (請參閱手機的使用者手冊)。

- 4 從第二部藍牙手機找到的裝置清單中選擇耳機 (HM3100)。
- 5 輸入藍牙 PIN 碼 (0000，4 個 0)，將耳機連接至手機。
- 6 從第一部藍牙手機重新連接耳機。



- 您可以將耳機設定為每次開啓電源時，自動重新連接到最近接通的電話。
 - 若要重新連接到最近接通的兩部電話，請啓用多點功能。在配對模式中，按住增加音量按鈕，直到藍色指示燈閃爍兩次。
 - 若只要重新連接到最近接通的一部電話，請停用多點功能。在配對模式中，按住降低音量按鈕，直到紅色指示燈閃爍兩次。
- 如果耳機同時與兩部藍牙手機連接，某些手機可能無法作為第二部藍牙手機與耳機連接。

斷開耳機連接

若要從手機斷開耳機連接：

- 關上耳機。
- 使用手機上的藍牙功能表。

重新連接耳機

當耳機與手機配對後，每次開啓耳機時，耳機即會自動嘗試重新連接。

若耳機並未自動嘗試重新連接：

- 按下多功能按鈕。
- 使用手機上的藍牙功能表。

透過使用中配對功能進行配對

透過使用中配對功能，耳機可自動搜尋藍牙手機並嘗試與之連接。

- 1 關閉耳機電源。按住多功能按鈕 8 秒以進入配對模式。
- 2 按住多功能按鈕，直到紫色指示燈亮起。
耳機會切換為使用中配對模式、搜尋範圍內的藍牙手機，並嘗試與之配對。



- 請確定您要連接的手機是在耳機的連接範圍內。請將耳機和手機靠近，以避免與其他裝置配對。
- 耳機會嘗試進行使用中配對，所需時間為 20 秒或以下。
- 您要連接的藍牙手機不得與其他裝置配對。如果手機已經連接另一個裝置，請結束連接並重新啟動使用中配對功能。
- 此功能可供行動電話使用，但電話的藍牙可見度選項必須設定為開啓。
- 視乎某些 PDA 而定，此功能可能無法使用。

使用通話功能

撥出電話

重撥上次號碼

按住多功能按鈕，以重撥最近連接之手機的最後一個號碼。

按下多功能按鈕兩次，以重撥其他手機的最後一個號碼，請參閱第 12 頁。



視手機而定，按下多功能按鈕可能會顯示通話記錄，而不是重撥號碼。

話音撥號

按下多功能按鈕並說出姓名。可以撥打第一個手機的號碼。



可用的通話功能可能會視乎手機而有所不同。

接聽電話

當聽到來電鈴聲時，按下多功能按鈕即可接聽電話。

當兩部接通之電話同時來電時，您可以接聽第一部電話的來電。

結束通話

按下多功能按鈕即可結束通話。

拒絕來電

有來電時，按住多功能按鈕可拒接來電。

當兩部接通之電話同時來電時，您可以拒絕接聽第一部電話的來電。



此功能僅適用於免提聽筒模式。如需更多資訊，請參閱手機使用者手冊。

通話時使用選項

通話時，您可以使用以下功能控制通話。

調整音量

按下增加或降低音量按鈕可調校音量。

麥克風靜音

按住增加或降低音量按鈕可關閉麥克風，使對方聽不到您的聲音。麥克風關閉時，耳機會定時發出嗶聲。再次按住增加或降低音量按鈕可重新開啓麥克風。

將通話從手機轉接至耳機

按下多功能按鈕可將通話從手機切換至耳機。

保留通話

按住多功能按鈕可保留目前的通話。



- 耳機連接兩部電話時，此功能無法使用。
- 此功能僅適用於免提聽筒模式。如需更多資訊，請參閱手機使用者手冊。

接聽第二通來電

- 聽到來電待接提示音時，按下多功能按鈕可結束第一個來電，並接聽相同手機的第二個來電。
- 聽到來電待接提示音時，按住多功能按鈕可保留第一個來電，並接聽相同手機的第二個來電。
- 若要在目前的通話與保留的來電之間切換，請按住多功能按鈕。



- 手機與兩部藍牙手機連接時，您無法接聽同一部手機的第二通來電。
- 此功能僅適用於免提聽筒模式。如需更多資訊，請參閱手機使用者手冊。

接聽第二個手機的新來電

- 聽到來電待接提示音時，按下多功能按鈕可結束第一個來電，並接聽其他手機的第二個來電。
- 聽到來電待接提示音時，按住多功能按鈕可保留第一個來電，並接聽其他手機的第二個來電。
- 若要在目前的通話與保留的來電之間切換，請按住多功能按鈕。



此功能僅適用於免提聽筒模式。如需更多資訊，請參閱手機使用者手冊。

常見問題

我的耳機可以配合手提電腦、個人電腦和 PDA 使用嗎？	支援耳機藍牙版本及操作模式的裝置，均可使用本耳機。有關規格詳情，請參閱第 23 頁。
使用耳機時，通話是否會受到干擾？	有些裝置，例如無線電話或無線網路設備等，可能會干擾您的通話，通常是靜電干擾。要減少干擾，耳機必須遠離其他使用或產生無線電波的裝置。
耳機是否會干擾汽車的電子裝置、收音機或電腦？	耳機產生的能量遠低於一般的手機。而且它僅發出符合國際藍牙標準的訊號。因此，您不必擔心它會對標準用戶級的電子設備造成干擾。

其他藍牙手機用戶是否可以聽到我的通話？	耳機與藍牙手機配對時，您只會在這兩部藍牙裝置之間建立保密連結。耳機採用的無線藍牙技術不易被第三方監聽，因為藍牙無線訊號的射頻能量遠低於一般手機。
通話中時，為何我聽到回音？	請調整耳機音量，或移至其他區域再試一次。
我該如何清理耳機？	用乾軟布擦拭。
耳機未充滿電。	耳機與充電架可能並未連接妥當。 將耳機從充電架拔出，然後重新連接，為耳機充電。

保用及更換零件

Samsung 保證自購買日期起一年內，本產品的材料、設計和工藝沒有缺陷 (視乎所在的國家或地區，保用期可能有所不同)。^{*}

在保用期內，若證明本產品在正常使用和服務的情況下存在缺陷，您應將本產品退回您原本購買本產品的零售商或合格維修中心。**Samsung** 及其指定維修公司的責任僅限於保用範圍內的維修費用及/或產品更換。

- 保用僅適用於原購買者。
- 為享有適當的保養服務，您必須提供收據或其他購買證明。
- 若產品序號、日期碼標籤或產品標籤遭移除，或產品曾遭未經授權的第三者不當時用、不當安裝、改裝或維修，保用即告無效。
- 電池和其他配件等有使用期限的可消耗部件，皆不在保用範圍內。
- **Samsung** 對運輸過程中造成的任何損失或損壞概不負責。若未經授權的第三者對 **Samsung** 產品進行任何維修工作，保用即告無效。

^{*} 視乎所在的地區，保用期可能有所不同。

規格

項目	規格和描述
藍牙版本	2.1+EDR
支援操作模式	耳機操作模式、免提操作模式
操作範圍	可達 33 英尺 (10 米)
待機時間	可達 180 小時*
通話時間	可達 4.5 小時*
充電時間	約 2 小時*

* 視乎手機的類型和使用情況，實際時間可能有所不同。

Contents

Getting started

Your headset overview	27
Button functions	28
Charging the headset	29
Wearing the headset	33

Using your headset

Turning the headset on or off	34
Pairing and connecting the headset	35
Pairing via the Active pairing feature	38
Using call functions	39

Appendix

Frequently asked questions	44
Warranty and parts replacement	46
Specifications	47

Read this user manual before you start to use your new Bluetooth headset.

Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide — Bluetooth QD ID: B16563



More information about Bluetooth is available at www.bluetooth.com.



Safety precautions

- Never disassemble or modify your headset for any reason. Doing this may cause the headset to malfunction or become combustible. Bring the headset to an authorised service centre to repair it.
- When using your headset while driving, follow local regulations in the region you are in.
- Avoid storage at high temperatures (above 50 °C /122 °F), such as in a hot vehicle or in direct sunlight, as this can damage performance and reduce battery life.
- Do not expose the headset or any of its supplied parts to rain or other liquids.

 


Excessive exposure to sound at high volumes can cause hearing damage. Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.

Getting started

This section explains what to remember for the proper use of your Bluetooth headset.

Your headset overview

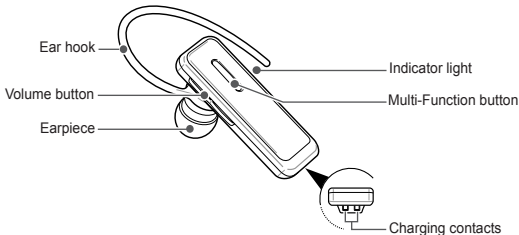

- Make sure you have the following items with your headset: travel adapter, charging cradle, ear rubbers, earhook and user manual.
- The items supplied with your headset may vary depending on your region and may appear different from the illustrations in this manual.

Button functions

Multi-Function button

- Press and hold to turn the headset on or off.
- Press and hold to enter Pairing mode.
- Press to make or answer a call.
- Press to end a call.

Volume up or down button

- Press to adjust the volume.
- Press and hold to turn the microphone on or off.
- In Pairing mode, press and hold the Volume up button to turn the Multi-point feature on.
- In Pairing mode, press and hold the Volume down button to turn the Multi-point feature off.

 


You can hear a beep when the volume level of the headset reaches to the lowest or highest level.

Charging the headset


This headset has a rechargeable internal battery which is non-removable. Ensure that you fully charge the battery before using the headset for the first time.

- 1 Plug the headset into the charging cradle.



- 2 Open the cover to the charger jack on the back of the charging cradle.

 - 3** Plug the small end of the travel adapter into the charger jack.

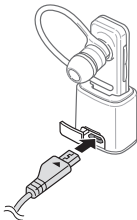

- 4** Plug the large end of the travel adapter into a power outlet.
During charging, the indicator light will turn red. If charging does not begin, unplug the travel adapter and plug it in again.

- 5** When the headset is fully charged, the indicator light changes to blue. Unplug the travel adapter from the power outlet and remove the headset from the charging cradle.



- Use only a Samsung-approved travel adapter. Unauthorised travel adapters may cause an explosion or damage to the headset.
- The battery will gradually wear out while charging or discharging because it is a consumable part.
- While charging, the headset goes into charging mode and deactivates other functions.

When the battery charge gets low

The headset beeps and the indicator light flashes red. Recharge the battery. If the headset powers off during a call, the call will be automatically transferred to the phone.


Checking the battery level

At the same time, press and hold the Multi-Function button and the Volume down button. Depending on the battery level, the indicator light flashes 5 times in one of the following colours:

Battery level	Indicator light colour
Above 80%	Blue
80 ~20%	Violet
Below 20%	Red

Wearing the headset

 Place the headset on your ear. Depending on what ear you are going to wear the headset, simply adjust the ear hook accordingly.

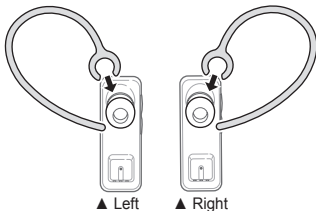

Using your headset

This section explains how to turn the headset on, pair and connect to the phone, and use various functions.



- Activated functions and features may differ depending on the phone type.
- Some devices, especially those that are not tested or approved by Bluetooth SIG, may be incompatible with your headset.

Turning the headset on or off

- To turn the headset on, press and hold the Multi-Function button for 4 seconds. The blue indicator light will flash 4 times.
- To turn the headset off, press and hold the Multi-Function button for 4 seconds. The indicator light turns off after the blue indicator light changes to red.

Pairing and connecting the headset

Pairing will create a unique and encrypted wireless link between two Bluetooth enabled devices, such as a Bluetooth phone and a Bluetooth headset.

To use the headset with other Bluetooth devices, the devices must be paired. When trying to pair the two devices, keep the headset and the phone reasonably close together. After pairing, you can connect the two devices.

Pairing and connecting the headset with a phone

- 1 Enter Pairing mode.
 - Power off the headset. Press and hold the Multi-Function button for 8 seconds until the blue indicator light stays lit.
 - If you turn on the headset for the first time, it proceeds into Pairing mode immediately.
- 2 Activate the Bluetooth feature on your phone and search for the headset (see your phone's user manual).
- 3 Select the headset (HM3100) from the list of devices found by your phone.

- 4 Enter the Bluetooth PIN (0000, 4 zeros) to pair and connect the headset to your phone.



Your headset supports the Simple Pairing feature which allows the headset to be paired with a phone without requesting a PIN. This feature is available for phones that are compliant with Bluetooth version 2.1 or higher.

The headset also can be paired via the Active pairing feature, see page 38.

Connecting with two Bluetooth phones

With the Multi-point feature activated, your headset can be connected with two Bluetooth phones at the same time.

- 1 After connecting with the first Bluetooth phone, power off the headset. Press and hold the Multi-Function button for 8 seconds until the blue indicator light stays lit.
- 2 Press and hold the Volume up button to activate the Multi-point feature.
- 3 Activate the Bluetooth feature on the second Bluetooth phone and search for the headset (see your phone's user manual).

- 4 Select the headset (HM3100) from the list of devices found by the second Bluetooth phone.
- 5 Enter the Bluetooth PIN (0000, 4 zeros) to connect the headset to the phone.
- 6 Reconnect to the headset from the first Bluetooth phone.



- You can set the headset automatically to reconnect to the recently connected phones each time you turn it on.
 - To reconnect to the two most recently connected phones, activate the Multi-point feature. Press and hold the Volume up button in Pairing mode until the blue indicator light flashes twice.
 - To reconnect to only the most recently connected phone, deactivate the Multi-point feature. Press and hold the Volume down button in Pairing mode until the red indicator light flashes twice.
- When the headset connects to two Bluetooth phones, some phones may not connect to the headset as the second Bluetooth phone.

Disconnecting the headset

To disconnect the headset from your phone,

- Turn off the headset.
- Use the Bluetooth menu on your phone.

Reconnecting the headset

When the headset is paired with a phone, it will attempt to automatically reconnect each time you turn it on.

If the headset does not automatically attempt to reconnect,

- Press the Multi-Function button.
- Use the Bluetooth menu on your phone.

Pairing via the Active pairing feature

With the Active pairing feature, your headset can automatically search for a Bluetooth phone and try to make a connection with it.

- 1 Power off the headset. Press and hold the Multi-Function button for 8 seconds to enter Pairing mode.
- 2 Press and hold the Multi-Function button until the violet indicator light turns on. The headset will switch to Active Pairing mode, search a Bluetooth phone within range, and attempt to pair with it.



- Ensure the phone you wish to connect to is within range of the headset. Place the headset and phone close to each other to avoid pairing with other devices.
- The headset will attempt Active pairing for up to 20 seconds.
- The Bluetooth phone you want to connect with must not be paired with other devices. If the phone is already connected to another device, end the connection and restart the Active pairing feature.
- This feature is available for mobile phones, but the phone's Bluetooth visibility option must be set to on.
- This feature may be unavailable depending on the some PDAs.

Using call functions

Making a call

Redialling the last number

Press and hold the Multi-Function button to redial the last number of the most recently connected phone.

Press the Multi-Function button twice to redial the last number of the other phone, see page 36.



Depending on the phone, pressing the Multi-Function button will display call history instead of redialling.

Dialling a number by voice

Press the Multi-Function button and say a name. You can dial a number of the first phone.



Available call functions may vary by the phone.

Answering a call

Press the Multi-Function button to answer a call when you hear incoming call tones.

When two calls from the two connected phones come in, you can answer the call of the first phone.

Ending a call

Press the Multi-Function button to end a call.

Rejecting a call

Press and hold the Multi-Function button to reject a call when a call comes in.

When two calls from the two connected phones come in, you can reject the call of the first phone.



This function is available only on the Hands-Free profile. For more information, see your phone's user manual.

Using options during a call

You can use the following functions to control your call during a call.

Adjusting the volume

Press the Volume up or down button to adjust the volume.

Muting the microphone

Press and hold the Volume up or down button to turn the microphone off so that the person with whom you are speaking cannot hear you. When the microphone is turned off, the headset beeps at regular intervals. Press and hold the Volume up or down button again to turn the microphone back on.

Transferring a call from the phone to the headset

Press the Multi-Function button to transfer a call from the phone to the headset.

Placing a call on hold

Press and hold the Multi-Function button to place the current call on hold.



- When the headset is connected with two phones, this function is not available.
- This function is available only on the Hands-Free profile. For more information, see your phone's user manual.

Answering a second call

- Press the Multi-Function button to end the first call and answer a second call of the same phone when you hear call waiting tones.
- Press and hold the Multi-Function button to place the first call on hold and answer a second call of the same phone when you hear call waiting tones.
- To switch between the current call and the held call, press and hold the Multi-Function button.



- When the headset is connected with two Bluetooth phones, you cannot answer a second call of the same phone.
- This function is available only on the Hands-Free profile. For more information, see your phone's user manual.

Answering a new call of the second phone

- Press the Multi-Function button to end the first call and answer a second call of the other phone when you hear call waiting tones.
- Press and hold the Multi-Function button to place the first call on hold and answer a second call of the other phone when you hear call waiting tones.
- To switch between the current call and the held call, press and hold the Multi-Function button.



This function is available only on the Hands-Free profile. For more information, see your phone's user manual.

Appendix

Frequently asked questions

Will my headset work with laptops, PCs, and PDAs?	Your headset will work with devices that support your headset's Bluetooth version and profiles. For specifications, see page 47.
Why do I hear static or interference while on a call?	Appliances such as cordless phones and wireless networking equipment may cause interference, which usually sounds like static. To reduce any interference, keep the headset away from other devices that use or produce radio waves.
Will my headset interfere with my car's electronics, radio, or computer?	Your headset produces significantly less power than a typical mobile phone. It also only emits signals that are in compliance with the international Bluetooth standard. Therefore, you should not expect any interference with standard consumer-grade electronics equipment.

Can other Bluetooth phone users hear my conversation?	When you pair your headset to your Bluetooth phone, you are creating a private link between only these two Bluetooth devices. The wireless Bluetooth technology used in your headset is not easily monitored by third parties because Bluetooth wireless signals are significantly lower in radio frequency power than those produced by a typical mobile phone.
Why do I hear an echo while on a call?	Adjust the headset volume, or move to another area and try again.
How do I clean my headset?	Wipe it with a soft dry cloth.
The headset does not fully charge.	The headset and the travel adapter may not have been connected properly. Separate the headset from the travel adapter, reconnect, and charge the headset.

Warranty and parts replacement

Samsung warrants this product as free of defects in material, design and workmanship for the period of one year from the original date of purchase.*

If during the period of warranty this product proves defective under normal use and service you should return the product to the retailer from whom it was originally purchased or qualified service centre. The liability of Samsung and its appointed maintenance company is limited to the cost of repair and/or replacement of the unit under warranty.

- The warranty is limited to the original purchaser.
- A copy of your receipt or other proof of purchase is required for a proper warranty service.
- The warranty is void if the serial number, date code label or product label is removed, or if the product has been subject to physical abuse, improper installation, modification, or repair by unauthorised third parties.
- Specifically exempt from any warranty are limited-life consumable components such as batteries and other accessories.
- Samsung will not assume any responsibility for any loss or damage incurred in shipping. All repair work on Samsung products by unauthorised third parties voids any warranty.

* Depending on your region, the length of warranty may vary.

Specifications

Item	Specifications and description
Bluetooth version	2.1+EDR
Support profile	Headset Profile, Hands-Free Profile
Operating range	Up to 33 feet (10 metres)
Standby time	Up to 180 hours*
Talk time	Up to 4.5 hours*
Charging time	Approximately 2 hours*

* Depending on the phone type and usage, the actual time may vary.



World Wide Web
www.samsungmobile.com

Printed in China
Code No.: GH68-28533L
CHI B. 06/2010. Rev. 1.0