

**SAMSUNG**

**OWNER'S INSTRUCTIONS  
MANUAL DE INSTRUCCIONES  
MANUEL D'UTILISATION  
MANUAL DE INSTRUÇÕES  
ISTRUZIONI PER L'USO**

**AW07LFABA/DA/EA**

**AW09LFABA/DA/EA**

**AW10LFABA**

**AW12LFABA/DA/EA**

ENGLISH

ESPAÑOL

FRANÇAIS

PORTUGUÊS

ITALIANO

 
**Window-type Room Air Conditioner ( Cool )**

**Acondicionador de aire doméstico sistema de tipo ventana ( Refrigeración )**

**Climatiseur de type Fenêtre ( Refroidissement )**

**O ar Condicionado de Window-Type ( Refrigeração )**

**Condizionatore d'aria per ambienti da finestra ( Raffreddamento )**

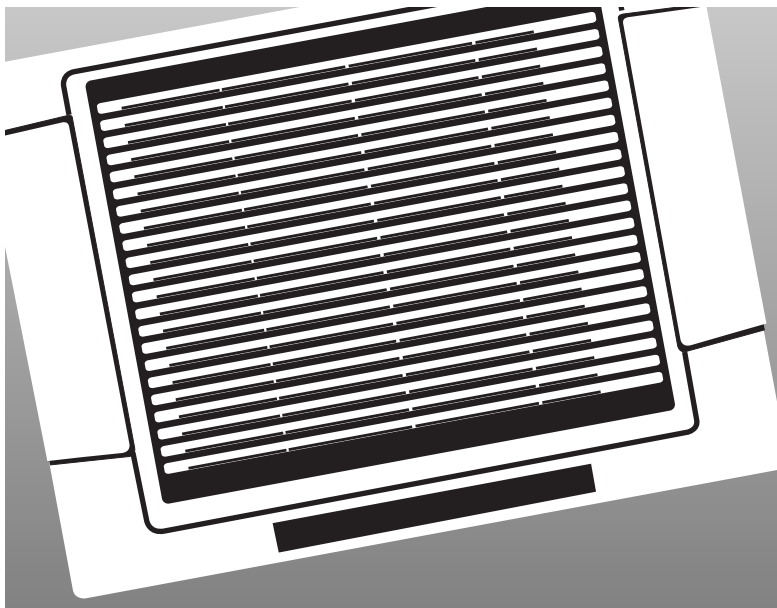

## Safety Precautions

**The following safety precautions must be taken when installing and using your air conditioner.**

---

**1** The air conditioner must be plugged into its own specific power source, which must be installed in compliance with national wiring, earthing and safety regulations.

Depending on national regulations and your specific installation, you may need to install:

- ◆ A circuit breaker

For further information on electrical requirements, contact a professional electrician.

This device must be installed according to the national electrical rules.

---

**2** Make sure that the unit is correctly ventilated at all times; do NOT place clothing or other materials over it.

---

**3** NEVER spill liquids of any kind into the unit. Should this happen, unplug the unit and contact your installation specialist.

---

**4** Do NOT insert anything between the air outlet blades, as it may damage the inner fan and you may be hurt. Keep children away from the unit.

---

**5** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

---

**6** Do NOT attempt to repair the unit yourself. If it is damaged in any way, contact:

- ◆ An authorized service center
- ◆ The dealer from whom you purchased the air conditioner.

---

**7** Do NOT place any blocking objects in front of the unit.

---

**8** If the remote control will not be used for a long time, remove the batteries.

---

**9** Before throwing out the device, it is necessary to pull back the battery cells and get rid of them safely.

---

**10** The appliance is not intended for use by young children or infirm person without supervision; young children should be supervised to ensure that they do not play with the appliance.

---

**11** Do NOT use an extension cord with this product.

---

### CAUTION

**The manufacturer does not assume responsibility for accidents or injury caused by an incorrectly installed air conditioner. If you are unsure about installation, contact an installation specialist.**

# Contents

◆ PREPARING YOUR AIR CONDITIONER	
■ Safety Precautions .....	2
■ Air Conditioning Unit - Main Parts, Buttons and Display .....	4
■ Remote Control Buttons .....	5
■ Getting Started .....	6
■ Inserting the Remote Control Batteries .....	7
◆ OPERATING YOUR AIR CONDITIONER	
■ Cooling Your Room .....	8
■ Airing Your Room .....	9
■ Adjusting the Air Flow Direction Horizontally .....	10
■ Adjusting the Air Flow Direction Vertically .....	11
◆ PROGRAMMING YOUR AIR CONDITIONER	
■ Setting the On Timer .....	12
■ Setting the Off Timer .....	13
■ Setting the Sleep Timer .....	14
■ Selecting Energy Saving mode .....	15
◆ RECOMMENDATIONS FOR USE	
■ Operating Recommendation .....	16
■ Temperature and Humidity Ranges .....	16
■ Cleaning Your Air Conditioner .....	17
■ Solving Common Problems .....	18
■ Technical Specifications .....	19
◆ INSTALLATION .....	19

## **CAUTION**

 
 
 
" The high inrush current of the starting compressor motor can have adverse effects to the operation of other equipment under unfavorable conditions. This equipment does not comply with the relevant technical standards for the limitation of voltage fluctuations and flicker."

Before connecting this equipment to the power supply system, please report to your supply authority and obtain the consent.


Do not connect other electric appliances to the same supply lines.

# Air Conditioning Unit - Main Parts, Buttons and Display

\* The design and shape are subject to change according to the model.

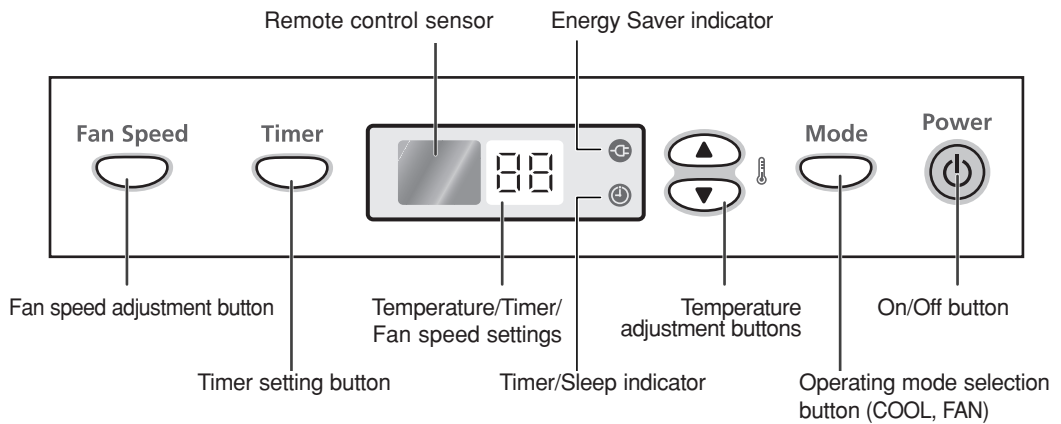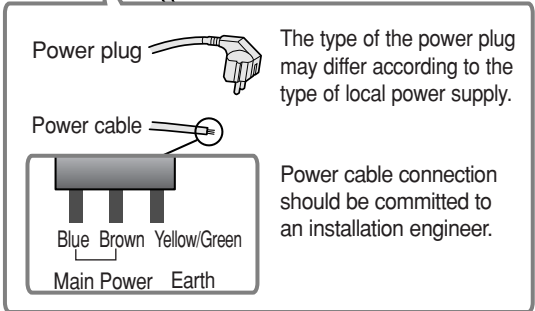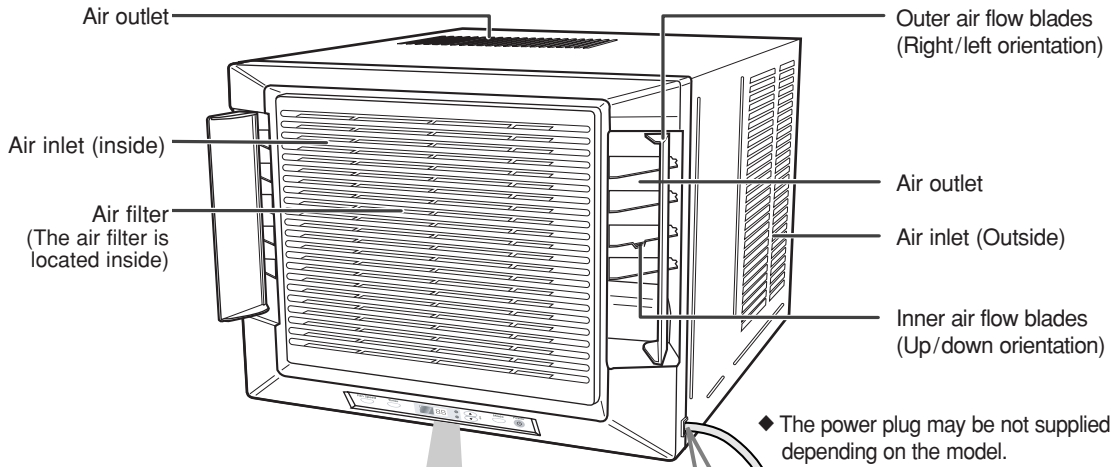

# Remote Control - Buttons

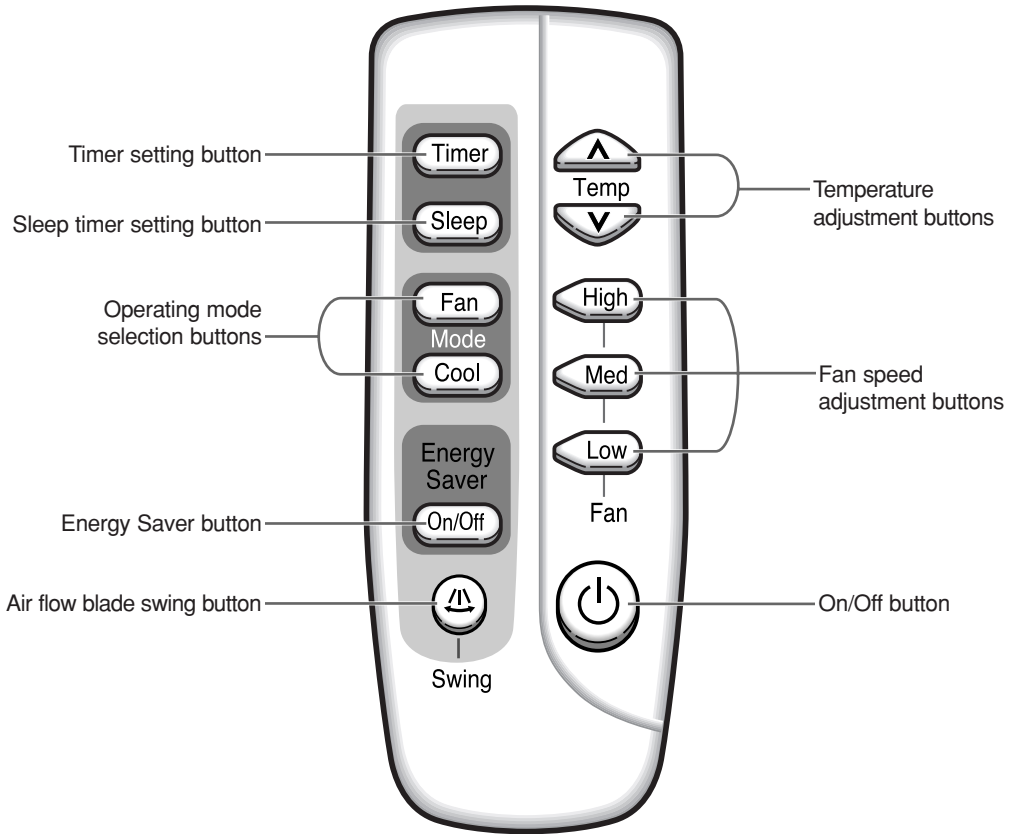 

# Getting Started

*You have just purchased a window-type room air conditioner and it has been installed by your installation specialist.*

*Your Owner's Instructions contain valuable information on using your air conditioner.*

*Please take the time to read them as they will help you take full advantage of the unit's functions.*

*This Owner's Instructions is just for using your air conditioner correctly.*

*Thus, the illustrations shown in this manual may not exactly match your air conditioners.*

*The booklet is organized as follows.*

 
◆ *The following figures are shown on pages 4 and 5:*

- *Air conditioning unit (main parts, buttons and display)*
- *Remote control (buttons)*



*They will help you find the buttons and understand the symbols displayed.*

◆ *In the manual, you will find a series of step-by-step procedures for each function available.*

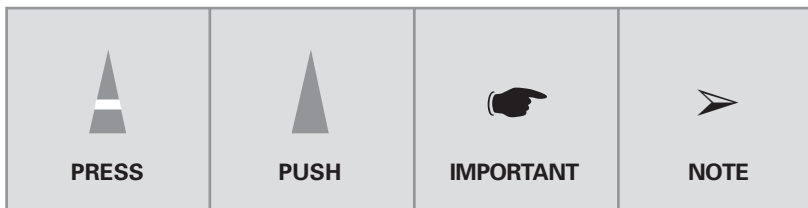*The illustrations in the step-by-step procedures use four different symbols:*



*Moreover, applicable, wherever the illustrations show the positions of the buttons on both the remote control and the unit itself.*

For the...	The illustrations have a...
Remote control	Gray background. Example: 
Unit itself	White background. Example: 

## Inserting the Remote Control Batteries

 
 
**You must insert or replace the remote control batteries when:**

- ◆ **You purchase the air conditioner**
- ◆ **The remote control does not work correctly**



Use two AAA, LR03 1.5 V batteries.  
Do not use old batteries or different kinds of batteries together.

Batteries may be completely discharged after 12 months, even if they have not actually been used.

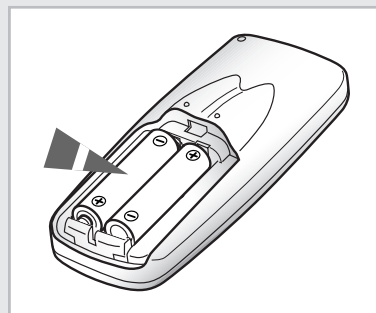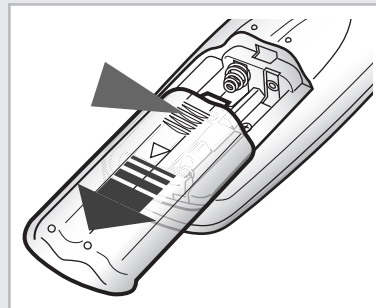

**1** Push the battery cover on the rear of the remote control with your thumb in the direction of the arrow and remove it.





**2** Insert the two batteries, taking care to respect the polarities:  
◆ + on the battery with + on the remote control  
◆ - on the battery with - on the remote control

**3** Close the cover by sliding it back until it clicks into place.

**Result:** You can control all the functions on your air conditioning unit directly from your seat, using the remote control.

# Cooling Your Room

    **You must select the Cool mode if you wish to lower the temperature in your room. You can also set the fan speed. When you operate the air conditioner, air flow blades are open and half closed automatically to give the proper air flow.**

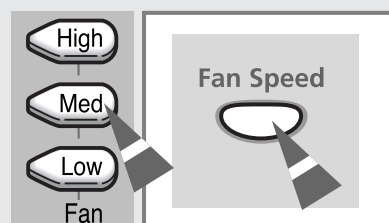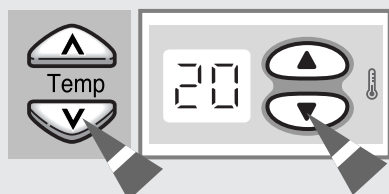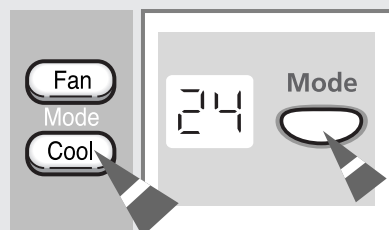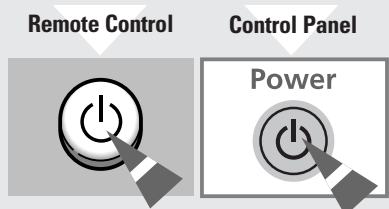

- 1 If necessary, press the (On/Off) button.  
Result:
  - ◆ The air conditioner starts up in the mode selected when the unit was last used.
  - ◆ The unit beeps twice.

The air conditioner is fitted with a protection mechanism to prevent the unit from being damaged when it is started immediately after being:

  - ◆ Plugged in
  - ◆ Stopped

It will start up automatically after about three minutes.

- 2 If the temperature is not displayed on the control panel:
  - ◆ Press the button on the remote control
  - or
  - ◆ Press the button on the unit one or more times until the temperature is displayed.Result:
  - ◆ The unit beeps each time you press the button.
  - ◆ The air conditioner starts up in the Cool mode.

➤ You can change modes at any time.

- 3 To adjust the temperature, press the or button on the remote control one or more times until the required temperature is displayed. To adjust the temperature, press the or button on the unit one or more times until the required temperature is displayed.  
 Possible temperatures are between 18°C and 30°C inclusive.  
Result:
  - ◆ Each time you press the temperature buttons:
    - The temperature is adjusted by 1°C and displayed on the control panel
    - The unit beeps
  - ◆ The air conditioner starts cooling if the room temperature is higher than the selected temperature.

- 4 **To set the fan speed to... Then...**

High	<ul style="list-style-type: none"> <li>◆ Press the  button on the remote control.</li> <li><u>or</u></li> <li>◆ Press the  button on the unit until F3 lights up</li> </ul>
Med	<ul style="list-style-type: none"> <li>◆ Press the  button on the remote control.</li> <li><u>or</u></li> <li>◆ Press the  button on the unit until F2 lights up</li> </ul>
Low	<ul style="list-style-type: none"> <li>◆ Press the  button on the remote control.</li> <li><u>or</u></li> <li>◆ Press the  button on the unit until F1 lights up</li> </ul>


Result: Each time you press a button, the unit beeps.

 
- 5 To control the direction of the air flow, refer to page 10~11.






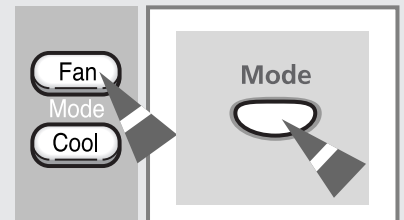 
# Airing Your Room

*If the atmosphere in your room is stale, you can air it using the Fan feature. When you operate the air conditioner, air flow blades are open and half closed automatically to give the proper air flow.*

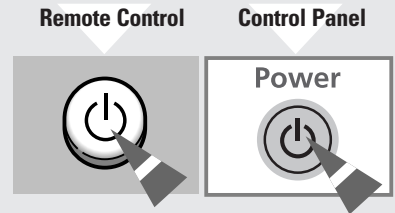





- 1 If necessary, press the  (On/Off) button.
- Result:
- ◆ The air conditioner starts up in the mode selected when the unit was last used.
  - ◆ The unit beeps twice.




- 2 If the Fan speed (F1,F2,F3) is not displayed on the unit:
- ◆ Press the  button on the remote control
  - or
  - ◆ Press the  button on the unit one or more times until the fan speed (F1,F2,F3) is displayed.
- Result:
- ◆ The unit beeps each time you press the  button.
  - ◆ The air conditioner starts up in the Fan mode.



- 
- ◆ You can change modes at any time.
  - ◆ When the air conditioner is in the Fan mode, the temperature is not displayed; in this case, you do not need to set the temperature.

3 To set the fan speed to...	Then...
High	<ul style="list-style-type: none"> <li>◆ Press the  button on the remote control.</li> <li>or</li> <li>◆ Press the  button on the unit until F3 lights up</li> </ul>
Med	<ul style="list-style-type: none"> <li>◆ Press the  button on the remote control.</li> <li>or</li> <li>◆ Press the  button on the unit until F2 lights up</li> </ul>
Low	<ul style="list-style-type: none"> <li>◆ Press the  button on the remote control.</li> <li>or</li> <li>◆ Press the  button on the unit until F1 lights up</li> </ul>

 
Result: Each time you press a button, the unit beeps.

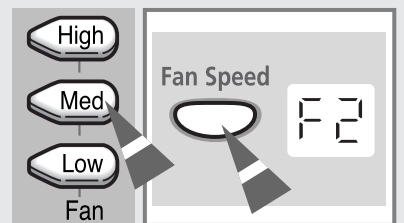

- 4 To control the direction of the air flow, refer to page 10~11.

## Adjusting the Air Flow Direction Horizontally

 
### Remote Control




**Depending on the position of the unit in your room, you can adjust the outer air flow blades into the direction you want.**

- 1 Press the  button on the remote control.

 
**Result:** Air flow blades swing automatically left and right.


- 2 To stop the blades moving left and right, press the  button on the remote control.

➤ To stop the blades in a specific position and orient the air flow in the corresponding direction, simply press the  button on the remote control when the blades are in the desired position.

### CAUTION

**Don't move the blades from the direction you operate with the remote control. If you force it inwards, the cool air doesn't flow into the room, but into the air conditioner. It may cause the malfunction.**

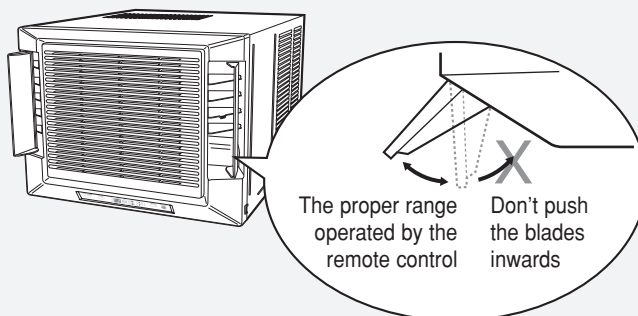

\* When operating a swing button, if you move the blades, both blades operate separately. To return the normal direction of the air flow, press the  (On/Off) button.


## Adjusting the Air Flow Direction Vertically

 *Again depending on the position of the unit in your room, you can adjust the inner airflow blades into the direction you want.*

 
 
<b>RECOMMENDATION</b>	<b>When...</b>	<b>Adjust the blades to face...</b>
	Cooling	Upwards.

Adjust the air flow blades to the desired position by pushing the tab of the inner air flow blades upwards or downwards.


- If you orient the air flow blades downwards and the unit operates in Cool mode for a long period of time, dew may:
  - ◆ Form on the surface of the blades
  - ◆ Drip from the blades

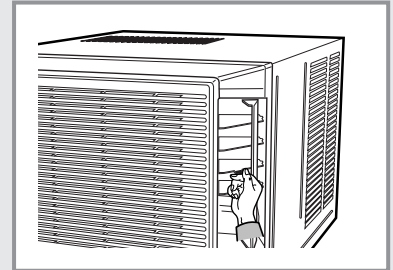

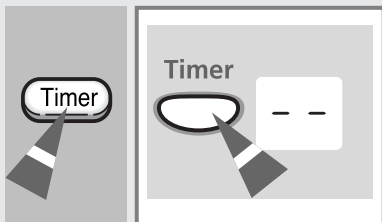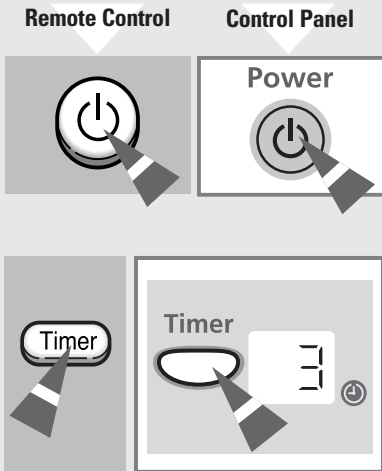

## Setting the On timer



*The On Timer enables you to switch on the air conditioner automatically after a given period time. You can set the period of time from 1 hour to 24 hours. You can select the On timer only when the air conditioner is off.*

- 1 Check that the air conditioner has been switched off; if necessary, press the  (On/Off) button.

- 2 Set the operating time by pressing:
  - ◆ The  button on the remote control.
  - or
  - ◆ The  button on the unit one or more times.


Possible time is between 1 hour and 24 hour inclusive.

- Result:
- ◆ The remaining time is displayed and decreased by 1 hour automatically to indicate the remaining time.
  - ◆ The air conditioner switches on automatically when the operating time reaches zero.

- ◆ You can select the fan speed, direction of airflow and Energy saving mode after setting the On timer and Off timer mode. However, when you change the mode, the On timer and Off timer is canceled.
- ◆ You can set the On timer and Off timer mode only in the Cool mode.

## To Cancel the On Timer

 
To cancel the timer, press:



- ◆ Timer on the remote control or unit one or more times until " -- " is displayed.
- or
- ◆ The  (On/Off) button on the remote control or unit (The air conditioner operates in the mode selected when the unit was last used.)

## Setting the Off Timer

**The Off Timer enables you to switch off the air conditioner automatically after a given period of time. You can set the period of time from 1 hour to 24 hours.**

**You can select the Off timer only when the air conditioner is on.**

- 1 Check that the air conditioner has been switched on; if necessary, press the  (On/Off) button.



- 2 Set the operating time by pressing:
  - ◆ The  button on the remote control
  - or
  - ◆ The  button on the unit one or more times.




Possible times are between 1 hour and 24 hour inclusive.

- Result:**
- ◆ The remaining time is displayed and decreased by 1 hour automatically to indicate the remaining time.
  - ◆ The air conditioner switches off automatically when the operating time reaches zero.
- ◆ You can select the fan speed, direction of airflow and Energy saving mode after setting the On timer and Off timer mode. However, when you change the mode, the On timer and Off timer is canceled.
- ◆ You can set the On timer and Off timer mode only in the Cool mode.


## To Cancel the Off Timer

    To cancel the timer, press:

- ◆ Timer on the remote control or unit one or more times until "  " is displayed.
- or
- ◆ The  (On/Off) button on the remote control or unit to turn the air conditioner off and then turn it on again. (The air conditioner operates in the mode selected when the unit was last used.)

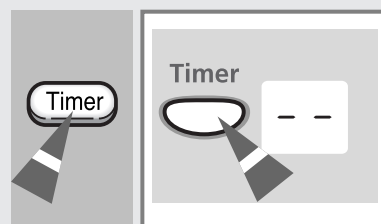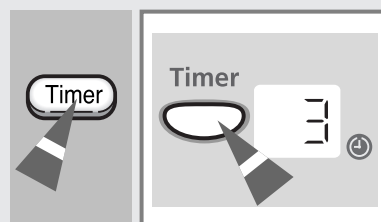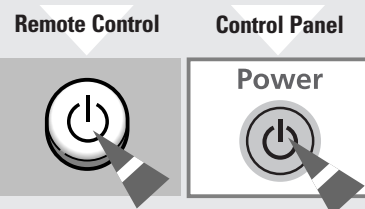

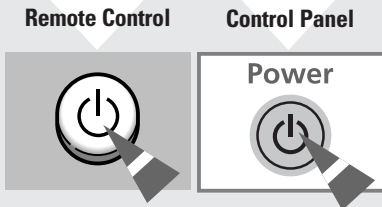

## Setting the Sleep timer

 


**The Sleep Timer can be used when you are cooling your room to switch the air conditioner off automatically after a period of 8 hours.**



➤ If you wish to switch the unit off at a specific time, refer to page 13.

- 1 Make sure that you have selected the COOL mode.
- 2 Press the  button on the remote control

- Result:**
- ◆ Each time you press a button, the unit beeps.
  - ◆ The "SLEEP" passes through the control panel for about 15 seconds and the "  " will be displayed.
  - ◆ The remaining time is displayed and decreased by 1 hour automatically to indicate the remaining time.
  - ◆ The air conditioner will be controlled as illustration below.

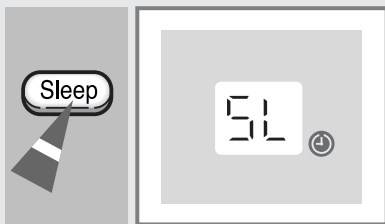

  
**Cooling** When the temperature has been increased by 1°C (after 1 hour), it is maintained for 7 hours.

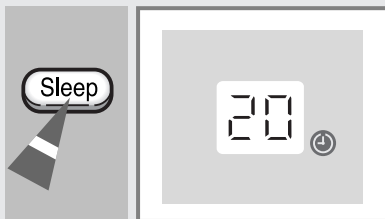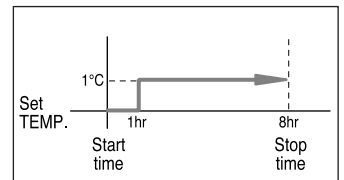

## To Cancel the Sleep Timer

To cancel the timer, press:

- ◆ The  button on the remote control.

- Result:**
- ◆ The unit beeps.
  - ◆ The SLEEP indicator is no longer displayed.
  - ◆ The air conditioner operates in the mode selected last.

➤ If you select the Energy Saving mode in the Sleep Timer mode, the Sleep Timer will be cancelled and the air conditioner will start up in the Energy Saving mode.

## Selecting Energy Saving mode

***If you wish to save energy when using your air conditioner, select the energy saving mode with the energy saving button.***

- 1 To select the energy saving mode, press the energy saver button on the remote control one or more times until the Energy Saving indicator lights up.

**Result:**

- ◆ The fan and compressor cycle on and off together.
- ◆ The fan will continue to run for a short time after the compressor cycles off.

- If you would like the air conditioner to run in Fan mode, do not press the energy saver button. You cannot use the Fan mode in the energy saving mode.

- 2 To stop the energy saving mode, press the energy saver button on the remote control again.

**Result:** The fan runs at all times, while the compressor cycles on and off.

- If you select the Sleep Timer in the Energy Saving mode, the Energy Saving will be cancelled and the air conditioner will start up in the Sleep Timer mode.

Remote Control



Control Panel



## Operating Recommendation

***Here is a recommendation that you should follow when using your air conditioner.***

Topic	Recommendation
Power failure	If a power failure occurs when the air conditioner is operating, the unit is switched off. When the power returns, the air conditioner starts up again automatically.

- \* The fan speed operates in the Med speed automatically to protect the air conditioner, especially in following conditions; the room temperature is going down below 23°C and the air conditioner is operating as the Low speed in the cool mode. If the room temperature is over 24°C, Low speed operates normally.

## Temperature and Humidity Ranges

***The following table indicates the temperature and humidity ranges within which the air conditioner can be used.***

Mode	Indoor Temperature	Outdoor Temperature	Indoor Humidity
Cooling	21°C to 32°C approx.	21°C to 43°C approx.	80% or less

If the air conditioner is used at...	Then...
Higher temperatures	The automatic protection feature may be triggered and the air conditioner stopped.
Lower temperatures	A water leakage or some other malfunction may happen if the heat exchanger freezes.
Higher humidity levels	Water may condense on and drip from the surface of the unit if it is used for long periods.



# Cleaning Your Air Conditioner

**Be sure to clean the air filter periodically to maintain the air conditioner in the best condition for a long period of time.**

 **When cleaning the air conditioner, turn it off and pull out the power plug.**

1 Open the front grille by pulling the tabs on the top of the front panel.

➤ Don't pull the tabs forcibly. It may fall down.

 
 
 
 
2 Pull the tab on the bottom of the air filter.

3 Remove all dust on the air filter with a vacuum cleaner or brush.

4 When you have finished, insert the air filter back into its original position.



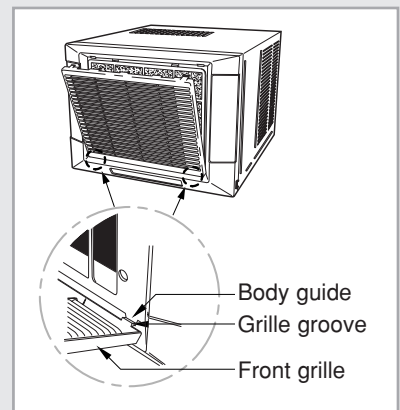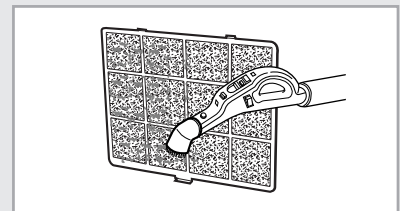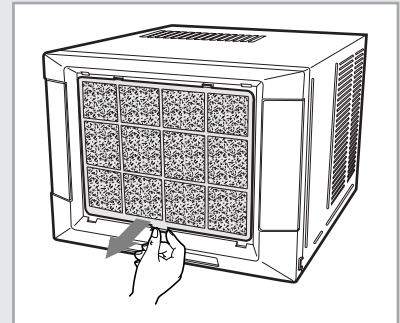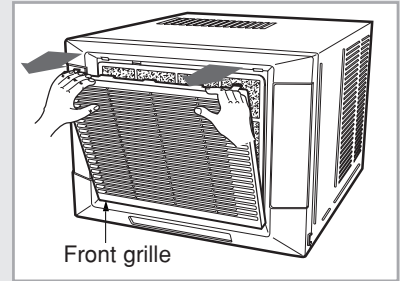

5 Wipe the surface of the unit with a neutral detergent and then wipe it again with dry cloth.  
(Be sure not to use benzene, solvent or other chemical products.)

➤ If you...	Then...
Will not be using the air conditioner for a long period of time	<ul style="list-style-type: none"> <li>◆ Set the fan to "FAN" and let it for a few hours to dry the inside of the air conditioner thoroughly.</li> <li>◆ Switch the air conditioner off and unplug it from the wall socket.</li> <li>◆ Clean the filter and outer surfaces.</li> </ul>
Have not used the air conditioner for a long period of time	Set the fan to "FAN" and let it run for a few hours to dry the inside of the air conditioner thoroughly.



## Solving Common Problems

**Before contacting the after-sales service, perform the following simple checks. They may save you the time and expense of an unnecessary service call.**

Problem	Explanation/Solution
The air conditioner does not operate at all	<ul style="list-style-type: none"> <li>◆ Check that the circuit breaker used for the air conditioner has not been triggered.</li> <li>◆ Check that the power cable is plugged into a wall socket and the socket is switched on, if necessary.</li> <li>◆ Check that temperature is displayed in the cool mode and F1,F2,F3 is displayed in the fan mode on the control panel; if necessary press the  (On/Off) button on the remote control or unit.</li> </ul>
The air conditioner does not operate with the remote control	<ul style="list-style-type: none"> <li>◆ Check that there are no obstacles between you and the unit.</li> <li>◆ Replace the remote control batteries if necessary.</li> <li>◆ Check that you are close enough to the unit (seven metres/yards or less).</li> </ul>
No beep is heard when you press the  (On/Off) button on the remote control	<ul style="list-style-type: none"> <li>◆ Check that you are pointing the remote control at the remote control sensor on the unit.</li> <li>◆ Replace the remote control batteries if necessary.</li> </ul>
The air conditioner does not cool	<ul style="list-style-type: none"> <li>◆ Check that the correct operating mode has been selected COOL.</li> <li>◆ The room temperature may be too low.</li> <li>◆ Dust may be blocking the air filter; refer to page 17 for cleaning instructions.</li> <li>◆ Check that there is no obstacle blocking the air flow into or out of the unit.</li> <li>◆ Check that the direction of blades; refer to page 10~11.</li> </ul>
The air flow blades does not operate when you press the  button.	<ul style="list-style-type: none"> <li>◆ Check that the air conditioner has been switched on; if necessary, press the  (On/Off) button on the remote control or unit.</li> </ul>
The timer is not correctly triggered	<ul style="list-style-type: none"> <li>◆ Check that the timer has been programmed correctly; refer to page 12~14.</li> </ul>
Odours are permeated in the room during air conditioning	<ul style="list-style-type: none"> <li>◆ Air the room.</li> </ul>

## Technical Specifications

**Design and specifications are subject to change without notice.**

Model	Power Supply
① *****BA	220V(230V)~, 60Hz
② *****DA	200-220V~, 50Hz
③ *****EA	220-240V~, 50Hz

 
➤ *Max current is measured according to IEC standard for safety and current is measured according to ISO standard for energy efficiency. This condition belongs to ②, ③ models.*

## Installation (for 60Hz)

### 1 Electrical Requirements

For personal safety:

- ◆ This appliance must be properly grounded.
- ◆ Do not, under any circumstances, cut or remove the third grounding prong from the power cord.
- ◆ We recommend that you should not use an extension cord or an adapter plug with this appliance.
- ◆ Do not change the plug on the power cord of this appliance.
- ◆ Follow national electrical codes or local codes and ordinances.

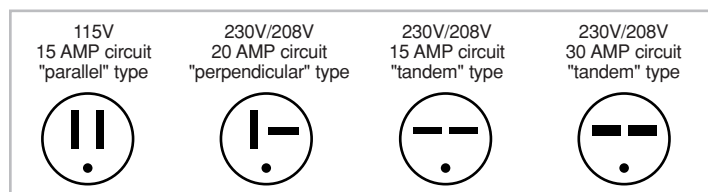

- ◆ If the electric supply provided does not meet the above specifications, call a licensed electrician.
- ◆ Aluminum house wiring may pose special problems - consult a qualified electrician.
- ◆ This unit requires a separate circuit, serving only this appliance.

# Installation

**Before installation, be sure to check the installation area or the air conditioner, and drain hose.**

 
## Checkpoints prior to installation

- 1 Check the cabinet and front grille of the unit for any harmful defects such as scratches.
- 2 Be sure to check the power supply.
  - Refer to the specifications on the label attached to the unit.


## Installation Conditions

- 1 As the unit is heavy, the wall or window of the installation area should have sufficient strength and durability for operation of the air conditioner, and for prevention of any vibration or noise. If it is weak, reinforcement work should be performed separately.
- 2 It is advisable to install the air conditioner in the north or west side to prevent the effect of direct sunlight. When installing it in the south or east side due to unavoidable circumstances, it is advisable to install the sunshade to prevent the direct sunlight. In this case, take care not to cause any hindrance to the flow of outside air.
- 3 When installing the air conditioner, be sure to obtain sufficient space on the rear side of the unit for smooth flow of air. When operating the air conditioner in closed areas such as inner building with cooling operation, and result in trouble with the unit. See the illustration below.

◆ The appliance must be fixed well by screw or similar method.

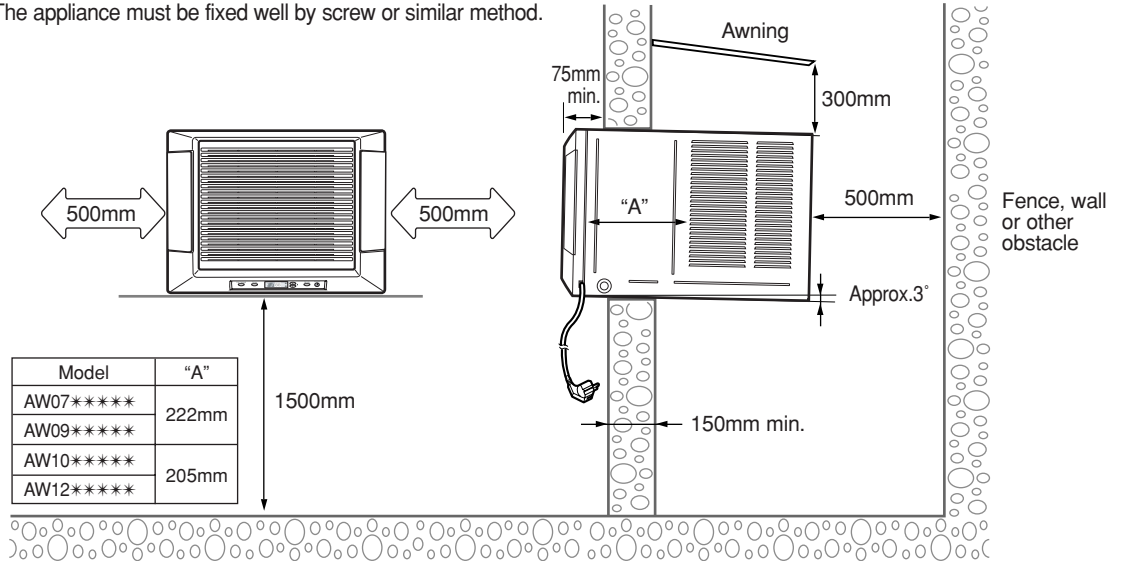

 ◆ If the wall is greater than 150mm thick, cut the wall back on a 45° angle if possible.

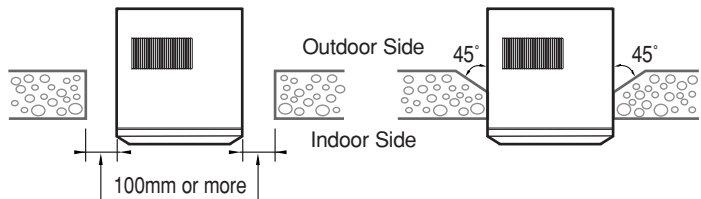

**In some region, drain tube and drain pan may not be supplied.  
Please contact the sales agent.**

### Installation of the Drain Tube

Fix the drain tube as shown in the figure.

When you want to drain, remove the rubber cap first. If you don't drain, the noise the air conditioner is increasing.

- Check out that it is draining correctly and the installation angle is over 3°. If it is not draining correctly and the angle is too narrow, water may leak and damage to your furniture.


### Installation of the Drain Pan

The procedure for installing the drain pan should be determined by the condition of the installing area.

◆ **In the case of an area where the drain pan can not be directly installed on the rear side of the unit after installing the air conditioner.**

Example: High storage

1 Open the front grille ; refer to page 17.


2 **Remove the screw located at the lower section of the front grille. It is secured in the  section depending on the model.**

3 Remove the front panel.

3-1 Press both sides of the cabinet in the direction of the arrow as shown in the figure.

3-2 Pull the lower part of the front panel slightly forward. (below three inches)

3-3 Lift the front panel upward.

 Applying excessive force to remove the front panel may cause damage to the tab ; be sure not to use excessive force.

- Separate the connector. When you reassemble the front panel, reconnect the connector.

4 Remove two screws on the lower, right and left sides of the unit.

5 Remove the chassis from the cabinet.

6 Remove the rubber cap inserted into the basepan.

 
 
 
 
7 Fix the drain pan as shown in the figure, and then connect the drain hose. (You can use any commercially-available drain hose.)

8 Install the cabinet at the specified area after installing the drain pan, and then re-assemble it in the original condition.

- Secure the front panel to the case by replacing the screw removed in step 2. If a screw not removed in step 2, secure the panel with a supplied screw.

◆ **In the case of an area where the drain pan can be directly installed on the rear side of the unit after installing the air conditioner.**

1 Follow steps 6 and 7 only

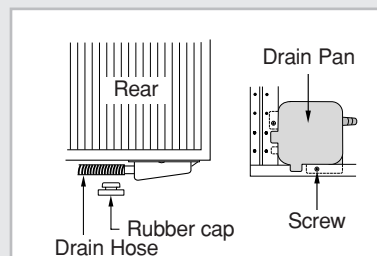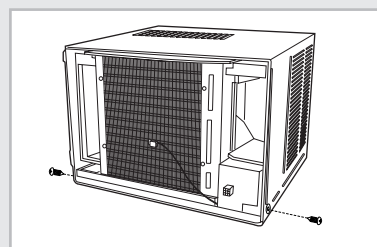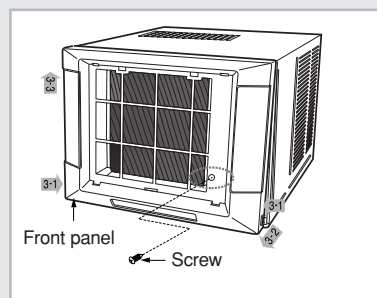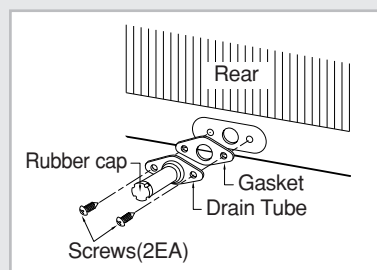

Bottom-Side View with  
Drain Pan and Hose in Place

**THIS AIR CONDITIONER IS MANUFACTURED BY:  
ESTE ACONDICIONADOR DE AIRE HA SIDO FABRICADO POR:  
CE CLIMATISEUR EST FABRIQUÉ PAR:  
ESTE APARELHO DE AR CONDICIONADO É FABRICADO POR:  
QUESTO CONDIZIONATORE D'ARIA È PRODOTTO DA:**



**ELECTRONICS**