

Precautions

1. Setting up

Ensure that the mains supply in your house complies with that indicated on the identification sticker located at the back of your play. Install your player horizontally, on a suitable base (furniture), with enough space around it for ventilation (7~10cm). Make sure the ventilation slots are not covered. Do not stack other, or heavy devices on top of the player. Do not place the player on amplifiers or other equipment which may become hot. Before moving the player ensure the disc tray is empty. This player is designed for continuous use. Switching off the DVD player to the stand-by mode does not disconnect the electricity supply. In order to separate the player completely from the mains, it has to be disconnected by unplugging the main plug, especially when left unused for a long period of time.

2. Caution

Protect the player from moisture (dripping or splashing and objects filled with liquids), and excess heat (e.g. fireplace) or equipment creating strong magnetic or electric fields (i.e. speakers...). Disconnect the power cable from the mains electricity supply if the player malfunctions. Your player is not intended for industrial use but for domestic purposes only. Use of this product is for personal use only. If your player or disc has been stored in a cold atmosphere for example during transportation in the winter, wait for approximately 2 hours until they have reached room temperature, before use.

3. For your safety

Never open the player or any of its components. It can be dangerous for you or certain fragile components. You could receive an electric shock or touch the laser beam. Do not place your eyes close to the opening of the disc tray or any other opening to look inside the player.

4. Disc

Be careful handle your discs with care. Hold a disc with finger on the border or hole. Always place disc with the label facing upward (in case of a single side disc). Always use a soft cloth to clean disc if necessary, wipe from the centre to the border. Always put disc back into their cases after playing and store in vertical position. Always place the disc properly into the tray using the proper guide area. Never use record cleaning sprays, benzine, static electricity liquids or any other solvent, if the disc surface is dirty. Wipe gently with a soft damp (water only) cloth, never wipe the disc in a circular motion, since circular scratches are likely to occur and could cause noise during playback.

5. Battery

The battery used in this product contains chemicals that are harmful to the environment. Do not dispose of batteries in the general household waster. It is recommended that the replacement of the battery should be done by a technician.





6. Maintenance of cabinet

For safety reasons, be sure to disconnect the AC power cord from the AC outlet.


- Do not use benzene, thinner, or other solvents for cleaning.
- Wipe the cabinet with a soft cloth.

Precautions


1

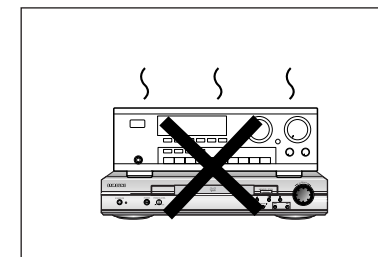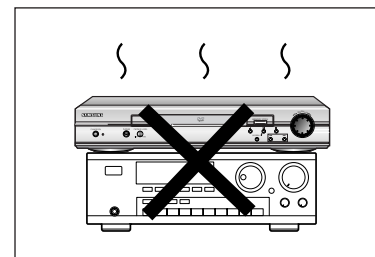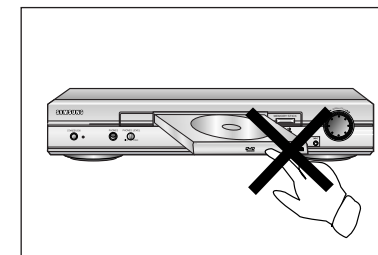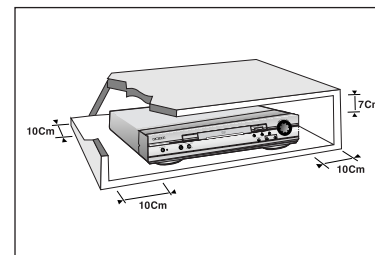


2

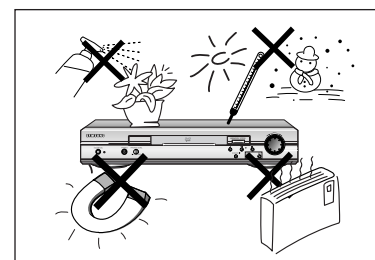


3

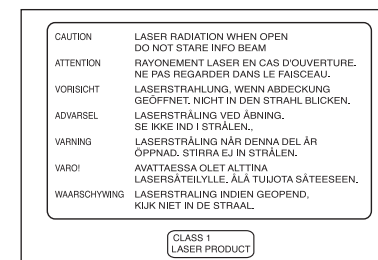

4

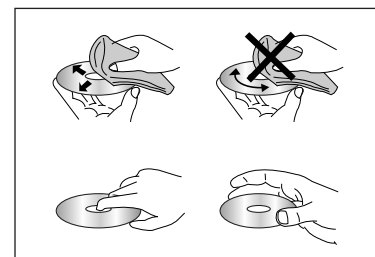

5

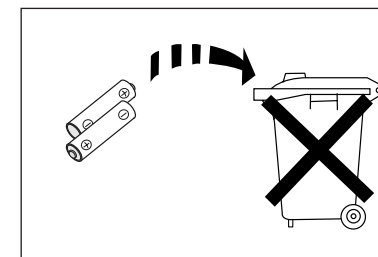

Before You Start


Accessories




Remote Control




Easy Remote Control

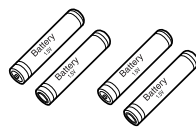

Batteries for
Remote Controls (AA Size)

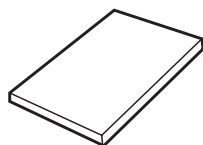

User's Manual

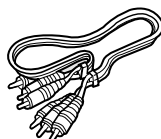

Video/Audio Cable

Install Batteries in the Remote

- 1** Open the battery cover on the back of the remote.
- 2** Insert two AA batteries. Make sure that the polarities (+ and -) are aligned correctly.
- 3** Replace the battery cover.

If remote doesn't operate properly:

- Check the polarity + - of the batteries (Dry-Cell)
- Check if the batteries are drained.
- Check if remote sensor is blocked by obstacles.
- Check if there is any fluorescent lighting nearby.

TABLE OF CONTENTS

General Features	6
Disc Type and Characteristics	7
Description-Front Panel	8
Description-Rear Panel	9
Tour of the Remote Control	10
Choosing a Connection	12
Playing a Disc.....	14
Using the Search & Skip Functions	16
Using the Display Function.....	17
Repeat Play	18
Program Play & Random Play	19
S.FIT Play	20
Selecting the Audio Language	21
Selecting the Subtitle Language	22
Changing the Camera Angle	23
Using the Instant Replay Function	24
Using the Bookmark Function	25
Using the Zoom & 3D Sound Functions	26
MP3 Play	27
Memory Stick	29
DAM (Digital Audio Manager) Playback.....	33
Memory Stick Pull out	34
DPM (Digital Photo Manager) Playback	35
Slide Show	36
Slide Show Order	37
Photo View	38
Edit Photo	39
Using the Setup Menu	40
Setting Up the Language Features	41
Setting Up the Parental Control	43
Setting Up the Audio	44
Surround Sound Speaker Setup	45
Setting Up the Display	46
Controlling a TV with the Remote	47
Troubleshooting.....	48
Specifications	49

SETUP

CONNECTIONS

BASIC
FUNCTIONS

ADVANCED
FUNCTIONS

MEMORY
STICK

CHANGING
SETUP MENU

REFERENCE

General Features

Excellent Sound

Dolby Digital, a technology developed by Dolby Laboratories provides crystal clear sound reproduction.

Screen

Both regular and widescreen(16:9) pictures can be viewed.

Slow Motion

An important scene can be viewed in slow motion.

Programmed Play

You can program tracks to play in desired order.

Parental Control

The parental control allows users to set the level necessary to prohibit children from viewing harmful movies such as those with violence, adult subject matter, etc.

Various On-Screen Menu Functions

You can select various languages(Audio/Subtitle) and screen angles while enjoying movies.

Memory Stick

"Memory Stick" is a new compact, portable and versatile IC (Integrated Circuit) recording medium with a data capacity that exceeds a floppy disk.

Repeat

You can repeat a song or movie simply by pressing the REPEAT button.

MP3

This unit can play discs created from MP3 files.

Instant Replay

This function is used to replay the previous 10 seconds of the movie from the current position.

Progressive Scan

Progressive scanning creates an improved picture with double the scan lines of a conventional interlaced picture.

Easy Remocon

The Easy Remocon combines frequently used functions for easier operation.

NOTE

* Discs which cannot be played with this player:

- DVD-ROM
- DVD-RAM
- CD-ROM
- CDV
- CDI
- SVCD, CVD
- HD layer of super Audio CD
- CDGs play audio only, not graphics.

* Ability to play back may depend on recording conditions:

- DVD-R
- CD-RW
- DVD+RW, -RW
- Picture CD

COPY PROTECTION

- Many DVD discs are encoded with copy protection. Because of this, you should only connect your DVD player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs.
- This product incorporates copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Disc Type and Characteristics

This DVD player is capable of playing the following types of discs with the corresponding logos:

Disc Types (Logos)	Recording Types	Disc Size	Max. Playing Time	Characteristics
DVD 	Audio + Video	12cm	Single-sided 240 min. Double-sided 480 min.	- DVD contains excellent sound and video due to Dolby Digital and MPEG-2 system. - Various screen and audio functions can be easily selected through the on-screen menu.
		8cm	Single-sided 80 min. Double-sided 160 min.	
VIDEO-CD 	Audio + Video	12cm	74 min.	Video with CD sound, VHS quality & MPEG-1 compression technology.
		8cm	20 min.	
AUDIO-CD 	Audio	12cm	74 min.	CD is recorded as a Digital Signal with better audio quality, less distortion and less deterioration of audio quality over time.
		8cm	20 min.	

Disc Markings


							
• Play Region Number	• PAL broadcast system in U.K, France, Germany, etc.	• Dolby Digital disc	• Stereo disc	• Digital Audio disc	• DTS disc	• MP3 disc	• Memory stick

Play Region Number

Both the DVD player and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play.


The Region Number for this player is described on the rear panel of the player.

Description-Front Panel

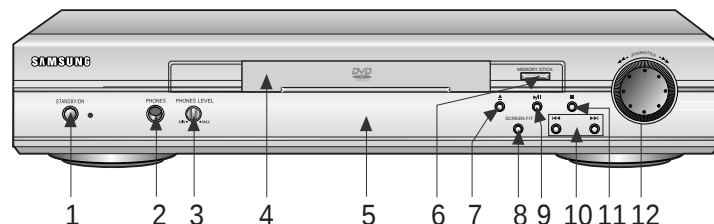

Front Panel Controls


1. **STANDBY / ON**
 - When the unit is first plugged in, the indicator lights. When STANDBY/ON is pressed on again, the light goes out and the player is turned on.
2. **HEADPHONES JACK**
 - You can attach headphones here for private listening.
3. **HEADPHONES VOLUME**
 - Use to adjust headphones volume level.
4. **DISC TRAY**
 - Load the disc here.
5. **DISPLAY**
 - Operation indicators are displayed here.
6. **MEMORY STICK**
7. **OPEN/CLOSE**
 - Press to open and close the disc tray.
8. **SCREEN FIT**
9. **PLAY/PAUSE**
 - Begin or pause disc play.
10. **SKIP/SEARCH**
11. **STOP**
 - Stops disc play.
12. **JOG/SHUTTLE**
 - Shuttle(outer dial) - Use during DVD and CD play to fast forward or reverse.
 - Jog(inner dial) - Use for frame advance/CD track selection.

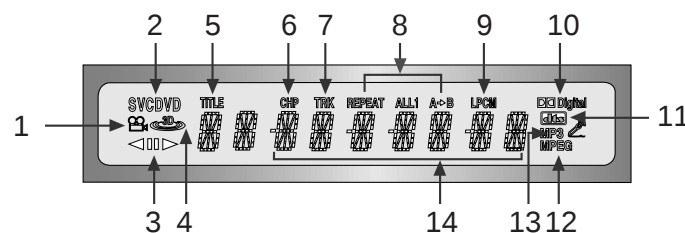

Front Panel Display

1. Angle indicator. You can select multiple angles of a scene recorded by different cameras.
2. Disc type indicators
3. Reverse play / Pause / Forward play
4. Lights when 3D surround is turned on.
5. DVD : Title number
6. DVD : Chapter number.
7. Video/Audio CD : Track number
8. Repeat play mode
9. Linear PCM audio output
10. Dolby Digital Disc
11. DTS (Digital Theater System) output
12. MPEG-2 Audio output
13. MP3 indicators
14. Displays various messages concerning operations such as PLAY, STOP, LOAD ...
no DISC : No disc loaded.
OPEN : The disc tray is open.
LOAD : Player is loading disc information.

Description-Rear Panel

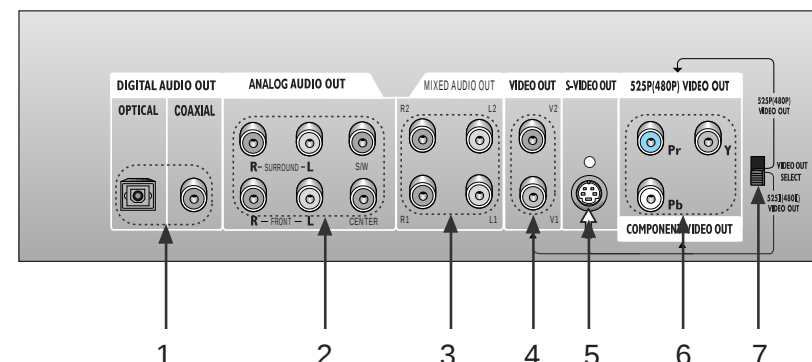


Rear Panel

1. **DIGITAL AUDIO OUT JACKS**
 - Use either an optical or coaxial digital cable to connect to a compatible Dolby Digital receiver. Use to connect to an A/V Amplifier that contains a Dolby Digital or DTS decoder.
2. **ANALOG AUDIO OUT JACKS**
 - Connect to a 5.1ch analog input jack on a speaker.
3. **MIXED AUDIO OUT JACKS**
 - Connecting to audio input jacks on your television, audio/video receiver or VCR.
4. **VIDEO OUT JACK**
 - Use a video cable to connect to the Video input jack on your television.
 - The VIDEO OUT SELECT switch must be set to the 525I(480I) position.
5. **S-VIDEO OUT JACK**
 - Use the S-Video cable to connect this jack to the S-Video jack on your television for a higher quality picture.
 - The VIDEO OUT SELECT switch must be set to the 525I(480I) position.
6. **COMPONENT VIDEO OUT JACKS**
 - Use these jacks if you have a TV with Component Video in jacks. These jacks provide Pr, Pb and Y video. Along with S-Video, Component Video provides the best picture quality.
 - If 525P(480P) VIDEO is selected, progressive scan mode will work.
 - If 525I(480I) VIDEO is selected, interlaced scan mode will work.
7. **VIDEO OUT SELECT SWITCH**
 - Use the switch to set video out.
 - If 525P(480P) VIDEO is selected, VIDEO and S-VIDEO will not work.

Important Note

- Consult your TV User's Manual to find out if your TV supports Progressive Scan. If Progressive Scan is supported, follow the TV User's Manual's instructions regarding Progressive Scan settings in the TV's menu system.
- If 525P(480P) VIDEO OUT is Selected, VIDEO and S-VIDEO will not work.


Tour of the Remote Control

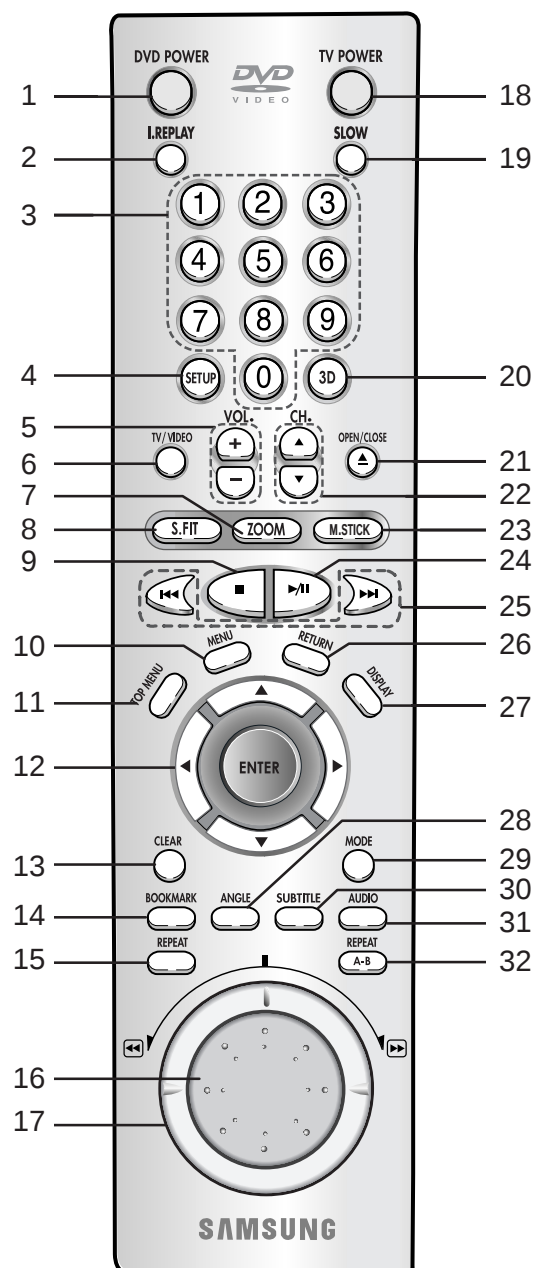

Tour of the Remote Control

DVD Function Buttons

1. **DVD POWER Button**
2. **I.REPLAY Button**
 - This function is used to replay the previous 10 seconds of the movie from the current position.
3. **NUMBER Buttons**
4. **SETUP Button**
 - Brings up the DVD player's Setup menu.
5. **VOLUME Buttons**
6. **TV/VIDEO Button**
7. **ZOOM Button**
8. **S.FIT Button**
9. **STOP Button**
10. **MENU Button**
 - Brings up the Disc menu.
11. **TOP MENU Button**
12. **ENTER/DIRECTION Button (UP/DOWN or LEFT/RIGHT buttons)**
 - This button functions as a toggle switch.
13. **CLEAR Button**
 - Use to remove menus or status displays from the screen.
14. **BOOKMARK Button**
15. **REPEAT Button**
 - Allows you to repeat play a title, chapter, track, or disc.
16. **JOG DIAL**
 - Operates frame by frame play. In CD mode, performs track search.
17. **SHUTTLE DIAL**
 - Performs fast or slow motion play.
18. **TV POWER Button**
19. **SLOW Button**
20. **3D Button**
21. **OPEN/CLOSE Button**
22. **CHANNEL Buttons**
23. **M.STICK(Memory Stick) Button**
24. **PLAY/PAUSE Button**
 - Begin/Pause disc play.
25. **SKIP Buttons**
 - Use to skip the title, chapter, or track.
26. **RETURN Button**
 - Returns to a previous menu.
27. **DISPLAY Button**
 - Displays the current disc mode.
28. **ANGLE Button**
 - Use to access various camera angles on a DVD.
29. **MODE Button**
 - Allows you to program a specific order.
30. **SUBTITLE Button**
31. **AUDIO Button**
 - Use this button to access various audio functions on a disc.
32. **REPEAT A-B Button**
 - Use to mark a segment to repeat between A and B.

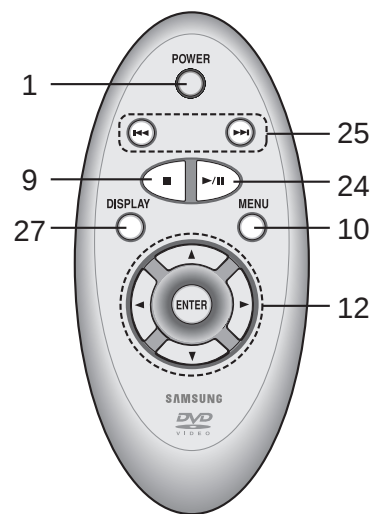

(Easy Remote Control)


Choosing a Connection

The following show examples of connections commonly used to connect the DVD player with a TV and other components.

Before Connecting the DVD Player

- Always turn off the DVD player, TV, and other components before you connect or disconnect any cables.
- Refer to the owner's manual of the additional components you are connecting for more information on those particular components.


Connection to an Audio System

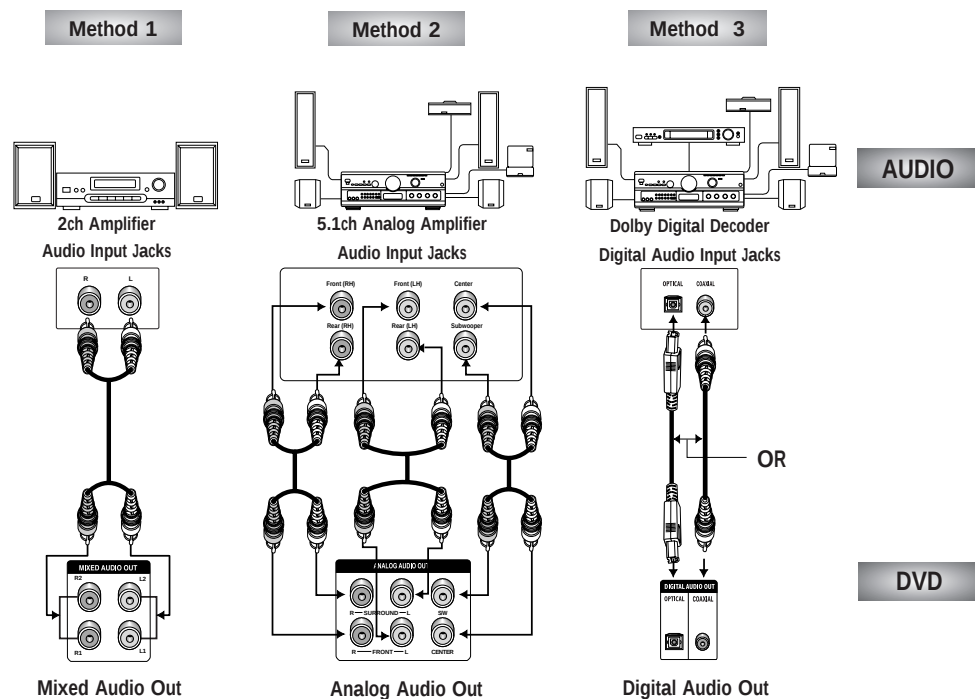

Choosing a Connection

Connection to a TV (For Video)

TV (Normal, Widescreen, Projection, etc..)

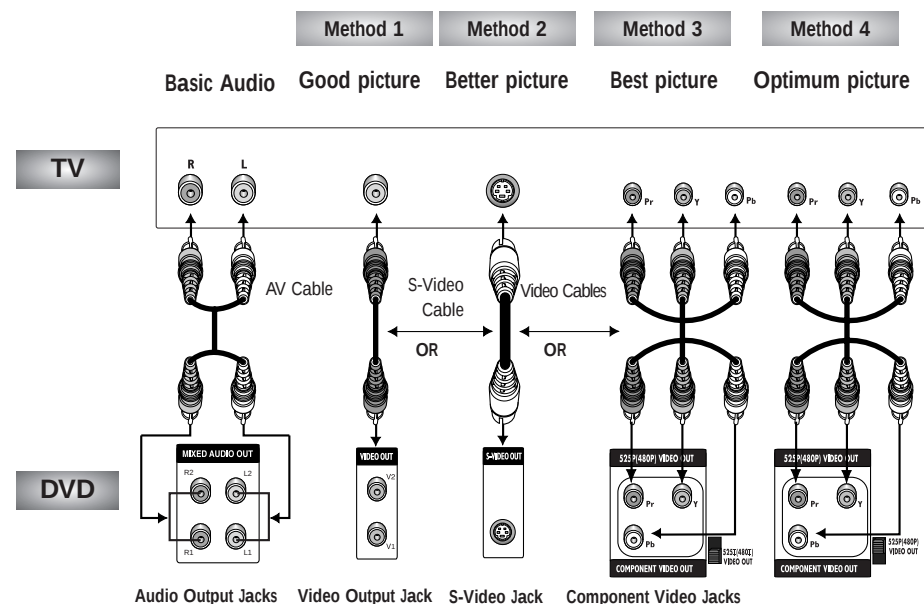

- **Method 1** DVD Player + TV with Video Input Jack
(The VIDEO OUT SELECT switch must be set to the 525I(480I) position.)
- **Method 2** DVD Player + TV with S-Video Input Jack
(The VIDEO OUT SELECT switch must be set to the 525I(480I) position.)
- **Method 3** DVD Player + TV with Component Video Jacks
(The VIDEO OUT SELECT switch must be set to the 525I(480I) position.)
- **Method 4** DVD Player + TV with Progressive Scan Jacks.
(The VIDEO OUT SELECT switch must be set to the 525P(480P) position.)
• If 525P(480P) VIDEO OUT is Selected, VIDEO and S-VIDEO will not work.
• Depending on your TV, your hookup for Method 4 may differ from the illustration.

Important Note

Consult your TV User's Manual to find out if your TV supports Progressive Scan. If Progressive Scan is supported, follow the TV User's Manual's instructions regarding Progressive Scan settings in the TV's menu system.

Playing a Disc

Before Play

- Turn on your TV and press the TV/VIDEO button to select the video mode.
- Turn on your Audio System and select AUX, CD or DVD.

After plugging in the player, the first time you press the DVD POWER button, this screen comes up :

If you want to select the language, press a NUMBER button.

(This screen will only appear the very first time you plug in the player.)



Play

- 1** Press the OPEN/CLOSE button.
The STANDBY indicator light goes out and the tray opens.
- 2** Place a disc gently into the tray with the disc's label facing up.
- 3** Press the PLAY/PAUSE button or OPEN/CLOSE button to close the disc tray.
- 4** Stopping Play
Press the STOP button during play.
- 5** Removing Disc
Press the OPEN/CLOSE button.
- 6** Pausing Play
Press the PLAY/PAUSE or STEP button on the remote during play.
 - Screen stops, no sound.
 - To resume again, press PLAY/PAUSE button once again.

Playing a Disc

7 Step Motion Play (Except CD)

When the JOG DIAL is turned, you can view frames one by one.

- Each time the button is pressed, a new frame will appear.
 - No sound is heard during STEP mode.
 - Press PLAY/PAUSE to resume normal play.
- (You can only perform step motion play in the forward direction.)

8 Slow Motion Play (Except CD)

- Press and hold the SKIP button to choose playback speed among 1/8X, 1/4X, and 1/2X of normal.
- No sound is heard during slow mode.
- Press PLAY/PAUSE to resume normal play.
- When playing a VCD, the reverse slow motion play will not work.

RESUME function

When you stop disc play, the player remembers where you stopped, so when you press PLAY again, it will pick up where you left off. (unless the disc is removed, the STOP button is pressed twice or the player is unplugged.)

NOTE

- If the player is left for 5 minutes in pause mode, it will stop.
- If the player is left in the stop mode for more than 30 minutes, the power will automatically shut off. (Automatic Power-Off Function)
- If the player is left in the stop mode for more than one minute without any user interaction, a screen saver will be activated, and the TV screen will fade in and out repeatedly. Press the PLAY button to resume normal play.
- This  icon indicates an invalid button press.

Using the Search & Skip Functions

During play, you can search quickly through a chapter or track or use the skip function to jump to the next selection.

Searching through a Chapter or Track

- 1 Turn the shuttle dial of remote control during disc play. Turn the Jog/Shuttle on the front can amultiple-speed operation if desiring to use the key on the front.

DVD	2X, 4X, 8X, 16X, 32X, 128X
VCD/CD	2X, 4X, 8X

- Depending on the disc, audio may not be heard when a disc is in 2X play mode.

Skipping Tracks


- 1 During play, press the NEXT SKIP (▶▶) or BACK SKIP (◀◀) button.

- When playing a DVD, if you press the NEXT SKIP button, it moves to the next chapter. If you press the BACK SKIP button, it moves to the beginning of the chapter.
One more press makes it move to the beginning of the previous chapter.
- When playing a VCD 2.0 in MENU OFF mode, a VCD 1.1 or a CD, if you press the NEXT SKIP button, it moves to the next track.
If you press the BACK SKIP button, it moves to the beginning of the track.
One more press makes it move to the beginning of the previous track.
- If a track exceeds 15 minutes when playing a VCD and you press the NEXT SKIP button, it moves forward 5 minutes.
If you press the BACK SKIP button, it moves backward 5 minutes.

Using the Display Function


When Playing a DVD

- 1 During play, press the DISPLAY button on the remote.
 - Current title, chapter number, elapsed time, Audio, Subtitle, Angle, Repeat and 3D control will be displayed.
 - Use the NUMBER buttons to enter a different title, then press the ENTER button.
 - Use the LEFT/RIGHT or NUMBER buttons to enter a chapter number, then press the ENTER button.
 - To enter the time from which you want to start, use the UP/DOWN buttons to select, then use the NUMBER buttons to enter the time.
Then press the ENTER button.
 - Use the LEFT/RIGHT buttons to change the values of the current audio, subtitle, Angle, Repeat and 3D.
 - To make the screen disappear, press the DISPLAY button again.

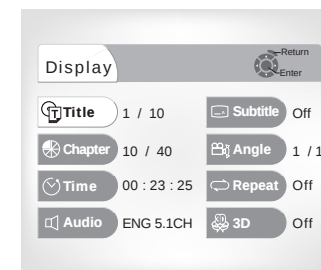

When Playing a CD/VCD

- 1 During play, press the DISPLAY button on the remote.
 - Current track number, elapsed time, Audio, Repeat and 3D control will be displayed.
 - Use the UP/DOWN buttons to select a track. Use the LEFT/RIGHT buttons or NUMBER buttons to enter a different track number, then press the ENTER button.
 - To enter the time from which you want to start, use the UP/DOWN buttons to select, then use the NUMBER buttons to enter the time.
Press the ENTER button.
 - Use the LEFT/RIGHT buttons to change the values of the current audio, Repeat and 3D.
 - To make the screen disappear, press the DISPLAY button again.
 - * In VCD 2.0 mode (MENU ON mode), only the volume control will appear on screen.

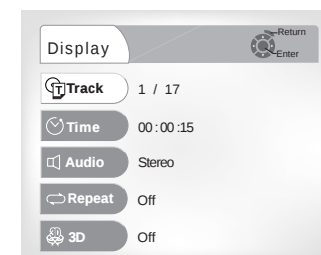

NOTE

What is a Chapter?

Each Title on a DVD is usually divided into chapters (similar to tracks on an audio CD).

What is a Title?

A DVD may contain several different titles. For example, if a disc contains four different movies, each might be considered a title.

 
Repeat Play

Repeat the current track, chapter, title, a chosen section (A-B), or all of the disc.



When playing a DVD

- 1 Press the REPEAT button on the remote. Repeat screen appears.
- 2 Select Title or Chapter using the LEFT/RIGHT buttons.
- 3 Press ENTER.
- 4 To return to normal play, press REPEAT again, then press the LEFT/RIGHT buttons to select Off and press ENTER.
 - * REPEAT A-B button
 - Press the REPEAT (A-B) button to select the point where the function starts. (A)
 - Press the REPEAT (A-B) button to select the point where the function ends. (B)
 - To terminate the function, press the 'CLEAR' button or the 'REPEAT (A-B)' button again. Then press play to resume normal playback.
 - A-B REPEAT does not allow you to set point (B) until at least 5 seconds has elapsed after point (A) has been set.

DVD



VCD/CD

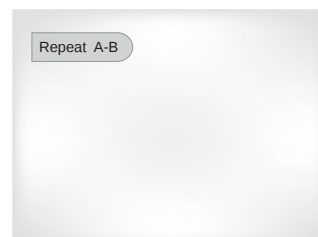 


NOTE

- DVD repeats play by chapter or title, CD and VCD repeat play by disc or track. See page 27 to MP3 disc repeat Play.
- Depending on the disc, the Repeat function may not work.
- If the title or track is completed before marking the end (B), the end of title or track becomes B automatically.
- When in VCD 2.0 mode (MENU ON mode), this function does not work.

Program Play & Random Play


Program Play (DVD/VCD/CD)

- 1 Press the MODE button.
- 2 Use the LEFT/RIGHT buttons to select PROGRAM. Press the ENTER button.
- 3 Use the UP/DOWN/LEFT/RIGHT buttons to select the first chapter (or track) to add to the program. Press the ENTER button. The selection numbers appear in the Program Order box.
- 4 Press the PLAY/PAUSE button. The disc will be played in programmed order.

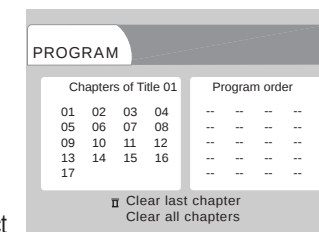

Random Play (DVD/VCD/CD)

- 1 Press the MODE button.
- 2 Use the LEFT/RIGHT buttons to select Random On. Press the ENTER button.
The disc will be played in random order.

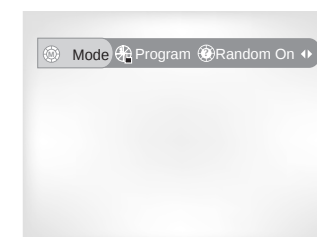


NOTE

- Depending on the disc, the Program and Random Play function may not work.
- When in VCD 2.0 mode (MENU ON mode), these functions do not work.
- To resume normal play, press the CLEAR button.

S.FIT Play

Screen Fit Play

- 1** During play, press S.FIT button on remote control.
 - Allows you to eliminate the black bars in the top and bottom of the screen.
 - Screen Fit will not work when the Zoom mode is active. (you can not remove the black bars on the screen) However, Zoom mode will work when Screen Fit is active.

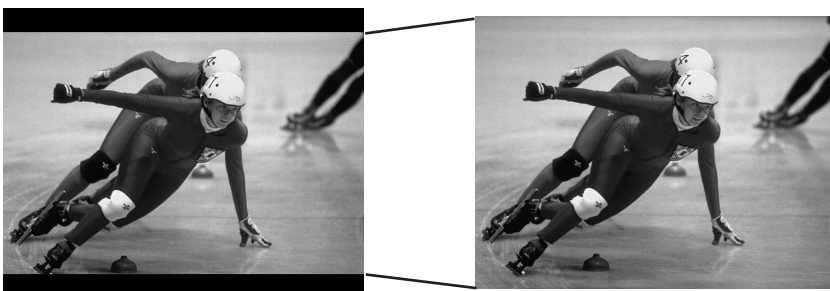

NOTE

- Various aspect ratios are available only in multiple screen format discs.
- This function does not work when a DVD has been recorded in a multi-camera angle format.
- On some DVDs, the black bars cannot be eliminated due to their aspect ratio.

 
Selecting the Audio Language

You can select a desired language quickly and easily with the AUDIO button.


Using the AUDIO button

- 1** Press the AUDIO button.
- 2** Use the LEFT/RIGHT buttons to select the desired language on a DVD.
 - The audio languages are represented by abbreviations.
- 3** Use the LEFT/RIGHT buttons to select Stereo, Right or Left. (On VCD/CD)

DVD



VCD/CD

 

NOTE

- This function depends on what languages are encoded on the disc and may not work with all DVDs.
- A DVD disc can contain up to 8 audio languages.
- **How to have the same audio language come up whenever you play a DVD;**
Refer to "Setting Up the Language Features" on page 42.


Selecting the Subtitle Language

You can select a desired subtitle quickly and easily with the SUBTITLE button.

Using the SUBTITLE button

- 1** Press the SUBTITLE button.
- 2** Use the LEFT/RIGHT buttons to select the desired subtitle language.
- 3** Use the UP/DOWN buttons to determine whether or not the subtitle will be displayed.

- Initially, the subtitling will not appear on screen.
- The subtitle languages are represented by abbreviations.

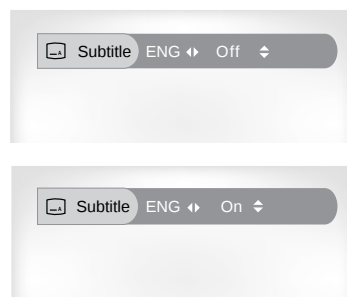

NOTE

- This function depends on what languages are encoded on the disc and may not work with all DVDs.
- A DVD disc can contain up to 32 subtitle languages.
- **How to have the same subtitle language come up whenever you play a DVD;**
Refer to "Setting Up the Language Features" on page 42.

Changing the Camera Angle

When a DVD contains multiple angles of a particular scene, you can select the Angle function.

Using the ANGLE button

Press the ANGLE button to see if an ANGLE () mark is present at the upper right hand corner of the screen.

- 1** When an ANGLE mark is shown, press the ANGLE button, then an ANGLE select icon will appear at the upper left hand corner of the screen.
- 2** Use the LEFT/RIGHT buttons to select the desired screen angle.
- 3** To turn off the display, press the ANGLE button again.




Using the Instant Replay Function

Using the Instant Replay function (DVD)

If you miss a scene, you can see it again using this function.

- 1 If you press the I.REPLAY button, the current scene moves backward about 10 seconds, and plays back.

* Depending on the disc, the Instant Replay function may not work.

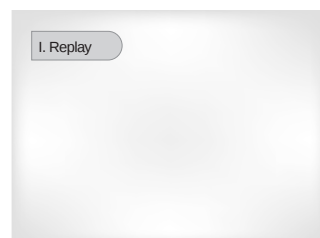

Using the Bookmark Function

The Bookmark function lets you select parts of a DVD or VCD (MENU OFF mode) so that you can quickly find the section at a later time.


Using the Bookmark Function (DVD/VCD)

- 1 During play, press the BOOKMARK button on the remote. The Bookmark icons will be displayed.
- 2 Use the LEFT/RIGHT buttons to move to the desired bookmark icon.
- 3 When you reach the scene you want to mark, press the ENTER button. The icon will change to a number (1, 2, or 3).
- 4 Press the BOOKMARK button to turn off the display.



Recalling a Marked Scene

- 1 During play, press the BOOKMARK button on the remote.
- 2 Use the LEFT/RIGHT buttons to select a marked scene.
- 3 Press the PLAY/PAUSE buttons to skip to the marked scene.

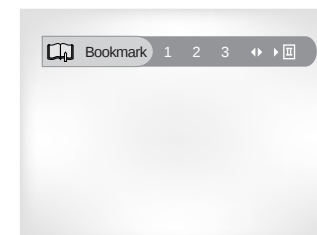

Clearing a Bookmark

- 1 During play, press the BOOKMARK button on the remote.
- 2 Use the LEFT/RIGHT buttons to select the bookmark number you want to delete.
- 3 Press the CLEAR button to delete a bookmark number. Press the BOOKMARK button to turn off display.


NOTE

- Up to three scenes may be marked at a time.
- When in VCD 2.0 mode (MENU ON mode), this function does not work.
- Depending on the disc, the Bookmark function may not work.

Using the Zoom & 3D Sound Functions

Using the Zoom Function (DVD/VCD)


- 1 During play or pause mode, press the ZOOM button on the remote.
A square will be displayed on screen.
- 2 Use the UP/DOWN or LEFT/RIGHT buttons to select the part of the screen you want to zoom in on.
- 3 Press the ENTER button.
 - During DVD play, press ENTER to zoom in 2X/4X/2X/Normal in order.
 - During VCD play, press ENTER to zoom in 2X/normal in order.

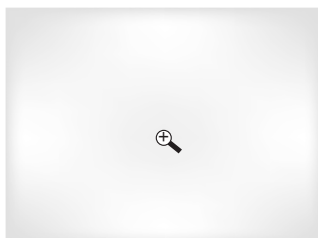

Using the 3D Sound Function

The simulated surround effect depends on the disc contents. If you connect the unit to your stereo system, you can enhance sound quality and produce a greater surround effect. This feature is useful when you are using the DVD player with a two channel stereo through the analog outputs. (Discs which are recorded with LPCM or DTS will not work. When the DIGITAL OUTPUT is set to BIT STREAM in the SETUP MENU, the 3D Sound function will not work.)

- 1 During play, press the 3D button. The 3D SOUND mark will be displayed on screen. (Be sure the DIGITAL OUTPUT is set to PCM.)
- 2 Press the UP/DOWN buttons to turn the 3D Sound feature on or off.

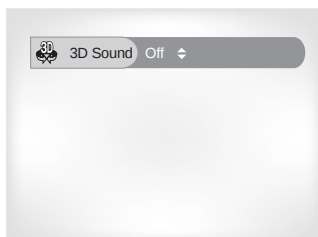

NOTE


- 3D Sound is possible only on discs recorded using DOLBY SURROUND or DOLBY DIGITAL. However, some of these discs do not contain rear channel sound signals.
- Depending on the disc, the Zoom and 3D Sound function may not work.

MP3 Play

When an MP3 Disc is inserted into the DVD PLAYER, the first song file of the first Directory plays.

MP3 Play Function

- 1 To returned playback of the first song file, then press RETURN to display the music files menu on the right side of the screen, the music Directory menu on left side of the Screen. Up to 10 music Directories can be displayed at a time. If you have more than 10 Directories on a disc, press the LEFT/RIGHT buttons to bring them up on the screen.
- 2 Use the UP/DOWN buttons to select the desired music Directory, the press ENTER. Use the UP/DOWN buttons again to select a song file. Press ENTER to begin playback of the song file.

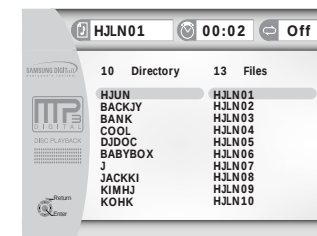

Program/Random playback

Press the MODE button, then the UP/DOWN buttons, to switch between the RANDOM and PROGRAM modes. See page 19 for more information on these modes.

NOTE

- Press the REPEAT button to hear a song file repeatedly. Press Repeat again to release the Repeat mode.
- Depending on the disc, the Program and Random Play function may not work.
- To resume normal play, press the CLEAR button.
- It does not work SETUP MENU in CD-R (MP3).



MP3 Play

CD-R/MP3 requirements

When playing CD-R/MP3 discs, please follow the recommendations below:

- **Your MP3 files should be ISO 9660 or JOLIET format.**
ISO 9660 format and Joliet MP3 files are compatible with Microsoft's DOS and Windows, and with Apple's Mac. These two formats are the most widely used.
- **When naming your MP3 files do not exceed 8 characters, and place ".mp3" as the file extension.**
General name format of: Title.mp3. When composing your title, make sure that you use 8 characters or less, have no spaces in the name, and avoid the use of special characters including: (,/, \, =, +).
- **Use a decompression transfer rate of at least 128 Kbps when recording MP3 files.**
Sound quality with MP3 files basically depends on the rate of compression/decompression you choose. Getting audio CD quality sound requires an analog/digital sampling rate (conversion to MP3 format) of at least 128 Kbps and up to 160 Kbps. However, choosing higher rates, like 192 Kbps or more, only rarely give better sound quality.
Conversely, files with sampling rates below 128 Kbps will not be played properly.
- **Do not try recording copyright protected MP3 files.**
Certain "securized" files are encrypted and code protected to prevent illegal copying. These files are of the following types: Windows Media™ (registered trade mark of Microsoft Inc) and SDMI™ (registered trade mark of The SDMI Foundation). You cannot copy such files.
- **Your DVD player only accepts one level of file directory.**
Consequently you must choose:
-either to save all your MP3 recording files at the root of the disc;
-and/or create folders in the directory for each artist or music type (e.g.classical, rock, jazz, etc)
- **Important:** The above recommendations cannot be taken as a guarantee that the DVD player will play MP3 recordings, or as an assurance of sound quality.
You should note that certain technologies and methods for MP3 file recording on CD-Rs prevent optimal playback of these files on your DVD player (degraded sound quality and in some cases, inability of the player to read the files).

Memory Stick

What is a Memory Stick?

"Memory Stick" is a new compact, portable and versatile IC (Integrated Circuit) recording medium with a data capacity that exceeds a floppy disk.

"Memory Stick" is specially designed for digital data exchange among "Memory Stick" compatible devices.

Because it is removable, the "Memory Stick" can also be used for external data storage.

There are two types of "Memory Sticks".

One is the regular "Memory Stick" and the other is the "MagicGate Memory Stick" equipped with "MagicGate" copyright protection technology.

"MagicGate" is a copyright protection technology that uses encryption.

1. MagicGate Memory Stick

Can be used for both copyright-protected and regular data.

2. Memory Stick

Can be used for regular data only.

NOTE

MagicGate Memory Sticks with copyright-protected data cannot be used in this unit.

Memory Stick

Precautions on handling the "Memory Stick"

1. Data can become corrupted in the following instances:
 - When the "Memory Stick" is taken out or the power is turned off while using the DPM (Digital Photo Manager) or DAM (Digital Audio Manager) function.
 - When using the "Memory Stick" in a location subject to static electricity or electric noise.
2. Memory sticks can only be read in this unit, not written.
3. Do not attach any other material than the supplied label on the label space.
4. Attach the label so that it does not stick out from the proper attachment location.
5. When moving or storing the "Memory Stick", use the storage case.
6. Do not touch the "Memory Stick" connector with your finger or metallic objects.
7. Do not bend, drop or apply strong shock to the "Memory Stick."
8. Do not disassemble or modify the "Memory Stick."
9. Do not allow the "Memory Stick" to get wet.

Memory Stick

Precautions on attaching/removing the "Memory Stick"

1. If it is not fully inserted, until you hear an audible "click", the "Memory Stick" will not work.
2. If you inadvertently remove the "Memory Stick" or turn off the power while using the DPM (Digital Photo Manager) or DAM (Digital Audio Manager) function, the recorded data may become corrupted.
3. To remove the "Memory Stick" during operation, see page 35.

To format the "Memory Stick"

1. Do not format the "Memory Stick" using your computer. If you format the "Memory Stick" using the computer, you cannot use it with "Memory Stick" compatible devices.
2. If you need to format the "Memory Stick," use a "Memory Stick" compatible device (If formatted, all data previously recorded on the "Memory Stick" will be erased.)
3. If you use a "Memory Stick" that has been initialized using a computer or initialize a "Memory Stick" attached to a camera using USB connection, further operation is not guaranteed.
4. Be careful not to optimize the "Memory Stick" from a computer running a Windows operating system. The life of the "Memory Stick" will be shortened.
5. Do not compress the data recorded on the "Memory Stick." A compressed file cannot be played back on this unit.

Software Compatibility

1. Depending on the type of application software used, the file size of a still image may become larger when it is opened.
2. Depending on the type of application software used, only the first frame (thumbnail) of the clip motion file may be displayed.
3. An image file that has been modified using an image processing software may not open if it is converted into a different file format to play back with this product .

Memory Stick


Memory Stick functions applicable to DPM and DAM

Item	DPM (Digital Photo Manager)	DAM (Digital Audio Manager)
File Format	JPEG Image (*.jpg)	MP3 Music File (*.mp3)
File Size	- All files in JPEG format that have less than 1600 x 1200 resolution can be played back with DPM. (JPEG files smaller than 1.5MB can be viewed with Photo View.) - For JPEG data without thumbnail information, "Thumbnail not available" will be displayed in The Thumbnail View, however, they can still be played back in Photo View.	- No limit to file size
Compatibility	- Still image files with ".jpg" extension that have been recorded with a digital camcorder or digital still camera equipped with Memory Stick functions - JPEG image files stored in Memory Stick using a Memory Stick adaptor for PC - JPEG image files stored in CD-R/RW using CD Writer on PC, have to be stored using one of directory formats as follows (Capitalize all letters of directory name): 1) \DCIM\<dir>*.jpg 2) \PREVIEWS\<dir>*.jpg 3) \IMAGES\<dir>*.jpg 4) *.jpg - The size of each <dir> cannot be over 50MB. [case 1), 2), 3)] - In case of storing files in root directory [case 4)], the size of root directory also cannot be over 50MB.	All files in MP3 format that have been downloaded from a PC or PDA to Memory Stick (*.mp3)
Main Functions	Directories Supported • Memory Stick DPM -DCIM\<dir>*.jpg • Picture CD DPM (Compatible with Picture CD of Kodak, Fuji, Qss (Noritus), and Konica)	MP3 music files recorded on Memory Stick can be played back. However, although non-MP3 files are also displayed on DAM, they cannot be played back.

DAM (Digital Audio Manager) Playback


MP3 Playback

- 1 Press Stop if in play mode.
- 2 Press the M.STICK button on the remote and the screen to the right will appear.
- 3 Insert the Memory Stick encoded with MP3 files into the Memory Stick Slot.
- 4 Press the UP/DOWN buttons on the remote control to select Digital Audio Manager, and then press the ENTER button.
 - Your selection is highlighted with yellow borders.
- 5 Use the UP/DOWN buttons to select the desired song.
- 6 Press the ENTER button to start play.
 - Press the MENU button to return to the Start menu.
 - If the PLAY button is pressed during the playback of an MP3 file, the song will start from the beginning again.
 - If the SKIP button is pressed during the playback of an MP3 file, the next song will be played.

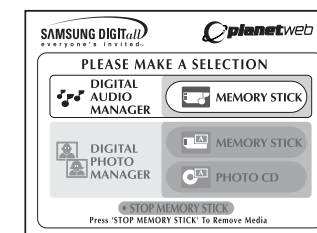

Screen Configuration



1. **FOLDER UP:** Use to move "up" a folder when you have multiple folders.
2. **PLAYLIST:** Shows the playlist.
3. **INFO:** Shows information about the Selected song being played.
4. **EXIT:** Takes you to the Start menu.
5. Shows brief information about the selected song.
6. The title of the song currently playing
7. Shows a list of MP3 files and folders found in the memory stick.
8. Shows the title and playback time of the currently playing song in the scroll box.
 - If the REPEAT button is pressed, the following displays will appear:
 - : If the REPEAT button is pressed, all MP3 files in a given folder will be played back repeatedly in the order they are listed under that folder.
 - : If the REPEAT button is pressed once again, the Shuffle function is activated. (All MP3 songs in a list are played once in random order.)
 - : If the REPEAT button is pressed yet once again, the Continuous Shuffle function is activated. (All MP3 songs in a list are played in random order.)
 - If the REPEAT button is pressed still yet once again, the Repeat function is deactivated.

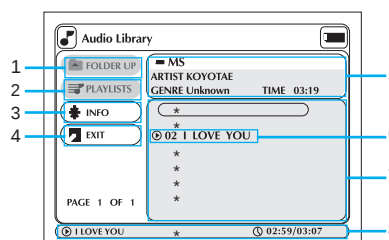

MEMORY
STICK

Memory Stick Pull out



- 1 If using DPM (Digital Photo Manager) or DAM (Digital Audio Manager), move to Exit, and then press the ENTER button to exit to Start Menu.
- 2 Move to the "STOP MEMORY STICK" function at the bottom of the menu and then press the ENTER button.
- 3 When the "PLEASE REMOVE MEMORY STICK" message appears on the top of the menu, remove the Memory Stick.
- 4 If the above sequence is not followed and the Memory Stick is inadvertently removed or the power is turned off, the data recorded on the Memory Stick may become corrupted.

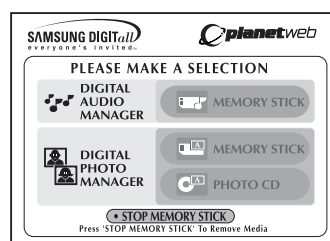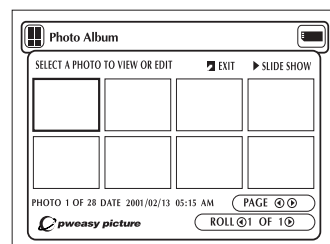

DPM (Digital Photo Manager) Playback

View Photo Album (Memory Stick/Photo CD)

- 1 Press Stop if in play mode.
- 2 Press the M.STICK button on the remote and the screen to the right will appear.
- 3 Insert the Memory Stick/Photo CD containing JPEG files into the Memory Stick Slot.
- 4 Press the UP/DOWN buttons on the remote control to select DIGITAL PHOTO MANAGER, and then press the ENTER button.
 - Your selection is highlighted with yellow borders.
- 5 JPEG files in the Memory Stick/Photo CD will be displayed on the screen in the order of their recording.
- 6 Use the UP/DOWN/LEFT/RIGHT buttons to select the image you want, and then press the ENTER button to display it in full view on the TV screen, or use the UP/DOWN/LEFT/RIGHT buttons to select SLIDE SHOW, and then press the ENTER button to begin the slide show. Slides will be displayed in order for a few seconds at a time.

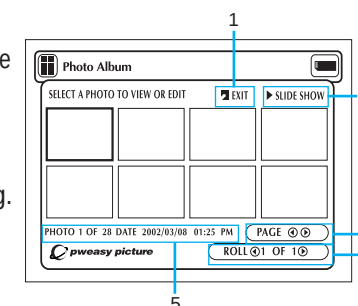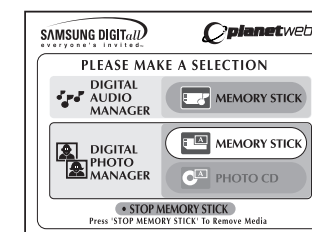

NOTE

The Auto Power Off function does not work while any DPM function is active.


Screen Configuration

1. **EXIT**: Takes you to the Start menu.
2. **SLIDE SHOW**: Begins the slide show.
3. **PAGE**: Highlight the PAGE menu item and use LEFT/RIGHT buttons to move to the next page of thumbnails.
4. **ROLL**: Allows navigation when there are multiple directories below '/DCIM' of Memory Stick. (See page 32)
5. **Photo Information**.

MEMORY
STICK

Slide Show

- 1 Use the LEFT/RIGHT buttons on the remote control to select Slide Show.
 - Your selection is highlighted with yellow borders.
- 2 Press the ENTER button and the Slide Show will begin.
 - To execute any function or option, be sure to press the ENTER button after selecting the menu item you want.
 - If there is no input for 5 seconds, the Slide Show menu will disappear, and the slide show will begin.
 - To view the Slide Show menu, press the UP/DOWN/LEFT/RIGHT button on the remote control. The slide show will stop and the menu will be displayed.
 - Select the PLAY menu item to resume.

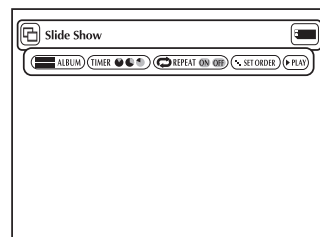


Menu Description

- **ALBUM** : Takes you back to the Photo Album.
- **TIMER**: Indicates the delay between images in a slide show.
- **REPEAT** : If ON is selected, the slide show will repeat indefinitely.
- **SET ORDER**: Use to change the order of images in a slide show.
- **PLAY**: Begins the slide show.

Slide Show Order

- 1 Use the LEFT/RIGHT buttons to select Slide Show and press ENTER.
- 2 Use the LEFT/RIGHT buttons to select Set Order and press ENTER.
- 3 Use the UP/DOWN/LEFT/RIGHT buttons on the remote control to select the image you want to move, and then press the ENTER button.
 - Your selection is highlighted with yellow borders.
- 4 Use the UP/DOWN/LEFT/RIGHT buttons on the remote control to select the location you want to move the image to, and then press the ENTER button.
 - Source location is indicated with yellow borders.
 - Destination location is indicated with green borders.
- 5 After moving the images to another location, you can begin the slide show by choosing START SHOW.
 - For those images you don't want to include in the slide show, select the image from the Slide Show Order screen, and then press the CLEAR button.

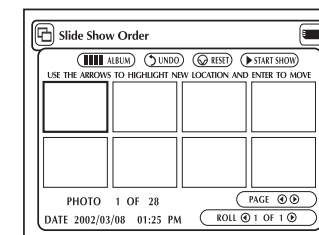

NOTE


- Slide Show order will reset when you turn player off.

Menu Description

- **ALBUM**: Takes you to Photo Album.
- **UNDO**: Restores the image you moved most recently to its original location.
- **RESET**: Restores all the images to their original locations.
- **START SHOW**: Begins the slide show.

Photo View

- 1 Use the UP/DOWN/LEFT/RIGHT buttons on the remote control to select the desired image from the Photo Album screen, and then press the ENTER button.
 - The selected image will appear on the TV screen.
- 2 Use the UP/DOWN/LEFT/RIGHT buttons on the remote control to move to the menu item you want, and then press the ENTER button.
 - If there is no input for 5 seconds, the Photo View menu will disappear. To view the menu again, press the UP/DOWN/LEFT/RIGHT button.

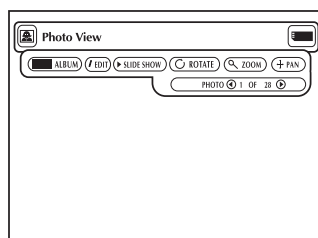


Menu Description

- **ALBUM:** Takes you to Photo Album.
- **EDIT:** You can apply various effects to the selected image.
This is only for viewing, the edited image cannot be saved.
- **SLIDE SHOW:** Begins the slide show.
- **ROTATE:** Each time the ENTER button is pressed, the image will rotate clockwise 90 degrees.
- **ZOOM:** Each time the ENTER button is pressed, the image will enlarge up to 6X
Normal --> 2X --> 4X --> 6X --> Normal
- **PAN:** Press the ENTER button followed by the UP/ DOWN/ LEFT or RIGHT button to move the image in the direction of the arrow.
- **PHOTO 1 OF 11:** When the Photo menu item is highlighted, the LEFT/RIGHT button move to the next previous images.

Edit Photo

- 1 From the Photo View screen, use the UP/DOWN/LEFT/RIGHT buttons to select EDIT, and then press the ENTER button.
 - The Edit Photo menu appears.
- 2 Use the UP/DOWN/LEFT/RIGHT buttons on the remote control to move to the menu item you want, and then press the ENTER button.
 - If there is no input for 5 seconds, the Edit Photo menu will disappear. To view the menu again, press the UP/DOWN/LEFT/RIGHT button.

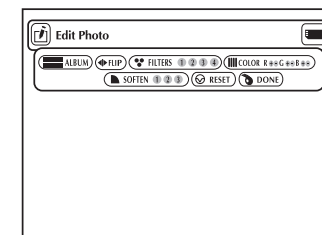

Menu Description

- **ALBUM :** Takes you back to the Photo Album.
- **FLIP:** Shows the mirror image.
- **FILTERS 1234:** You can apply various effects to the selected image.
 - 1: Black and white filter.
 - 2: Sepia (brown) filter.
 - 3: Image negative filter.
 - 4: Color negative filter.
- To restore the image to its original state, select RESET from the menu, and then press the ENTER button.
- **COLOR R + G + B**
Adjust Red, Green and Blue color balances each time ENTER is pressed.
- **SOFTEN 123:** Highlight 1 of 3 desired effects: 1) softens edges, 2) blurs the image and 3) creates an impressionist painting effect.
- **RESET:** Restores the image to its original state before the change was made.
- **DONE:** Returns you to the Photo View screen.

Using the Setup Menu

The Setup menu lets you customize your DVD player by allowing you to select various language preferences, set up a parental level, even adjust the player to the type of television screen you have.

1 With the unit in Stop mode, press the SETUP button on the remote.

1 Language

- **Player Menu:** Setup of the Display Language
Use the Player preference menu to select the language for the player's on-screen displays.
- **Disc Menu:** Setup of the Menu Language
Use the Menu preference menu to select the language you want a DVD's disc menu to be displayed in.
- **Audio:** Setup of the Audio Language
Use the Audio preference menu to select the soundtrack language.
- **Subtitle:** Setup of the Subtitle Language
Use the Subtitle preference menu to select the language the disc's subtitles are to be displayed in.

2 Parental : Setup of the Parental Level

Allows users to set the level necessary to prevent children from viewing unsuitable movies such as those with violence, adult subject matter, etc.

3 Audio : Setup of the Audio Options

4 Display : Setup of the Display Options

Use to select which type of screen you want to watch and several display options.

2 Use the UP/DOWN buttons on the remote to access the different features.

3 Press the ENTER button to access the sub features.

To make the setup screen disappear after setting up, press the SETUP button again.



NOTE

Depending on the disc, some Setup Menu selections may not work.

Setting Up the Language Features

If you set the player menu, disc menu, audio and subtitle language in advance, they will come up automatically every time you watch a movie.

Using the Player Menu Language

1 With the unit in Stop mode, press the SETUP button. Then press the ENTER button.

2 Use the UP/DOWN buttons to select the **Player Menu**.


3 Press the ENTER button.

4 Use the UP/DOWN buttons to select 'English'.

5 Press the ENTER button.

- English is selected and the screen returns to SETUP MENU.
- To make the SETUP MENU disappear, press the RETURN button.

e.g Setting up in English.

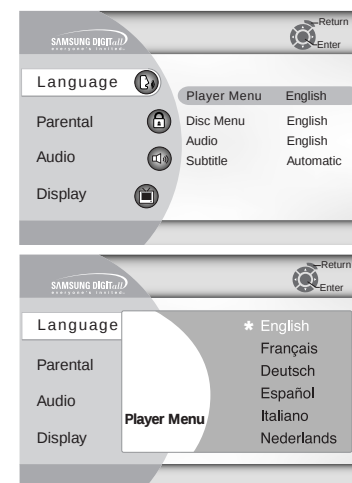

Using the Disc Menu Language

This function changes the text language only on the disc menu screens.

1 With the unit in Stop mode, press the SETUP button. Then press the ENTER button.

2 Use the UP/DOWN buttons to select **Disc Menu**.

3 Press the ENTER button.


4 Use the UP/DOWN buttons to select 'English'.

- Select "Others" if the language you want is not listed.

5 Press the ENTER button.

- English is selected and the screen returns to SETUP MENU.

e.g Setting up in English.

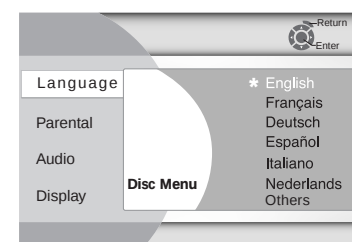

CHANGING
SETUP MENU

Setting Up the Language Features


Using the Audio Language

- 1 With the unit in Stop mode, press the SETUP button. Then press the ENTER button.
- 2 Press the UP/DOWN buttons to move to **Audio**.
- 3 Press the ENTER button.
- 4 Press the UP/DOWN buttons to select 'English'.
 - Select "Original" if you want the default soundtrack language to be the original language the disc is recorded in.
 - Select "Others" if the language you want is not listed.
- 5 Press the ENTER button.
 - English is selected and the screen returns to SETUP MENU.



Using the Subtitle Language

- 1 With the unit in Stop mode, press the SETUP button. Then press the ENTER button.
- 2 Use the UP/DOWN buttons to select **Subtitle**.
- 3 Press the ENTER button.
- 4 Use the UP/DOWN buttons to select 'English'.
 - Select "Automatic" if you want the subtitle language to be the same as the language selected as the audio preference.
 - Select "Others" if the language you want is not listed. Some discs may not contain the language you select as your initial language; in that case the disc will use its original language setting.
- 5 Press the ENTER button.
 - English is selected and the screen returns to SETUP MENU.

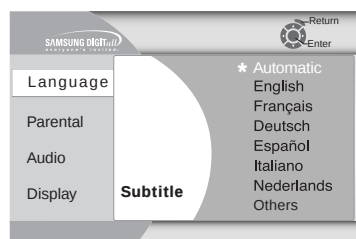

NOTE

- If the selected language is not recorded on the disc, the original pre-recorded language is selected.
- **How to make the SETUP MENU disappear or return to menu screen during set up;** Press RETURN button.

Setting Up the Parental Control

The Parental Control function works in conjunction with DVDs that have been assigned a rating - which helps you control the types of DVDs that your family watches. There are up to 8 rating levels on a disc.

- 1 With the unit in Stop mode, press SETUP button.
- 2 Use UP/DOWN to select **Parental**. Press ENTER. The Parental Control screen appears.
- 3 Use LEFT/RIGHT to select On if you want to use a password. The Enter Password screen appears.
- 4 Enter your password. The Re-enter Password screen appears to confirm the password. Enter your password again. The Parental Control screen appears.
- 5 **About the Rating Level ;**

The Rating Level will work only when Use Password is set to On. To unlock the player, use LEFT/RIGHT to select Off. Use UP/DOWN to select Rating level. Press ENTER.


 - Use UP/DOWN to select the level(e.g. Level 6) and press ENTER. Discs that contain Level 7 will now not play.
 - To cancel the rating level, use LEFT/RIGHT to select Off in Use Password.

6 About Change Password;


- Use UP/DOWN to select Change Password. The Change Password screen appears.
- Enter your new password. Re-enter the new password again.

NOTE

- **How to make the SETUP MENU disappear or return to menu screen during set up;** Press RETURN button.
- If you have forgotten your password, see Forgot Password in the Troubleshooting Guide.

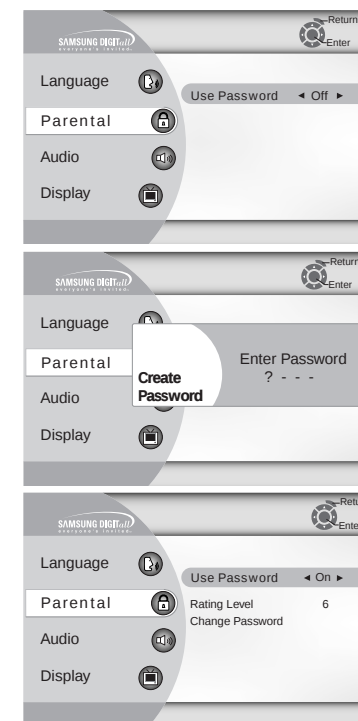


e.g Setting up in LEVEL6.

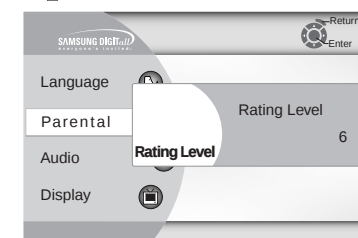

Setting Up the Audio

- 1 With the unit in Stop mode, press the SETUP button.
- 2 Use the UP/DOWN buttons to select **Audio**. Then press the ENTER button.
- 3 Use the UP/DOWN buttons to select the desired item. Then press the LEFT/RIGHT buttons.

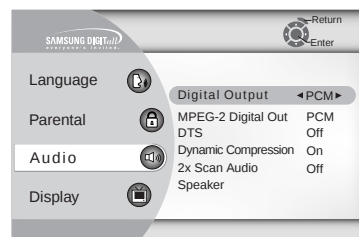

1 Digital Output

1. **PCM** : Converts to PCM(2CH) audio. Select PCM when using the Analog Audio Outputs.
2. **Bitstream** : Converts to Dolby Digital Bitstream (5.1CH). Select Bitstream when using the Digital Audio Output.

NOTE : Be sure to select the correct Digital Output or no audio will be heard.

3 DTS

1. **Off** : Doesn't output digital signal.
2. **On** : Outputs DTS Bitstream via digital output only. Select DTS when connecting to a DTS Decoder.

5 2X Scan Audio

1. **Off** : Turns 2X audio off. Though 2X Scan Audio is ON in the SETUP MENU, no sound will be heard on discs which are recorded with LPCM, DTS or MPEG-2 Audio.
2. **On** : Turns 2X audio on.

2 MPEG-2 Digital Out

1. **PCM** : Converts to PCM(2CH) audio. Select PCM when using the Analog Audio Outputs.
2. **Bitstream** : Converts to MPEG-2 Digital Bitstream (5.1CH or 7.1CH). Select Bitstream when using the Digital Audio Output.

4 Dynamic Compression

1. **On** : To select dynamic compression.
2. **Off** : To select the standard range.


6 Speaker

NOTE

- How to make the SETUP MENU disappear or return to menu screen during set up; Press RETURN button.
- Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.
- "DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

Surround Sound Speaker Setup

- 1 Press the SETUP button in play or stop mode.
- 2 Press the UP/DOWN buttons to select Audio. Then press the ENTER button.
- 3 Use the UP/DOWN buttons to select Speaker. Then press the ENTER button.

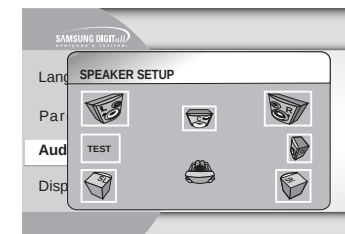

- 4 Use the UP/DOWN or LEFT/RIGHT buttons to select the desired item. Then press the ENTER button.

Setting up SPEAKER MODE

- If you have connected the system to a speaker with low frequencies of 100Hz or below, select 'Found (Large illustration)'.
- If you have connected the system to a speaker without low frequencies of 100Hz or below, select 'Found (Small illustration)'. If you don't connect a subwoofer, always select 'Found (Large illustration)' for the Front Speakers (L/R).
- When you don't have a particular speaker connected, select 'Not found (No illustration visible)'.

Setting up TEST

The test output signals come clockwise starting from the Front Speaker (L). Adjust Channel Balance to match to the volume of test signals memorized in the system.


FRONT(L) → CENTER → FRONT(R) → SUBWOOFER
→ SURROUND(R) → SURROUND(L)

NOTE

- How to make the SETUP MENU disappear or return to menu screen during set up. Press RETURN button.
- The subwoofer test output signal is lower than the other speakers.
- The MPEG Multichannel logo is a trademark registered by PHILIPS Corporation.

Setting Up the Display

- 1 With the unit in Stop mode, press the SETUP button.
- 2 Use the UP/DOWN buttons to select **Display**. Then press the ENTER button.
- 3 Use the UP/DOWN buttons to select the desired item. Then press the LEFT/RIGHT buttons.

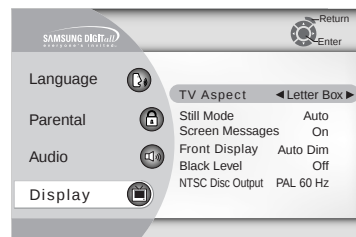

1 TV Aspect

Depending on the type of television you have, you may want to adjust the screen setting (aspect ratio).

1. Letter Box :
Select when you want to see the total 16:9 ratio screen DVD supplies, even though you have a TV with a 4:3 ratio screen. Black bars will appear at the top and bottom of the screen.
2. Pan-Scan :
Select this for conventional size TVs when you want to see the central portion of the 16:9 screen. (Extreme left and right side of movie picture will be cut off.)
3. Wide :
You can view the full 16:9 picture on your widescreen TV.

2 Still Mode

These options will help prevent picture shake in still mode and display small text clearer.

1. Auto : When selecting Auto, Field/Frame mode will be automatically converted.
2. Frame : Select this feature when you want to see small letters more clearly in the Auto mode.
3. Field : Select this feature when the screen shakes in the Auto mode.

3 Screen Messages

Use to turn on-screen messages On or Off.

4 Front Display

Adjust the brightness of the unit's front panel display.

1. Auto Dim : Makes the Front Panel Display dim automatically when playing a DVD.
2. Dim : Makes the Front Panel Display dim.
3. Bright : Makes the Front Panel Display bright.

5 Black Level

Adjusts the brightness of the screen.(On/Off)

You are unable to adjust picture brightness in case you select progressive video out.

6 NTSC Disc Output

"NTSC" if the screen only has one NTSC-video entrance. If this is not the case, you can choose to leave "PAL 60Hz" as is.

NOTE

- How to make the SETUP MENU disappear or return to menu screen during set up;
Press the RETURN button.

Controlling a TV with the Remote

The remote can also be set up to control most TVs. To program the remote, use the code that corresponds to your brand.

TV Codes	
CODE	BRAND
01	SAMSUNG_4
02	SAMSUNG_6, LG, LOEWE, PHILIPS, FINLUX, YOKO, LOEWE OPTA, MITSUBISHI, PHONOLA, RADIOLA, SCHNEIDER
03	SAMSUNG_1
04	SAMSUNG_2
05	SAMSUNG_3
06	SAMSUNG_5
07	TOSHIBA
08	PANASONIC_4
09	GRUNDIG, BLAUPUNKT, SIEMENS
10	SHARP
11	HITACHI
12	SANYO, AKAI, FISHER
13	HITACHI, SABA, THOMSON, NORDMENDE
14	HITACHI, NORDMENDE, SABA, TELEFUNKEN, THOMSON, BRANDT, FERGUSON, PIONEER, TELEVA
15	SONY
16	TOSHIBA, SANYO, SHARP, SONY, MITSUBISHI
17	TOSHIBA, GRUNDIG, FINLUX
18	TOSHIBA
19	TOSHIBA
20	PHILIPS, PHONOLA, RADIOLA
21	TOSHIBA, GRUNDIG, CGE, IMPERIAL, MIVAR
22	PHILIPS, SABA, BANG&OLUFSEN, BRIONVEGA, FINLUX, FORMENTI, LOEWE OPTA, METZ, WEGA, PHONOLA, RADIOMARELLI, SINGER, SINUDYNE
23	NOKIA, PANASONIC, SABA, PIONEER, REZ, SELECO, SALORA
24	HITACHI, NORDMENDE, PANASONIC, SABA, TELEFUNKEN, THOMSON, CONTINENTAL, EDISON
25	PANASONIC_2
26	PANASONIC_3
27	PANASONIC_6
28	TELEFUNKEN
29	MIVAL
30	LG_2
31	SHARP_2
32	JVC
33	THOMSON ASIA
34	THOMSON ASIA

1 Turn on the TV.

2 Point the DVD's remote at the TV.

3 While holding the TV POWER button down, enter the code for your brand.

4 If the TV turns off, setup is complete.

Enter other codes of the same brand if the first code does not work.

5 To operate the TV, use the "TV Function Buttons" described on page 11.

e.g

For SAMSUNG 4 TVs

While holding down the TV POWER button, enter 0 and then 1.

NOTE

The remote may not be able to control every model TV of the brands listed.

Troubleshooting

Before requesting service (troubleshooting), please check the following.

Problem	Action	Page
No operations can be performed with remote.	- Check the batteries in the remote. May need replacing. - Operate the remote control at a distance of no more than 20 feet. - Remove batteries and hold down one or more buttons for several minutes to drain the microprocessor inside the remote to reset it. Reinstall batteries and try remote again.	P4
Disc does not play.	- Ensure that the disc is installed with the label side facing up. - Check the region number of the DVD.	P7
5.1 channel sound is not being reproduced.	5.1 channel sound is reproduced only when the following conditions are met. : - The DVD player is connected with the proper amplifier - The disc is recorded with 5.1 channel sound. - Check whether the disc being played has the "Dolby 5.1 ch" mark on the outside. - Check if your audio system is connected and working properly. - In a SETUP Menu, is the Audio Output set to Bitstream?	P12
The  icon appears on screen.	- The features or action cannot be completed at this time because: - The DVD's software restricts it. - The DVD's software doesn't support the feature (e.g., angles). - The feature is not available at the moment. - You've requested a title or chapter number or search time that is out of range.	P15
Disc Menu doesn't appear.	Check if the disc has a Menu.	P40~41
Play mode differs from the Setup Menu selection.	Some of the functions selected in the Setup Menu may not work properly if the disc is not encoded with the corresponding function.	P40~46
The screen ratio cannot be changed.	The Screen Ratio is fixed on your DVDs.	P46
No audio.	Make sure you have selected the correct Digital Output in the Audio Options Menu.	P44~45
Forgot password	Press power on from a cold start with no disc in the unit. Press the STOP and PLAY buttons simultaneously on the front panel for three seconds. The Select Menu Language display will appear. Select the desired language button. Press the SETUP button on the remote control to select the Parental Mode. The Parental Mode is now unlocked as indicated on the display. Press the DOWN button to select Parental. Press ENTER and the Create Password display will appear. You can now set your rating level and change your password to a new number.	P43
If you experience other problems.	- Go to the contents and find the section of the instruction book that contains the explanations regarding the current problem, and follow the procedure once again. - If the problem still cannot be solved, please contact your nearest authorized service center.	

Specifications

General	Power Requirements	AC 110~240V, 50/60 Hz
	Power Consumption	15 W
	Weight	2.8 Kg
	Dimensions	430mm X 240mm X 79mm
	Operating Temperature Range	+5°C to +35°C
	Operating Humidity Range	10 % to 75 %
Disc	DVD (DIGITAL VERSATILE DISC)	Reading Speed : 3.49 m/sec. Approx. Play Time (Single Sided, Single Layer Disc) : 135 min.
	CD : 12Cm (COMPACT DISC)	Reading Speed : 1.2 to 1.4 m/sec. Maximum Play Time : 74 min.
	CD : 8Cm (COMPACT DISC)	Reading Speed : 1.2 to 1.4 m/sec. Maximum Play Time : 20 min.
	VCD : 12Cm	Reading Speed : 1.2 to 1.4 m/sec. Maximum Play Time : 74 min. (Video + Audio)
Video Output	Composite Video	1 channel : 1.0 Vp-p (75 Ω load)
	Component Video	Y : 1.0 Vp-p (75 Ω load) Pr : 0.70 Vp-p (75 Ω load) Pb : 0.70 Vp-p (75 Ω load)
	S-VIDEO	Luminance Signal : 1.0 Vp-p (75 Ω load) Chrominance Signal : 0.286 Vp-p (75 Ω load)
Audio Output	2 channel	L(1/L), R(2/R)
	*Frequency Response	48 kHz Sampling : 4 Hz to 22 kHz 96 kHz Sampling : 4 Hz to 44 kHz
	*S/N Ratio	110 dB
	*Dynamic Range	100 dB
	*Total Harmonic Distortion	0.004 %

*: Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.