

## GT-C3262 user guide

 
- Some of the contents in this guide may differ from your device depending on the software of the device or your service provider.
- Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time.
- This product includes certain free/open source software. The exact terms of the licenses, disclaimers, acknowledgements and notices are available on the Samsung's website [opensource.samsung.com](http://opensource.samsung.com).

[www.samsung.com](http://www.samsung.com)

Printed in Korea  
GH68-37378D  
English (EU), 09/2012, Rev. 1.0



## Device layout

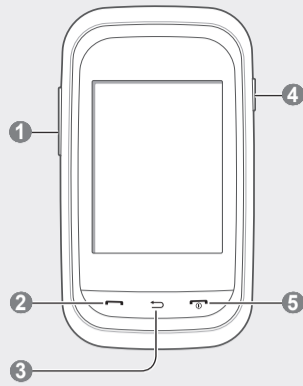

1

### Volume key

From the Home screen, adjust the phone's volume; Make a fake call (down); Send an SOS message  
*See "Make fake calls"*  
*See "Activate and send an SOS message"*

2

### Dial Key

Make or answer a call; From the Home screen, retrieve recently dialed, missed, or received numbers

3

### Back key

In the Menu screen, cancel an input and return to the Home screen

4

### Keypad lock key

From the Home Screen, lock or unlock the keypad (press and hold)

5

### Power key

Turn the device on or off (press and hold); End a call; In the Menu screen, cancel an input and return to the Home screen

 
Your device displays the following status indicators on the top of the screen:

Icon	Description	Icon	Description
	No SIM card		SOS message feature activated
	No signal		Normal profile activated
	Signal strength <sup>1</sup>		Silent profile activated
	Network searching		Browsing the web
	GPRS network connected		Bluetooth feature activated
	EDGE network connected		Alarm activated
	Battery power level		Music playback in progress
	Current time		Music playback paused
	Call in progress		FM radio on
	Call diverting activated		Roaming (outside of normal service area)
	New text message (SMS)		Memory card inserted
	New multimedia message (MMS)		
	New voicemail message		
	New push message		

1. The icon may vary depending on your SIM card setting.


## Installing the SIM cards and battery

- Remove the back cover and insert the SIM cards.

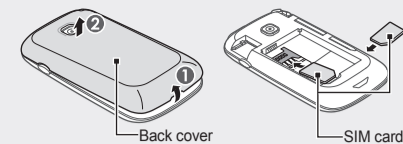


- Do not bend or twist the back cover excessively. Doing so may damage the cover.

 - Insert the battery and replace the back cover.

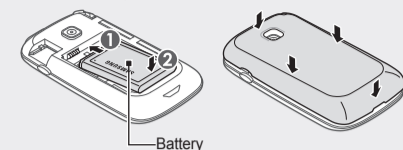

## Charging the battery

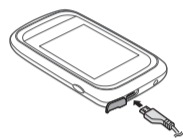 

To AC power outlet


- Plug a charger into the multipurpose jack.
- Unplug the charger when charging is complete.

- Use only Samsung-approved chargers, batteries, and cables. Unapproved chargers or cables can cause batteries to explode or damage your device.
- Do not remove the battery before removing the charger. This may damage the device.

- To save energy, unplug the charger when not in use. The charger does not have a power switch, so you must unplug the charger from the electric socket when not in use to avoid wasting power. The device should remain close to the electric socket while charging.
- If the device receives an unstable power supply while charging, the touch screen may not function. If this happens, unplug the charger from the device.

## Installing a memory card (optional)

 Your device accepts memory cards with maximum capacities of 32 GB. Depending on the memory card manufacturer and type, some memory cards may not be compatible with your device.



Memory card

Insert the memory card as shown in the drawing.

- Formatting the memory card on a computer might cause incompatibility with your device. Format the memory card only on the device.
- Frequent writing and erasing of data shortens the lifespan of memory cards.
- Do not use sharp tools to remove the memory card from the device.

## Turning your device on or off

### Turn your device on

Press and hold [], then enter your PIN and press <Confirm>, if necessary.

### Turn your device off

Press and hold [].

- If the battery remains fully discharged or removed from the device, the time and date is reset.

## Accessing menus

To access your device's menus or options,

Drag on the touch screen	Scroll left or right to the Menu screen.
Tap	Launch a menu or an application.
Menu	Open the Menu screen.
[]	Return to previous screen.
[]	Close a menu or an application and return to the Home screen.



- When you access a menu requiring the PIN2, you must enter the PIN2 supplied by the SIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damage caused by illegal software.

## Using the touch screen and a stylus

Your device's touch screen lets you easily select items or perform functions. Learn basic actions to use the touch screen with a stylus.

- Do not use sharp tools to avoid scratching the touch screen.

Tap	Touch the screen once to select or launch a menu, option, or application.
Tap and hold	Tap an item and hold for more than 2 seconds.
Drag	Tap and hold an item, then drag it to move.

### Symbol mode

Select an appropriate virtual key to enter a symbol.

### Other features for text input

Tap []	Move the cursor.
Tap []	Delete a character one by one.
Tap and hold []	Delete characters quickly.
Tap 1	Enter punctuation marks.
Tap []	Change to uppercase. Tap twice to type all words in uppercase.

## Making or answering a call

- To make a call, tap **Keypad**, enter a phone number and press [].
- To end a call, press [].
- To call a recently dialed number, press [] to select a number, and press [] again to dial the number.
- To make a call using the phonebook, tap **Menu** → **Contacts**, select a contact and press [].
- To answer an incoming call, press [].

## Sending and viewing messages

### Menu → Messages

#### Send a message

- Tap **Create message**.
- Tap the recipients filed → an option and select a contact or enter a number manually.
- Select the text input field and enter a text message.  
*See "Enter text".*
- To attach files with the message, tap **Add media** and select files.
- Tap **Send**.

#### View a message

Tap **Inbox** and select a message to read.

## Managing your contacts

Save your data such as names, phone numbers and personal information in the device memory, SIM card, or the memory card.

### Menu → Contacts

#### Add a new contact

- Tap **Create** → a memory location (if necessary).
- Select a number type (if necessary)
- Enter contact information and tap **Save**.

#### Edit a contact

- Select a contact and tap **Edit**.
- Edit items and tap **Done**.
- Tap **Save**.

#### Delete a contact

Select a contact and tap **More** → **Delete**.

## Using the camera

### Menu → Camera

#### Take a photo

- Rotate the device anti-clockwise to landscape view.
- Aim the lens at the subject and make any adjustments by tapping [].
- Tap [] to take a photo. Photos are saved automatically.

#### Record a video

- Tap [] to switch to Camcorder.
- Rotate the device anti-clockwise to landscape view.
- Aim the lens at the subject and make any adjustments by tapping [].
- Tap [] to start recording.
- Tap [] to end recording. Videos are saved automatically.

#### View photos and videos

From the Home screen, tap **Menu** → **My Files** → **Images** or **Videos** and select an item to view.

## Listening to music

### Menu → Music

Keys	Function
[]	Play, pause, or resume a music.
[]	Skip backward (press); Scan backward in a file (press and hold).
[]	Skip forward (press); Scan forward in a file (press and hold).

## Browsing the web

### Menu → Internet

- When you access Internet for the first time, you might be prompt to create an Internet profile.

### Navigate web pages

Keys	Function
[]	Return to the previous page.
[]	Open browser options.

### Bookmark your favourite web page

- Tap [] → **Add**.
- Enter details and tap **Save**.

## Listening to the FM radio

### Menu → FM Radio

#### Activate the FM radio

- Plug a headset into the device.
- Tap [] to turn on the FM radio.
- Tap **Yes** to start automatic tuning. You will be asked to start automatic tuning when accessing the FM radio for the first time.
- Control the FM radio using the following keys:

Keys	Function
[]	Turn the FM radio on or off.
[<< / >>]	Fine-tune the frequency.

#### Add a radio station to the favourites list

- Plug a headset into the device and select a station.
- Tap [] to add the station to the favourites list.

## Using widgets

Use widgets to perform specific tasks for applications such as contacts, calendar, memo, and many more.

#### Launch a widget

From the Home screen, scroll left or right to a panel and select a widget.

#### Organize your widgets

- From the Home screen, tap [] at the top left corner of the screen.
- Read the widget disclaimer and tap **I agree** (if necessary)
- Tap and hold a widget and drag it to the screen, and tap [].

- Some widgets require connection to web services. Selecting a web-based widget might incur additional charges.
- Available widgets might vary, depending on your region or service provider.

## Using the Bluetooth feature

### Menu → Applications → Bluetooth

#### Turn on the Bluetooth feature

- Tap **Settings** → **Bluetooth** to turn on.
- Set **My phone's visibility** to allow other devices to search your device.

#### Find and pair with other Bluetooth devices

- Tap **Search** to find other Bluetooth devices.
- Select a device.
- Tap **Yes** to match the PIN between the devices.
- When the other device accepts the connection, pairing is complete.

- You might have to enter a PIN, depending on the device.

#### Turn off the Bluetooth feature

Tap **Settings** → **Bluetooth** to turn off.

#### Send data using the Bluetooth feature

- Select items to send from one of your device's applications.
- Tap **Send via** → **Bluetooth**.

## Customising your device


Settings control how applications and functions operate. Change them to customise the device. Appearances, sound profiles, call actions and many more can be customised.

### Menu → Settings

Menu	Description
<b>SIM cards management</b>	Change the SIM/USIM card settings.
<b>Sound profiles</b>	Change alert type, ringtone, volume, etc.
<b>Display</b>	Alter wallpaper, theme, brightness, etc.
<b>Time and date</b>	Change time and date of the device.
<b>Phone</b>	Change device language, etc.
<b>Call</b>	Set auto reject, answering mode, call forwarding, fake call, etc.
<b>Backup manager</b>	Back up or restore your data.
<b>Security</b>	Set locks or change passwords.
<b>PC connections</b>	Set connection settings with a computer.
<b>Network</b>	Change network profiles settings.
<b>Memory</b>	Clear memory, manage the memory card, or set default memory location.
<b>Reset</b>	Reset the device.



## Adjusting the sound profiles

 **Menu** → **Settings** → **Sound profiles**

### Change the ringtone

- Select a profile.
- Tap **Voice call ringtone**.
- Choose a ringtone and tap **Set**.

### Change the message alert tone


- Select a profile.
- Tap **Message alert type**.
- Choose a tone and tap **Save**.

### Adjust the volume of the ringtone

- Select a profile.
- Tap **Volume** → **Call alert**.
- Adjust the volume and tap **Save**.

### Adjust the volume of voice during a call

While a call is in progress, press the Volume key up or down to adjust the volume.

 To switch to another profile, select it from the list.

## Backing up your data

Back up your data, such as contacts, messages, calendar, and tasks to your memory card. To use this feature, a memory card must be installed.

 **Menu** → **Settings** → **Backup manager**

### Back up your data

Tap **Backup**, select items to back up and tap **Backup**.

### Restore your data

Tap **Restore**, select items to restore and tap **Restore**.

## Making fake calls

 **Menu** → **Settings** → **Call** → **Fake call**

### Activate the fake call feature

- Tap **Fake call hot key** to turn on.
- Change caller name or number (if necessary).

### Make a fake call

Press and hold the Volume key down.

## Managing your SIM cards

Your device supports Dual SIM mode that allows the use of two networks without changing the SIM card.

 **Menu** → **Settings** → **SIM cards management**

### Activate SIM cards

- Tap **Network** and select a SIM card.
- Tap **On** or **Off** to activate or deactivate the network, and **Save**.

### Switch SIM cards automatically

- Tap **SIM auto switch** → **Activation** to activate the auto switch feature.
- Set starting and ending time to use each SIM card.

### Change names and icons of the SIM cards


- Tap **Register card** and select a SIM card.
- Change the name and icon of the card.

### Activate the Dual SIM feature

- Tap **Dual SIM always on** to activate the Dual SIM feature.
- Select an option and tap **Save**.

## Using the SOS message feature

Send an SOS message to your family or friends in an emergency.

 **Menu** → **Messages** → **Settings** → **SOS messages**

### Activate the SOS message feature


- Tap **Sending options** → **Sending SOS** to turn on.
- Enter recipient and tap **Save**.
- Set the number of times to repeat the message.
- Edit SOS message (if necessary).
- Press the Back key → **Yes**.

### Send an SOS message

- With the touch screen and keys locked, press the Volume key four times to send an SOS message to preset numbers.
- To exit SOS mode, press [**⌂**].



## Safety information



This product meets applicable national SAR limits of 2.0 W/kg. The specific maximum SAR value can be found in the SAR information section of this manual.

www.sar-tick.com

### Trademarks

- SAMSUNG and the SAMSUNG logo are registered trademarks of Samsung Electronics.
- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide.
- All other trademarks and copyrights are the property of their respective owners.

This safety information contains content for mobile devices. Some content may be not applicable to your device. To prevent injury to yourself and others or damage to your device, read the safety information about your device before using the device.

### Warning: Prevent electric shock, fire, and explosion

**Do not use damaged power cords or plugs, or loose electrical sockets**

**Do not touch the power cord with wet hands, or disconnect the charger by pulling on the cord**

**Do not bend or damage the power cord**

**Do not use your device while charging or touch your device with wet hands**

**Do not short-circuit the charger or the battery**

**Do not drop or cause an impact to the charger or the battery**

**Do not charge the battery with chargers that are not approved by the manufacturer**

**Do not use your device during a thunderstorm**  
Your device may malfunction and your risk of electric shock is increased.

**Do not handle a damaged or leaking Lithium Ion (Li-Ion) battery**

For safe disposal of your Li-Ion batteries, contact your nearest authorised service centre.

**Handle and dispose of batteries and chargers with care**

- Use only Samsung-approved batteries and chargers specifically designed for your device. Incompatible batteries and chargers can cause serious injuries or damage to your device.

- Never dispose of batteries or devices in a fire. Follow all local regulations when disposing of used batteries or devices.
- Never place batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

**Protect the device, batteries, and chargers from damage**

- Avoid exposing your device and batteries to very cold or very hot temperatures.
- Extreme temperatures can cause the deformation of the device and reduce the charging capacity and life of your device and batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and – terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

### Caution: Follow all safety warnings and regulations when using your device in restricted areas

**Do not use your device near other electronic devices**

Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices.

**Do not use your device near a pacemaker**

- Avoid using your device within a 15 cm range of a pacemaker, if possible, as your device can interfere with the pacemaker.
- To minimise possible interference with a pacemaker, use your device only on the side of your body that is opposite the pacemaker.

**Do not use your device in a hospital or near medical equipment that can be interfered with by radio frequency**

If you use medical equipment, contact the equipment manufacturer before using your device to determine whether or not the equipment will be affected by radio frequencies emitted by the device.

**If you are using a hearing aid, contact the manufacturer for information about radio interference**

The radio frequency emitted by your device may interfere with some hearing aids. Before using your device, contact the manufacturer to determine whether or not your hearing aid will be affected by radio frequencies emitted by the device.

**Turn off the device in potentially explosive environments**

- Turn off your device in potentially explosive environments instead of removing the battery.
- Always comply with regulations, instructions and signs in potentially explosive environments.
- Do not use your device at refuelling points (petrol stations), near fuels or chemicals, or in blasting areas.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

**Turn off your device when in an aircraft**

Your device may interfere with the aircraft's electronic navigation instruments.

**Your device may interfere with automotive equipment**

Electronic devices in your car may malfunction, due to radio interference from your device. Contact the manufacturer for more information.

- Call roadside assistance or a special, non-emergency assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle that you know to be stolen, call a number that is designated for reporting these types of situations.

### Proper care and use of your mobile device

**Keep your device dry**

- Humidity and liquids may damage the parts or electronic circuits in your device.
- Do not turn on your device if it is wet. If your device is already on, turn it off and remove the battery immediately (if the device will not turn off or you cannot remove the battery, leave it as-is). Then, dry the device with a towel and take it to a service centre.
- Liquids will change the colour of the label that indicates water damage inside the device. Water damage to your device can void your manufacturer's warranty.

**Do not use or store your device in areas with high concentrations of dust or airborne materials**

Dust or foreign materials can cause your device to malfunction and may result in fire or electric shock.

**Store your device only on flat surfaces**

If your device falls, it may be damaged.

**Do not store your device in very hot or very cold areas. It is recommended to use your device at temperatures from 5 °C to 35 °C**

- Your device can explode if left inside a closed vehicle, as the internal temperature can reach up to 80 °C.
- Do not expose your device to direct sunlight for extended periods of time (on the dashboard of a car, for example).
- Store the battery at temperatures from 0 °C to 45 °C.

**Do not store your device with metal objects, such as coins, keys, and necklaces**

- Your device may be scratched or may malfunction.
- If the battery terminals come into contact with metal objects, this may cause a fire.

**Do not store your device near magnetic fields**

- Your device may malfunction or the battery may discharge from exposure to magnetic fields.
- Magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic fields.
- Do not use carrying cases or accessories with magnetic closures or allow your device to come into contact with magnetic fields for extended periods of time.

**Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers**

- The battery may leak.
- Your device may overheat and cause a fire.

**Do not drop your device or cause impacts to your device**

- The screen of your device may be damaged.
- If bent or deformed, your device may be damaged or parts may malfunction.

**Do not use your device or applications for a while if the device is overheated**

Prolonged exposure of your skin to an overheated device may cause low temperature burn symptoms, such as red spots and pigmentation.

**If your device has a camera flash or light, do not use a flash close to the eyes of people or pets**

Using a flash close to the eyes may cause temporary loss of vision or damage to the eyes.

**Use caution when exposed to flashing lights**

- While using your device, leave some lights on in the room and do not hold the screen too close to your eyes.
- Seizures or blackouts can occur when you are exposed to flashing lights while watching videos or playing Flash-based games for extended periods. If you feel any discomfort, stop using the device immediately.

**Reduce the risk of repetitive motion injuries**

When you repetitively perform actions, such as pressing keys, drawing characters on a touch screen with your fingers, or playing games, you may experience occasional discomfort in your hands, neck, shoulders, or other parts of your body. When using your device for extended periods, hold the device with a relaxed grip, press the keys lightly, and take frequent breaks. If you continue to have discomfort during or after such use, stop using the device and consult a physician.

**Ensure maximum battery and charger life**

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purposes.

**Use manufacturer-approved batteries, chargers, accessories and supplies**

- Using generic battery or charger may shorten the life of your device or cause the device to malfunction.
- Samsung cannot be responsible for the user's safety when using accessories or supplies that are not approved by Samsung.

**Do not bite or suck the device or the battery**

- Doing so may damage the device or cause explosion.
- If children use the device, make sure that they use the device properly.

Maximum SAR for this model and conditions under which it was recorded	
Head SAR	0.762 W/kg


During use, the actual SAR value for this device is usually well below the value stated above. This is because, for purposes of system efficiency and to minimise interference on the network, the operating power of your mobile device is automatically decreased when full power is not needed for the call. The lower the power output of the device, the lower its SAR value.

Organisations such as the World Health Organisation and the US Food and Drug Administration have suggested that if people are concerned and want to reduce their exposure, they could use a hands-free accessory to keep the wireless device away from the head and body during use, or reduce the amount of time spent using the device.

For more information, visit [www.samsung.com/sar](http://www.samsung.com/sar) and search for your device with the model number.


### Correct disposal of this product

(Waste Electrical & Electronic Equipment)

 (Applicable in countries with separate collection systems) This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal. This EEE is compliant with RoHS.

### Correct disposal of batteries in this product

 (Applicable in countries with separate collection systems) This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

### Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle

While driving, safely operating the vehicle is your first responsibility. Never use your mobile device while driving, if it is prohibited by law. For your safety and the safety of others, use your common sense and remember the following tips:

- Get to know your device and its convenience features, such as speed dial and redial. These features help you reduce the time needed to place or receive calls on your mobile device.
- Position your device within easy reach. Make sure you can access your wireless device without taking your eyes off the road. If you receive an incoming call at an inconvenient time, let your voicemail answer it for you.
- Suspend calls in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and heavy traffic can be hazardous.
- Do not take notes or look up phone numbers. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility of driving safely.
- Dial sensibly and assess the traffic. Place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary.
- Do not engage in stressful or emotional conversations that may be distracting. Make the person you are talking to aware that you are driving and suspend conversations that could potentially divert your attention from the road.
- Use your device to call for help. Dial a local emergency number in the case of fire, traffic accidents, or medical emergencies.
- Use your device to help others in emergencies. If you see a car accident, a crime in progress, or a serious emergency where lives are in danger, call a local emergency number.

**Use caution when using the device while walking or moving**

- Always be aware of your surroundings to avoid injury to yourself or others.
- Make sure the headset cable does not become entangled in your arms or on nearby objects.

**Do not carry your device in your back pockets or around your waist**

You could be injured or damage the device if you fall.

**Do not disassemble, modify, or repair your device**

- Any changes or modifications to your device can void your manufacturer's warranty. If your device needs servicing, take your device to a Samsung Service Centre.
- Do not disassemble or puncture the battery, as this can cause explosion or fire.

**Do not paint or put stickers on your device**

Paint and stickers can clog moving parts and prevent proper operation. If you are allergic to paint or metal parts of the device, you may experience itching, eczema, or swelling of the skin. When this happens, stop using the device and consult your physician.

**When cleaning your device:**

- Wipe your device or charger with a towel or an eraser.
- Clean the battery terminals with a cotton ball or a towel.
- Do not use chemicals or detergents.

**Do not use the device if the screen is cracked or broken**

Broken glass or acrylic could cause injury to your hands and face. Take the device to a Samsung Service Centre to have it repaired.

**Do not use the device for anything other than its intended use**

**Avoid disturbing others when using the device in public**

**Do not allow children to use your device**

Your device is not a toy. Do not allow children to play with it as they could hurt themselves and others or damage the device.

**Install mobile devices and equipment with caution**

- Ensure that any mobile devices or related equipment installed in your vehicle are securely mounted.
- Avoid placing your device and accessories near or in an airbag deployment area. Improperly installed wireless equipment can cause serious injury when airbags inflate rapidly.

**Allow only qualified personnel to service your device**

Allowing unqualified personnel to service your device may result in damage to your device and will void your manufacturer's warranty.

**Handle SIM cards or memory cards with care**

- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

**Ensure access to emergency services**

Emergency calls from your device may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternative method of contacting emergency services personnel.

**Keep your personal and important data safe**

- While using your device, be sure to back up important data. Samsung is not responsible for the loss of any data.
- When disposing of your device, back up all data and then reset your device to prevent misuse of your personal information.
- Carefully read the permissions screen when downloading applications. Be particularly cautious with applications that have access to many functions or to a significant amount of your personal information.

- Check your accounts regularly for unapproved or suspicious use. If you find any sign of misuse of your personal information, contact your service provider to delete or change your account information.
- In the event your device is lost or stolen, change the passwords on your accounts to protect your personal information.
- Avoid using applications from unknown sources and lock your device with a pattern, password, or PIN.

**Do not distribute copyright-protected material**

Do not distribute copyright-protected material without the permission of the content owners. Doing this may violate copyright laws. The manufacturer is not liable for any legal issues caused by the user's illegal use of copyrighted material.

### Specific Absorption Rate (SAR) certification information

**THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES**

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines. The guidelines were developed by an independent scientific organisation (ICNIRP) and include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2.0 W/kg.

Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The highest SAR value under the ICNIRP guidelines for this device model is:



### Declaration of Conformity (R&TTE)

**We, Samsung Electronics**

declare under our sole responsibility that the product

GSM Bluetooth Mobile Phone : GT-C3262

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950-1 : 2006 + A1 : 2010
SAR	EN 50360 : 2001 / AC 2006 EN 62209-1 : 2006 EN 62479 : 2010
EMC	EN 301 489-01 V1.8.1 (04-2008) EN 301 489-07 V1.3.1 (11-2005) EN 301 489-17 V2.1.1 (05-2009)
RADIO	EN 301 511 V9.0.2 (03-2003) EN 300 328 v1.7.1 (10-2006)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Forsyth House, Churchfield Road, Wallon-on-Thames, Surrey, KT12 2TD, UK\*  
Identification mark: 0168

The technical documentation kept at :

Samsung Electronics QA Lab,

which will be made available upon request.

(Representative in the EU)

Samsung Electronics Euro QA Lab, Blackbushe Business Park, Saxony Way, Yateley, Hampshire, GU46 6GG, UK\*

2012.07.06

(place and date of issue)

Joong-Hoon Choi / Lab Manager

(name and signature of authorised person)

\* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.