

MAX-G55  
MAX-G56

Three-CD Changer  
MINI-Compact System  
MP3-CD/WMA-CD/CD-R/RW Playback  
user manual



imagine the possibilities

Thank you for purchasing this Samsung product.  
To receive more complete service,  
please register your product at  
[www.samsung.com/global/register](http://www.samsung.com/global/register)



# Safety Warnings

ENG

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK. DO NOT OPEN	
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE REAR COVER (or BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		

**CLASS 1 LASER PRODUCT**  
**KLASSE 1 LASER PRODUKT**  
**LUOKAN 1 LASER LAITE**  
**KLASS 1 LASER APPARAT**  
**PRODUCTO LASER CLASE 1**



This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

## CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product.

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION : INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED, AVOID EXPOSURE TO BEAM.

**WARNING :** To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

**CAUTION :** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

## CAUTION

 
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The Mains plug is used as a disconnect device and shall stay readily operable at any time.

### [Saudi Arabian Standards Organisation only]

THIS APPLIANCE IS FITTED WITH 220V SASO APPROVED PLUG.THE CUSTOMER IS ENTITLED TO A FREE SASO APPROVED 127V PLUG FROM THE LOCAL DEALER.

## WHAT'S INCLUDED

Check for the supplied accessories below.

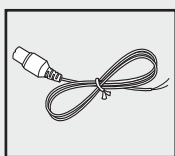

FM Antenna



User's Manual



Remote Control

# Contents

◆ <b>SAFETY WARNINGS</b> .....	2
◆ <b>INSTALLING YOUR MINI-COMPACT SYSTEM</b>	
■ Front Panel View .....	4
■ Rear Panel View(MAX-G55) .....	4
■ Rear Panel View(MAX-G56) .....	5
■ Remote Control .....	5
■ Where to Install Your Mini-Compact System .....	6
■ Connecting your System to the Power Supply .....	6
■ Inserting Remote Control Batteries .....	6
■ Connecting the Loudspeakers .....	6
■ Connecting to an External Source .....	7
■ Connecting the FM Aerial .....	7
■ Demo/Dimmer function .....	8
■ ECO function .....	8
■ Setting the Clock .....	8
◆ <b>CD/MP3/WMA-CD-PLAYER</b>	
■ Loading and Changing Compact Discs .....	9
■ To replay the CD/MP3/WMA-CD .....	9
■ Selecting a CD in the Disc changer .....	10
■ Selecting a Track .....	10
■ Searching for a Specific Music Passage on a CD .....	10
■ Display Function .....	10
■ Repeating One or All Tracks on the Compact Discs .....	11
■ A-B Repeat Playback .....	11
■ Function to skip through 10 track at a time .....	12
■ Remain Function .....	12
■ Programming the Order of CD Playback .....	12
■ Checking or Changing Programmed CD Tracks .....	13
◆ <b>USB</b>	
■ Playing USB .....	14
■ To use high speed search .....	15
■ To repeat .....	15
■ To skip next 10 tracks .....	15
■ To repeat section .....	15
■ Selecting a Track from USB Device .....	15
■ Remain Function .....	15
◆ <b>TUNER</b>	
■ Searching for and Storing the Radio Stations .....	16
■ Selecting a Stored Station .....	17
■ Improving Radio Reception .....	17
◆ <b>OTHER FUNCTIONS</b>	
■ CD Ripping Function .....	18
■ Timer Function .....	19
■ Cancelling the Timer .....	19
■ Mute Function .....	20
■ Selecting EQ Mode .....	20
■ Party Function .....	20
■ Power Sound Function .....	20
■ Power Bass Function .....	20
■ Setting the System to Switch off Automatically .....	21
■ Connecting Headphones .....	21
■ Connecting Microphone .....	21
◆ <b>RECOMMENDATIONS FOR USE</b>	
■ Safety Precautions .....	22
■ Cleaning Your Mini-Compact System .....	22
■ Precautions When Using Compact Discs .....	22
■ Before Contacting the After-Sales Service .....	23
■ Technical Specifications .....	24



Press



Push

## Symbols



 
Important



Note


## Front Panel View

ENG

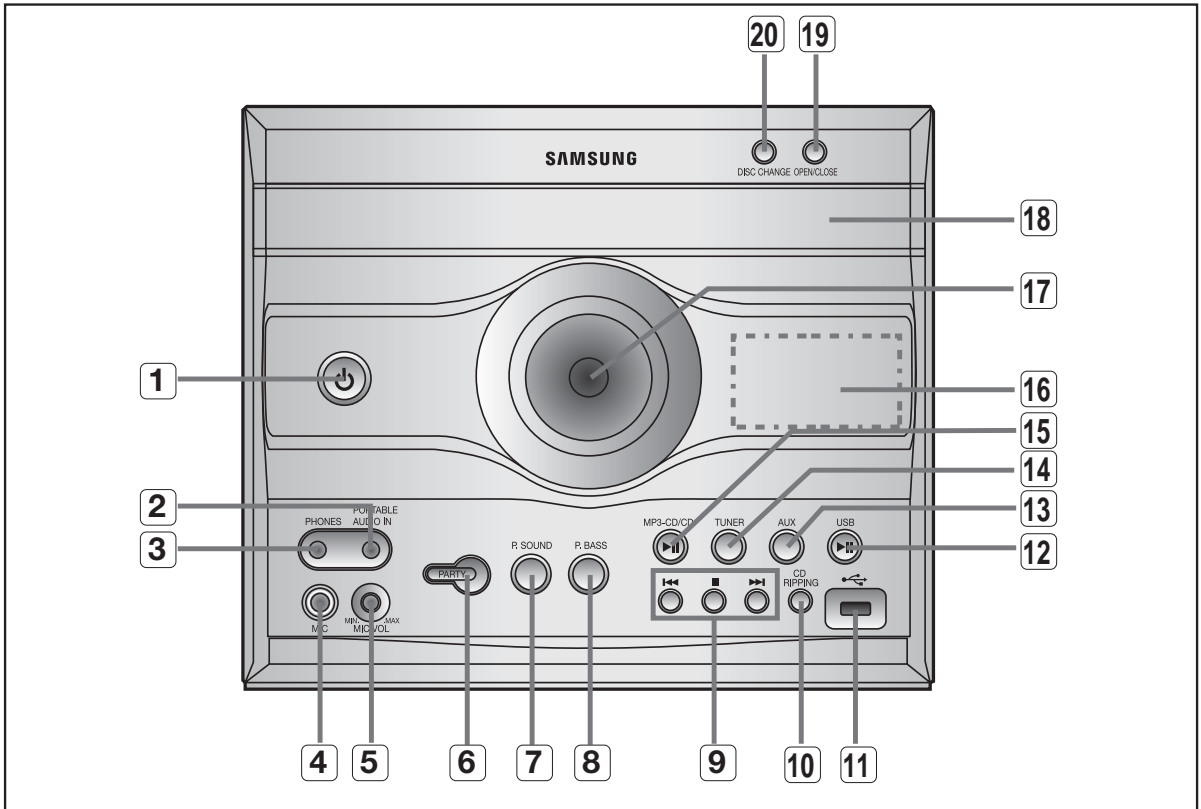


- |  |                              |
|--|------------------------------|
| 1. STANDBY/ON  | 11. USB JACK                 |
| 2. PORTABLE AUDIO IN                                   | 12. USB FUNCTION             |
| 3. HEADPHONE JACK                                      | 13. AUX FUNCTION             |
| 4. MIC   | 14. TUNER FUNCTION           |
| 5. MIC VOLUME  | 15. MP3-CD/CD FUNCTION       |
| 6. PARTY   | 16. WINDOW DISPLAY           |
| 7. POWER SOUND   | 17. VOLUME                   |
| 8. POWER BASS  | 18. COMPACT DISC COMPARTMENT |
| 9. SEARCH FUNCTION BUTTONS, TUNING MODE OR STOP BUTTON | 19. CD OPEN/CLOSE            |
| 10. CD RIPPING   | 20. CD DISC CHANGE           |

## Rear Panel View (MAX-G55)

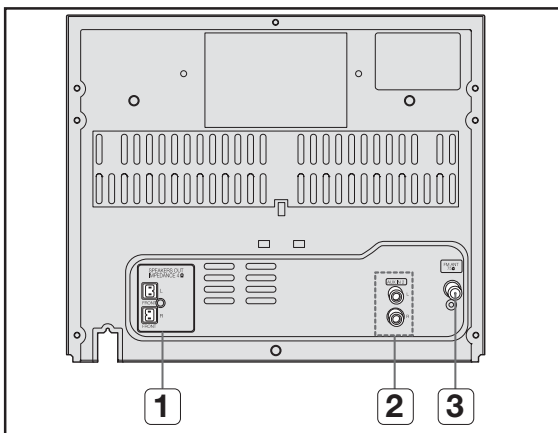 

1. Speaker Connector Terminals
2. AUX IN 2 Terminals
3. FM Aerial Connector Terminal


# Rear Panel View(MAX-G56)

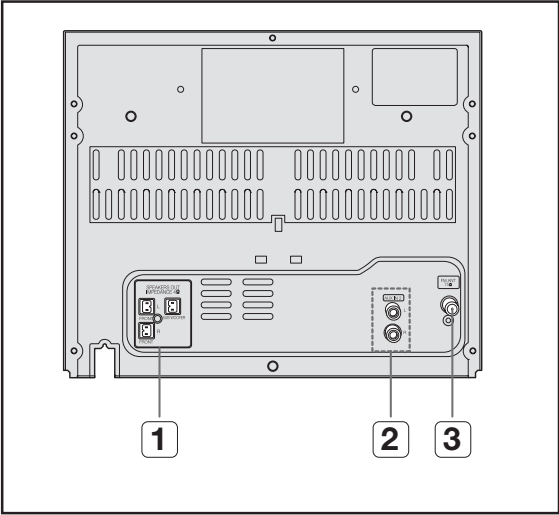 

- 1. Speaker Connector Terminals
- 2. AUX IN 2 Terminals
- 3. FM Aerial Connector Terminal

☛ All those pictures of Rear panel are based on MODEL:MAX-G56

# Remote Control

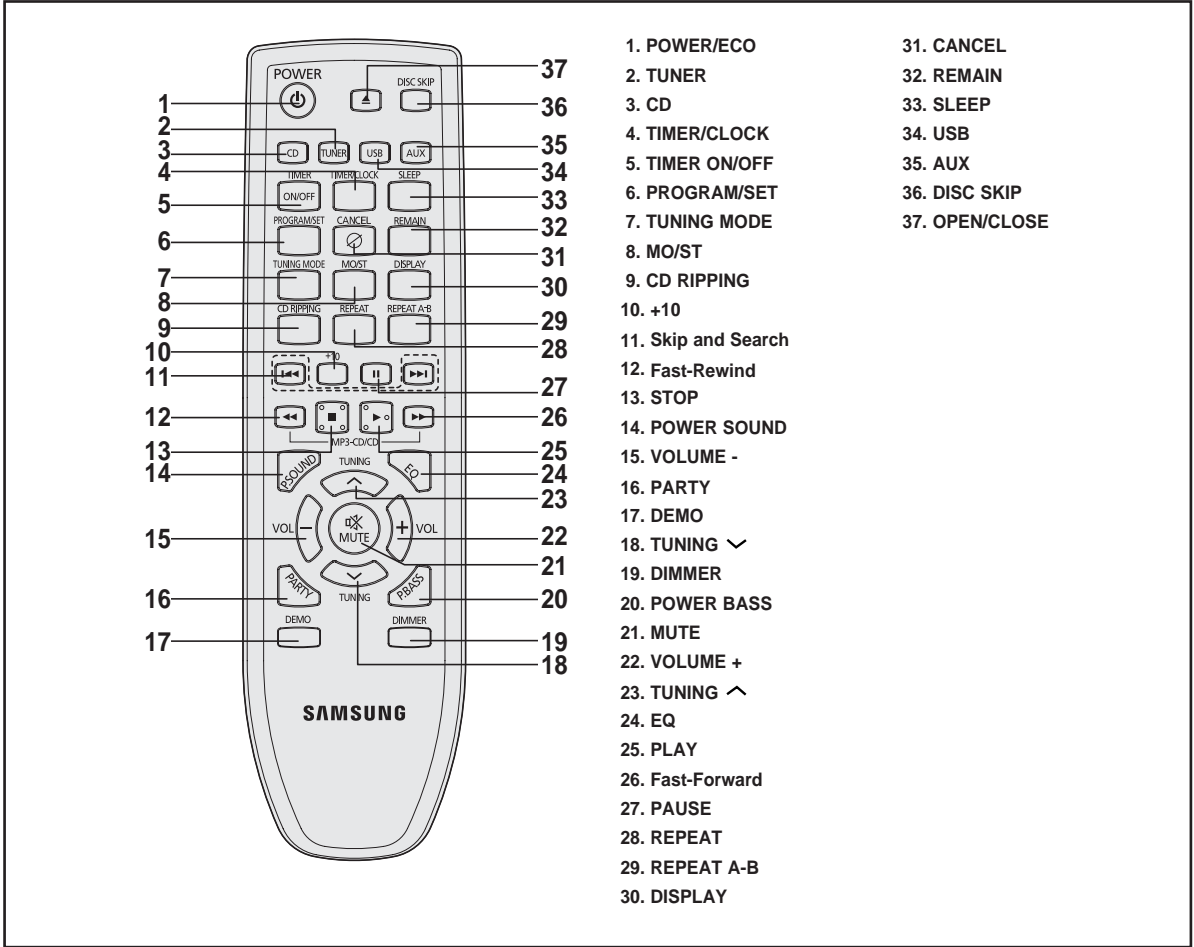 


- 1. POWER/ECO
- 2. TUNER
- 3. CD
- 4. TIMER/CLOCK
- 5. TIMER ON/OFF
- 6. PROGRAM/SET
- 7. TUNING MODE
- 8. MO/ST
- 9. CD RIPPING
- 10. +10
- 11. Skip and Search
- 12. Fast-Rewind
- 13. STOP
- 14. POWER SOUND
- 15. VOLUME -
- 16. PARTY
- 17. DEMO
- 18. TUNING ∨
- 19. DIMMER
- 20. POWER BASS
- 21. MUTE
- 22. VOLUME +
- 23. TUNING ∧
- 24. EQ
- 25. PLAY
- 26. Fast-Forward
- 27. PAUSE
- 28. REPEAT
- 29. REPEAT A-B
- 30. DISPLAY
- 31. CANCEL
- 32. REMAIN
- 33. SLEEP
- 34. USB
- 35. AUX
- 36. DISC SKIP
- 37. OPEN/CLOSE

## Where to Install Your Mini-Compact System

 ENG

To take full advantage of your new mini-compact system, follow these installation instructions before connecting the unit.


- ◆ Install the system on a flat, stable surface.
- ◆ Never place this unit on carpeting.
- ◆ Never place this unit in an outdoor area.
- ◆ Maintain an open space of approximately 6 inches (15 cm) on the sides and rear of the system, for ventilation purposes.
- ◆ Make sure that you have enough room to open the compact disc compartment easily.
- ◆ Place the loudspeakers at a reasonable distance on either side of the system to ensure good stereo sound.
- ◆ Direct the loudspeakers towards the listening area.
- ◆ For optimum performance, make sure that both speakers are placed at an equal distance above the floor.

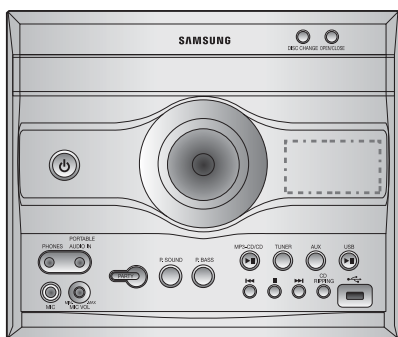

## Connecting your System to the Power Supply

Before plugging your system into a main socket, you must check the voltage.

 - 1 Plug the main lead into an appropriate socket.
- 2 Press the (STANDBY/ON) button to switch your mini-compact system .

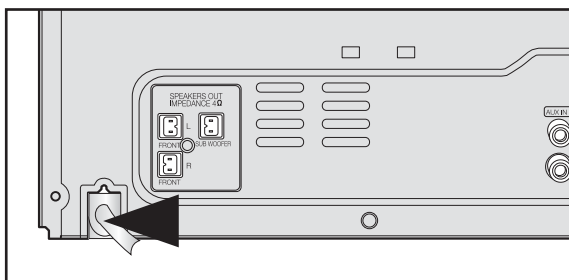

## Inserting Remote Control Batteries

 
Insert or replace remote control batteries when you:

- ◆ Purchase the mini-compact system
- ◆ Find that the remote control is no longer operating correctly

When replacing the batteries, use a new set of batteries and never mix alkaline and manganese batteries.

- 1 Place your thumb on the position marked on the battery compartment cover (rear of the remote control) and pull the cover in the direction of the arrow.
- 2 Insert two AAA, LR03 or equivalent batteries, taking care to respect the polarities:
  - ◆ + on the battery against + in the battery compartment
  - ◆ - on the battery against - in the battery compartment
- 3 Replace the cover by sliding it back until it clicks into position.

- ◆ If you will not be using the remote control for a long time, remove the batteries to prevent corrosion.
- ◆ The remote control can be used up to approximately 7 meters in a straight line. It can also be operated at a horizontal angle of up to 30° from the remote control sensor.

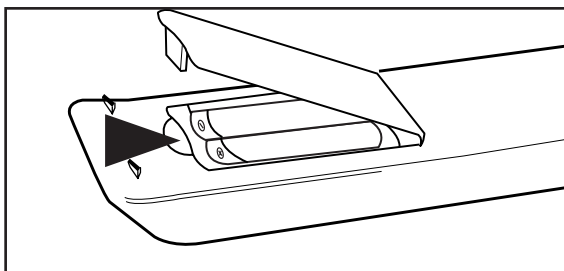



## Connecting the Loudspeakers

The loudspeaker connector terminals are located on the rear of the system.

There are two terminals on the system:


- ◆ left speaker (marked L)
- ◆ right speaker (marked R)

  To achieve the correct sound quality, insert those speaker connector cables to the speaker connector terminals of the system.

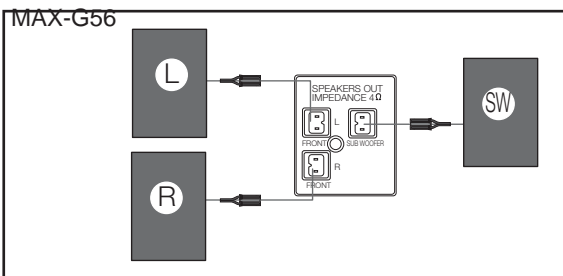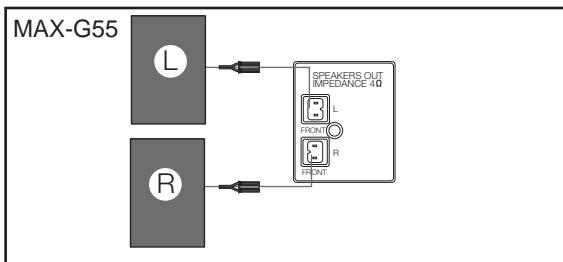

## Connecting to an External Source
 
### AUX1 : Front Panel

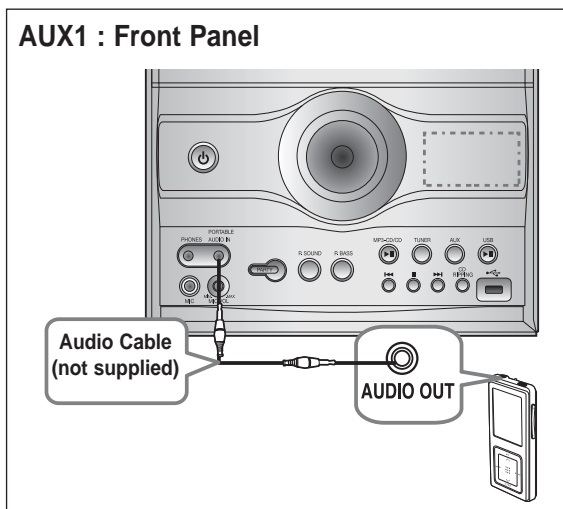

### AUX1 : Connecting an External Component/MP3 player

 
Components such as an MP3 Player

**1** Connect PORTABLE AUDIO IN (Audio) on the MINI COMPACT front panel to the Audio Out of the external component/MP3 player.

**2** Press the **AUX** button to select <AUX1> input.

The mode switches as follows : **AUX 1**→**AUX 2**.

### AUX2 : Rear Panel

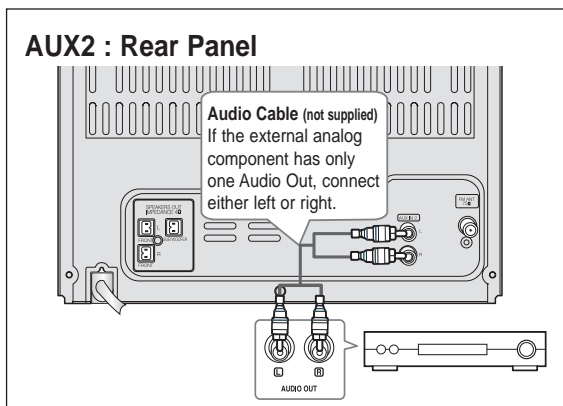

### AUX2 : Connecting an External Analog Component

Analog signal components such as a VCR.

**1** Connect AUX IN 2 (Audio) on the MINI COMPACT rear panel to the Audio Out of the external analog component.

- Be sure to match connector colors.

 
 
**2** Press the **AUX** button to select <AUX2> input.

The mode switches as follows : **AUX 1**→**AUX 2**.

## Connecting the FM Aerial

### How to connect a COAXIAL TYPE aerial.


- ◆ Connect a 75Ω antenna to the **FM** antenna terminal.
- ◆ Plug the connector on the **FM** aerial supplied into the coaxial socket (75Ω) marked **FM** on the rear of the system.
- ◆ Follow the instructions given on **Page 17** to tune into a radio station, and determine the best position for the aerial.
- ◆ If reception is poor, you may need to install an outdoor aerial. To do so, connect an outdoor **FM** aerial to the **FM** socket on the rear of the system using a 75Ω coaxial cable (not supplied).

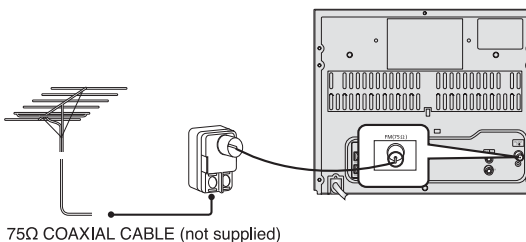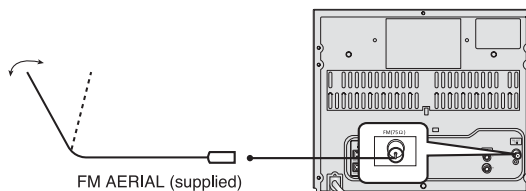

## DEMO/DIMMER function

All functions available on the system can be viewed on the display and the display's brightness can be switched between "on" and "off".

 
- 1 Press the **DEMO** button.  
Result: All functions available on the system appear on the front panel display.
- Each of these are explained in detail in this guide. Please refer to the relevant section.
- 2 Press the **DIMMER** button.  
Result: The Dimmer function is selected and the display darkens.
- 3 Press the **DIMMER** button once again to brighten the front panel display.
- A display brightness control can only be performed while the system power is on.

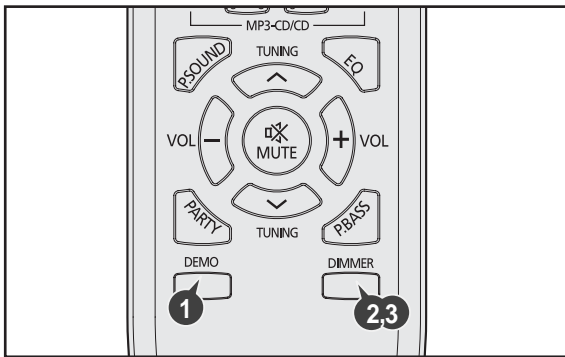

## ECO function

You can save the power consumption while the unit is turned off (on standby)

 - 1 In Standby/on mode, press and hold the **POWER** button for longer than 3 seconds.  
Result: ECO displays and the main set automatically switches itself into the power saving mode.

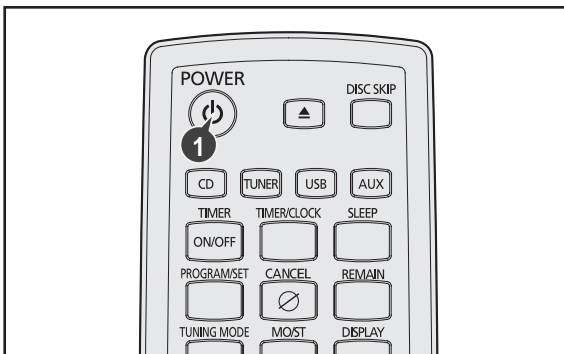

## Setting the Clock

Your system is equipped with a clock which allows you to turn your system on and off automatically.

 
You should set the clock:

- ◆ When you first purchase the mini-compact system
- ◆ After a power failure
- ◆ After unplugging the unit

➤ ◆ For each step, you have a few seconds to set the required options. If you exceed this time, you must start again.

- 1 Switch the system on by pressing **STANDBY/ON**.
- 2 Press **TIMER/CLOCK** twice.  
Result: **CLOCK** is displayed.
- 3 Press **PROGRAM/SET**.  
Result: The hour flashes.
- 4 To... **Press the TUNING button**  
Increase the hours ..... ^  
Decrease the hours ..... v
- 5 When the correct hour is displayed, press **PROGRAM/SET**.  
Result: The minutes flash.
- 6 To... **Press the TUNING button**  
Increase the minutes ..... ^  
Decrease the minutes ..... v
- 7 When the correct time is displayed, press **PROGRAM/SET**.  
Result: The clock starts and is displayed, even when the system is in standby mode.

➤ ◆ You can display the time, even when you are using another function, by pressing **TIMER/CLOCK** once.  
◆ You can also use **◀▶** buttons on the main unit to instead of **TUNING** button ^ or v in step 4, 6.

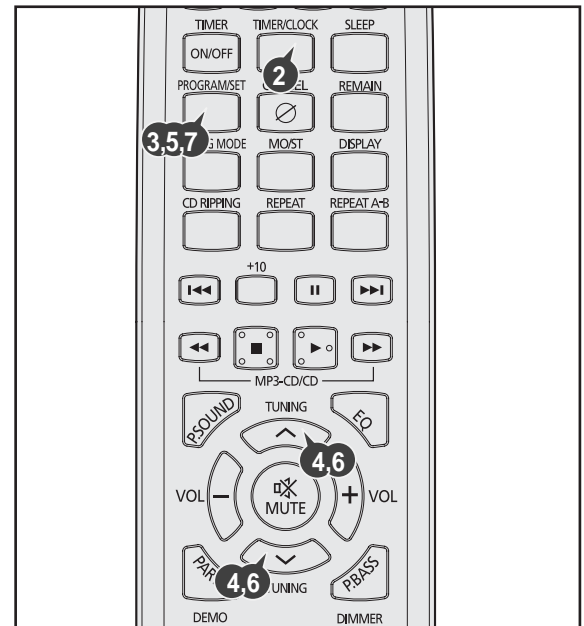



## Loading and Changing Compact Discs

The CD disc changer can contain up to three 12 cm or 8 cm compact discs without using an adapter.

 
- ⚠ Never force the compact disc carousel when opening and closing the compartment.  
Never press down or place objects on the carousel.
- Always treat your compact discs with care; refer, if necessary, to the section entitled "Precautions When Using Compact Discs" on page 22 .

- 1 Switch the system on by pressing **STANDBY/ON**.
- 2 Press the **OPEN/CLOSE** button on the main unit.  
**Result:** The compartment opens.
- 3 Place one disc in the front slots of the carousel, with the label on the discs facing upwards.  
⚠ Check that the compact disc has been correctly inserted in the holder before closing the compartment.
- 4 If you wish to load another compact disc, press the **DISC CHANGE** button on the main unit (or **DISC SKIP** on the remote control).  
**Result:** The carousel rotates by 120°.
- 5 Close the compartment by pressing the **OPEN/CLOSE** button again.  
➤ Playback starts automatically.

To change or unload the compact disc changer, repeat step 2 to 5.

- ⚠ Keep the compartment closed whenever you are not using it, to prevent dust from entering.

➤ You can load or unload compact discs when the radio, usb or auxiliary source function is selected, and when you press the OPEN/CLOSE button, all of the other functions will be changed to MP3-CD/CD function.

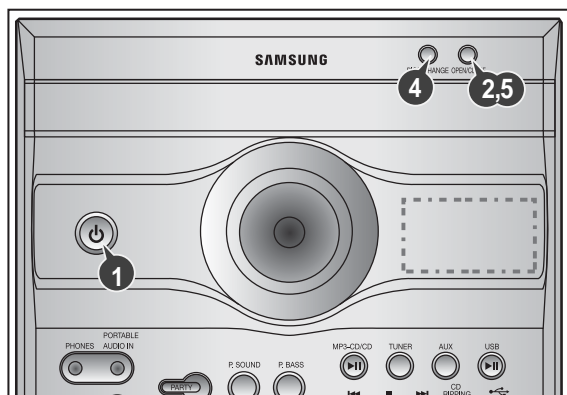

## To replay the CD/MP3/WMA-CD

This is a player that enables the playback of audio CD, CD-R, CD-RW and MP3/WMA-CD.

Do not use CDs of irregular shapes like heart or octagon shapes. The performance of the player may be degraded. At least more than one CD should be inserted for playbacks.

 
- 1 Press the **STANDBY/ON** button to switch on the power.
- 2 Press the **MP3-CD/CD** (▶▶) of the main unit to select the CD function.
- 3 Insert more than one CD, or a MP3/WMA-CD .
- 4 Press the **MP3-CD/CD** (▶▶) button of the main unit or the ▶ button of the remote control.  
➤ ♦ If there are more than one CD or an MP3/WMA-CD inserted, replays are then processed in order.  
♦ Your CD Player will take a few moments to scan through all the tracks recorded on a particular MP3/WMA-CD.  
♦ The English name of the song may be indicated on the display only if directly downloaded from the PC or if the purchased MP3/WMA-CD is sorted according to titles(directory). (Other languages besides English may not be indicated.)  
♦ The English name of the track may not be indicated depending on the characteristics of the MP3/WMA-CD.

### <CD/MP3/WMA-CD Playback>

Track Indicator — 02 00:19 — Playtime Indicator

- 5 Adjust the volume according to needs with the following procedures.  
♦ Tuning the **VOLUME** knob.  
♦ Press the **VOLUME +** or **-** button of the remote control.  
The volume level can be adjust in 31 steps (VOL MIN, VOL 01-VOL 29, and VOL MAX).
- 6 Main set  
To pause playback temporarily, press the **MP3-CD/CD** (▶▶) button. Press **MP3-CD/CD** (▶▶) again to continue playing the disc.  
Remote control  
To pause playback temporarily, press the **PAUSE** (||) button. Press **PLAY** (▶) button to continue playing the disc.
- 7 To stop playback, press the ■ button.

- ♦ If there is not even one CD inserted in the CD tray, it is indicated as "NO DISC".
- ♦ If the CD Repeat function is not selected, 3 CDs automatic playback.
- ♦ The quality of MP3/WMA-CD playback may vary depending on the condition of the disc containing the music files or the condition of the recorder with which the disc was created.
- ♦ If different types of files or unnecessary folders are on the same disc, you will have problems with playback.

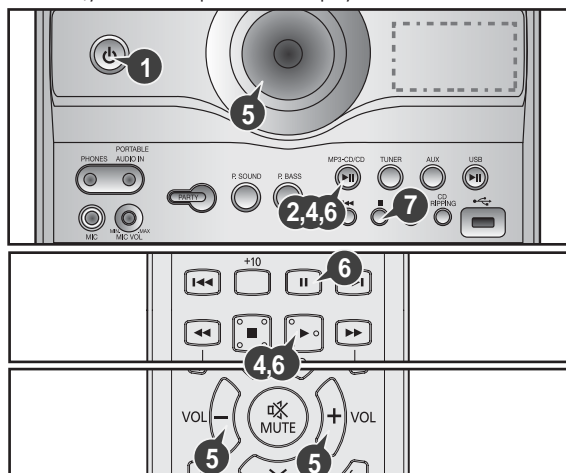


## Selecting a CD in the Disc changer

To select a specific disc, press the **DISC CHANGE** button on the main unit or **DISC SKIP** on the remote control, until the required disc indicator flashes.

**Result:** starting with the one selected.

 - If the disc selected is not loaded, the next disc is played automatically.
- ◆ When the CD door is opened or closed, if you hold the **OPEN/CLOSE** button over 5 seconds until "LOCK" is on the display, the CD door will be locked. In the case, you should hold the **OPEN/CLOSE** button once again until "UNLOCK" is on the display, the CD door will be unlocked.

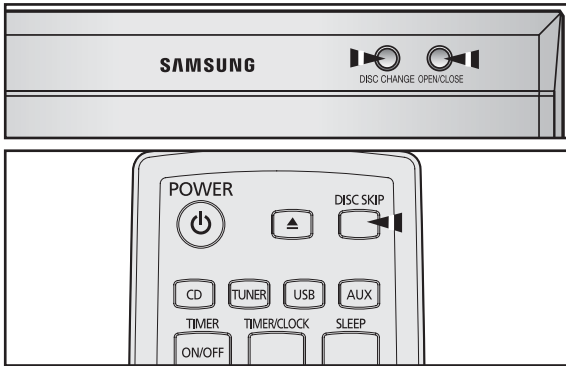

## Selecting a Track

You can select the track you wish to listen to when a disc is playing.

### To play the previous track

Press the **⏮** within 3 seconds after the current track started playing.  
Press the **⏮** twice 3 seconds after the current track started playing.

### To play the next track

Press the **⏭**.

### To play the current track

Press the **⏮** 3 seconds after the current track started playing.

### To play the track of your choice

Press the **⏮**, **⏭** the appropriate number of times.

- ◆ You can also use the **⏮**, **⏭** buttons on the remote control to select a track.



 
 
## Searching for a Specific Music Passage on a CD

When listening to a compact disc, you can quickly search for a specific music passage on a track.

To search through the tracks... Press...

Forwards ..... **⏭**  
Backwards ..... **⏮**

You can also press and hold down **⏮**, **⏭** on the main unit to auto search through the tracks.

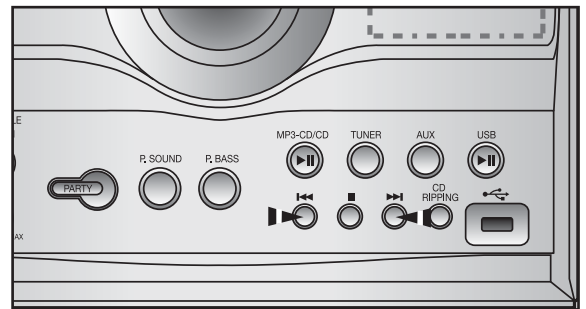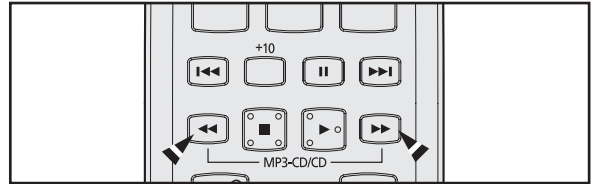


## Display Function

(This function is not available during playback of an MP3/WMA-CD.)

You may check the total tracks of the disc.

### 1 Press the DISPLAY button.

 **Result:** The total tracks number of the disc is displayed, and it will be disappeared after 3 seconds.

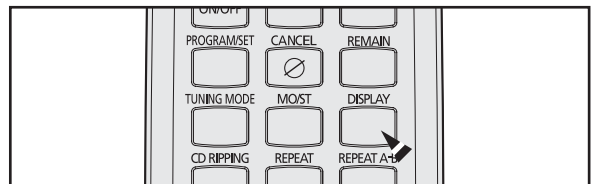

## What is WMA?

WMA means Windows Media Audio, the global standard for audio signal compression technology.

## What is MP3?

MP3 means MPEG1 Layer 3, the global standard for audio signal compression technology. It uses digital compression technology to compress original sound data by up to 12 times without sound quality degradation.

## File Compatibility

- ◆ The unit will playback files created in MP3 format (Mpeg1.Layer3) with \*.mp3 as their extension, and some WMA files with.WMA extension can't be playback.
- ◆ Playback will be impossible for the file of MP2 or 22KHz.

## How many MP3 files can a CD-R or CD-RW disc record?

The maximum capacity of one CD-R or CD-RW disc is 680MB.

Normally, one MP3 file has a capacity of 4MB, therefore approximately 170 files can be recorded on a single disc.

## Regarding the playback of CD-R/RW

 
- ◆ In the case of an original CD-R(Recordable) recorded in audio CD format, CD-RW(Rewritable) and editing by the user, playback is processed on the respective completed status. (The player may not be played back according to the characteristics of the CD or recorded status.)
- ◆ The CD-RW is comparably less reflexive than CD which causes more time delay to read.

## Repeating One or All Tracks on the Compact Discs

### You can repeat indefinitely:

- ◆ A specific track on a compact disc.
- ◆ All tracks on the compact disc selected.
- ◆ All discs loaded in the carrousel


- 1 Press REPEAT button.  
Each time you press the REPEAT button, the repeat mode will change as follows:  
MP3: RPT TRK → RPT DIR → RPT DISC → RPT SHF → RPT OFF.  
CD: RPT TRK → RPT DISC → RPT SHF → RPT OFF.
- 2 When you wish to stop the Repeat function, press REPEAT until RPT OFF is displayed.
  - ◆ RPT TRK: Repeatedly plays the selected track.
  - ◆ RPT DIR: Repeatedly plays all tracks in the selected folder.
  - ◆ RPT DISC: Repeatedly plays the entire disc.
  - ◆ RPT SHF: Plays tracks in random order. (Each track can be played one time.)
  - ◆ RPT OFF: Cancels Repeat Playback.

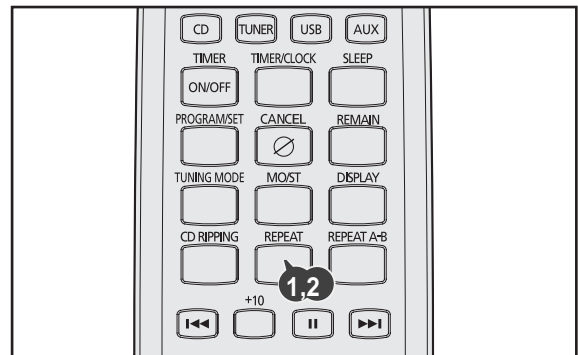

## A-B Repeat Playback

You can repeatedly play back a designated section of a CD/MP3/WMA-CD.

 - 1 Press the REPEAT A-B button at the beginning of desired part.
    - ◆ 'RPT A-' shows.
  - 2 Press the REPEAT A-B button at the ending of desired part.
    - ◆ 'RPT A-B' shows.
  - 3 To cancel REPEAT A-B function, press REPEAT A-B button again.
- Point B cannot be set until 5 seconds of playback has elapsed from point A.

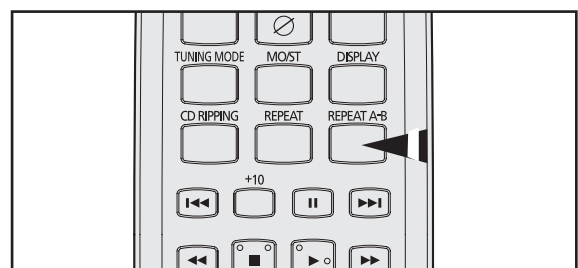


## Function to skip through 10 tracks at a time

Press the **+10** button briefly while playing back a CD and MP3/WMA-CD. The track 10 tracks after the current one will then be played back.

**Example:** If you want to select track 43 during playback of track 5, press the **+10** button four times, and then press the **▶▶** button three times.

 
5 → 10 → 20 → 30 → 40 → 41 → 42 → 43

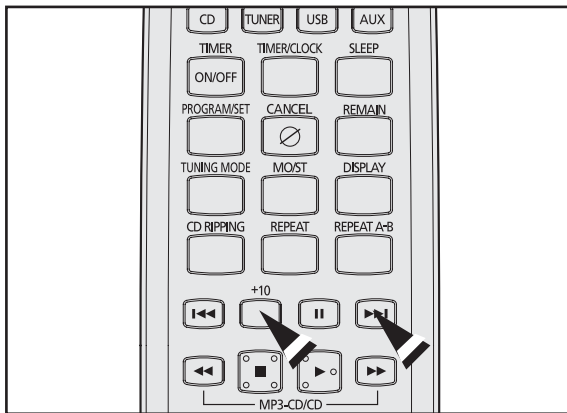

## Remain Function

You can check the remaining time.

 - Press the **REMAIN** button.
  - ◆ If you press the **REMAIN** button, the remaining time is displayed.
- To cancel this function, press the **REMAIN** button again.

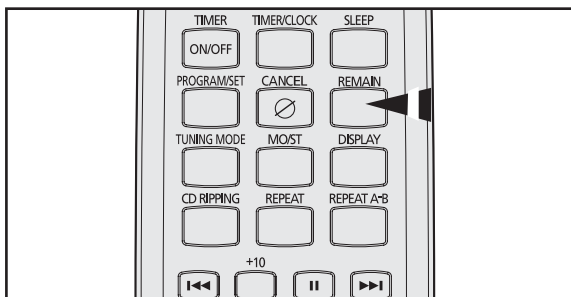

## Programming the Order of CD Playback (This function is not available during playback of an MP3/WMA-CD.)

You can decide:

- ◆ The order of the track desired to listen
- ◆ The track not desired to listen
- You can program up to 24 tracks.
- ◆ You must stop the compact disc player before selecting the tracks.

**1** If the CD function is selected, stop the player by pressing **■**.

**2** Press **PROGRAM/SET**.

**Result:** The following indications are displayed:

*PG01: --*

(01 = Program no., -- = Track no. on the disc)

**3** Select the required track by pressing the **◀▶▶** button:

- ◆ Press the **◀▶▶** button to move back through the tracks.
- ◆ Press the **▶▶▶** button to move forward through the tracks.

**4** Press **PROGRAM/SET** to confirm your selection.

 
 
**Result:** The selection is stored and *PG02: --* is displayed.

**5** To select other tracks, repeat Steps 3 to 4.

**6** Press **PLAY (▶)** to listen to the track selection in the order programmed.

**7** When press **■** button one time, compact disc player is stopped, and press **■** button again to cancel the selection.


- **◆ If you open the compartment or turn off the power, the selection is cancelled.**
- ◆ If you press the CANCEL button when you are setting, the selection is cancelled.**

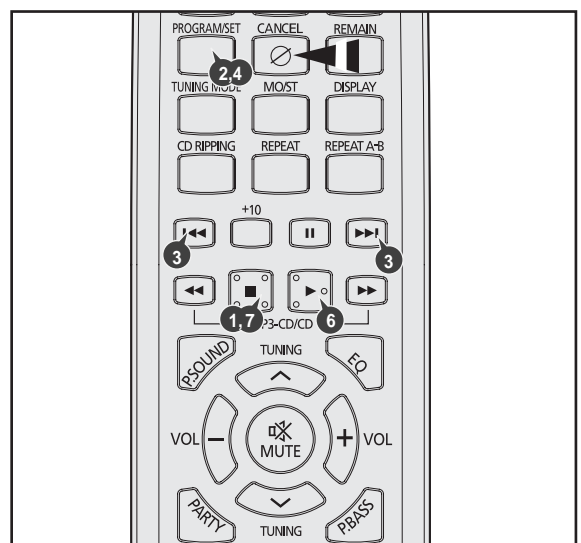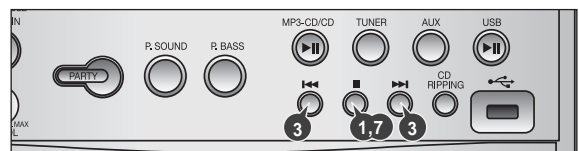



# Checking or Changing Programmed CD Tracks

You can check or change your selection of tracks at any time.

 - 1 Press **■** once if you have started listening to the selection.
- 2 Press **PROGRAM/SET**.  
Result: The following indications are displayed:  





 (CH = Check, 01=Program No, -- = Track No on the disc)  
 ➤ If you have already programmed 24 tracks, **CH** is displayed instead of **PR** when you press **PROGRAM/SET**.
- 3 Press **PROGRAM/SET** once or more times until the track to be changed is displayed.
- 4 Press **◀◀** or **▶▶** button to select a different track.
- 5 Press **PROGRAM/SET** to confirm your change.
- 6 Press **PALY (▶)** to start listening to the selection.  
Result: The first track selected is played.

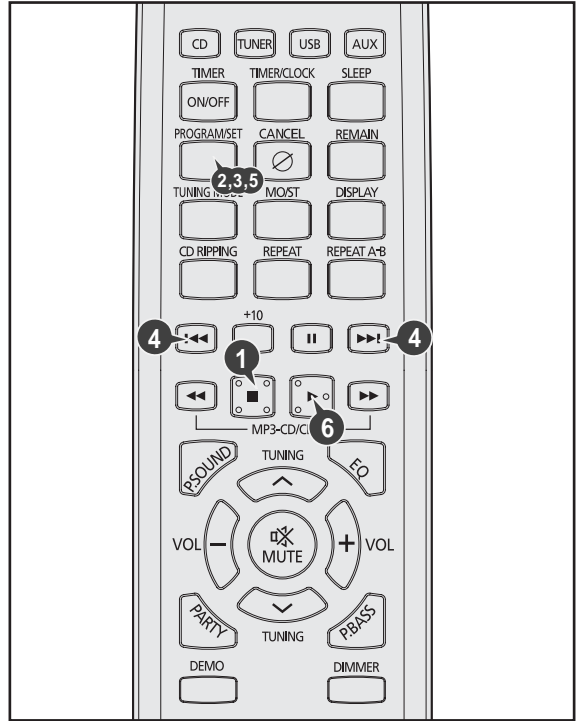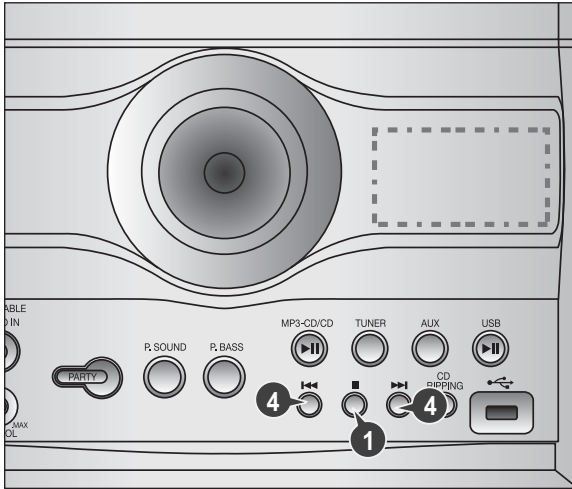  

# Playing USB

You can play MP3/WMA files by connecting to various external USB storage devices such as USB flash memory or HDD(Hard Disc drives).

  - 1 Connect the external USB storage device to your player.
  - 2 Select USB function by pressing the **USB** button.
    - ◆ The first track of the first directory plays automatically.
- **To stop playing**  
Press the Stop (■) button to stop playing.

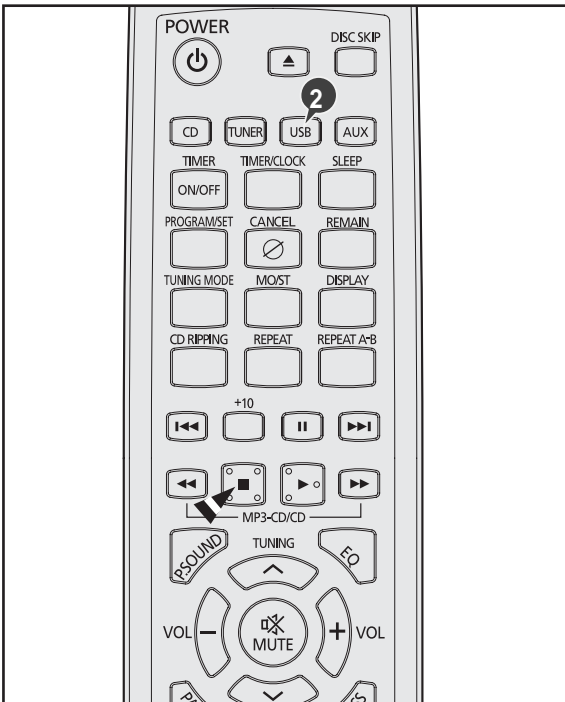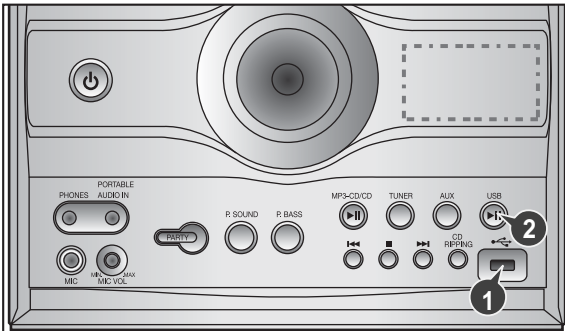

◆ Do not connect a USB charging device to the USB connection port on the player, because it may cause damage to the product.

## Please be aware of the following before using USB.

- ◆ Some external USB storage device may not be compatible with this player.
- ◆ With external HDD, FAT format can be played, however, the NTFS format can not.
- ◆ With USB 2.0 HDD, connect to a separate power source. If it's not connected to a separate power source, it may not work.
- ◆ If memory of an external USB storage device is segmented into several parts, MP3 files of only the first hard disk drive can be played.
- ◆ DRM applied files are not played.  
Digital Rights Management: Technology and service that protect the profit and rights of copyright owners by disallowing unauthorized use of digital contents.
- ◆ Even if the file name ends with .mp3, the file does not play if actual file format is MPEG layer 1 or 2.
- ◆ Do not use a USB hub as it will not be recognized.
- ◆ Up to 15 letters of MP3/WMA file name will be shown.

## Delay

 
- ◆ When selecting USB function, file reading (READ-IN) may take several minutes.
- ◆ When playing a USB device, there may be a delay then advancing to the next track, especially with HDD. The operation time of external USB storage devices will vary; even when they are of the same capacity.
- ◆ If the external USB storage device supports only USB VER1.1 and the access speed is slow, the file may not property.

## To use high speed search

**Before you begin!** ♦ Connect the external USB storage device to your player.  
 ♦ Select USB function by using the USB button.

You can search the desired section quickly during the play


- Press the **▶▶**, **◀◀** button.
  - ♦ Whenever you press the button, you can search backward or forward quickly.
  - ☛ When you use the high speed search function, there is no sound.

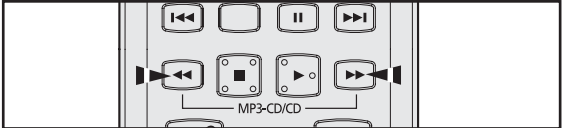

## To repeat

**Before you begin!** ♦ Connect the external USB storage device to your player.  
 ♦ Select USB function by using the USB button.

 - 1** Press REPEAT button.  
 Each time you press the REPEAT button, the repeat mode will change as follows:  
**RPT TRK** → **RPT DIR** → **RPT ALL** → **RPT SHF** → **RPT OFF**.
- 2** When you wish to stop the Repeat function, press REPEAT until **RPT OFF** is displayed.
  - ♦ **RPT TRK**: Repeatedly plays the selected track.
  - ♦ **RPT DIR**: Repeatedly plays all tracks in the selected folder.
  - ♦ **RPT ALL**: Repeatedly plays all tracks.
  - ♦ **RPT SHF**: Plays tracks in random order. (Each track can be played one time.)
  - ♦ **RPT OFF**: Cancels Repeat Playback.

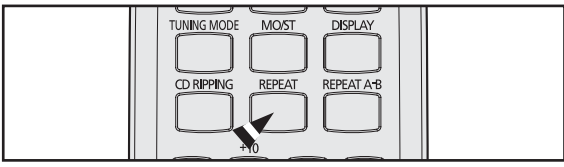


## To skip next 10 tracks

**Before you begin!** ♦ Connect the external USB storage device to your player.  
 ♦ Select USB function by using the USB button.

- Press the **+10** button on the remote control shortly during the play.  
**Example:** If you want to select 43rd track while 15th track is playing, press the **+10** button 3 times, and then press the **▶▶** button 3 times .

 
15 → 20 → 30 → 40 → 41 → 42 → 43

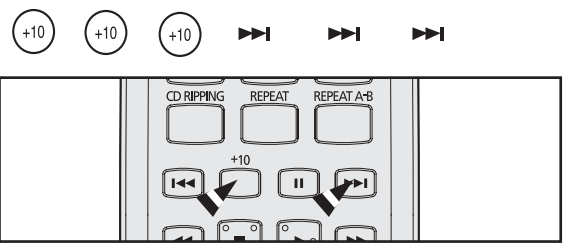

## To repeat section

**Before you begin!** ♦ Connect the external USB storage device to your player.  
 ♦ Select USB function by using the USB button.

 - 1** Press the **REPEAT A-B** button at the beginning of desired part.  
 ♦ 'RPT A-' shows.
  - 2** Press the **REPEAT A-B** button at the ending of desired part.  
 ♦ 'RPT A-B' shows.
- ☛ To cancel REPEAT A-B function, press **REPEAT A-B** button again.
  - Point B cannot be set until 5 seconds of playback has elapsed from point A.

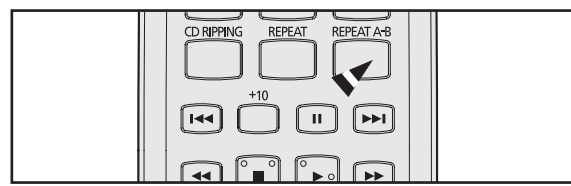


## Selecting a Track from USB Device

You can select an MP3 file during the play.

**Before you begin!** ♦ Connect the external USB storage device to your player.  
 ♦ Select the USB function by using the USB button.

 - If you want to move the next/previous(track), press the **▶▶**, **◀◀** button shortly.
  - ♦ It moves the next/previous file within the directory.
  - ♦ If you press the **▶▶**, **◀◀** button more times than the number of the files in the directory, it will move over to the next directory.

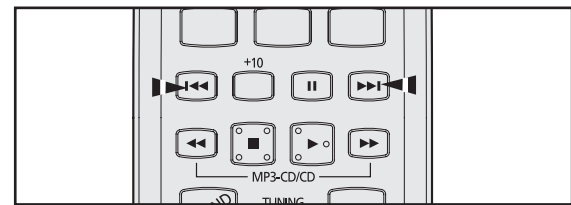


## Remain Function

You can check the remaining time.

**Before you begin!** ♦ Connect the external USB storage device to your player.  
 ♦ Select USB function by using the USB button.

 - 1** Press the **REMAIN** button .  
 ♦ If you press the **REMAIN** button, the remaining time is displayed.
- 2** To cancel this function, press the **REMAIN** button again.

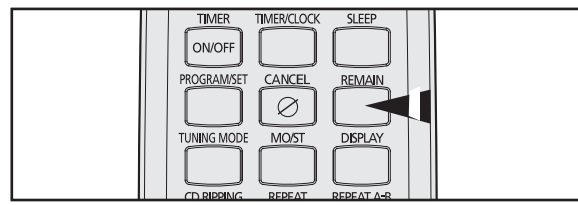

# Searching for and Storing the Radio Stations

ENG

 
 
You can store up to:

- ◆ 15 FM stations

- 1 Switch the system on by pressing **STANDBY/ON**.
- 2 Select the **TUNER** function by pressing **TUNER**.
- 3 **To search for a station... Press TUNING MODE button station...**  
 Preset ..... Once or more times until **PRESET** is displayed.  
 Automatically ..... Once or more times until **AUTO** is displayed.  
 Manually ..... Once or more times until **MANUAL** is displayed.
- 4 Select the station to be stored by:
  - ◆ Pressing **TUNING**  $\wedge$  or  $\vee$  on the remote control.
  - ◆ To scroll through the frequencies faster when searching manually, hold down the  $\lll$  or  $\ggg$  buttons.
  - ◆ The automatic search procedure may stop on a frequency that does not correspond to a radio station. If this happens, use the manual search mode.
- 5 Adjust the volume by:
  - ◆ Turning the **VOLUME** knob on the main unit
  - or
  - ◆ Pressing the **VOLUME +** or **-** buttons on the remote control
- 6 Select the FM stereo or mono mode by pressing **MO/ST**.
- 7 If you do not want to store the radio station found, revert to Step 3 and search for another station.  
 Otherwise:
  - a Press **PROGRAM/SET**.
  - b Press  $\lll$  or  $\ggg$  on the main unit or press **TUNING**  $\wedge$  or  $\vee$  on the remote control to assign a program number .
  - c Press **PROGRAM/SET** to store the radio station.
- 8 To store any other radio frequencies required, repeat Steps 3 to 7.

## ➤ In Tuner mode

- ◆ In manual tuning mode, you can use  $\lll$ ,  $\ggg$  button on the main unit to manual search a radio station.
- ◆ During Tuner auto searching, press  $\blacksquare$  button on the main unit or **TUNING MODE** button on the remote control to stop auto searching.
- ◆ In Preset tuning mode, you can use  $\lll$ ,  $\ggg$  button on the main unit to search a stored radio station.

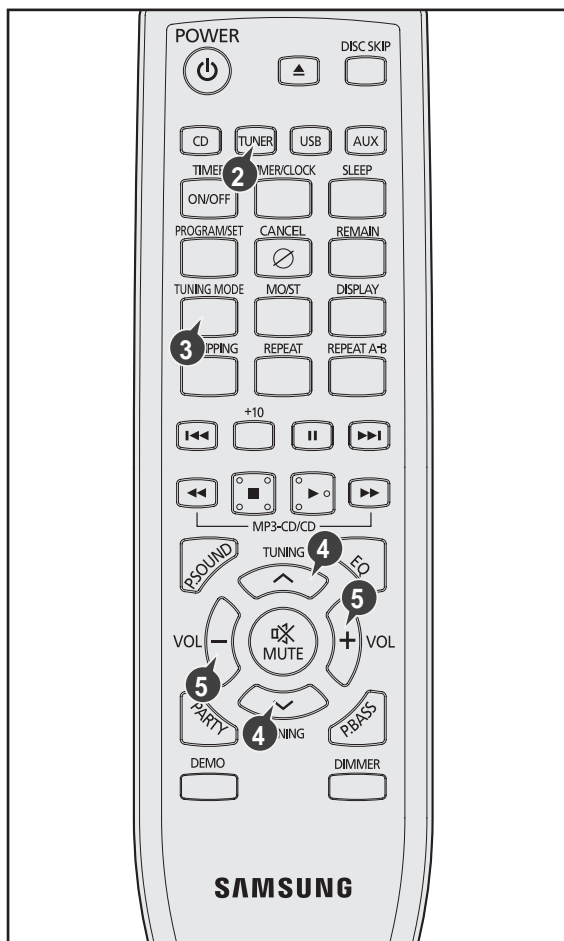
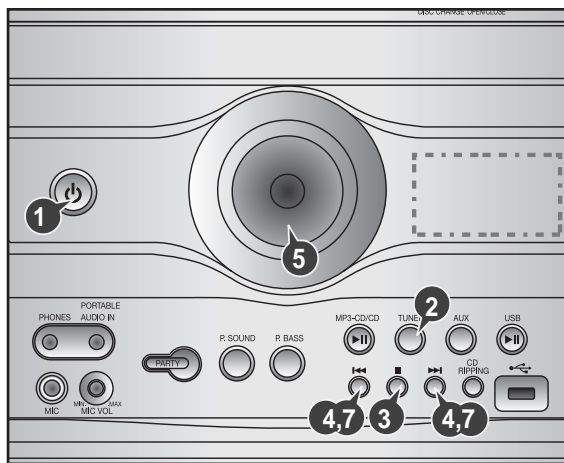




## Selecting a Stored Station

You can listen to a stored radio station as follows:

  - 1 Switch the system on by pressing **STANDBY/ON**.
- 2 Select the **TUNER** function by pressing **TUNER**.
- 3 Press the **TUNING MODE** button on the remote control or on the main unit until "PRESET" is displayed.
- 4 Press **◀◀** or **▶▶** to select the desired station.  
or  
Select the desired station by pressing the **TUNING ▲** or **▼** button on the remote control.  
**Result:** The desired station is now received.

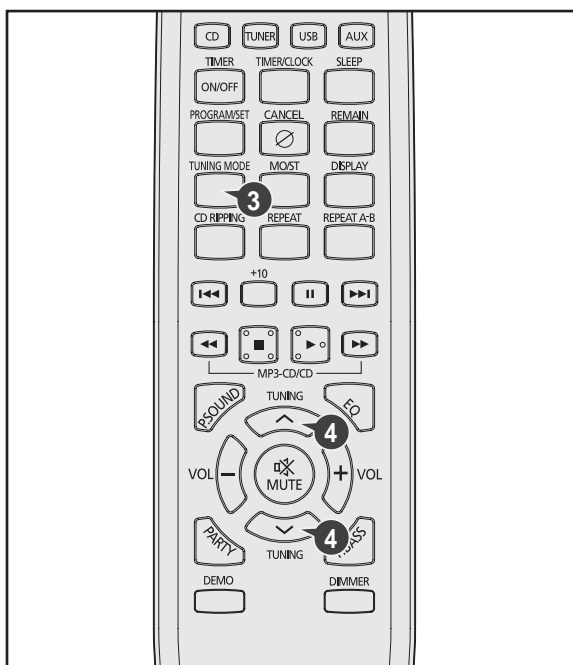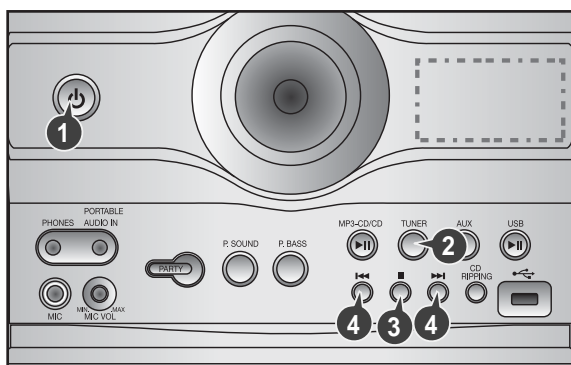


## Improving Radio Reception

You can improve the quality of radio reception by:

- ◆ Rotating the FM aerial
- ◆ Testing the positions of the FM aerials before fixing them permanently

 - If reception from a specific FM radio station is poor, press **MO/ST.** to switch from stereo mode to mono. The quality of the sound will be improved.

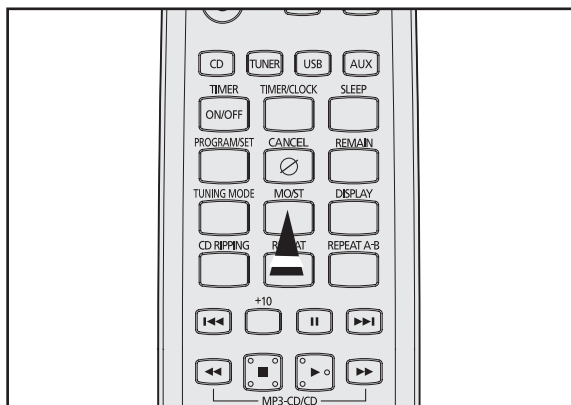



# CD RIPPING Function

You can rip a compact disc as a MP3 file on the USB  
This feature enables you to ripping with the start of the disc or track of your choice.

- 1** Switch the system on by pressing **STANDBY/ON**.
- 2** Connect the USB.
- 3** Load a compact disc(Digital Audio).
  - ◆ Press the **OPEN/CLOSE** button to open the CD door.
  - ◆ Insert a CD and press the **OPEN/CLOSE** button to close the CD door.
  - ◆ Use the CD selection ( **⏮** or **⏭** ) buttons to select the desired song.
- 4** Press **CD RIPPING** button on remote control to starting ripping.
  - ◆ If the system is playing state, turn the **CD RIPPING** dial down or press **CD RIPPING** button on the remote control to start the ripping for the current track.
  - ◆ Turn **CD RIPPING** dial up or press and hold **CD RIPPING** button on the remote control to start ripping the all tracks of Disc.
  - ◆ Press this button, "TRACK RIPPING" is displayed and **CD RIPPING** starts.
  - ◆ Press and hold this button, "FULL CD RIPPING" is displayed and **CD RIPPING** starts.
  - ◆ During **CD** ripping, do not disconnect USB device.
- 5** To stop ripping, press **STOP** ( **■** ) button and then automatically create and save as the MP3 file.  
After **CD-Ripping**, a directory named "RIPPING" will be created in your device, and the file name is same with the disc.

## Note

  - ◆ Don't disconnected USB and AC Cord during **CD-Ripping**. This may cause the file damage. If you want to stop **CD-Ripping** during **CD-Ripping**, you must press stop Key first and after the **CD** Stopped, then you can remove the USB device.
- ◆ If you disconnected USB device when **CD Ripping**, the main unit will be power off and you may not delete the ripped file. In this case, please connect the USB on the PC and backup the USB data on the PC first and then format the USB device.
- ◆ When the USB memory is not enough, it will be displayed "RIPPING ERROR".
- ◆ DTS-CD can't for **CD Ripping**.
- ◆ With external HDD, FAT format the USB can be **CD Ripping**, but not NTFS. The **CD Ripping** function of this product does not support all USB devices.
- ◆ When you use **CD** high speed search function or in the **Pause** or **Stop** mode, the **CD Ripping** can't work.
- ◆ During **CD Ripping**, do not deal impact. If is shocked while **CD Ripping**, **CD Ripping** maybe disengage.
- ◆ Sometimes, some of USB devices, **CD Ripping** time is long.
- ◆ In program mode, you can't use **CD RIPPING** function.

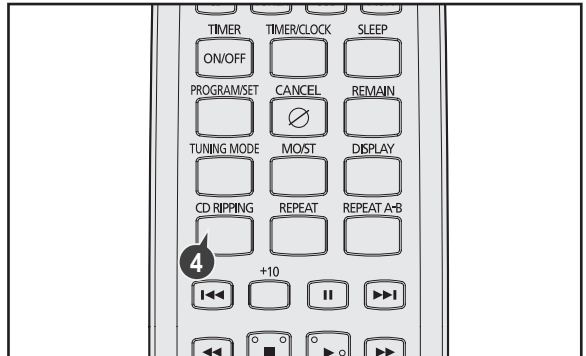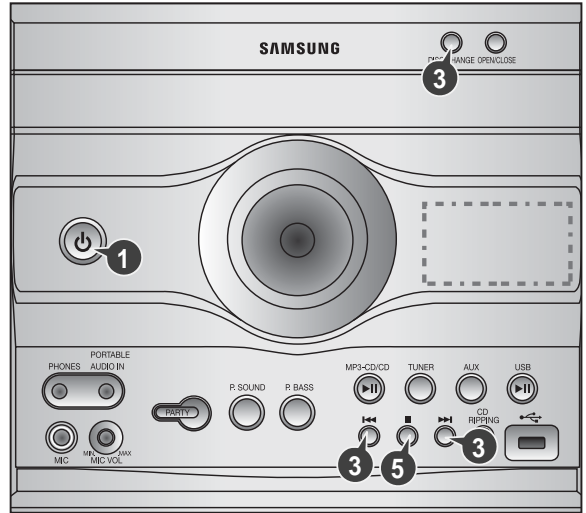

# Timer Function

The timer enables you to switch the system on or off at specific times.

**Example:** You wish to wake up to music every morning.

- If you no longer want the system to be switched on or off automatically, you must cancel the timer.
- ◆ Before setting the timer, check that the current time is correct.
- ◆ For each step, you have a few seconds to set the required options. If you exceed this time, you must start again.

- 1** Switch the system on by pressing **STANDBY/ON**.
- 2** Press **TIMER/CLOCK** until **TIMER** is displayed.
- 3** Press **PROGRAM/SET**.  
**Result:** **ON TIME** is displayed for a few seconds, followed by any switch-on time already set; you can set the timer switch-on time.
- 4** Set the timer switch-on time.
  - a** Press the **TUNING**  $\wedge$  or  $\vee$  buttons.
  - b** Press **PROGRAM/SET**.  
**Result:** The minutes flash.
  - c** Press the **TUNING**  $\wedge$  or  $\vee$  buttons.
  - d** Press **PROGRAM/SET**.  
**Result:** **OFF TIME** is displayed for a few seconds, followed by any switch-off time already set; you can now set the timer switch-off time.
- 5** Set the timer switch-off time.
  - a** Press the **TUNING**  $\wedge$  or  $\vee$  buttons.
  - b** Press **PROGRAM/SET**.  
**Result:** The minutes flash.
  - c** Press the **TUNING**  $\wedge$  or  $\vee$  buttons.
  - d** Press **PROGRAM/SET**.  
**Result:** **VOL XX** is displayed, where **XX** corresponds to the volume already set.
- 6** Press **TUNING**  $\wedge$  or  $\vee$  to adjust the volume level and press **PROGRAM/SET**.  
**Result:** The source to be selected is displayed.
- 7** Press the **TUNING**  $\wedge$  or  $\vee$  buttons to select the source to be played when the system switches on.

 
 
If you select...	You must also...
TUNER (radio) .....	<b>a</b> Press <b>PROGRAM/SET</b> . <b>b</b> Select a preset station by press the <b>TUNING</b> $\wedge$ or $\vee$ buttons.
CD (compact disc) .....	Load one or more compact discs.
USB .....	connect usb.

- 8** Press **PROGRAM/SET** to confirm the timer.
- 9** Press **STANDBY/ON** to set the system to standby mode.  
**Result:** **T** is displayed to the top of the time, indicating that the timer has been set. The system will switch on and off automatically at the required times.

➤ If the timer switch on and off times are identical, the word **ERROR** is displayed.

## ➤ To set the timer function

- ◆ You may use **◀** or **▶** buttons on the main unit to instead of the **TUNING**  $\wedge$  or  $\vee$  buttons to adjust in step 4, 5, 6, 7.

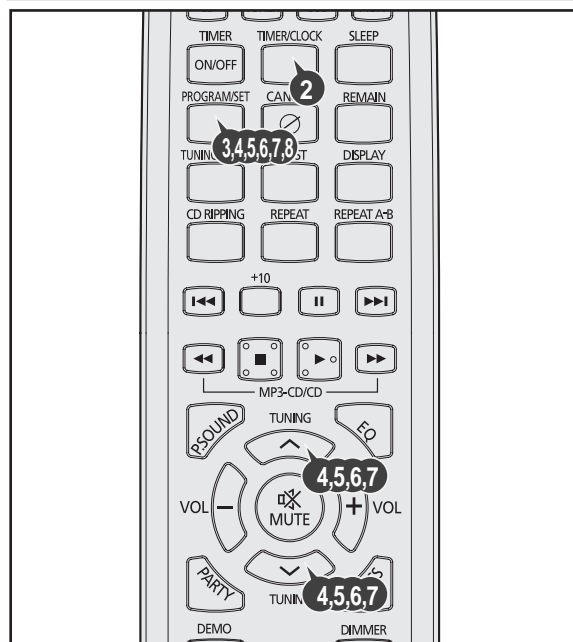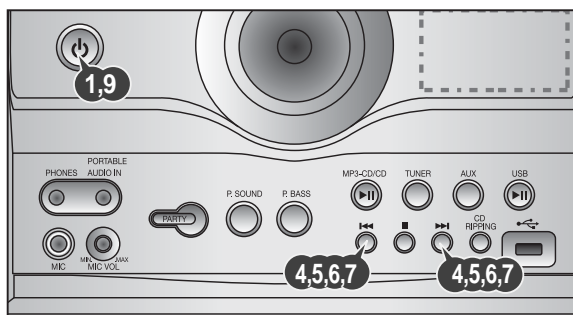


## Canceling the Timer

After having set the timer, it will start automatically as shown by the **TIMER** indication on the display. If you no longer wish to use the timer, you must cancel it.

➤ You can stop the timer at any time (system on or in standby mode).

 To...	Press <b>TIMER ON/OFF</b> ...
Cancel the timer .....	Once. <b>Result:</b> <b>T</b> is no longer displayed.
Restart the timer .....	Twice. <b>Result:</b> <b>T</b> is displayed again.

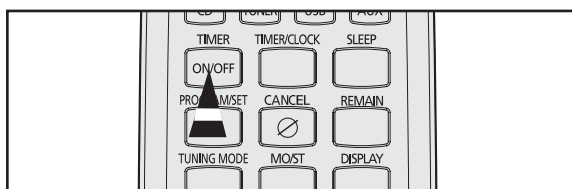


## Mute Function

You can turn the sound off temporarily on your system.

**Example:** You wish to answer a telephone call.

 - 1 Press MUTE.
- 2 To switch the sound back on, press MUTE again or the VOLUME buttons.

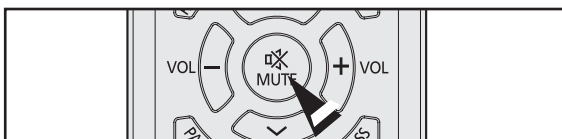


## Selecting EQ Mode

Your mini-compact system is equipped with a preset equalizer that allows you to choose the most appropriate balance between treble and bass frequencies, according to the type of music you are listening to.

- 1 Press EQ button until the required option is selected.


 
To obtain a...	Select...
Normal balance (linear)	PASS
Balance suitable for pop music	POP
Balance suitable for rock music	ROCK
Balance suitable for classic music	CLASSIC
Balance suitable for hall	HALL
Balance suitable for live	LIVE
Balance suitable for cinema	CINEMA



## Party Function

Your mini-compact system has a special effect light. when you select PARTY mode, the light will changed with the music playback.

  - 1 Press the PARTY button.  
Each time you press the PARTY button, the party mode will change as follows:  
**PARTY 1 k PARTY 2 k PARTY 3 k PARTY 4 k OFF**

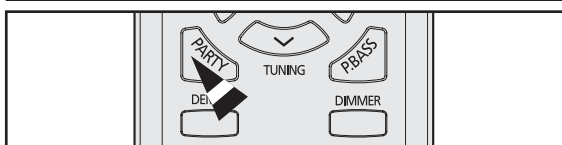
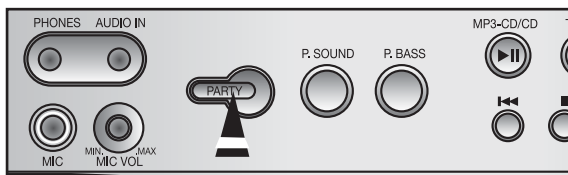


## Power Sound Function

Your mini-compact system is equipped with the function of POWER SOUND mode .

The function of POWER SOUND mode amplifies bass and improves high key or bass twice as much for you to appreciate powerful real sound.

 
 
- 1 Press the P.SOUND button.  
Result: "P.SOUND" is displayed.
- 2 To cancel this function, press P.SOUND again, "OFF" is displayed for a few seconds.

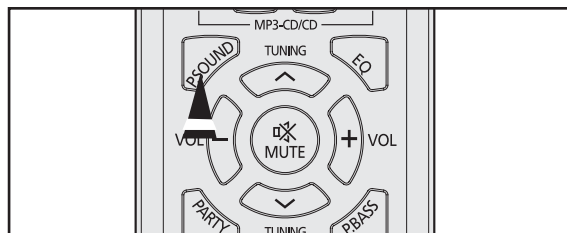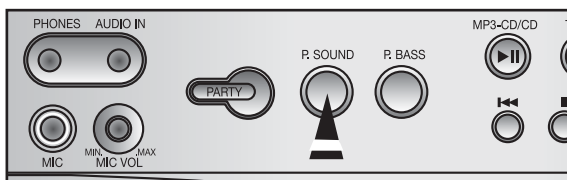

## Power Bass Function

Your mini-compact system has a bass amplification function called SBS (Super Bass Sound). This function makes the sound more powerful and real.

  
- 1 Press the P.BASS button.  
Result: "P. BASS" is displayed.
- 2 To cancel this function, press P.BASS again, "OFF" is displayed for a few seconds.

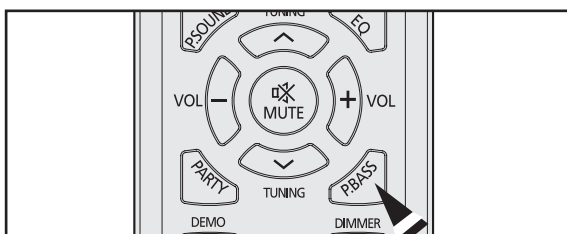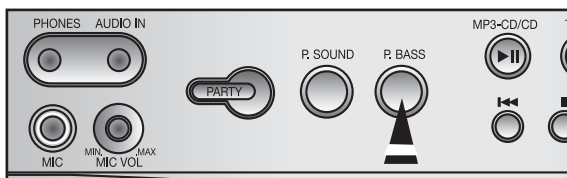


## Setting the System to Switch off Automatically

While listening to music, you can set the system to switch off automatically.

 **Example:** You wish to go to sleep to music.

 
- 1 Press **SLEEP**.  
Result: playback starts and the following indications are displayed:  
**90 MIN**
- 2 Press **SLEEP** once or more times to indicate how long the system should continue playing before it switches off:  

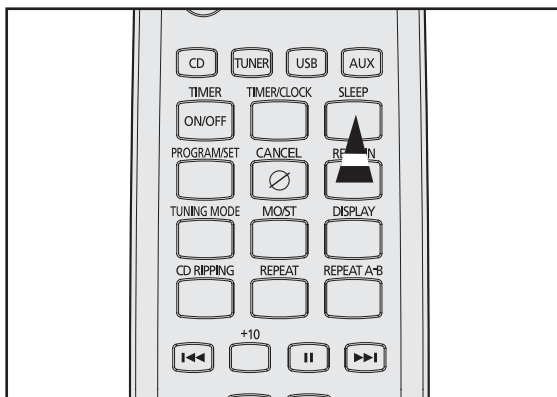  - At any time, you can:
    - ◆ Check the remaining time by pressing **SLEEP**
    - ◆ Change the remaining time by repeating Steps 1 and 2
- 3 To cancel SLEEP function, press **SLEEP** once or more times until **OFF** is display.



## Connecting Microphone

 You can also insert microphone to sing along with your favorite Cds.

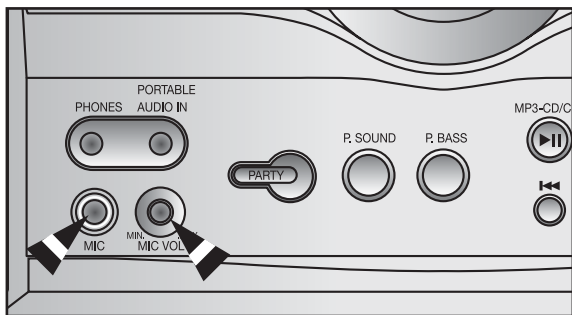- Plug a microphone with a 6.3ø MIC jack into the Mic terminal
- ◆ Connect one Microphone.
- ◆ Turn the **MIC VOL** knob to adjust the **MIC** Volume.




## Connecting Headphones

 You can connect a set of headphones to your mini-compact system so that you can listen to music or radio programmers without disturbing other people in the room. The headphones must have a 3.5ø jack or an appropriate adapter.

Connect the headphones to the **PHONES** jack on the main unit.  
Result: The loudspeakers are no longer used to output the sound.


- Prolonged use of headphones at a high volume may damage your hearing.

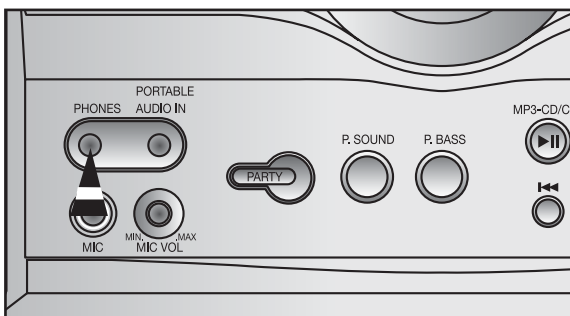


## Safety Precautions

ENG


The following diagrams illustrate the precautions to be taken when using or moving your mini-compact system.

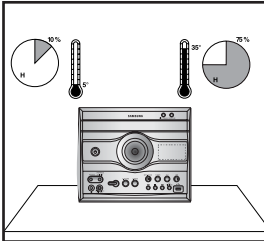 

 
Ambient operating conditions:  
Ambient temperature 5°C-35°C  
Humidity 10-75%

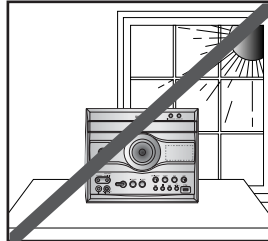

 
Do not expose the unit to direct sun radiation or other heat sources. This could lead to overheating and malfunction of the unit.

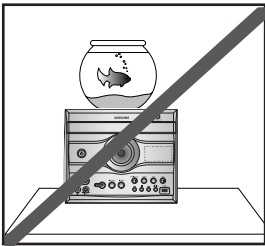

 
Do not place potted plants or vases on top of the unit. Moisture entering the unit could lead to dangerous electric shock and can cause equipment damage. In such events immediately disconnect the main plug from the socket.

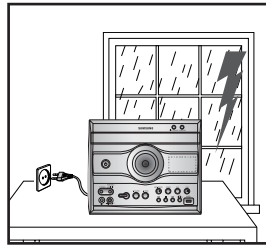

 
During thunderstorms, disconnect the main plug from the socket. Main voltage peaks due to lightning could damage the unit.

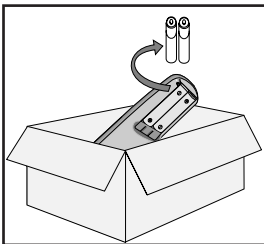

 
Remove the batteries from the remote control, if not used for any extended period. Leaking batteries can cause serious damage to the remote control.

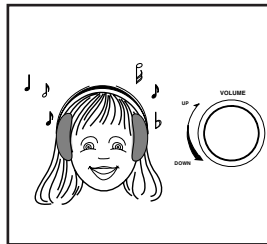

 When using headphones, take care not to listen at excessive volumes. Extended use of headphones at high volumes will lead to hearing damage.

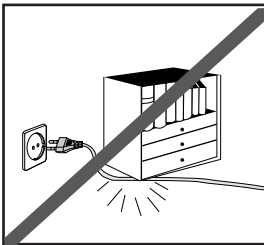

 Do not place heavy items on the main lead. Main cable damage can lead to damage of the equipment (fire hazard) and can cause electric shock.

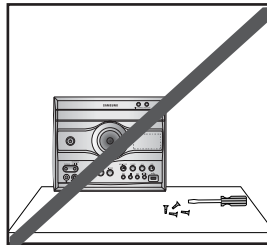

Do not remove any equipment panels. The inside of the unit contains live components, which cause electric shock.

## Cleaning Your Mini-Compact System

To obtain the best possible results from your mini-compact system, you must clean the following elements regularly:

- ◆ The outer casing
  - ◆ The compact disc player
  - ◆ The cassette players (heads, rollers and drive capstans)
- ☛ Always unplug the system from the wall outlet:
- ◆ Before cleaning it
  - ◆ If you are not going to be using it for a long time


### Outer Casing

 
Clean the outer casing regularly using a soft cloth and a light detergent. Do not use abrasive powders, liquids or aerosol cleaners. Never let any liquids get into the system.

### Compact Disc Player

- 1 Before playing a compact disc, clean it with a special CD cleaning agent. Do not use the same cleaning agents as for vinyl LP records. Carefully wipe the disc from the centre outward.
  - 2 Regularly clean the player with a special cleaning disc (available from your local dealer).
- ☛ If you will not be using the remote control for a long time, remove the batteries to prevent corrosion.
- ◆ Although your system is very hard-wearing, it should not be used in an excessively dusty environment or subjected to shocks or extreme heat (close to heating appliances or in direct sunlight, etc.).
  - ◆ If the unit emits an unpleasant odor when in use, unplug it from the main supply and contact the after-sales service.

## Precautions When Using Compact Discs

- ◆ Handle your compact discs with care. Always hold them by the edges to avoid leaving fingerprints on the shiny surface.
- ◆ When you have finished playing a compact disc, always put it back in its case.
- ◆ Do not fix paper or adhesive tape to the discs and do not write on the label.
- ◆ Clean them with a special-purpose cloth.
- ◆ Store your compact discs in a clean place, out of direct sunlight, where they will not be exposed to high temperatures.
- ◆ Always use compact discs marked .

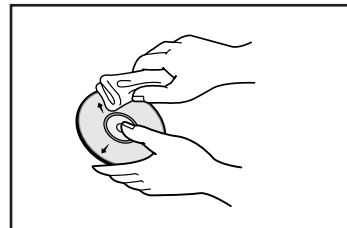

# Before Contacting the After-Sales Service

It always takes a little time to become familiar with a new appliance.  
 If you have any of the problems listed below, try the solutions given. They may save you the time and inconvenience of an unnecessary service call.

- If the above guidelines do not allow you to solve the problem, take a note of:
- ◆ The model and serial numbers, normally printed on the rear of the system
  - ◆ Your warranty details
  - ◆ A clear description of the problem
- Then contact your local dealer or SAMSUNG after-sales service.

Problem	Checks/Explanation
<p style="margin: 0;">G E N E R A L</p>	<p>The system does not work</p> <ul style="list-style-type: none"> <li>• The main lead is not correctly plugged into a wall socket or the wall socket is not switched on.</li> <li>• The remote control batteries need replacing or the polarity has not been respected.</li> <li>• The <b>STANDBY/ON</b> button has not been pressed.</li> </ul>
<p style="margin: 0;">G E N E R A L</p>	<p>There is no sound</p> <ul style="list-style-type: none"> <li>• The volume has been completely turned down.</li> <li>• The correct function (TUNER, CD, USB, AUX) has not been selected.</li> <li>• You have connected a set of earphones.</li> <li>• The loudspeaker wires have been disconnected.</li> <li>• The <b>MUTE</b> button has been pressed.</li> </ul>
<p style="margin: 0;">G E N E R A L</p>	<p>The Timer does not work</p> <ul style="list-style-type: none"> <li>• The timer has been stopped by pressing <b>TIMER ON/OFF</b>.</li> </ul>
<p style="margin: 0;">G E N E R A L</p>	<p>In case it does not work, even the action is taken as above.</p> <ul style="list-style-type: none"> <li>• Press the <b>STOP</b> button for 5 seconds in power 'OFF'(standby), then it is returned the original position (RESET)</li> </ul>
<p style="margin: 0;">C D / M P 3 / C D</p>	<p>The compact disc player does not start playing</p> <ul style="list-style-type: none"> <li>• The CD function has not been selected.</li> <li>• The disc has been inserted face down or is either dirty or scratched.</li> <li>• The laser sensor is dirty or dusty.</li> <li>• The system has not been installed on a flat, horizontal surface.</li> <li>• Condensation has formed in the player; leave the system in a warm, airy room for at least one hour.</li> </ul>
<p style="margin: 0;">R A D I O</p>	<p>Reception is poor or no radio stations are received at all</p> <ul style="list-style-type: none"> <li>• The <b>TUNER</b> function has not been selected.</li> <li>• The radio frequency has not been correctly selected.</li> <li>• The aerial has been disconnected or is not facing the right way. Turn it until you find the best orientation.</li> <li>• You are in a building that blocks radio waves; you must use an outside aerial.</li> </ul>

# Technical Specifications

ENG

**SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.**

---

## RADIO

### FM

Signal/noise ratio	62 dB
Usable sensitivity	10 dB
Total harmonic distortion	0.4 %

---

## COMPACT DISC PLAYER

Capacity	3 discs
Frequency range	20 Hz - 20 KHz ( $\pm$ 1 dB)
Signal/noise ratio	90 dB (at 1 KHz) with filter
Distortion	0.1 % (at 1 KHz)
Channel separation	75 dB
Disc sizes	Diameter: 120 or 80 mm. Thickness: 1.2 mm

---

## AMPLIFIER

Output power	
Front Speaker (4 $\Omega$ )(MAX-G55/G56)	90 Watts/CH RMS,IEC (total harmonic distortion: 10 %)
Subwoofer Speaker (4 $\Omega$ )(MAX-G56)	100 Watts/CH RMS,IEC (total harmonic distortion: 10 %)
Channel separation	60 dB
Signal/noise ratio	70 dB

---

## GENERAL

Power Consumption	50 W
Dimensions	270 (W) x 227 (H) x 377 (D) mm
Weight	3.8 Kg

---



## Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

ENG

Region	Country	Customer Care Center	Web Site
North America	CANADA	1-800-SAMSUNG(726-7864)	www.samsung.com/ca
	MEXICO	01-800-SAMSUNG(726-7864)	www.samsung.com/mx
	U.S.A	1-800-SAMSUNG(726-7864)	www.samsung.com/us
Latin America	ARGENTINE	0800-333-3733	www.samsung.com/ar
	BRAZIL	0800-124-421, 4004-0000	www.samsung.com/br
	CHILE	800-SAMSUNG(726-7864)	www.samsung.com/cl
	NICARAGUA	00-1800-5077267	www.samsung.com/latin
	HONDURAS	800-7919267	www.samsung.com/latin
	COSTA RICA	0-800-507-7267	www.samsung.com/latin
	ECUADOR	1-800-10-7267	www.samsung.com/latin
	EL SALVADOR	800-6225	www.samsung.com/latin
	GUATEMALA	1-800-299-0013	www.samsung.com/latin
	JAMAICA	1-800-234-7267	www.samsung.com/latin
	PANAMA	800-7267	www.samsung.com/latin
	PUERTO RICO	1-800-682-3180	www.samsung.com/latin
	REP. DOMINICA	1-800-751-2676	www.samsung.com/latin
	TRINIDAD & TOBAGO	1-800-SAMSUNG(726-7864)	www.samsung.com/latin
	VENEZUELA	0-800-100-5303	www.samsung.com/latin
Europe	COLOMBIA	01-8000112112	www.samsung.com.co
	BELGIUM	02 201 2418	www.samsung.com/be
	CZECH REPUBLIC	800-726-786 (800 - SAMSUNG)	www.samsung.com/cz
	DENMARK	70 70 19 70	www.samsung.com/dk
	FINLAND	030-6227 515	www.samsung.com/fi
	FRANCE	01 48 63 00 00	www.samsung.com/fr
	GERMANY	01805 - SAMSUNG(726-7864) (€ 0,14/Min)	www.samsung.de
	HUNGARY	06-80-SAMSUNG(726-7864)	www.samsung.com/hu
	ITALIA	800-SAMSUNG(726-7864)	www.samsung.com/it
	LUXEMBURG	02 261 03 710	www.samsung.com/lu
	NETHERLANDS	0900-SAMSUNG (726-7864)(€ 0,10/Min)	www.samsung.com/nl
	NORWAY	815-56 480	www.samsung.com/no
	POLAND	0 801 1SAMSUNG(0-801172 678)	www.samsung.com/pl
	PORTUGAL	80820-SAMSUNG(726-7864)	www.samsung.com/pt
	SLOVAKIA	0800-SAMSUNG(726-7864)	www.samsung.com/sk
	SPAIN	902-1-SAMSU(72678)	www.samsung.com/es
	SWEDEN	0771-400 200	www.samsung.com/se
	U.K	0845 SAMSUNG (7267864)	www.samsung.com/uk
	EIRE	0818 717 100	www.samsung.com/ie
	AUSTRIA	0800-SAMSUNG(726-7864)	www.samsung.com/at
	SWITZERLAND	0800-SAMSUNG(726-7864)	www.samsung.com/ch
CIS	RUSSIA	8-800-555-55-55	www.samsung.ru
	KAZAKHSTAN	8-10-800-500-55-500	www.samsung.com/kz_ru
	UZBEKISTAN	8-10-800-500-55-500	www.samsung.com/kz_ru
	KYRGYZSTAN	00-800-500-55-500	
	TADJIKISTAN	8-10-800-500-55-500	
	UKRAINE	8-800-502-0000	www.samsung.ua
	LITHUANIA	8-800-77777	www.samsung.lt
	LATVIA	8000-7267	www.samsung.com/lv
	ESTONIA	800-7267	www.samsung.ee
Asia Pacific	AUSTRALIA	1300 362 603	www.samsung.com/au
	NEW ZEALAND	0800 SAMSUNG (0800 726 786)	www.samsung.com/nz
	CHINA	800-810-5858, 400-810-5858, 010-6475 1880	www.samsung.com/cn
	HONG KONG	3698-4698	www.samsung.com/hk
	INDIA	3030 8282, 1800 110011, 1-800-3000-8282	www.samsung.com/in
	INDONESIA	0800-112-8888	www.samsung.com/id
	JAPAN	0120-327-527	www.samsung.com/jp
	MALAYSIA	1800-88-9999	www.samsung.com/my
	PHILIPPINES	1800-10-SAMSUNG(726-7864)	www.samsung.com/ph
	SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg
	THAILAND	1800-29-3232, 02-689-3232	www.samsung.com/th
	TAIWAN	0800-329-999	www.samsung.com/tw
Middle East & Africa	VIETNAM	1 800 588 889	www.samsung.com/vn
	TURKEY	444 77 11	www.samsung.com/tr
	SOUTH AFRICA	0860-SAMSUNG(726-7864)	www.samsung.com/za
	U.A.E	800-SAMSUNG (726-7864), 8000-4726	www.samsung.com/ae

