

SAMSUNG

COLOR TELEVISION

**SP42Q2
SP43W6
SP43T7
SP43T8/54T8
SP43Q5/47Q5
SP43R1/54R1**

Owner's Instructions

Before operating the unit,
please read this manual thoroughly,
and retain it for future reference.

**ON-SCREEN MENUS
TELETEXT
SELF FOCUS**

**VIRTUAL
DOLBY
SURROUND**

Important Warranty Information Regarding Television Format Viewing

Standard screen format televisions (4:3, the aspect ratio of the screen width to height) are primarily designed to view standard format full-motion video. The images displayed on them should primarily be in the standard 4:3 ratio format and constantly moving. Displaying stationary graphics and images on screen, such as the dark top and bottom letterbox bars (wide screen pictures), should be limited to no more than 15% of the total television viewing per week.

Wide screen format televisions (16:9, the aspect ratio of the screen width to height) are primarily designed to view wide screen format full-motion video. The images displayed on them should primarily be in the wide screen 16:9 ratio format, or expanded to fill the screen if your model offers this feature, and constantly moving. Displaying stationary graphics and images on screen, such as the dark side-bars on non-expanded standard format television video and programming, should be limited to no more than 15% of the total television viewing per week.

Additionally, viewing other stationary images and text such as stock market reports, video game displays, station logos, web sites or computer graphics and patterns, should be limited as described above for all televisions. *Displaying any stationary images that exceed the above guidelines can cause uneven aging of picture tubes (CRTs) that leave subtle, but permanent burned-in ghost images in the television picture. To avoid this, vary the programming and images, and primarily display full screen moving images, not stationary patterns or dark bars.* On television models that offer picture sizing features, use these controls to view the different formats as a full screen picture.

Be careful in the selection and duration of television formats used for viewing. Uneven CRT aging as a result of format selection and use, as well as other burned-in images, is not covered by your Samsung limited warranty.

Contents

◆ FOREWORD	
■ Important Warranty Information Regarding Television Format Viewing	3
◆ CONNECTING AND PREPARING YOUR TELEVISION	
■ Control Panels (depending on the model)	6~7
■ Connection Panels (depending on the model)	8
■ Using a Display Deck (depending on the model)	9
■ Inserting the Batteries in the Remote Control.....	9
■ Infrared Remote Control.....	10
■ Connecting to an Aerial or Cable Television Network	11
■ Connecting a Satellite Receiver or Decoder.....	12
■ Switching Your Television On and Off.....	13
■ Placing Your Television in Standby Mode	13
■ Becoming Familiar with the Remote Control	14
■ Plug and Play Feature	15~16
■ Displaying Information	16
■ Choosing Your Language.....	17
■ Adjusting the Screen Automatically (Self Focus).....	18
■ Deactivating the Automatic Execution of the Self Focus	19
■ Removing the “Self Focus” from the Display	20
■ Adjusting Convergence Manually	21
◆ SETTING THE CHANNELS	
■ Storing Channels Automatically.....	22
■ Sorting the Stored Channels	23
■ Storing Channels Manually.....	24~25
■ Skipping Unwanted Channels	26
■ Locking the Channel.....	27
■ Fine Tuning Channel Reception.....	28
◆ USING YOUR TELEVISION	
■ Using the LNA (Low Noise Amplifier) Feature	29
■ Activating Panel Button Lock.....	30
■ Changing the Picture Standard	31
■ Customizing the Picture Settings.....	32
■ Selecting the Picture Size (4:3 Model)	33
■ Selecting the Picture Size (Wide Model)	34~35
■ Selecting the Scan Mode.....	36
■ Using the Digital NR (Digital Noise Reduction) Feature	37
■ Setting the Blue Screen Mode.....	38
■ Freezing the Current Picture	38

Contents (continued)

◆ USING YOUR TELEVISION (continued)	
■ Changing the Sound Standard	39
■ Adjusting the Sound Settings	40
■ Extra Sound Settings.....	41
- Auto volume	
- Dolby Virtual	
■ Setting the Melody Sound	42
■ Selecting the Sound Mode (depending on the model)	43
■ Setting and Displaying the Current Time.....	44
■ Setting the Sleep Timer.....	45
■ Switching the Television On and Off Automatically	46
■ Viewing an External Signal Source	47
◆ USING THE TELETEXT FEATURE	
■ Teletext Feature	48
■ Displaying the Teletext Information	49
■ Selecting Display Options.....	50
■ Selecting a Teletext Page.....	51
■ Storing Teletext Pages (depending on the model)	52
◆ ADDITIONAL INFORMATION ON CONNECTIONS	
■ Connecting to the External Devices	53
■ Connecting to the Audio Output	54
■ Connecting to the S-Video Input.....	55
■ Connecting to the Component Input.....	56
◆ RECOMMENDATIONS FOR USE	
■ Programming the Remote Control for Other Components	57~58
- VCR Remote Control Codes	58
- Cable Box (CATV) Remote Control Codes	58
- DVD Remote Control Codes	58
■ Troubleshooting: Before Contacting Service Personnel.....	59

Symbols



Press



Important




Note


Control Panels (depending on the model)

➤ The actual configuration on your TV may be different, depending on your model.


SP43T7

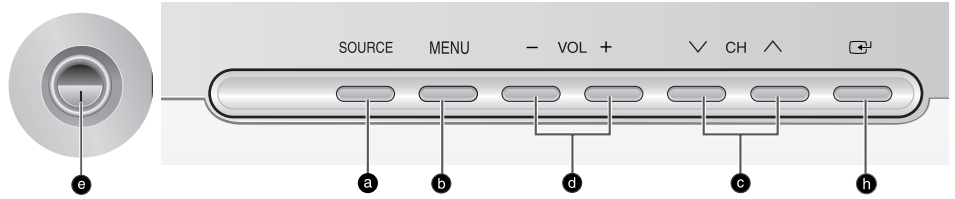

SP43T8
SP54T8

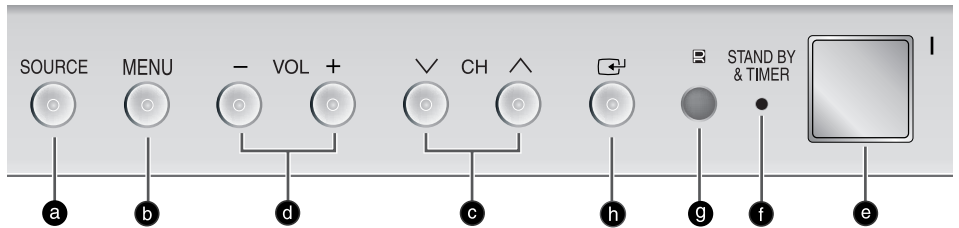

SP43W6

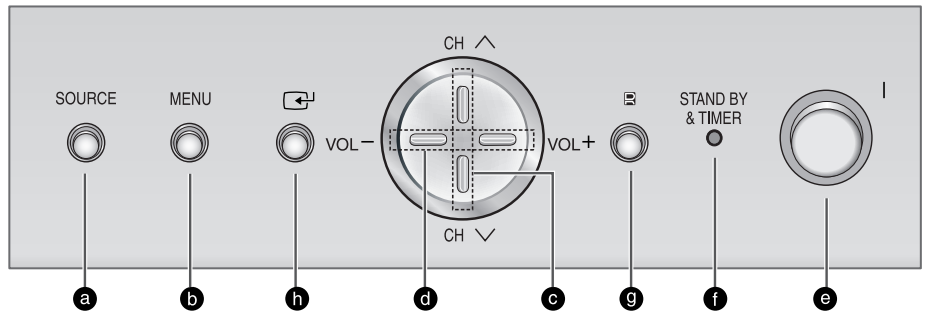



- | | |
|------------------------------------|--|
| (a) Switch among video input modes | (e) Switch the TV on and off |
| (b) Display the on-screen menu | (f) Standby & Timer indicator |
| (c) Select the channels | (g) Remote control sensor |
| (d) Adjust the volume | (h) Access to the selected option on the menu system |

-
- ◆ You can use the ∇ CH \wedge buttons to switch on the TV when it is in standby mode depending on the model.
 - ◆ The - VOL + and ∇ CH \wedge buttons have the same function as the \blacktriangle / \blacktriangledown / \blacktriangleleft / \blacktriangleright buttons on the remote control.
 - ◆ If the remote control no longer works or you have lost it, you can use controls on the panel of the TV.



Control Panels (depending on the model) (continued)

➤ The actual configuration on your TV may be different, depending on your model.



SP42Q2

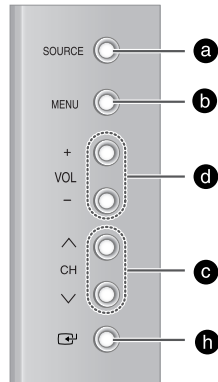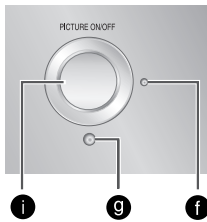

SP43Q5
SP47Q5

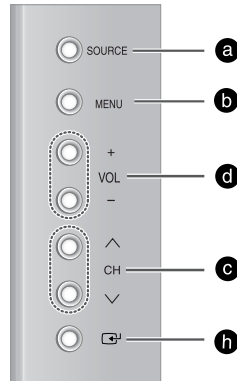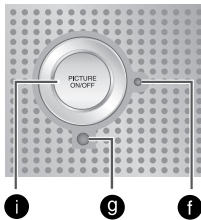

SP43R1
SP54R1

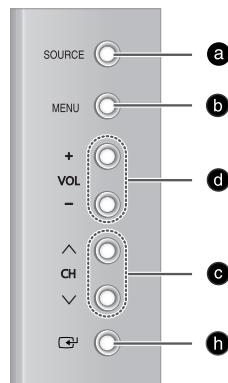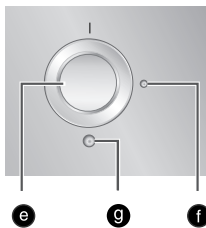

- | | |
|------------------------------------|--|
| (a) Switch among video input modes | (f) Standby & Timer indicator |
| (b) Display the on-screen menu | (g) Remote control sensor |
| (c) Select the channels | (h) Access to the selected option on the menu system |
| (d) Adjust the volume | (i) Place the TV in standby mode |
| (e) Switch the TV on and off | |

Using a Display Deck (depending on the model)


You can display a VCR or DVD Player, etc. by using the display deck.

SP54T8


- 1 Hold the center of the door and lift it up in the direction of arrow.
- 2 After placing a component you have in the display deck, hold the center of the door and pull it down.

- You should display only the component that is within 126mm high. When displaying a component in the display deck, please space it out 30mm from the front, 20mm from either end.

SP43W6

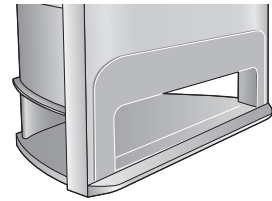

SP54T8



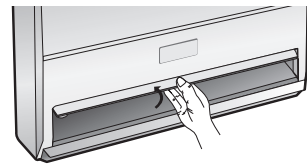


Inserting the Batteries in the Remote Control


You must insert or replace the batteries in the remote control when you:

- ◆ Purchase the television
- ◆ Find that the remote control is no longer operating correctly

- 1 Remove the cover on the rear of the remote control by pressing the symbol (▼) downwards and then pulling firmly to remove it.
- 2 Insert two R03, UM4, "AAA" 1.5V or equivalent batteries taking care to respect the polarities:
 - ◆ + on the battery against + on the remote control
 - ◆ - on the battery against - on the remote control
- 3 Replace the cover by aligning it with the base of the remote control and pressing it back into place.

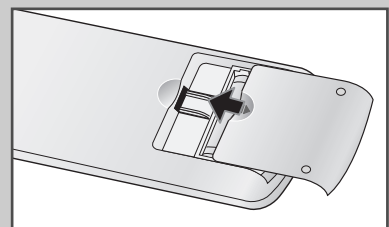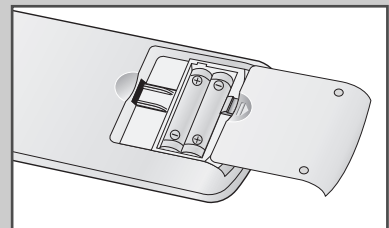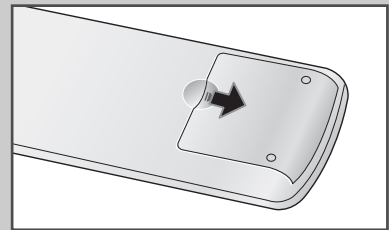

Infrared Remote Control

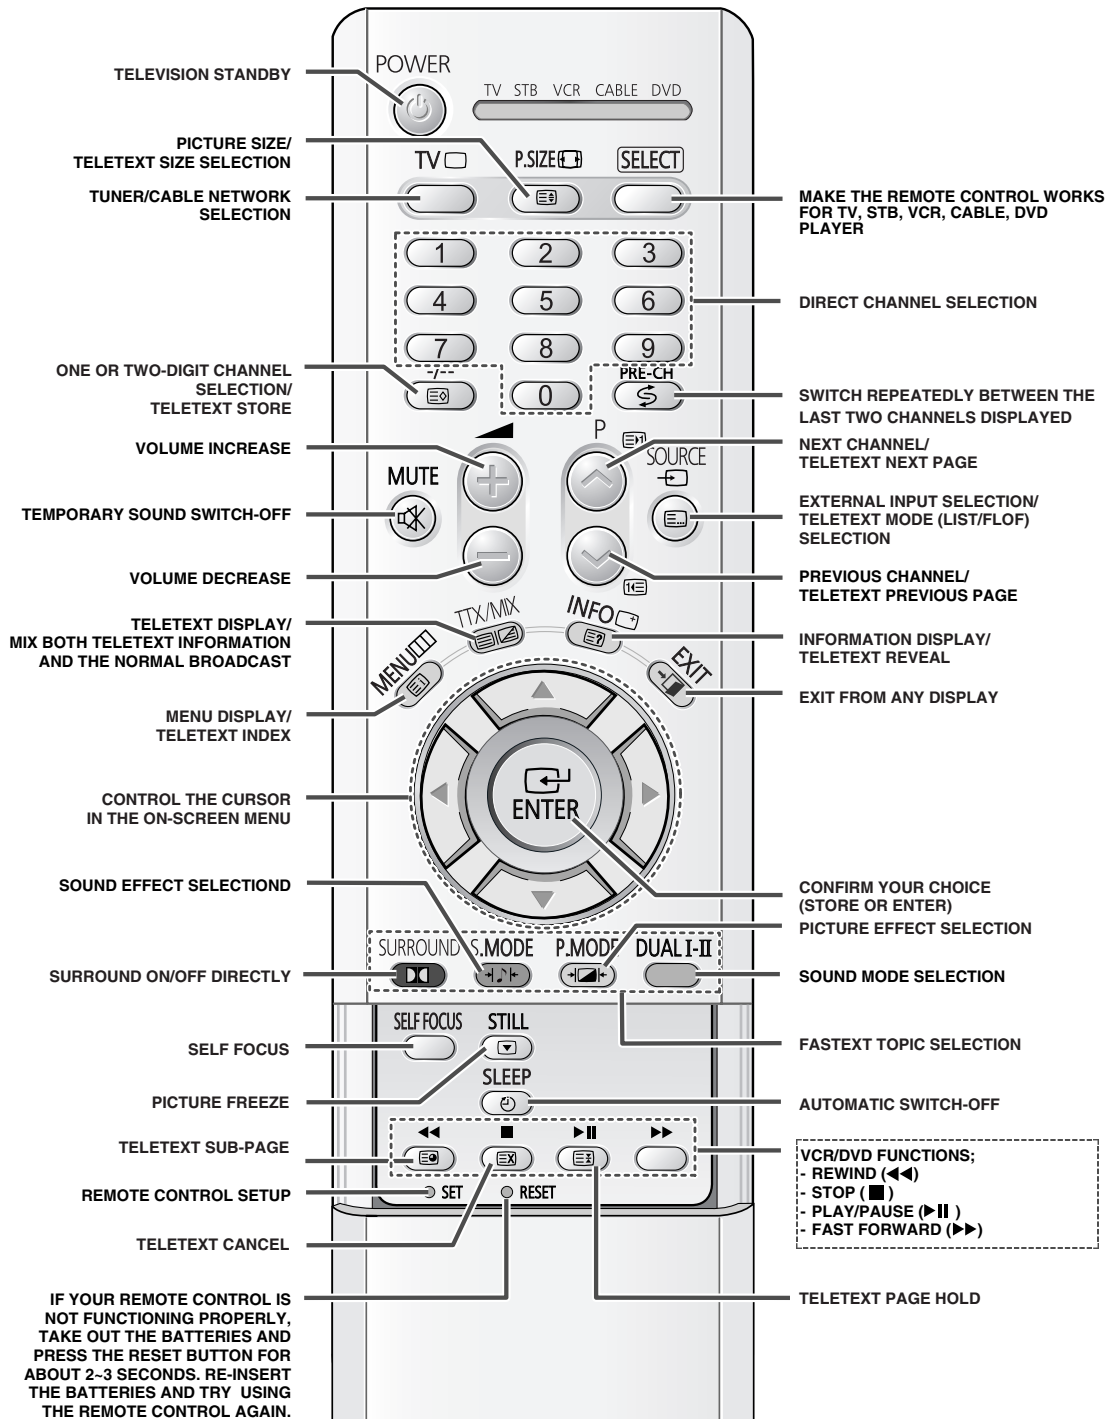

➤ The performance of the remote control may be affected by bright light.

Connecting to an Aerial or Cable Television Network

To view television channels correctly, a signal must be received by the set from one of the following sources:


- ◆ An outdoor aerial
- ◆ A cable television network
- ◆ A satellite network

1 In the first three cases, connect the aerial or network input cable to the 75Ω coaxial socket on the rear of the television.

2 If you are using an indoor aerial, you may need to turn it when tuning your television until you obtain a picture that is both sharp and clear.


For further details, refer to:

- ◆ "Storing Channels Automatically" on page 22.
 - ◆ "Storing Channels Manually" on page 24.
-

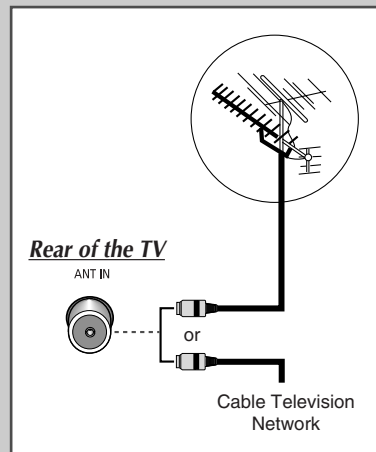

Connecting a Satellite Receiver or Decoder

In order to watch television programmes broadcast via a satellite network, you must connect a satellite receiver to the rear of TV. Also, in order to descramble a coded transmission signal, you must connect a decoder to the rear of TV.

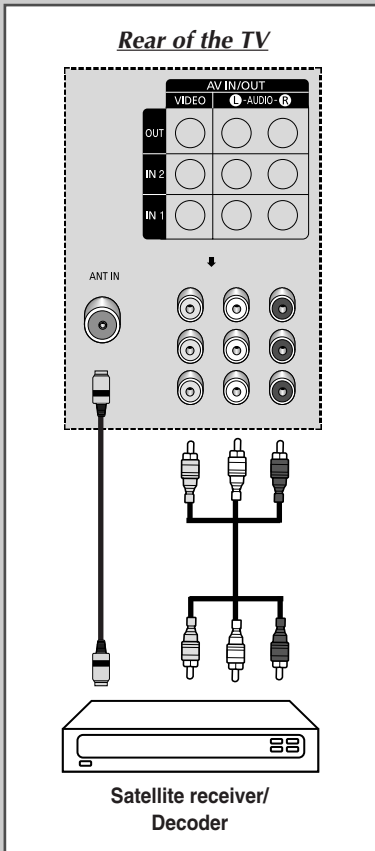

Using a Coaxial cable

Connect a coaxial cable to the:

- ◆ Receiver (or Decoder) output socket.
- ◆ Television aerial input socket.

➤ If you wish to connect both a satellite receiver (or decoder) and a VCR, you should connect the:

- ◆ Receiver (or Decoder) to the VCR
- ◆ VCR to the television

Otherwise, connect the receiver (or decoder) directly to the television.

Switching Your Television On and Off


The mains lead is attached to the rear of your television.

- 1 Plug the mains lead into an appropriate socket.
 - The main voltage is indicated on the rear of the television and the frequency is 50 or 60Hz.
- 2 Press the "I" button (On/Off) on the front or side of the television.

Result: The Standby indicator on the front of the television lights up.
- 3 Press the **POWER** (⏻) button on the remote control to switch the television on.

Result: The programme that you were watching last is re-selected automatically.

 - If you have not yet stored any channels, No clear picture appears. Refer to "Storing Channels Automatically" on page 22 or "Storing Channels Manually" on page 24.
- 4 To switch your television off, press the "I" button (On/Off) again.

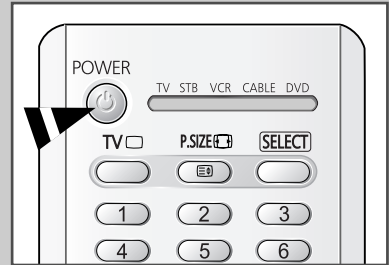

Placing Your Television in Standby Mode


Your television can be placed in Standby mode, in order to reduce the power consumption.

The Standby mode can be useful when you wish to interrupt viewing temporarily (during a meal, for example).


- 1 Press the **POWER** (⏻) button on the remote control.

Result: The screen is turned off and the Standby indicator on the front of the television lights up in red.
- 2 To switch the television back on, simply press the **POWER** (⏻) button again.
 - You can also switch on by pressing the **TV** (□) or **P** (⏻/⏻) button.

☞ Do not leave your television in Standby mode for long periods of time (when you are away on holiday, for example). Turn your television off by pressing the "I" button (On/Off) on the front or side of the television. It is best to unplug the set from the mains and aerial.

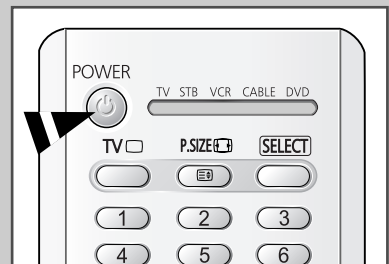

Becoming Familiar with the Remote Control

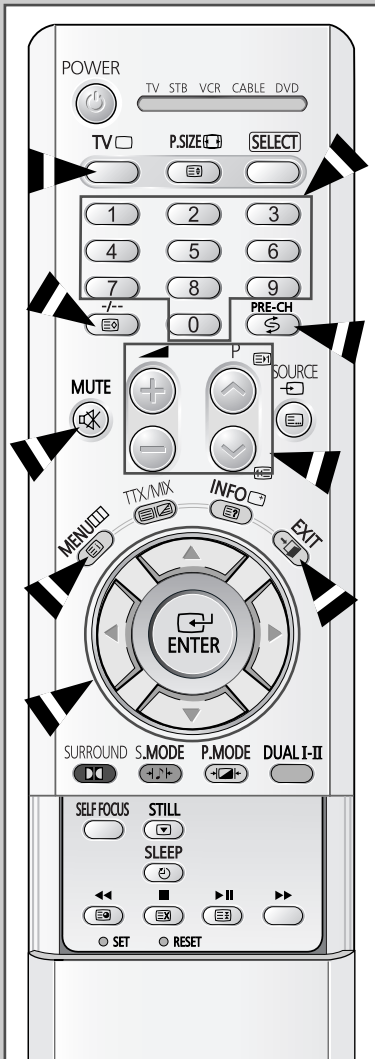

The remote control is used mainly to:

- ◆ Change channels and adjust the volume
- ◆ Set up the television using the on-screen menu system

The following table presents the most frequently used buttons and their functions.

Button	Viewing Function	Menu Function
	Used to display the next stored channel.	—
	Used to display the previous stored channel.	—
0 to 9	Used to display the corresponding channels. ➤ For double digit channels, the second digit must be pushed immediately after the first. Failure to do this will result in a single digit channel being displayed.	—
-/--	Used to select a channel numbered ten or over. Press this button, and the "--" symbol is displayed. Enter the two-digit channel number.	—
PRE-CH (\$)	Press the PRE-CH button. The TV will switch to the last channel viewed. To quickly switch between two channels that are far apart, tune to one channel, then use the numeric buttons to select second channel. Then, use the PRE-CH button to quickly alternate between them.	—
	Used to increase the volume.	—
	Used to decrease the volume.	—
MUTE ()	Used to switch the sound off temporarily. ➤ To turn the sound back on, press this button again, or press the or button.	—
MENU ()	Used to display the on-screen menu system.	Used to return to the previous menu or normal viewing.
	—	Used to: ◆ Display a submenu containing selections for the current menu option. ◆ Increase/decrease a menu option value.
	—	Used to confirm your choice.
TV ()	Used to switch the television on when it is in Standby mode.	Used to exit from the menu system and return to normal viewing directly.
EXIT ()	—	Used to exit from the any display.

Plug and Play Feature

When the television is initially powered ON, several basic customer settings proceed automatically and subsequently. The following settings are available.

- 1 If the television is in Standby mode, press the **POWER** (⏻) button on the remote control.
Result: The message **Start Plug & Play** is displayed for a little while and then **Language** menu is automatically displayed.

- 2 Select the appropriate language by pressing the **▲** or **▼** button.

- 3 Press the **ENTER** (↵) button to confirm your choice
Result: The message **Check antenna input.** is displayed.
 ➤ If any language is not selected on the **Language** menu, the **Language** menu will disappear about 30 seconds later.

- 4 Make sure that the antenna is connected to the TV, and then press the **ENTER** (↵) button.
Result: The **Area** menu is displayed




- 5 Select your area by pressing the **▲** or **▼** button. Press the **ENTER** (↵) button to confirm your choice.
Result: The **Search** menu is displayed.

- 6 To start the channel store, press the **ENTER** (↵) button.
Result: The search will end automatically. Channels are sorted and stored in an order which reflects their position in the frequency range (with lowest first and highest last). When it has finished, the **Clock** menu is displayed.
 ➤ To stop the search before it has finished or return to normal viewing, press the **MENU** (⏏) button.


- 7 Press the **◀** or **▶** button to move to the **Hour** or **Min.** Set the hour or minute by pressing the **▲** or **▼** button.
 ➤ You can also set the **Hour** and **Min** by pressing the numeric buttons directly.

- 8 Press the **ENTER** (↵) button.

- 9 When the setting has finished, the message **Enjoy your Watching.** is displayed, and then the channel which has been stored will be activated.

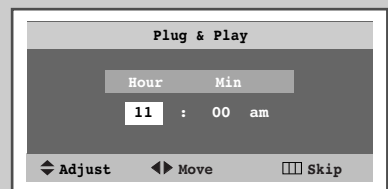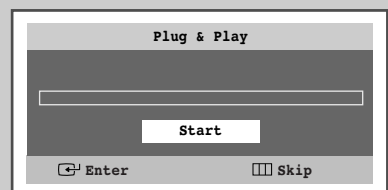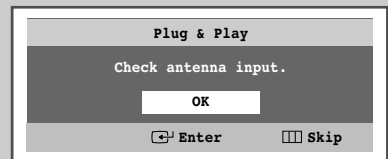


Plug and Play Feature (continued)

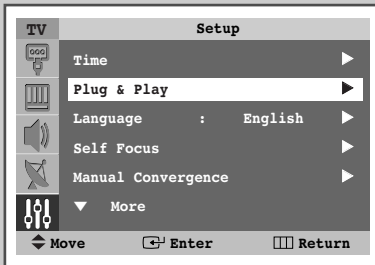

If you want to reset this feature...

- 1 Press the **MENU** ([]) button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button until the **Setup** is selected.
Result: The options available in the **Setup** group are displayed.
- 3 Press the **ENTER** ([]) button.
- 4 Press the **▲** or **▼** button until the **Plug & Play** option is selected.
Press the **ENTER** ([]) button.
Result: This feature starts with the message **Start Plug & Play** is displayed.
- 5 For further details on how to set, refer to the opposite page.

Displaying Information

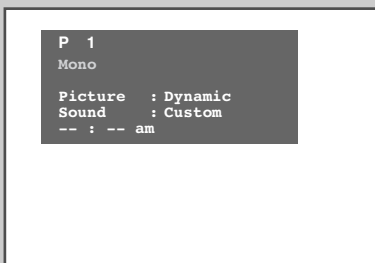

You can view the channel information and setting status you select by pressing the "INFO ([])" button on the remote control.

Choosing Your Language

When you start using your television for the first time, you must select the language which will be used for displaying menus and indications.

 
- 1 Press the **MENU** () button.

Result: The main menu is displayed.


- 2 Press the **▲** or **▼** button until the **Setup** is selected.


Result: The options available in the **Setup** group are displayed.

- 3 Press the **ENTER** () button.





- 4 Press the **▲** or **▼** button until the **Language** is selected.
Press the **ENTER** () button.

 Result: The languages available are listed.

- 5 Select the appropriate language by pressing the **▲** or **▼** button.
Press the **ENTER** () button to confirm your choice.

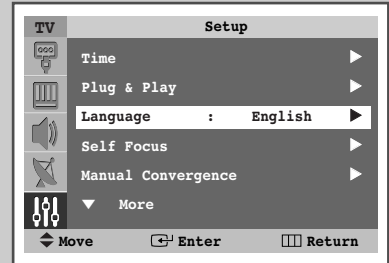

Adjusting the Screen Automatically (Self Focus)

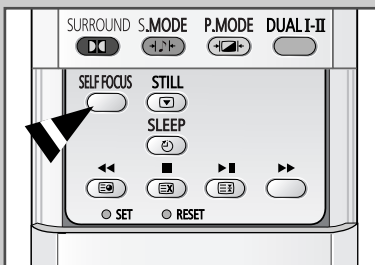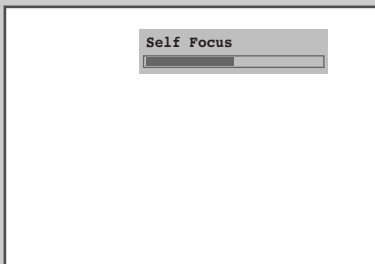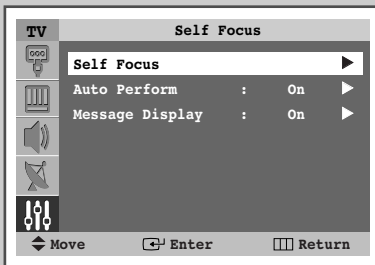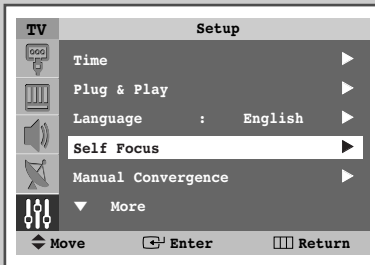

The "Self Focus" feature automatically finds the optimum picture quality when blurring, overlapping colors or incorrect focus occurs. These conditions may be caused by moving your TV.

- 1 Press the **MENU** (□□□) button.
Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button until the **Setup** is selected.
Result: The options available in the **Setup** group are displayed.

- 3 Press the **ENTER** (↵) button.

- 4 Press the **▲** or **▼** button until the **Self Focus** is selected.
Press the **ENTER** (↵) button.
Result: The **Self Focus** is selected.

 
 
 


- 5 Press the **ENTER** (↵) button again
Result: The self focus process begins with the message **Self Focus** and horizontal bar is displayed. During the process, minor distortions of the picture may occur. At this time, the colors may diffuse and a searching action will appear on the edges of the screen. This is a normal part of the adjustment. When it is finished, all of things will disappear and the optimum picture quality can be enjoyed.



➤ You can also set these options simply by pressing the **SELF FOCUS** button.

- ◆ Changing channels and any other signal changes will pause the self focus until a stable signal has returned. It resumes after the signal has been stabilised. This feature will not work without a signal.
- ◆ Ambient light that is too bright may affect the self focus. If this occurs, darken the environment and try again.



Deactivating the Automatic Execution of the Self Focus

The “Self Focus” feature starts on default. It will automatically begin 10 minutes after switching on the power and the appearance of the screen image. To set the optimum picture quality, the “Self Focus” will automatically begin again after another 30 minutes, as the screen image is then fully stabilised.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button until the **Setup** is selected.
Result: The options available in the **Setup** group are displayed.
- 3 Press the **ENTER** () button
- 4 Press the **▲** or **▼** button until the **Self Focus** is selected.
Press the **ENTER** () button.
Result: The options available in the **Self Focus** group are displayed.
- 5 Press the **▲** or **▼** button until the **Auto Perform** is selected.
Press the **ENTER** () button.
- 6 To turn off the automatic execution of the self focus feature, select **off** by pressing the **▲** or **▼** button. Press the **ENTER** () button to confirm.

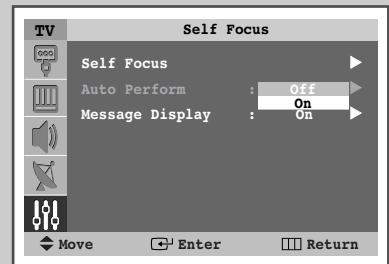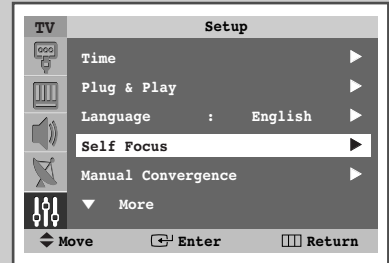

 


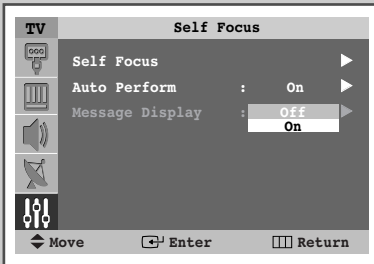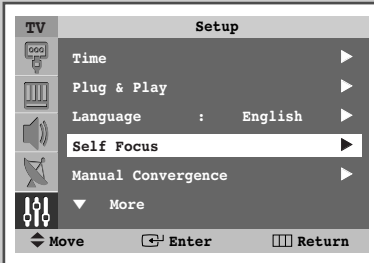


 
Removing the "Self Focus" from the Display








- 1 Press the **MENU** (□□□) button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button until the **Setup** is selected.
Result: The options available in the **Setup** group are displayed.
- 3 Press the **ENTER** (↵) button.
- 4 Press the **▲** or **▼** button until the **Self Focus** is selected.
Press the **ENTER** (↵) button.
Result: The options available in the **Self Focus** group are displayed.
- 5 Press the **▲** or **▼** button until the **Message Display** is selected.
Press the **ENTER** (↵) button.
- 6 To remove the message **Self Focus** and horizontal bar on the screen during the self focus process, select **Off** by pressing the **▲** or **▼** button. Press the **ENTER** (↵) button to confirm.

Adjusting Convergence Manually





If the color appears spread out or “smeared” on the screen, the convergence probably needs alignment. Be sure to use the remote control for the convergence adjustments. (The Convergence Adjustment can not be made by using the control buttons on the front panel.)

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button until the **Setup** is selected.
Result: The options available in the **Setup** group are displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button until the **Manual Convergence** is selected. Press the **ENTER** () button.
- 5 Press the **▲** or **▼** button to select **Red** or **Blue**. Press the **ENTER** () button.
Result: A crosshatch pattern will appear on the screen.
- 6 Adjust convergence by using your remote control.
 - ◆ Use the **▲/▼/◀/▶** buttons to all directions for select the position. Press the **ENTER** () button.
 - ◆ To move the line so that it is superimposed on the horizontal or vertical center-line, use the **▲/▼/◀/▶** buttons (i.e., make a signal horizontal or vertical line that is as white as possible).
 - ◆ Press the **MENU** () button to exit.
- 7 To return to the factory default settings, press the **▲** or **▼** button to select **RESET**. Press the **ENTER** () button.

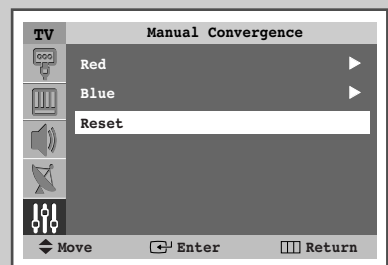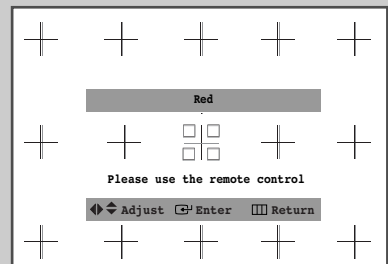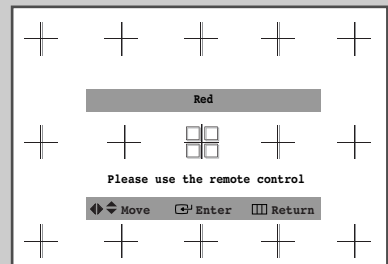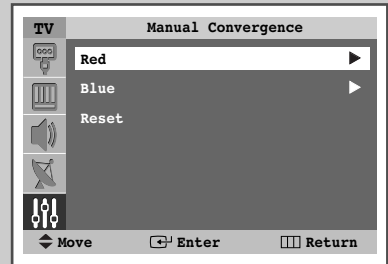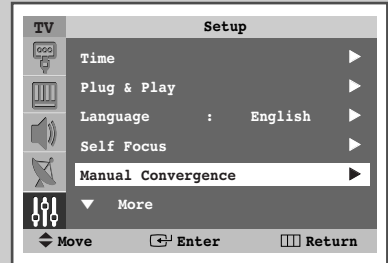

Storing Channels Automatically

You can scan for the frequency ranges available to you (and availability depends on your country). Automatically allocated programme numbers may not correspond to actual or desired programme numbers. However you can sort numbers manually and clear any channels you do not wish to watch.

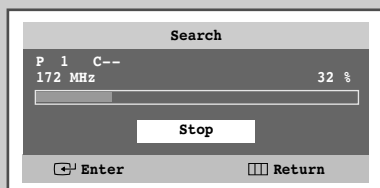
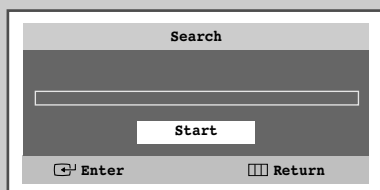
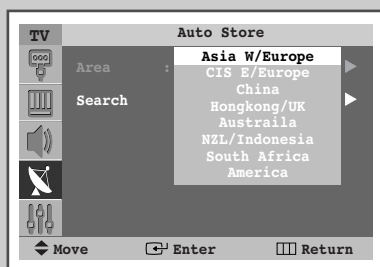
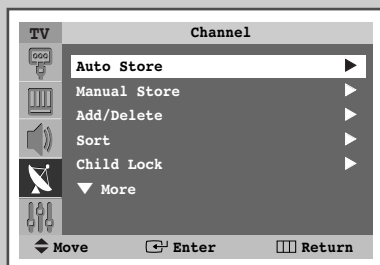


- 1 Press the **MENU** (□□□) button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button until the **Channel** is selected.
Result: The options available in the **Channel** group are displayed.
- 3 Press the **ENTER** (↵) button.
Result: The **Auto Store** is selected.
- 4 Press the **ENTER** (↵) button again.
Result: The **Auto Store** menu is displayed with **Area** option selected.
- 5 Press the **ENTER** (↵) button once again. Select your area by pressing the **▲** or **▼** button.
The are displayed in the following order:
Asia W/Europe - CIS E/Europe - China - Honkong U/K - Australia - NZL/Indonesia - South Africa - America.
- 6 Press the **ENTER** (↵) button to confirm your choice.
- 7 Press the **▲** or **▼** button until the **Search** is selected.
Press the **ENTER** (↵) button.
- 8 Press the **ENTER** (↵) button to start the search.
Result: The search will end automatically. Channels are sorted and stored in an order which reflects their position in the frequency range, (with lowest first and highest last). The programme originally selected is then displayed.
➤ To stop the search before it has finished or return to normal viewing, press the **MENU** (□□□) button.
- 9 When searching and storing are complete, the **Sort** menu is displayed.
 - ◆ To sort the stored channels into the desired numerical order, go to Step 6 of the "Sorting the Stored Channels" procedure on page 23.
 - ◆ To exit from the channel store function without sorting the channels, press the **MENU** (□□□) button repeatedly until the menus disappear.
- 10 When the channels have been stored, you can:
 - ◆ Sort them in the order required (see page 23)
 - ◆ Clear a channel (see page 26)
 - ◆ Fine-tune channel reception if necessary (see page 28)
 - ◆ Activate/deactivate the **LNA** (Low Noise Amplifier) feature (see page 29)
 - ◆ Activate/deactivate the **Digital NR** (Digital Noise Reduction) feature (see page 37)

Sorting the Stored Channels

This operation allows you to change the programme numbers of stored channels. This operation may be necessary after using auto store. You can delete the channels you do not want to keep.

- 1 Press the **MENU** (□□□) button.
Result: The main menu is displayed.
- 2 Press the ▲ or ▼ button until the **Channel** is selected.
Result: The options available in the **Channel** group are displayed.
- 3 Press the **ENTER** (↵) button.
- 4 Press the ▲ or ▼ button until the **Sort** is selected.
Press the **ENTER** (↵) button.
Result: The options available in the **Sort** group are displayed with **From** is selected.
- 5 Select the channel number that you wish to change by pressing the ◀ or ▶ button repeatedly.
- 6 Press the ▲ or ▼ button until the **To** is selected. Select the new channel number which you wish to identify by pressing the ◀ or ▶ button repeatedly.
- 7 Press the ▲ or ▼ button until the **Store** is selected. Select **OK** to confirm the exchange of channel numbers by pressing the **ENTER** (↵) button.
Result: The selected channel is exchanged with the one previously stored to the chosen number.
- 8 For all the channels to move to the required channel numbers, repeat steps 5 to 7 after selecting the **From** by pressing the ▲ or ▼ button.

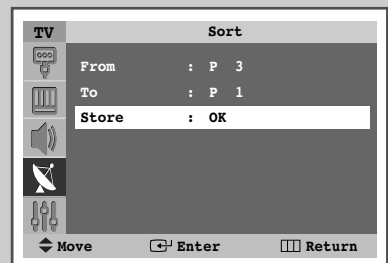
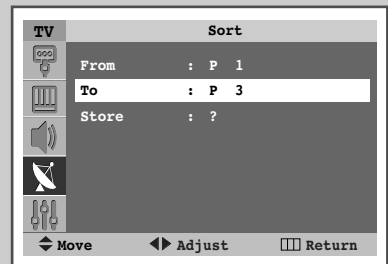
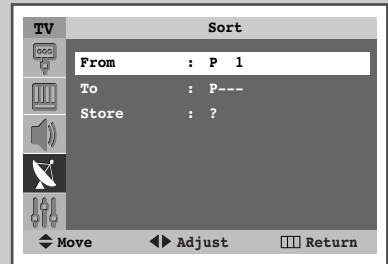
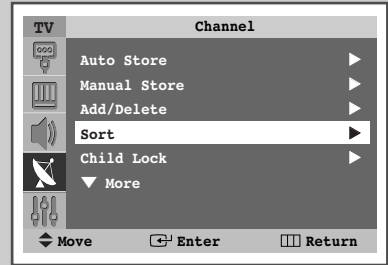



Storing Channels Manually

You can store the television channels, including those received via cable networks.


When storing channels manually, you can choose:


- ◆ Whether or not to store each of the channels found
- ◆ The programme number of each stored channel which you wish to identify

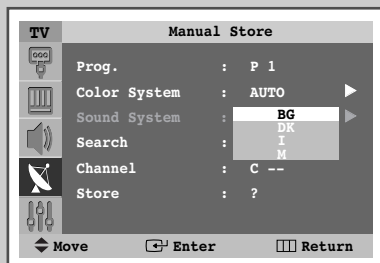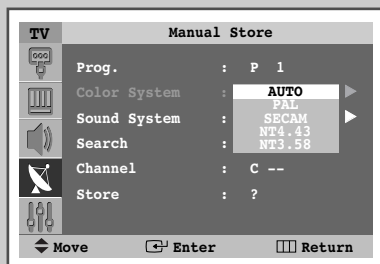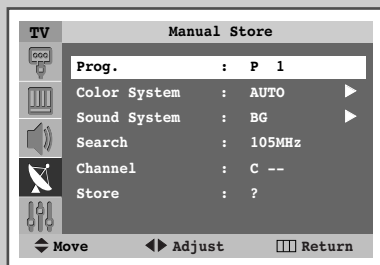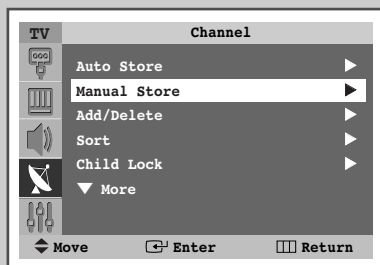


- 1 Press the **MENU** () button.
Result: The main menu is displayed.


- 2 Press the **▲** or **▼** button until the **Channel** is selected.
Result: The options available in the **Channel** group are displayed.


- 3 Press the **ENTER** () button.


- 4 Press the **▲** or **▼** button until the **Manual Store** is selected.
Press the **ENTER** () button.
Result: The options available in the **Manual Store** group are displayed with **Prog.** is selected.

- 5 To assign a programme number to a channel, find the correct number by pressing the **◀** or **▶** button.

- 6 Press the **▲** or **▼** button until the **Color System** is selected.
Press the **ENTER** () button. Indicate the broadcasting standard required by pressing the **▲** or **▼** button.
Result: The color standards are displayed in the following order:
AUTO - PAL - SECAM - NT4.43 - NT3.58

- 7 Press the **ENTER** () button to confirm.

- 8 Press the **▲** or **▼** button until the **Sound System** is selected.
Press the **ENTER** () button. Select the sound standard required by pressing the **▲** or **▼** button.
Result: The sound standards are displayed in the following order:
BG - DK - I - M

- 9 Press the **ENTER** () button to confirm.

Storing Channels Manually (continued)

- 10** If you know the number of the channel to be stored, see the following steps.
- ◆ Press the ▲ or ▼ button until the **Channel1** is selected.
 - ◆ Press the ◀ or ▶ button.
 - ◆ Press the ▲ or ▼ button to select **C** (Air channel) or **S** (Cable channel).
 - ◆ Press the ◀ or ▶ button.
 - ◆ Press the ▲ or ▼ button to select the required number.

➤ If no sound or abnormal sound can be heard, re-select the sound standard required.

- 11** If you do not know the channel numbers, select **Search** by pressing the ▲ or ▼ button. Press the ◀ or ▶ button to start the search.





Result: The tuner scans the frequency range until the first channel or the channel that you selected is received on your screen.

- 12** To store the channel and associated programme number, select **Store** by pressing the ▲ or ▼ button. Set to **OK** by pressing the **ENTER** (↵) button.




- 13** Repeat Steps 10 to 12 for each channel to be stored.

Channel mode

- ◆ **P** (Programme mode): When completing tuning, the broadcasting stations in your area have been assigned to position numbers from P00 to max P99. You can select a channel by entering the position number in this mode.
- ◆ **C** (Real channel mode): You can select a channel by entering the assigned number to each air broadcasting station in this mode.
- ◆ **S** (Cable channel mode): You can select a channel by entering the assigned number for each cable channel in this mode.

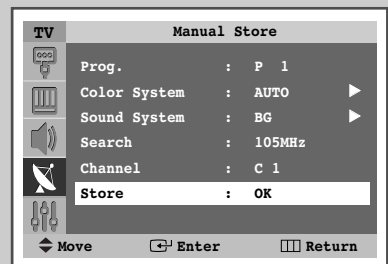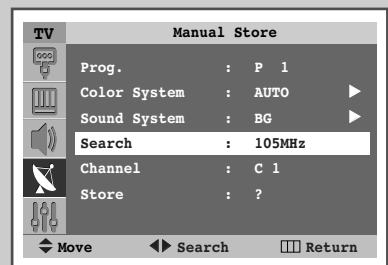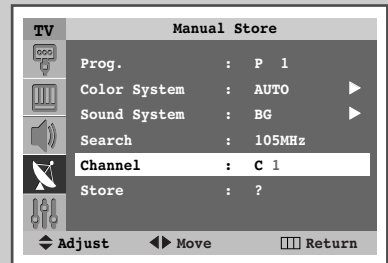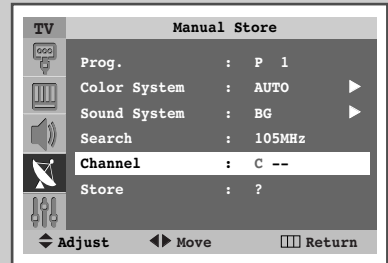

Skipping Unwanted Channels

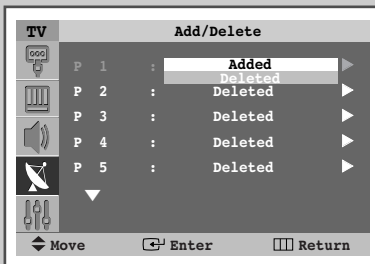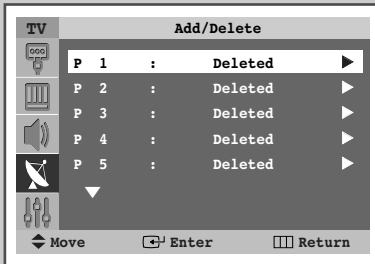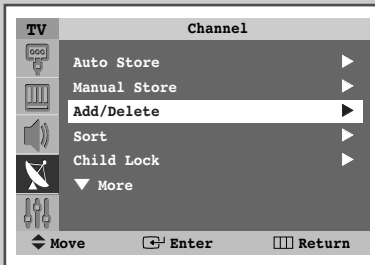

You can exclude the channels you chosen from the channels you scanned. When you scan through the stored channels, those you have chosen to skip are not displayed. All of the channels that you do not specifically choose to skip are displayed during scanning.

1 Press the **MENU** () button.

Result: The main menu is displayed.

2 Press the **▲** or **▼** button until the **Channel** is selected.

Result: The options available in the **Channel** group are displayed.

3 Press the **ENTER** () button.

4 Press the **▲** or **▼** button until the **Add/Delete** is selected. Press the **ENTER** () button.

Result: The **Add/Delete** menu is displayed with the current channel selected.

5 Press the **▲** or **▼** button to delete or add the required channel. Press the **ENTER** () button.

6 Select **Added** or **Deleted** by pressing the **▲** or **▼** button. Press the **ENTER** () button to confirm.

7 Repeat Step 5 for each channel to be added or erased.

Locking the Channel

This feature allows you to lock the television so that it cannot be switched on via the front panel. It can, however, still be switched on via the remote control. Thus, by keeping the remote control away from unauthorised users, such as children, you can prevent them from watching unsuitable programmes.

- 1 Press the **MENU** (□□□) button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button until the **Channel** is selected.

Result: The options available in the **Channel** group are displayed.




- 3 Press the **ENTER** (↵) button.

- 4 Press the **▲** or **▼** button until the **Child Lock** is selected. Press the **ENTER** (↵) button.

Result: The **Child Lock** menu is displayed and the current channel is shown as selected.






- 5 Press the **▲** or **▼** button to select the channel to be locked.

- 6 Press the **ENTER** (↵) button. To lock the channel, select **Locked** by pressing the **▲** or **▼** button (to unlock the channel, select **Unlocked**). Press the **ENTER** (↵) button to confirm.

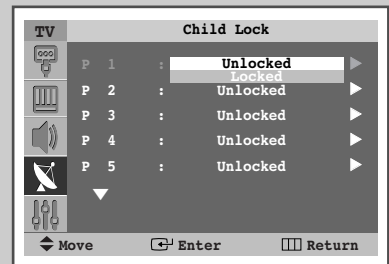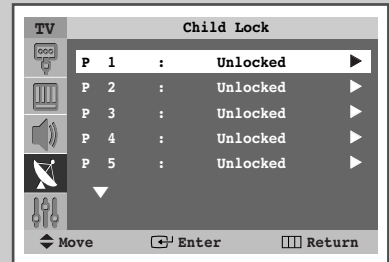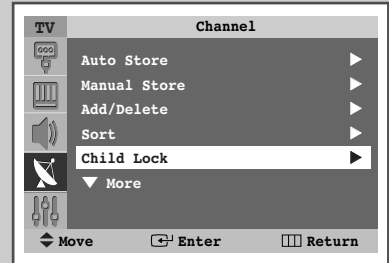

Fine Tuning Channel Reception

If the reception is clear, you do not have to fine tune the channel, as this is done automatically during the search and store operation. If the signal is weak or distorted, you may have to fine tune the channel manually.

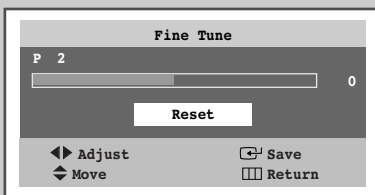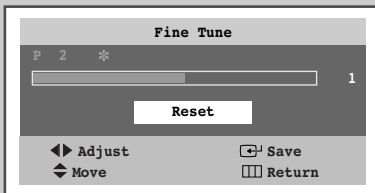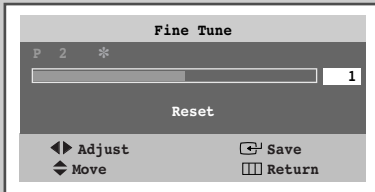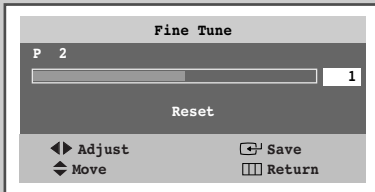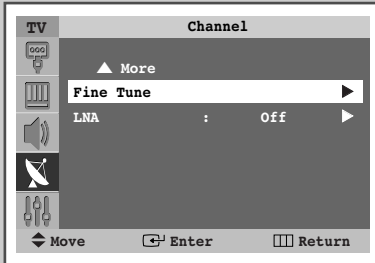

- 1 Press the **MENU** (□□□) button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button until the **Channel** is selected.

Result: The options available in the **Channel** group are displayed.

- 3 Press the **ENTER** (↵) button.

- 4 Press the **▲** or **▼** button until the **Fine Tune** is selected. Press the **ENTER** (↵) button.

Result: The horizontal bar is displayed.

- 5 To obtain a sharp and clear picture and good sound quality, press the **◀** or **▶** button until you reach the setting.

- 6 To store the fine tuning setting in the TV's memory, press the **ENTER** (↵) button.

 
 
 
 
Result: The programme number turns red, and the “*” symbol is displayed. (P 2 *)



- 7 To reset the fine tuning to 0, select **Reset** by pressing the **▲** or **▼** button then press the **ENTER** (↵) button.

Using the LNA (Low Noise Amplifier) Feature



This feature is very useful in the situation that the TV is used in a weak signal, and amplifies the TV signal in the weak signal area, but not noise.

This feature is working only in a weak signal condition, and that is memorized on relevant channel's additional information.

- 1 Press the **MENU** () button.
Result : The main menu is displayed.
- 2 Press the **▲** or **▼** button until the **Channel** is selected.
Result : The options available in the **Channel** group are displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button until the **LNA** is selected.
Press the **ENTER** () button.
- 5 Select **Off** or **On** by pressing the **▲** or **▼** button.
Press the **ENTER** () button to confirm.

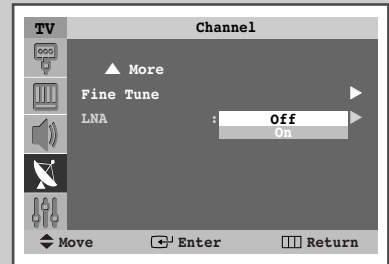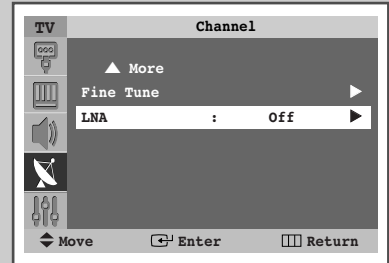

Activating Panel Button Lock

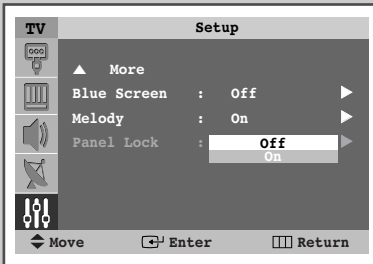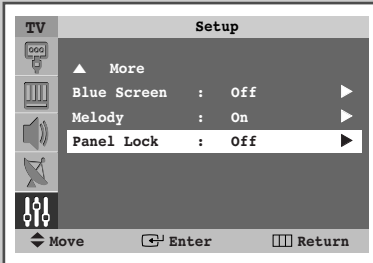

This feature allows you to lock the TV panel buttons so that it cannot be operated via the TV panel. It can, however, still be operated via the remote control. Only remote control can release the panel lock setting, so keep the remote control away from unauthorized users.

 
1 Press the **MENU** () button.

 
Result: The main menu is displayed.

2 Press the **▲** or **▼** button until the **Setup** is selected.

Result: The options available in the **Setup** group are displayed.


 
 
 
3 Press the **ENTER** () button.

4 Press the **▲** or **▼** button until the **Panel Lock** is selected.
Press the **ENTER** () button.

 


5 Select **Off** or **On** by pressing the **▲** or **▼** button.
Press the **ENTER** () button to confirm.

Changing the Picture Standard

You can select the type of picture which best corresponds to your viewing requirements.





- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button until the **Picture** is selected.
Result: The options available in the **Picture** group are displayed.
- 3 Press the **ENTER** () button.
Result: The **Mode** is selected.
- 4 Press the **ENTER** () button again.
Result: The options available are listed.
- 5 Select the required option by pressing the **▲** or **▼** button.
Result: The following modes are available:
Dynamic – Standard – Movie – Custom
- 6 Press the **ENTER** () button to confirm.


➤ You can select these options by simply pressing the **P.MODE** ( : Picture Mode) button on the remote control.

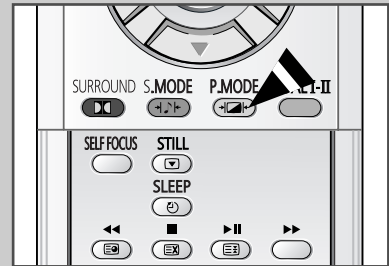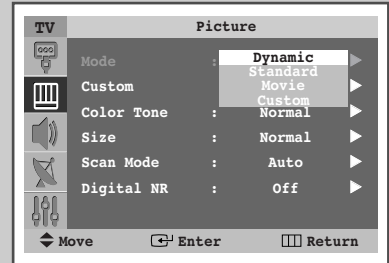


Customizing the Picture Settings


Your television has several settings options that allow you to control picture quality.

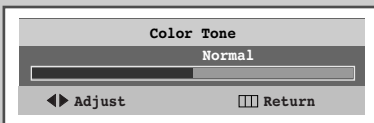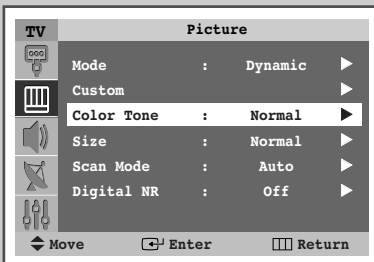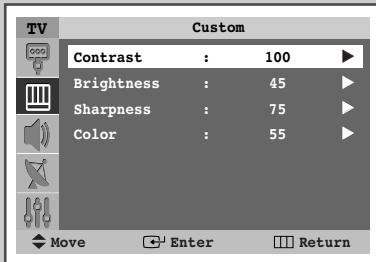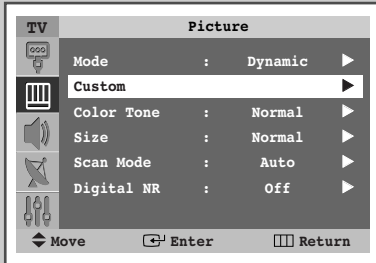




- 1 Press the **MENU** () button.
Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button until the **Picture** is selected.
Result: The options available in the **Picture** group are displayed.

- 3 Press the **ENTER** () button.

- 4 Press the **▲** or **▼** button until the **Custom** is selected.
Press the **ENTER** () button.
Result: The **Custom** menu is displayed.

 
- 5 Select the option (**Contrast**, **Brightness**, **Sharpness**, **Color** or **Tint**-NTSC only) to be adjusted by pressing the **▲** or **▼** button.
Press the **ENTER** () button.
Result: The horizontal bar is displayed. Press the **◀** or **▶** button until you reach the setting.

- 6 Press the **MENU** () button to return the **Picture** menu.
Press the **▲** or **▼** button until the **Color Tone** is selected.
Press the **ENTER** () button.


- 7 Select the required color tone (**Warm 1 ~ Warm 10**, **Normal**, **Cool 1 ~ Cool 10**) by pressing the **◀** or **▶** button.


Selecting the Picture Size (4:3 Model)


You can select the picture size which best corresponds to your viewing requirements.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.

 - 2 Press the **▲** or **▼** button until the **Picture** is selected.
Result: The options available in the **Picture** group are displayed.

- 3 Press the **ENTER** () button.

  - 4 Press the **▲** or **▼** button until the **Size** is selected.
Press the **ENTER** () button.
Result: The **Size** menu is displayed.

- 5 Select the required mode by pressing the **▲** or **▼** button.
Press the **ENTER** () button.
Result: The following modes are available:

Normal Adjusts the picture to fit into a 4:3 normal aspect ratio. (Prolonged use in 4:3 mode may cause the lifespan of the CRT to be reduced.)




Zoom1 Vertically enlarges the picture approximately 130%.

Zoom2 Vertically enlarges the picture about approximately 150%.





Cinema When the top and bottom of the screen margin are black (blank), they will change to gray.

➤ Lifting is available in the **Zoom1** or **Zoom2** mode by pressing the **▲** or **▼** button




➤ You can select these options by simply pressing the **P.SIZE** () button on the remote control.

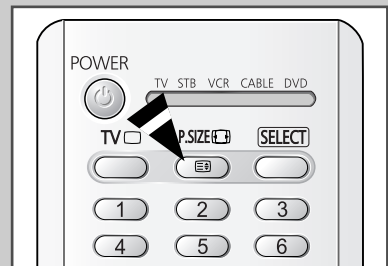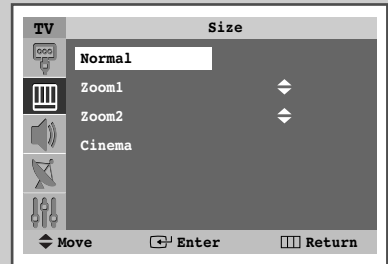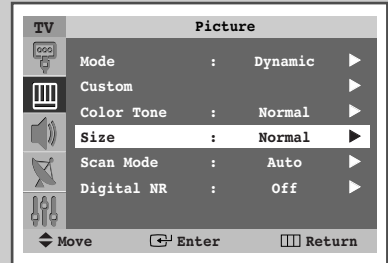




4:3 Signal

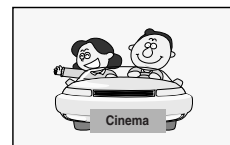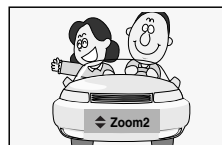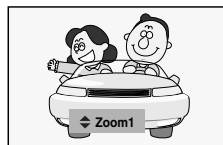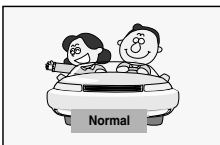



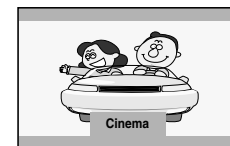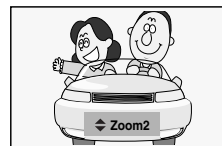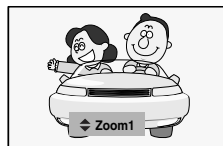

16:9 Signal

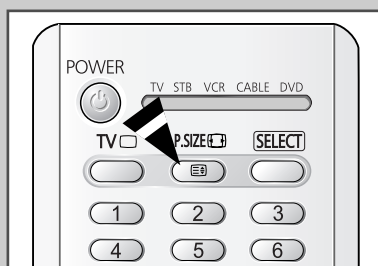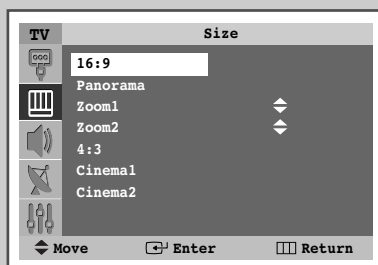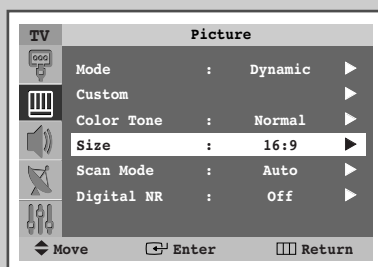

Selecting the Picture Size (Wide Model)




You can select the picture size which best corresponds to your viewing requirements.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button until the **Picture** is selected.
Result: The options available in the **Picture** group are displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button until the **Size** is selected.
Press the **ENTER** () button.
Result: The **Size** menu is displayed.
- 5 Select the required mode by pressing the **▲** or **▼** button.
Press the **ENTER** () button.
Result: The following modes are available:

- | | |
|-----------------|---|
| 16:9 | Adjusts the picture to fit into the 16:9 wide aspect ratio. |
| Panorama | Adjusts a Wide picture to appear natural. |
| Zoom1 | Vertically enlarges the picture approximately 130%. |
| Zoom2 | Vertically enlarges the picture about approximately 150%. |
| 4:3 | Adjusts the picture to fit into a 4:3 normal aspect ratio. (Prolonged use in 4:3 mode may cause the lifespan of the CRT to be reduced.) |
| Cinema1 | To maintain optimum screen display, the picture is vertically enlarged and the letterboxed (black margin) area is filled with gray instead. |
| Cinema2 | When the top and bottom of the screen margin are black (blank), they will change to gray. |

 - ◆ Lifting is available in the **Zoom1** or **Zoom2** mode by pressing the **▲** or **▼** button.
- ◆ Subtitles may be cut-off or hidden below the screen area in **Zoom1**, **Zoom2**, **Cinema1** and **Cinema2** modes.

- You can select these options by simply pressing the **P.SIZE** () button on the remote control.

Selecting the Picture Size (Wide Model) (continued)


4:3 Signal




16:9




Panorama

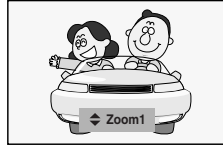


Zoom1

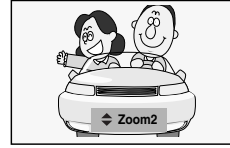

Zoom2

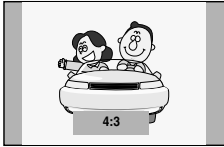

4:3

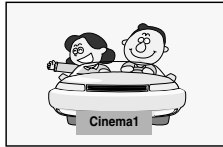

Cinema1



Cinema2


16:9 Signal




16:9



Panorama

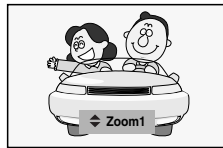


Zoom1

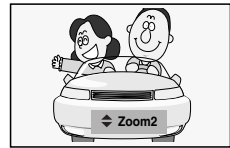


Zoom2



4:3


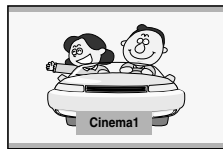


Cinema1

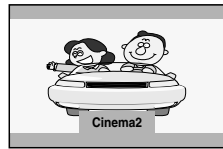

Cinema2

Selecting the Scan Mode

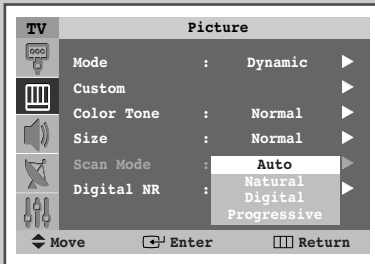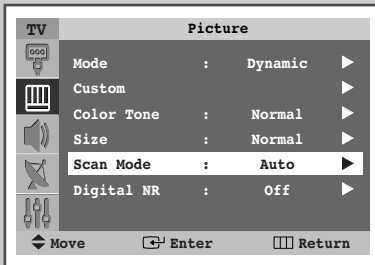

*You will normally find that scan mode is best set to **Natural** to reduce any slight picture flicker. However, it is possible that some occasional broadcasts (NTSC-M) may benefit by changing the scan mode.*

 
1 Press the **MENU** () button.

Result: The main menu is displayed.

2 Press the **▲** or **▼** button until the **Picture** is selected.

Result: The options available in the **Picture** group are displayed.

3 Press the **ENTER** () button.

4 Press the **▲** or **▼** button until the **Scan Mode** is selected.
Press the **ENTER** () button.

5 Select the required option by pressing the **▲** or **▼** button.

 
 
 

Result: The following modes are available:



Auto – Natural – Digital – Progressive

6 Press the **ENTER** () button to confirm.



Using the Digital NR (Digital Noise Reduction) Feature

If the signal received by your television is weak, you can activate this feature to help reduce any static and ghosting that may appear on the screen.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button until the **Picture** is selected.
Result: The options available in the **Picture** group are displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button until the **Digital NR** is selected.
Press the **ENTER** () button.
- 5 Select **Off** or **On** by pressing the **▲** or **▼** button.
Press the **ENTER** () button to confirm.

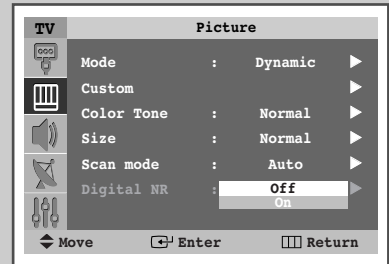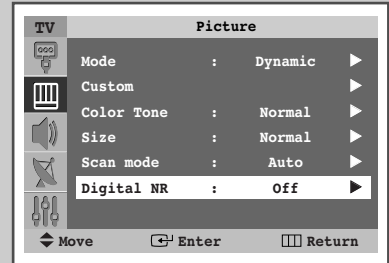

Setting the Blue Screen Mode

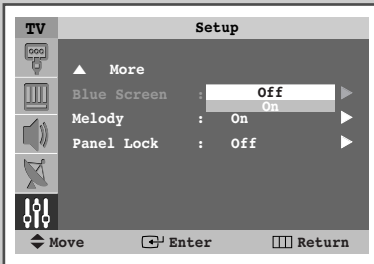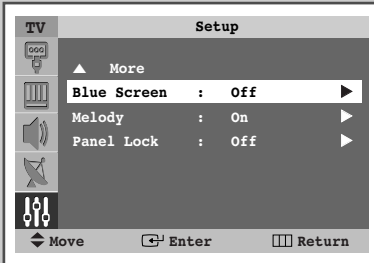

If no signal is being received or the signal is very weak, a blue screen automatically replaces the noisy picture background. If you wish to continue viewing the poor picture, you must set the Blue screen mode to Off.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button until the **Setup** is selected.
Result: The options available in the **Setup** group are displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button until the **Blue Screen** is selected.
Press the **ENTER** () button.
- 5 Select **Off** or **On** by pressing the **▲** or **▼** button.
Press the **ENTER** () button to confirm.

 



Freezing the Current Picture





You can freeze the picture when watching a television programme simply by pressing the "STILL ()" button. To return to normal viewing, press it again.

Changing the Sound Standard



You can select the type of special sound effect to be used when watching a given broadcast.

 - 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button until the **Sound** is selected.
Result: The options available in the **Sound** group are displayed.
- 3 Press the **ENTER** () button.
Result: The **Mode** is selected.
- 4 Press the **ENTER** () button again.
- 5 Select the required option by pressing the **▲** or **▼** button.
Result: The following modes are available:
Standard - Music - Movie - Speech - Custom.
- 6 Press the **ENTER** () button to confirm.

➤ You can select these options by simply pressing the **S.MODE** ( : Sound Mode) button on the remote control.

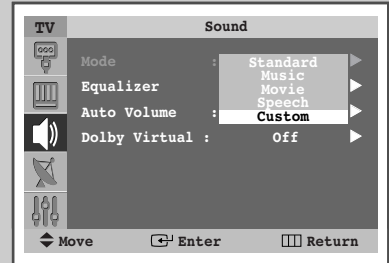

Adjusting the Sound Settings

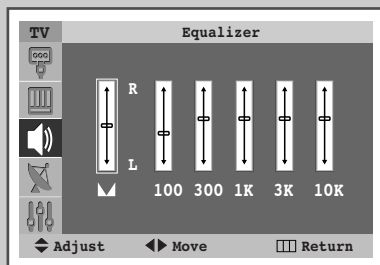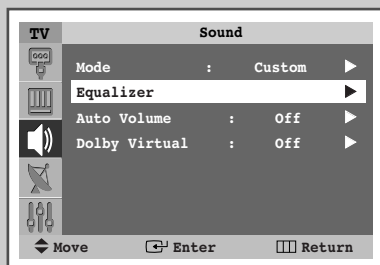

The sound settings can be adjusted to suit your personal preferences.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button until the **Sound** is selected.
Result: The options available in the **Sound** group are displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button until the **Equalizer** is selected.
Press the **ENTER** () button.
Result: The **Equalizer** menu is displayed with the current option.
- 5 Select the option to be adjusted by pressing the **◀** or **▶** button.
Press the **▲** or **▼** button to reach the required setting.

➤ If you make any changes to these settings, the sound standard is automatically switched to **Custom**.





Extra Sound Settings


◆ *Auto Volume*



Each broadcasting station has its own signal conditions, and so it is not easy for you to adjust the volume every time the channel is changed. This feature lets you automatically adjust the volume of the desired channel by lowering the sound output when the modulation signal is high or by raising the sound output when the modulation signal is low.

◆ *Dolby Virtual*



This feature converts a monaural sound signal into two identical left and right channels. Once the **Dolby Virtual** is set to **Off** or **On**, the setting applies to the sound effects such as **Standard**, **Music**, **Movie** and **Speech**.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button until the **Sound** is selected.
Result: The options available in the **Sound** group are displayed.
- 3 Press the **ENTER** () button.
- 4 Select the required option (**Auto Volume** or **Dolby Virtual**) by pressing the **▲** or **▼** button.
- 5 Press the **ENTER** () button.
- 6 To activate each feature, select **On** by pressing the **▲** or **▼** button. Press the **ENTER** () button.

- Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol  are trademarks of Dolby Laboratories.

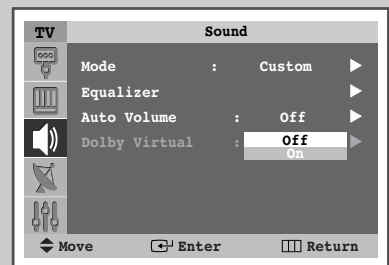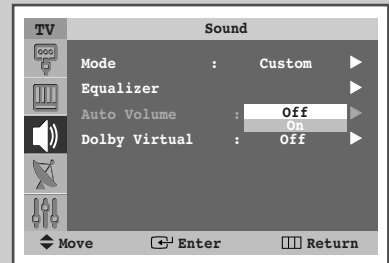




Setting the Melody Sound

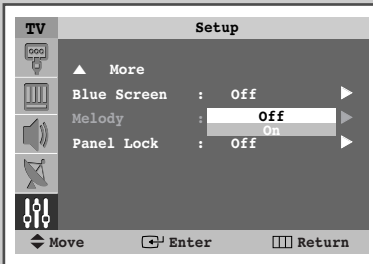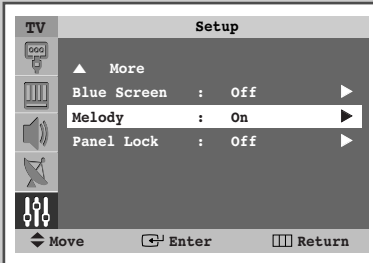

You can hear clear melody sound when the television is powered on or off.

- 1 Press the **MENU** (□□□) button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button until the **Setup** is selected.
Result: The options available in the **Setup** group are displayed.
- 3 Press the **ENTER** (↵) button.
- 4 Press the **▲** or **▼** button until the **Melody** is selected.
Press the **ENTER** (↵) button.
- 5 Select **Off** or **On** by pressing the **▲** or **▼** button.
- 6 Press the **ENTER** (↵) button to confirm.

Setting and Displaying the Current Time

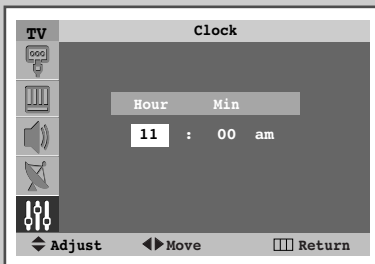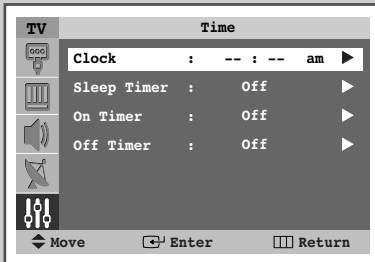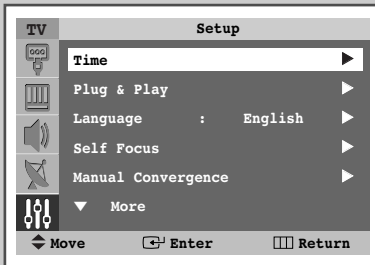

You can set the television's clock so that the current time is displayed by pressing the "INFO ()" button. You must also set the time if you wish to use the automatic on or off timers.

- When pressing the "I" button (On/Off) on the front of the television, the clock setting will be reset.

-
- 1 Press the **MENU** () button.
Result: The main menu is displayed.

 - 2 Press the **▲** or **▼** button until the **Setup** is selected.
Result: The options available in the **Setup** group are displayed.

 - 3 Press the **ENTER** () button.

 
 
 
 
 
 - 4 Press the **▲** or **▼** button until the **Time** is selected.
Press the **ENTER** () button.
Result: The options available in the **Time** group are displayed with **Clock** is selected.


 - 5 Press the **ENTER** () button.





 - 6 Press the **◀** or **▶** button to move to the **Hour** or **Min**.
Set the hour or minute by pressing the **▲** or **▼** button.
➤ You can also set the **Hour** and **Min** by pressing the numeric buttons directly
-

Setting the Sleep Timer





You can select a time period of between 30 and 180 minutes after which the television automatically switches to Standby mode.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button until the **Setup** is selected.
Result: The options available in the **Setup** group are displayed.
- 3 Press the **ENTER** () button.
- 4 Press the **▲** or **▼** button until the **Time** is selected.
Press the **ENTER** () button.
Result: The options available in the **Time** group are displayed.
- 5 Press the **▲** or **▼** button until the **Sleep Timer** is selected.
Press the **ENTER** () button.
- 6 Select the preset time interval (**Off**, **30**, **60**, **90**, **120**, **150**, **180**) for staying on by pressing the **▲** or **▼** button.
Press the **ENTER** () button to confirm.

- ◆ You can also set these options simply by pressing the **SLEEP** () button.
- ◆ If the sleep timer is not yet set, **Off** is displayed.
If the sleep timer is already set, the remaining time before which the television switches to Standby mode is displayed.

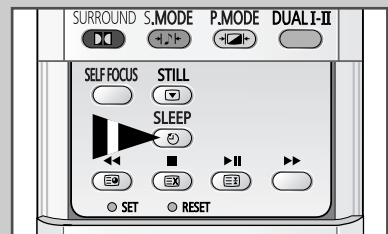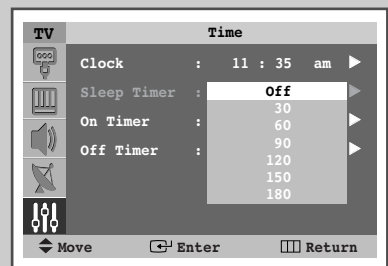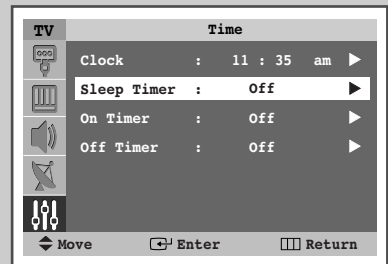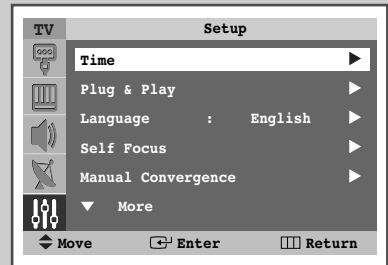

Switching the Television On and Off Automatically

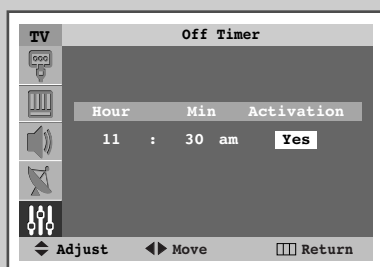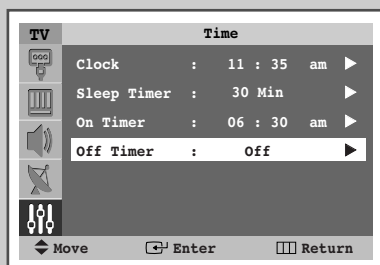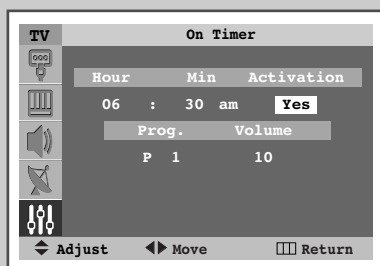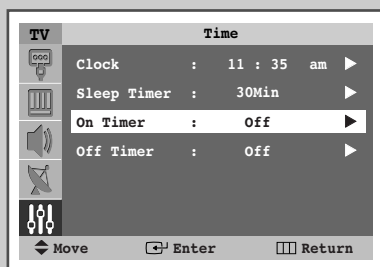

You can set the On/Off timers so that the television will:

- ◆ Switch on automatically and tune to the channel of your choice at the time you select
- ◆ Switch off automatically at the time you select

➤ The first step is to set the television's clock (refer to "Setting the Current Time" on page 44). If you have not yet set the clock, the message **Set the clock first** is displayed.

- 1 Press the **MENU** () button.
Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button until the **Setup** is selected.
Result: The options available in the **Setup** group are displayed.

- 3 Press the **ENTER** () button.

- 4 Press the **▲** or **▼** button until the **Time** is selected.
Press the **ENTER** () button.
Result: The options available in the **Time** group are displayed.

- 5 Press the **▲** or **▼** button until the **On Timer** is selected.
Press the **ENTER** () button.
Result: The options available in the **On Timer** group are displayed.

- 6 Select the **Hour**, **Min**, **Prog.** (programme number) or **Volume**.
Press the **◀** or **▶** button to set these by pressing the **▲** or **▼** button.

- 7 To activate the **On Timer** with the settings satisfied, select **Activation** to by pressing the **◀** or **▶** button, then select **Yes** by pressing the **▲** or **▼** button.

- 8 Press the **MENU** () button.
Result: The options available in the **Time** group are displayed again.

- 9 Press the **▲** or **▼** button until the **Off Timer** is selected.
Press the **ENTER** () button.
Result: The **Off Timer** menu is displayed.


- 10 Set the **Off Timer** as methods for **On Timer** setting.

 
➤ Auto Power Off


When you set the timer "On", the television will eventually turn off, if no controls are operated for 3 hours after the TV was turned on by timer. This function is only available in timer "On" mode and prevents overheating or leakages, which may occur if a TV is on for too long (on holiday, for example).



Viewing an External Signal Source


Use the remote control to switch between viewing signals from connected equipment, such as VCR, DVD, Set-Top Box and the TV source (broadcast or cable)

 
- 1 Press the **MENU** () button.
Result: The options available in the **Input** group are displayed.


- 2 Press the **ENTER** () button.
Result: The **Source List** is selected.


- 3 Press the **ENTER** () button again.

- 4 Press the **▲** or **▼** button to select signal source, then press the **ENTER** () button.
 - ◆ When you connect equipment to the TV, you can choose between the following sets of jacks : **Ext.**, **AV1**, **AV2**, **Component1** or **Component2** on the TV's rear panel, and **AV3** or **S-video** on the TV's side panel.
 - ◆ You can select these options simply by pressing the **SOURCE** () button.




 
- 5 Press the **MENU** () button.
Result: The options available in the **Input** group are displayed again.

 - 6 Press the **▲** or **▼** button until the **Edit Name** is selected. Press the **ENTER** () button.

 
- 7 Press the **▲** or **▼** button to select the external source to be edited. Press the **ENTER** () button.
Result: The device names available are listed.
VCR - DVD - Cable STB - HD STB - Sat. STB - AV Receiver - DVD Receiver - Game - Camcorder - DVD Combo - DHR (DVD HDD Recorder).

- 8 Select the required device by pressing the **▲** or **▼** button. Press the **ENTER** () button to confirm.

➤ If you change the external source while viewing, pictures might take a short period of time to be switched.

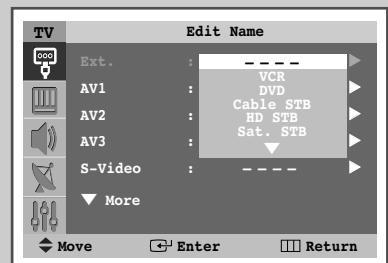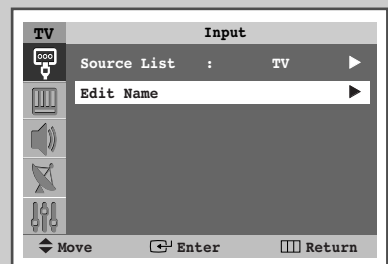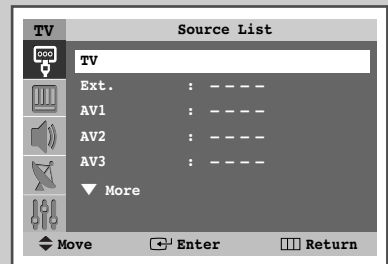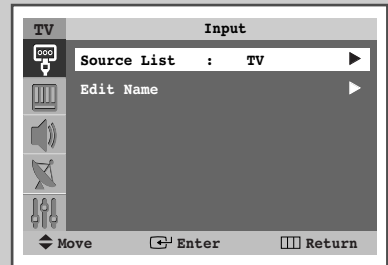

Teletext Feature

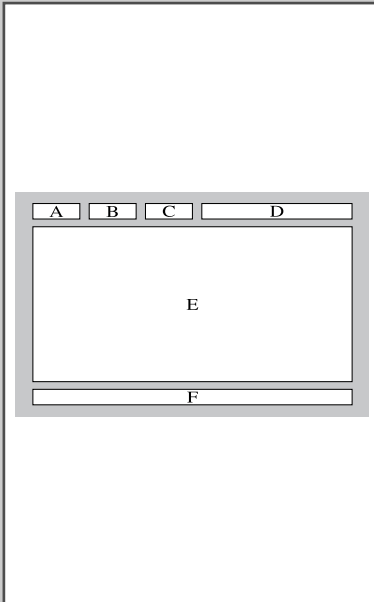

Most television channels provide written information services via teletext. Information provided includes:

- ◆ *Television programme times*
- ◆ *News bulletins and weather forecasts*
- ◆ *Sports results*
- ◆ *Travel information*

This information is divided into numbered pages (see diagram).

Part	Contents
A	Selected page number.
B	Broadcasting channel identity.
C	Current page number or search indications.
D	Date and time.
E	Text.
F	Status information. FASTEXT information.


 

 

- Teletext information is often divided between several pages displayed in sequence, which can be accessed by:
- ◆ Entering the page number
 - ◆ Selecting a title in a list
 - ◆ Selecting a colored heading (FASTEXT system)


Displaying the Teletext Information

You can display Teletext information at any time on your television.


☞ For Teletext information to be displayed correctly, channel reception must be stable; otherwise:

- ◆ Information may be missing
- ◆ Some pages may not be displayed

- 1 Select the channel providing the Teletext service using the **P** or **CH** button.
- 2 Press the **TTX/MIX** () button to activate the teletext mode.
Result: The contents page is displayed. It can be redisplayed at any time by pressing the **INDEX** () (index) button.
- 3 Press the **TTX/MIX** () button again.
Result: The screen will be split into two. This Double Teletext feature lets you view the actual broadcast and teletext information separately on the screen.
- 4 If you wish to display the actual broadcast at the same time as the teletext page, press the **TTX/MIX** () button again.
- 5 Press the **TV** () button to exit from the teletext display.

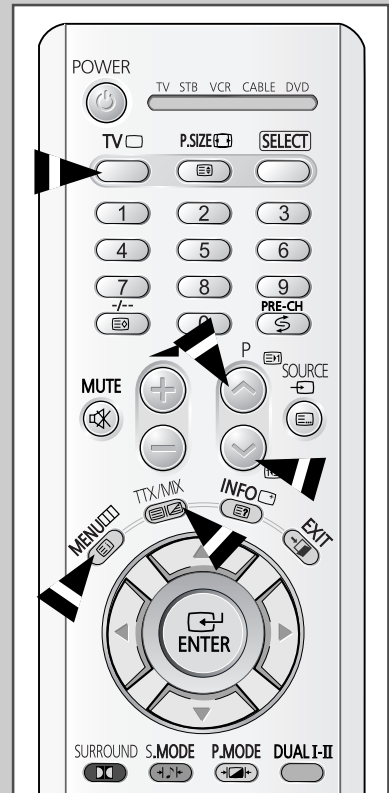

Selecting Display Options

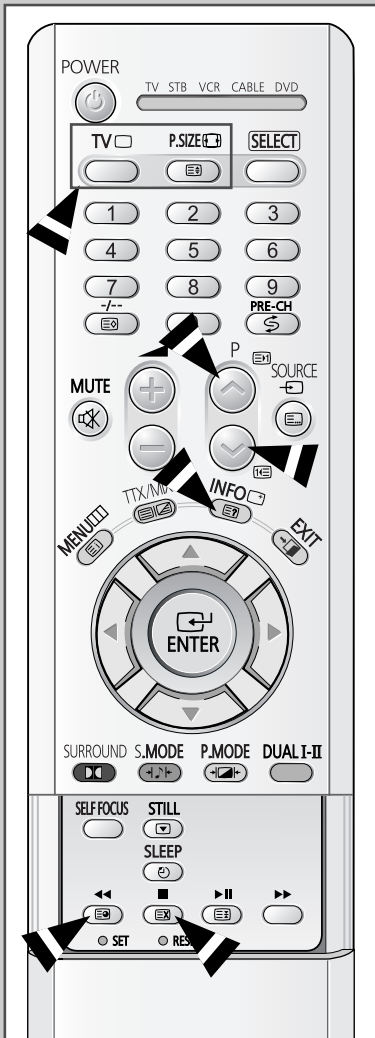




When you have displayed a Teletext page, you can select various options to suit your requirements.


To display...	Press the...
◆ Hidden text (answers to quiz games, for example)	[REVEAL] (reveal)
◆ The normal screen	[REVEAL] (reveal) again
◆ A secondary page	[SUB-PAGE] (sub-page)
◆ The broadcast when searching for a page	[CANCEL] (cancel)
◆ The next page	[PAGE UP] (page up)
◆ The previous page	[PAGE DOWN] (page down)
◆ Double-size letters in the: <ul style="list-style-type: none"> • Upper half of the screen • Lower half of the screen 	[SIZE] (size) <ul style="list-style-type: none"> • Once • Twice
◆ Normal screen	<ul style="list-style-type: none"> • Three times

➤ To return to the normal display after using the reveal or size feature, press the TV (□) button.


Selecting a Teletext Page

You can enter the page number directly by pressing the numeric buttons on the remote control.

- 1 Enter the three-digit page number given in the content by pressing the corresponding numeric buttons.
Result: The current page counter is incremented and the page is then displayed. If the selected page is linked with several secondary pages, the secondary pages are displayed in sequence. To freeze the display on a given page, press the  (hold). Press it again to resume.
- 2 If the FASTEXT system is used by the broadcasting company, the different topics covered on a Teletext page are color-coded and can be selected by pressing the colored buttons on the remote control. Press the colored button corresponding to the topic that you wish to select; the available topics are given on the status line.
Result: The page is displayed with other colored information that can be selected in the same way.
- 3 To display the previous or next page, press the corresponding colored button.
- 4 To display the subpage, see the following steps.
 - ◆ Press the  (sub-page) button.
Result: The available subpages appear.
 - ◆ Select the required sub-page. Sub-pages can be scrolled by pressing the Red or Green button.
- 5 When you have finished, press the TV () button to return to your normal broadcast.

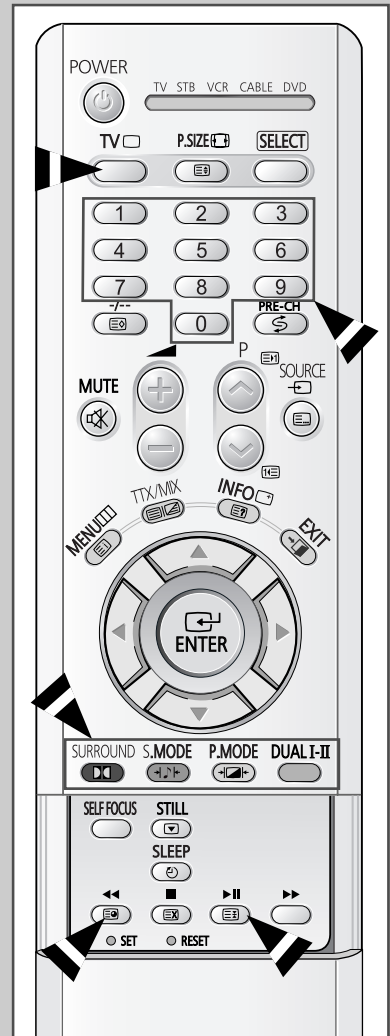

Storing Teletext Pages (depending on the model)



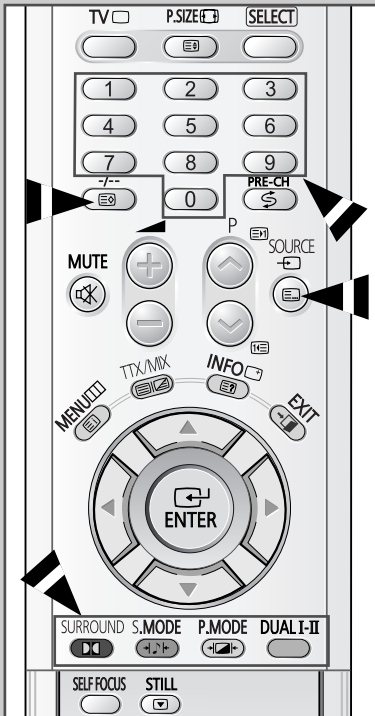


You can store up to four teletext pages to display them later at leisure.

- 1 Select the LIST mode using the button.
Result: Four 3-digit numbers are displayed in different colors.
➤ The button is used to switch between the LIST and FLOF modes.
- 2 Press the colored button corresponding to the page that will be replaced.
- 3 Enter the new page number using the numeric buttons.
- 4 Repeat steps 2 and 3 for each page to be stored, using a different colored button each time.
- 5 Press the (store) button until the corresponding blocks blink.

Connecting to the External Devices




Rear of the TV (Input/Output)

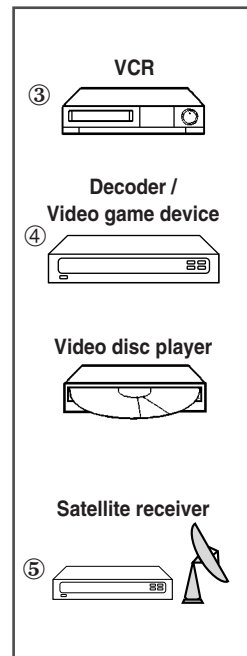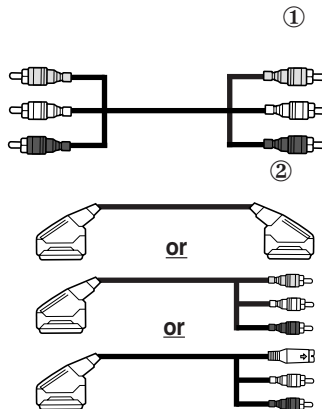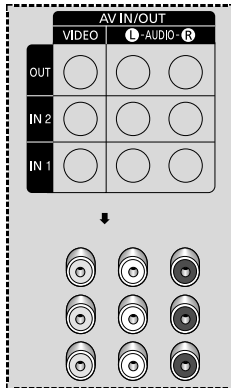

- ① This end can be fitted with:
 - ◆ Three RCA connectors (**VIDEO + AUDIO-L and R**)
- ② This end can be fitted with:
 - ◆ A SCART connector
 - ◆ Three RCA connectors (**VIDEO + AUDIO-L and R**)
 - ◆ An S-Video connector and two audio RCA connectors (L+R)
- ③ If you have a second VCR and wish to copy cassettes tape, connect the source VCR to **IN 1** (or **IN 2**) and the target VCR to **OUT** so that you can redirect the signal from source VCR to target VCR.
- ④ If you have a decoder, connect the decoder to the VCR and the VCR to the television.
- ⑤ When you wish to record a programme, connect the receiver to **IN 1** (or **IN 2**) and the VCR to **OUT** so that you can redirect the signal from **IN 1** (or **IN 2**) to **OUT**.
- ⑥ **OUT** is used for displaying the current picture to an external device. When you wish to record the current picture, connect the VCR to **OUT**.

Side of the TV (Input)


 

(depending on the model)

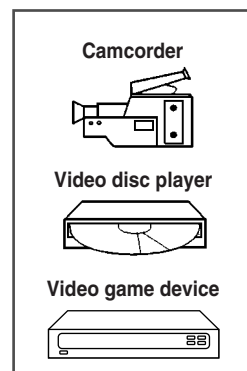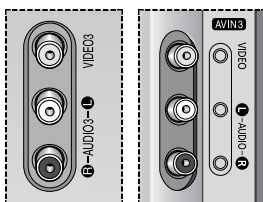

Connecting to the Audio Output

- The **AUDIO-L** and **R** RCA connectors are used for equipment, such as an audio system (to take full advantage of the Surround sound effect).

 Rear of the TV

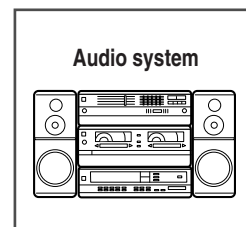
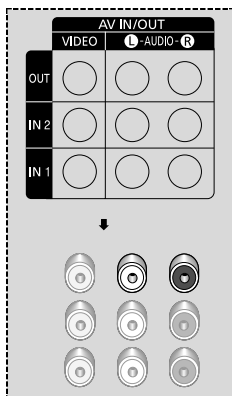


Connecting to the S-Video Input

- The **S-VIDEO** (or **S-VIDEO INPUT**) and RCA (**AUDIO-L** and **R**) connectors are used for equipment with an S-Video output, such as a camcorder or VCR.

Side of the TV


(depending on the model)

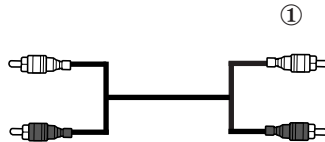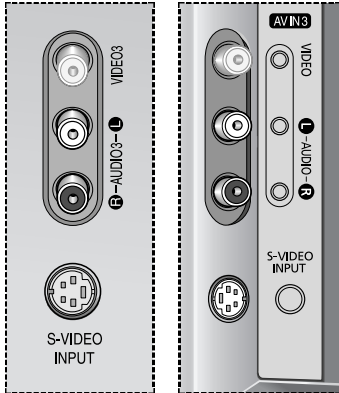


and



①

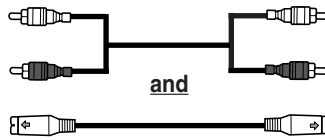




and

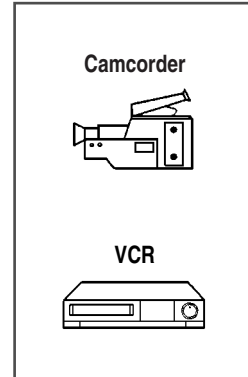

- ① To play pictures and sound, both the **S-VIDEO** (or **S-VIDEO INPUT**) and RCA connectors must be used.

Connecting to the Component Input

Rear of the TV

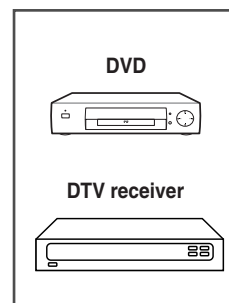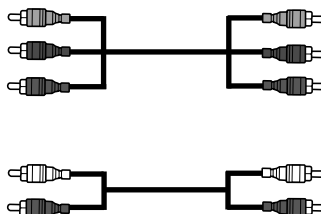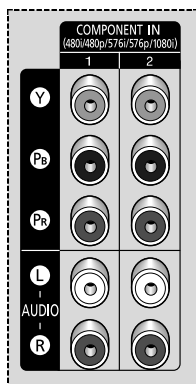

- The **COMPONENT IN** connectors are used for equipment with a DVD or DTV receiver output. (480i, 480p, 576i, 576p, 1080i)



Programming the Remote Control for Other Components

Your TV comes equipped with a universal remote control. In addition to controlling the TV, the universal remote control can also operate a VCR, Cable box, DVD and Set-Top Box made by Samsung (even if your VCR, Cable box and DVD are made by manufacturers other than Samsung).

➤ *The remote control might not be compatible with all VCRs, DVD players and Cable boxes.*

- 1 Turn off your VCR (Cable box or DVD).
- 2 Press the **SELECT** button to switch the remote control to the **VCR (CABLE or DVD)** mode.
 - The remote control has five modes : **TV, STB, VCR, CABLE** and **DVD**
- 3 Press the **SET** button.
- 4 Enter 3 digits of the VCR (Cable box or DVD) code listed on next page for your VCR (Cable box or DVD).

Example: To enter the code "6", press 0, 0, and 6.
To enter the code "76", press 0, 7, and 6.
- 5 Press the **POWER** (⏻) button. Your VCR (Cable box or DVD) should turn on. If it turns on, your remote control is now set correctly.
 - If it does not turn on, repeat steps above, but try one of the other codes listed for the brand of particular yours.
- 6 Once your remote control is set up, press the **SELECT** button any time you want to use the remote control to operate VCR (Cable box or DVD).
 - ◆ When your remote control is in the **STB, VCR, CABLE** and **DVD** mode, the volume buttons still control your television's volume.
 - ◆ When your remote control is in the **TV** mode, the VCR or DVD control buttons (rewind, stop, play/pause and fast forward) still operate your VCR or DVD.

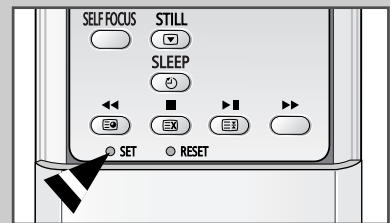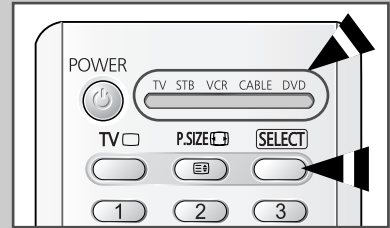

Programming the Remote Control for Other Components

VCR Remote Control Codes

Admiral	015,088	Hitachi	014,024,044,045	Quasar	017,053
Aiwa	024	Instant Replay	017	Radio Shack	011,015,017,018,021,024,028,036,052,062
Akai	026,031,032	JC Penny	011,014,016,017,023,025,039,044,060,062	RCA	009,014,016,017,037,044,046,063,078
Audio Dynamics	022,025	JCL	011,017,023,025,039,055	Realistic	011,015,017,018,021,024,028,036,052,062
Bell & Howell	011	Kenwood	011,023,025,039,055	Samsung	000,016,022,031,041,051
Broksonic	019	KLH	082	Sansui	025
Candle	016,018,022,054,055,061	LG(Goldstar)	001,002,007,018,023,055,069	Sanyo	011,021
Canon	017,062	Lloyd	024	Scott	022,050,058,077
Citizen	016,018,022,054,055,061	Logik	040	Sears	011,014,018,021,027,028,044,052,057
Colorlyme	023	LXI	024	Sharp	015,036,048,054
Craig	016,021	Magnavox	017,038,062,065	Shintom	026,035,040,064
Curtis Mathes	009,016,017,023,024,055,062,073,076	Marantz	011,017,023,025,038,039,055,070	Signature	024
Daewoo	003,004,005,006,007,008,022,054,085	MTC	016,024	Sony	026,035,047
DB	023,025	Multitech	016,024,040,041	Sylvania	017,024,038,062,065
Dimensia	009	NEC	073	Symphonic	024
Dynatech	024	Optimus	015	Tandy	011,024
Electrohome	036	Panasonic	017,062,084,086	Tatung	039
Emerson	017,018,019,022,024,029,032,036,043,050,051,056,058,066,071,074,076,077,079	Pentax	014,044	Teac	024,039,078
Fisher	011,021,027,028,052,057,067	Pentex Research+	055	Technics	017
Funai	024	Philco	017,038,062,065	Teknika	017,018,024,030
General Electric	009,016,017,041,062	Philips	017,038	TMK	076
Go Video	016	Pioneer	014,025,042,059	Toshiba	014,022,028,057,058
Harman Kardon	023	Portland	053,054,061	Toshiko	018
		PROSCAN	009	Totevision	016,018
		Quartz	011		

Cable Box (CATV) Remote Control Codes

Anvision	015,016	Magnavox	015,016,027,029,034,036,037,040,041,048,049	Signature	054
Cable Star	015,016	Nawoo	001	Sprucer	035
DaeHan	005	NSC	017	Starcom	054
DeaRyung	003	Oak	024,046	Stargate2000	066
DongKuk	004	Osk Sigma	024	Sylvania	019,067
Eagle	015,016	Panasonic	011,035,047,069	TaePyungYang	002
Eastern International	020	Philips	015,016,027,029,034,036,037,040,041,048,049	Texscan	019,067
General Instrument	054	Pioneer	026,028,052	Tocom	025,029,057,058,063
GI	012,013,023,031,032,033,038,044,075,076,077	Randtek	015,016	Unika	039,040,049
Hamlin	011,012,020,021,042,056	RCA	008,035,074	Universal	059,060
Hitachi	045,051,054	Regal	011,020,021	Viewstar	015,016,027,029,034,036,037,040,041,048,049
Jerrold	012,013,023,031,032,033,038,044,054,070,073	Regency	010,041	Warner Amex	052
LG(Goldstar)	006	Saewoo	007	Zenith	022,050,065,069
Macom	045,051	Samsung	000,011,030,052,071,072		

DVD Remote Control Codes

Curtis Mathes	009	Philips	007	Sharp	005
JVC	003	PROSCAN	008	Sony	004
LG(Goldstar)	001	RCA	008	Toshiba	002
Panasonic	006	Samsung	000		

Troubleshooting: Before Contacting Service Personnel

Before contacting Samsung after-sales service, perform the following simple checks.

If you cannot solve the problem using the instructions below, note the model and serial number of the television and contact your local dealer.

No sound or picture	<ul style="list-style-type: none">◆ Check that the mains lead has been connected to a wall socket.◆ Check that you have pressed the "I" button (On/Off) and the POWER (⏻) button.◆ Check the picture contrast and brightness settings.◆ Check the volume.
Normal picture but no sound	<ul style="list-style-type: none">◆ Check the volume.◆ Check whether the volume MUTE (🔇) button on the remote control has been pressed.
No picture or black and white picture	<ul style="list-style-type: none">◆ Adjust the color settings.◆ Check that the broadcast system selected is correct.
Sound and picture interference	<ul style="list-style-type: none">◆ Try to identify the electrical appliance that is affecting the television, then move it further away.◆ Plug your television into a different mains socket.
Blurred or snowy picture, distorted sound	<ul style="list-style-type: none">◆ Check the direction, location and connections of your aerial. This interference is often occurs to the use of an indoor aerial.
Remote control malfunctions	<ul style="list-style-type: none">◆ Replace the remote control batteries.◆ Clean the upper edge of the remote control (transmission window).◆ Check the battery terminals.

- AFTER SALES SERVICE

- Do not hesitate to contact your retailer or service agent if a change in the performance of your product indicates that a faulty condition may be present.

