


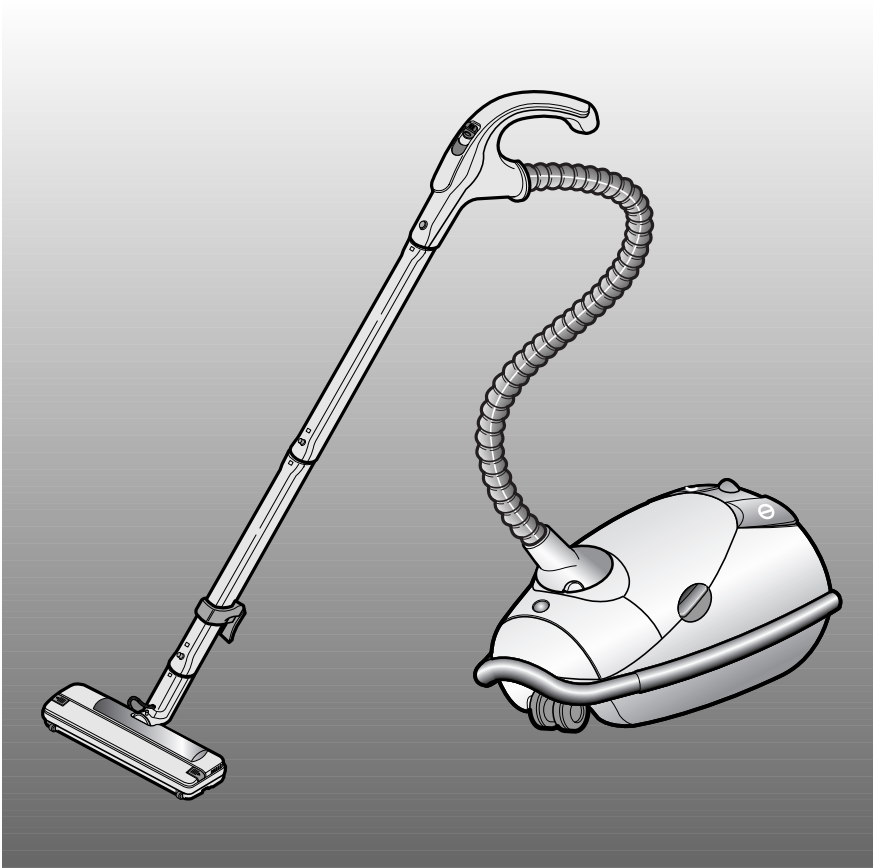

Operating Instructions

TC-9015VP

VACUUM CLEANER



* FOR HOUSEHOLD USE ONLY

IMPORTANT SAFETY INSTRUCTIONS


READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

WARNING

To reduce the risk of fire, electric shock, of injury:

1. Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
2. Do not use outdoors or on wet surfaces.
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this manual. Use only manufacturer's recommended attachments.
5. Do not use with damaged cord or plug. If appliances is not working as it should, has been dropped, damaged, left out door, or dropped into water, return it to a service center.
6. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Do not handle pulg or appliance with wet hands.
9. Do not put any object into openings. Do not use with any opening blocked ; keep free of dust, lint, hair, and anythin that may reduce air flow.
10. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
11. Do not pick up anything that is burring or smoking, such as cigarettes, matches, or hot ashes.
12. Do not use without dust bag and filters in place.
13. Turn off all controls before unplugging.
14. Use extra care when cleaning on stairs.
15. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
16. Hold plug when rewinding onto cord reel. Do not allow plug to whip when rewinding.
17. This hose contains electrical connections.
18. Do not use to suck up water.
19. Do not immerse in water for cleaning.
20. The hose should be checked regularly and must not be used of damaged.
21. The plug must be removed from the socket - outlet before cleaning or maintaining the appliance.
22. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

IDENTIFICATIONS PARTS

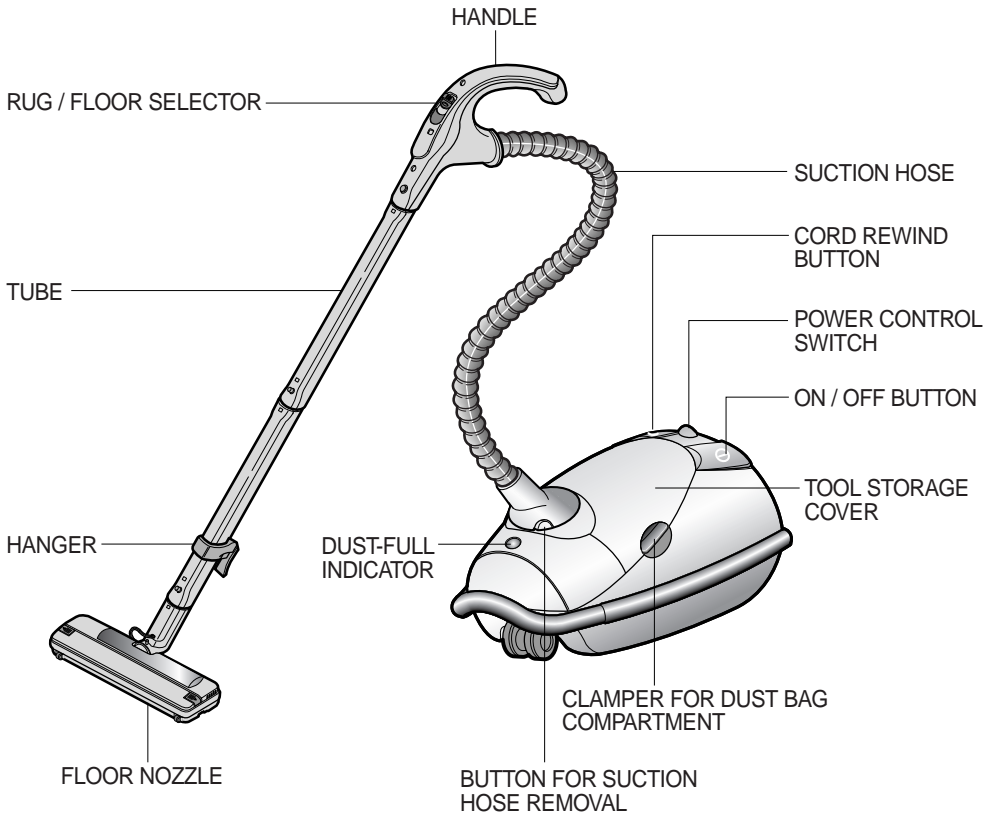


DUST-FULL INDICATOR

If the "Dust - Full" indicator switches to "RED" while you are cleaning, the dust bag requires replacement.


NOTE If the "Dust - Full" indicator continues to display "RED" even after changing the dust bag turn the cleaner off and check whether the hose, tube or nozzle is clogged.

ASSEMBLING THE VACUUM-CLEANER READY FOR USE


1) Connect the suction hose to the suction tube.

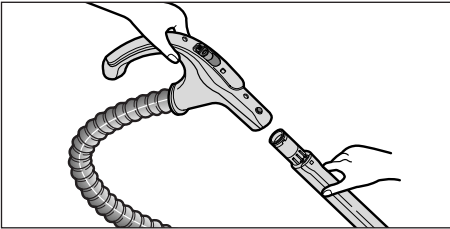


2) Connect the suction tubes together.

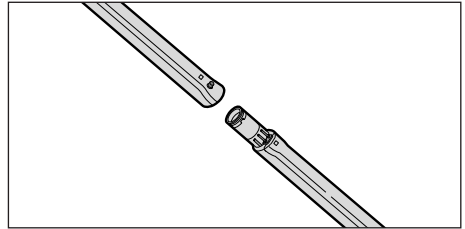

3) Connect the nozzle to the suction tube.

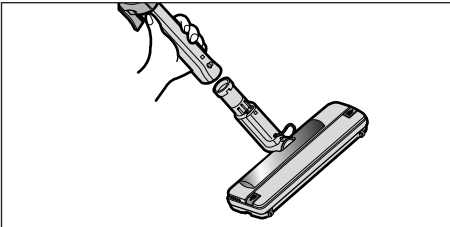

4) Connect the hose clamer to the body of the clamer along the arrow point.

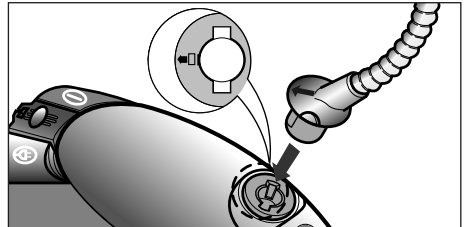


POWER CORD

1) PULLING OUT

The power cord is long enough to be drawn out for a convenience.

2) REWINDING


Upon finishing cleaning disconnect the plug from the electrical outlet and just press the cord rewind the button lightly with your toe.

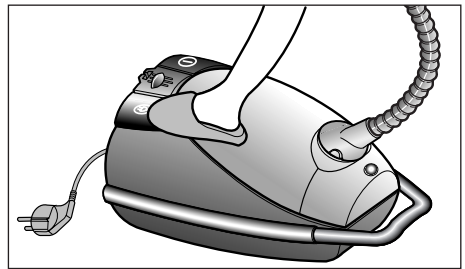

NOTE When removing the power cord from the electrical outlet, grasp the plug, not the cord.

ON / OFF SWITCH

With the cord plugged into an electrical outlet, start or stop the vacuum cleaner by stepping lightly on the switch button.

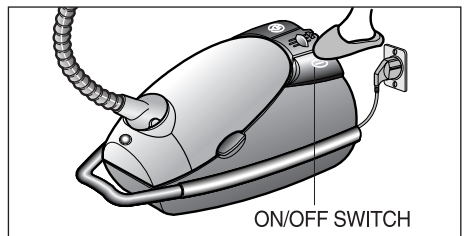


POWER CONTROL

The suction power can be adjusted with the electrical power control to suit any situation.

MIN = For delicate fabrics, like net curtains.

MAX = For hard floors and heavily soiled carpets.

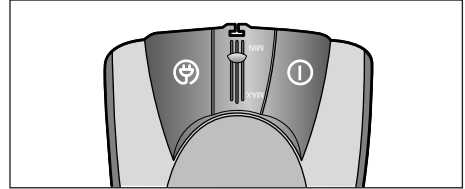

SLIDING REGULATOR

USING THE ACCESSORIES


● **Dusting brush** - for furniture, shelves, books, etc.

● **Upholstery brush** - for cushions and drapery.

● **Crevice tool** - for radiators, crevice, corners, between cushions.

● **Brush head** -

The rotating brush ensures that cleaning is carried out more thoroughly.

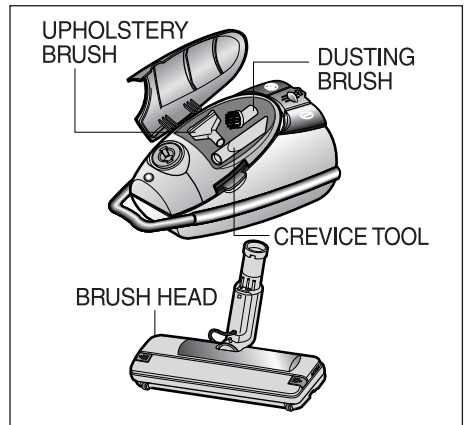

UPHOLSTERY BRUSH


DUSTING BRUSH

CREVICE TOOL

BRUSH HEAD


OPERATING THE BRUSH HEAD

Push the switch(A) down.
(The brush switches on)

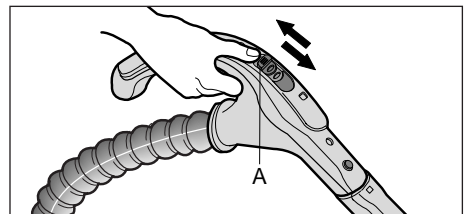


PARK POSITION

Located in the top rear side of the vacuum cleaner, there is a support for a convenient park position during pauses when using the nozzle.

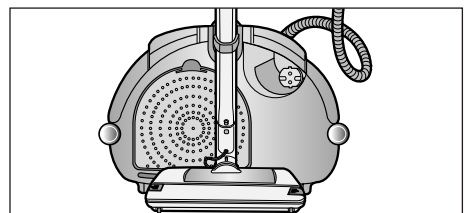


TRANSPORTING AND STORING THE VACUUM CLEANER

For easy storage and transportation, this vacuum cleaner has a clip system built onto the body, which will keep the tube, hose and nozzle in a vertical position.

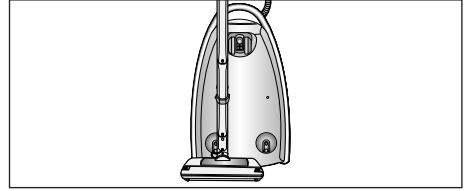


REPLACING THE DUST BAG


1) To open the dust cover of the dust bag compartment press the clamber upward located at the side of the dust cover.

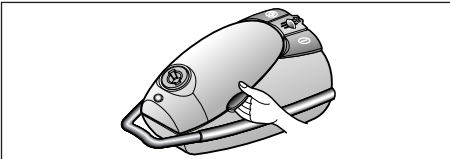


2) Remove the dust bag from the cleaner.

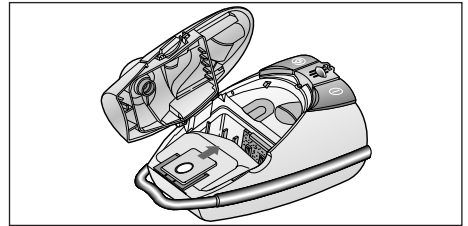

3) After removing the used dust bag, insert the cardboard bag collar of the new dust bag in to the suction inlet to the full.

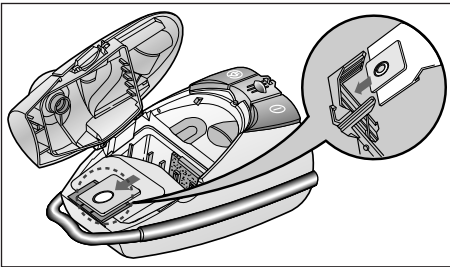


4) Press the dust cover down gently until the clamber relocks.

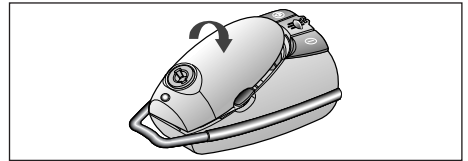

NOTE After using the cloth filter bag is full, clean the cloth filter bag and use it again.

 
NOTE Used dust bag can be sealed by removing the film from the paper and sticking the latter over the suction opening.



BRUSH HEAD


You can change or clean the brush by removing the cover, having first detached it with the 2 slides.

- Remove the brush from the plastic guides and toothed belt and clean, or insert a new brush. Do not lose the plastic guides, washers or springs.

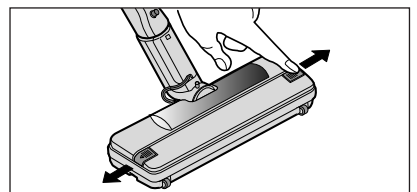


The rubber lip under the brush head can be removed if it requires cleaning or replacing.

- Lift the rubber lip in the middle and pull out of the guides at one side.

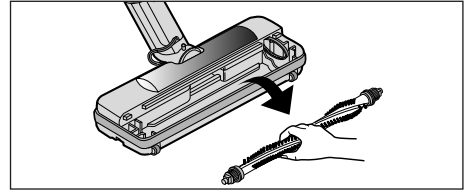


CARE OF MOTOR FILTER

The motor filter situated between the dustbag and the motor will gradually become dirty. Each time you change the air outlet filter we advise you to remove the motor filter and to clean it by tapping to remove the dirt and then replacing it in the vacuum cleaner.

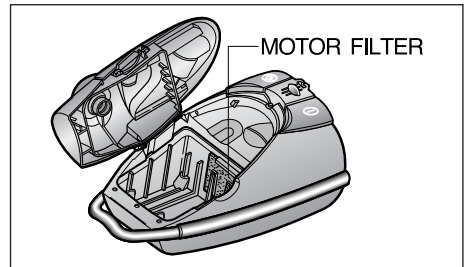

REPLACING THE MICROFILTER

- The microfilter filters the air which comes out from the vacuum cleaner.
- To open the filter cover, press down and pull it simultaneously.
- Remove and replace the exhausted microfilter.
- Close the cover.

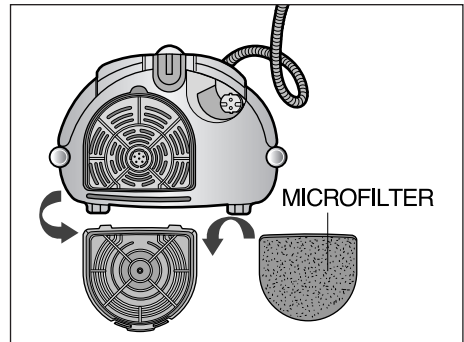

TROUBLESHOOTING

PROBLEM	CAUSE	REMEDY
Motor does not start	No voltage	Check cable, plug and socket.
Suction force is gradually decreasing	Filter, nozzle, suction hose or tube blocked.	Remove the object.
Cord does not rewind fully	Check that the cord is not twisted or wound unevenly	Pull the cord at 2~3m & push down the cord rewind button

This Vacuum cleaner is approved the following
EMC Directive : 89/336/EEC, 92/31/EEC and 93/68/EEC
EN 61000-3-2 : 1995, EN 55014 : 1993 and EN 55104 : 1995
Low Voltage Safety Directive : 73/23/EEC and 93/68/EEC
IEC 335-1, IEC 335-2-2, EN 60335-1 and EN 60335-2-2

CODE NO.DJ68-40015E