

Vacuum Cleaner For Household use Only

Operating Instructions

Read these instructions before operating the vacuum cleaner * The design and specification may be different depending on the models.

 $-\phi$

Safety Instructions

Thank you for purchasing a Samsung vacuum cleaner. When using an electrical appliance, basic precautions should always be followed, including the following:

PLEASE READ ALL WARNINGS AND INSTRUCTIONS BEFORE USING THIS APPLIANCE

Warning:

To reduce the risk of fire, electric shock, or injury:

- Do not leave appliance unattended when plugged in. Unplug the vacuum from the outlet when it is not in use, or when it is being cleaned.
- · Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, or has been dropped, damaged, left outdoors or dropped in water, take it to a service center.
- Do not pull or carry the vacuum by the cord, or use the cord as a handle. Do not close a door on cord, or pull the cord around sharp edges or corners. Do not run the appliance over its cord. Keep the cord away from heated surfaces.
- Do not unplug the vacuum by pulling on the cord. To unplug, grasp the plug, not the cord.
- · Do not handle plug or appliance with wet hands.
- Do not put any object into vacuum openings. Do not operate with any opening blocked: Keep free of dust, lint, hair and anything that may reduce air flow.
- Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
- Do not use to pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- · Do not use without dust bag and filters in place.
- Turn off all controls before unplugging.
- · Use extra care when cleaning on stairs.
- Do not use to clean up flammable or combustible liquids such as gasoline. Do not use the vacuum in areas where such liquids may be present.
- · Store your cleaner indoors in a cool, dry area.
- Do not use extension cords or plug into an electrical outlet with inadequate current carrying capacity.
- · Avoid vacuuming up sharp objects.
- Always turn this appliance off before connecting or disconnecting the hose, replacing bags, or removing the bottom plate for maintenance.
- · Unplug electrical appliances before vacuuming them.

Save these instructions!

To reduce the risk of electrical shock, this appliance has a polarized plug with one blade wider than the other. This plug will fit in a polarized outlet only one way. If the plug does not fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to replace the outlet. Do not change the plug in any way.





Assembling Parts

Assembled Vacuum Cleaner Parts



WARNING!

OPERATE THE VACUUM CLEANER ONLY AT THE VOLTAGE SPECIFIED ON THE NAMEPLATE.

Step 1. Attaching the Handle



Stand the vacuum upright and slide the base of the handle firmly into the grooves at the top of the vacuum body.



Insert the screw provided into the existing hole. Tighten the screw securely with a screwdriver. Before securing the handle, please check that the handle is fitted to the vacuum body and make sure there's no gap.

Step 2. Attaching the Hose and Tools



Slide the end of the hose wand with tabs into the suction intake valve.



Slide the extension wand and the crevice tool together into the storage clip.





ON-OFF Switch 1.To turn cleaner ON(I), press the

ON/OFF switch to the ON position.

2.To the cleaner OFF(**0**), press the ON/OFF switch to the OFF position.



Carrying handle

The cleaner can also be moved by using the carrying handle.



Cleaning lightweight flexible rugs

Stand on one end of rug and move cleaner toward other end or edge. Before reaching edge, push down on handle. This will lift up the nozzle(front of cleaner)and will prevent rug from clinging to cleaner.

Continue to lift front of cleaner so that when you have reached the edge, it is completely off the rug. Move cleaner back to start again, lower front of cleaner, and use only forward strokes.

Operation



Handle positions

The handle of your cleaner has three positions; **upright** for storage and when using cleaning tools; **operating** for general operation on carpet and floors; **low** for reaching under low furniture. Step on handle release pedal to lower handle.



Cleaning Tool attachments

Attachment tools can be used to clean furniture or drapes, on stairs or in corners. Place the vacuum on the floor with the handle in the upright position.











Transporting cleaner

To move your cleaner from room to room, put the handle in upright position, tilt the cleaner back on its rear wheels and push forward.

while using attachment tools. Do not place the vacuum on top of fumiture or steps as the brushroller may cause damage.

A. Combination tool:

Two types of cleaning tools are included in one attachment: rotate for desired tool.

- Use brush side to dust furniture, blinds, books, lamps, shelves.
- Use upholstery side for curtains, draperies, cushions, fabrics.

B. Crevice tool:

Use in corners, on stairs, baseboards, and behind furniture.

C. Extension Wand:

Use with desired attachments and narrow wand for a longer reach.

Carpet height adjustment

Carpet and rug cleaning takes place at the nozzle (A).

When it is necessary to raise and lower the nozzle for various carpet pile heights, rotate the nozzle control knob (B) to the desired setting.

For maximum cleaning performance, The

- following carpet height settings are recommended: • Lowest setting: for all types of carpet
- Lowest seturg: for all types of carpet
 Higher settings: for very deep pile carpet where easier pushing effort is desired, while maintaining good cleaning performance.

Note: If the cleaner is difficult to push, rotate knob to the next higher setting.

Power control (some models only)

To change the power level of the vacuum cleaner, rotate the knob.



Maintenance

Familiarize yourself with these home maintenance tasks as proper use and care of your cleaner will ensure continued cleaning effectiveness.

When to replace the Dust bag

Check the dust bag from time to time. Change the dust bag when dirt reaches the dotted line. If more dirt than this accumulates, your cleaner will not operate effectively.

Note: All new carpet has loose fibers which can fill the bag quickly while vacuuming.

Replacing Dust Bag



Pull the bag door outward to open. Set bag door aside.



Removing and installing filter bag Grasp dust bag collar (A) and pull

collar from tube (B). Note: Do not clean out old dust bag and reuse. Discard used dust bag. Hold new dust bag as shown. Align opening in dust bag with (B). Push (A) firmly onto (B). Tuck in dust bag.

Cleaning secondary and final filters



How to clean Disconnect cleaner from electrical outlet.

The secondary filter (A), located behind the grill in the bottom of bag compartment, protects the motor from dirt particles.

If filter becomes dirty, pull off grill and lift out filter.

Normal filter (Black) Hand wash filter in cold water with mild detergent, then air dry.

Reposition dry filter and grill.



The final filter asists in the filtration process to return clean air to the room. To remove this filter, first open the door on the side of the cleaner (Fig. 3-6). Grasp filter (B) and pull it straight out.

Micro filter Reposition new filter by reversing this procedure.

HEPA filter (some models only)

This filter will become dirty and needs to be replaced about once a year to maintain efficient filtration.

Reposition new filter by reversing this procedure.

Do not operate cleaner without either the secondary or final filter in place.





Replacing bag door Reposition bag door by placing tab on bottom of door into opening (C). Press top of door to snap securely shut.



How to attach filter door

The filter door is designed with a "break away" feature which allows it to snap free if it is pushed open too far. To reattach, align hinges (C) of cover with slots on sides of filter area.

Check agitator shield

Because your cleaner picks up so well, we strongly recommend you check for debris accumulation under the agitator shield each time you clean the filters. Removing debris under the shield will help maintain your cleaner's excellent pick up and suction. Remove debris as follows:

1. Disconnect cleaner from electrical outlet.

- Check for dirt accumulation by removing bottom plate (Fig. 3-10), removing agitator (Fig. 3-11), and lifting agitator shield (Fig. 3-13).
 Remove any debris and replace
- Remove any debris and replace shield, agitator and bottom plate (Figs. 3-13 to 3-15).

The belt

The belt on your cleaner causes the agitator to rotate and is important for the effective operation of the cleaner. The belt is located under the bottom plate of the cleaner and should be checked from time to time to be sure it is in good condition.

When to replace

Disconnect cleaner from electrical outlet.

To check belt, remove bottom plate as shown in "How to replace." Replace belt it is stretched, cut or broken.



With lettering on outside of belt and positioned as shown in box on (D), slide new belt over motor pulley (B).



Reposition bottom plate and 4 screws. Tighten screws securely.

Maintenance



How to replace Disconnect cleaner from electrical outlet.

Place handle in low position and turn cleaner over so bottom side is up. Remove the 4 screws as shown with a screw driver.



Insert agitator through belt and place belt in belt guide (C) on agitator.

Should the agitator shield (D) become dislodged while replacing the belt or the agitator, reposition it as shown, noting the placement of its belt guide (D)

When to replace the agitator brush roll

When agitator brushes are worn, the agitator should be replaced. To check condition of brushes, **disconnect cleaner from electrical**

outlet. Move the edge of a card across bottom plate while turning agitator. To maintain cleaning effectiveness, replace agitator if brushes do not

touch card.



Remove agitator and used belt. Discard used belt.



Grasp agitator firmly and fit it into position by first sliding the end opposite the belt into the rectangular slot (F) on side of cleaner.

Pull other side of agitator (G) into place. Turn agitator, making sure belt is not pinched between agitator and agitator shield.



How to replace Disconnect cleaner from electrical outlet.

Remove bottom plate, belt and agitator following directions in "The belt" section beginning with Fig. 3-10. Discard old agitator.

Continue following the directions in "The belt" section to reposition belt, new agitator and bottom plate.





Maintenance

Clearing Clogs

Disconnect cleaner from electrical outlet.

The hose on the back of the vacuum cleaner that carries the dirt from the nozzle to the dust bag can sometimes become clogged. If you notice a change in the sound of the vacuum motor, check for clogs.



Pull and open the suction inlet cover, and check for a clog.



Disconnect the wand and check for clogs in the vacuum base, the wand and the hose.



If the clog persists, turn the vacuum cleaner off and unplug it. Remove the bottom plate. Lift up the short hose in the base of the vacuum. Inspect the hose for clogs and remove any obstructions. Replace the short nozzle hose and the bottom plate.

Troubleshooting

Check this list of possible problems and solutions before bringing your vacuum to a service center.

Problem: Cleaner won't run

Possible Cause

- Possible Solution
- · Not firmly plugged in
- Plug unit in firmly
- No voltage in wall plug
- Check fuse or breaker
- Blown fuse or tripped breaker
- Replace fuse or reset breaker

Problem : Dust escapes the dust bag

Possible Cause

- Possible Solution
- · Bag improperly installed
- Re-install bag.
- · Bag torn
- Replace bag

Problem : Cleaner hard to push

Possible Cause

- Possible Solution
- Incorrect carpet height setting
- Rotate nozzle control knob to lower setting

Problem : Poor job of dirt pickup

- Possible Cause
- Possible Solution
- Full or clogged dust bag
- Change bag.
- Broken or worn belt
- Replace belt.
- Clogged hose or nozzle
- Clean hose or nozzle area.
- Hole in hose
- Replace hose.
- Dust bag improperly installed
- Properly install dust bag
- Incorrect carpet height setting
- Rotate nozzle control knob to lower setting
- · Clogs in air flow passage
- Clear clogs.

Problem : Abnormal sound

Possible Cause

Possible Solution

- · Strange sound like rushing air
- Check for clogs
- 6





DJ68-00075E REV(0.0)



الرجاء قراءة هذه التعليمات بعناية قبل تشغيل المكنسة. * الرجاء قراءة هذه التعليمات بعناية قبل تشغيل المكنسة.

.

2/10/09, 1:16 PM

8

| I | | | I |
|---|--|--|---|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

٧

•

7

DJ68-00075E REV(0.0)

2/10/09, 1:16 PM

ARB

الصيانة

ازالة الأشياء المسدودة

أفصل المكنسة عن مخرج التيار . الخرطوم على اللوحة الخُلفَية للُمكنسة الكهربائية الذي يقوم بنقل الغبار من الفوهة الى كيس الغبار ، قد يحدث سده أحيانا. إذا شعرت بتغيرات في صوت محرك المكنسة ، افحص الأشياء المسدودة.



اسحب غطاء مدخل الشفط وإفتحه وافحص شيئا مسدودا.



افصل الماسورة وافحص شيئا مسدودا في قاعدة المكنسة ، والماسورة والخرطوم.



إذا كانت الأشياء المسدودة موجودة، أوقف المكنسة الكهربائية عن العمل وافصل قابسها عن مخرج التيار. اًزل الصفيحة الأسفل . أخرج الخرطوم القصير في قاعدة المكنسة . افحص الخرطوم لمعرفة وجودة الأشياء المسدودة وإزالة أي شيء مسدود. اعد خرطوم الفوهة القصير والصفيحة الأسفل الى مكانها.

تحرى الخلل وإصلاحه

افحص هذا البيان من المشاكل المتوقعة وحلولها قبل إحضار المكنسة الكهربائية الى مركز الخدمات.

المشكلة : لا تعمل المكنسة

- السب الممكن الحل الممكن
- لا توصل القابس بإحكام صل قابس المكنسة الى مخرج التيار بإحكام.

 - لا فولتية في مخرج التيار الجداري
 - افحص الصقيرة أو قاطع الدائرة
 - الصهيرة المنقطعة وأو القاطع المتوقف • بدل الصحيلة أو اعد ضبط قاطع الدائرة.

المشكلة : يخرج الغبار من كيس الغبار

- السب الممكن
- الحل الممكن • لم يتم تركيب الكيس كما ينبغي • *اعد* تركيب *الكيس.* •يتمزق الكيس
 - بدّل الكيس.

المشكلة : من الصعوبة دفع المكنسة

السب الممكن الحل الممكن • ضبط ارتفاع السجادة غير الصحيح • دوّر مقبض التحكم في الفوهة الى الضبط الأسفل

المشكلة : الضعف في التقاط الغبار والوسخ

السب الممكن

- الحل الممكن • كيس الغبار كامل أو مسدود
 - بدّل الكب
 - سر ،
 - أنكسر أو تبلى الحزام • بدّل الحزاء
- الخِرطوم أوَّ الفوهة مسدودة
- نظّف الخرطوم أو منطقة الفوهة.
 - الثقب في الفتّحة
 - بدّل الْخرطّوم.
- لم يتم تركيب كيس الغبار كما ينبغي
 - ركُب كَيس الغبار كما ينبغي.
- ضَبِط ارْتفاع السَّجادة غَير الصحيح
- دوّر مقبض التحكم في الفوهة الي الضبط الأسفل
 - الأشياء المسدودة موجوّدة في ممر سير الهواء
 - ازل الأشياء المسدودة.

المشكلة : الصوت غير العادي

السب الممكن

- الحل الممكن
- الصوت الغريب مثل الهواء المندفع

6

• افحص الأشياء المسدودة.

الصبانة

الحزام

الحزام في المكنسة يؤدي الى تدوير المهيج وهو مهم لتشغيل المكنسة بفعالة. الحزام موجود تحت الصفيحة الأسفل من المكنسة ولابد من فحصه من حين الى أخر لتأكده في حالته الجيدة.

عند التبديل افصل المكنسة من مخرج التيار.

لحفص الحزام، ازل الصفيحة الأسفل كما كيفية التبديل هو مبين في "كيفية التبديل" . بدل الفصل المكنسة ه الجزام في حالة أنه ممتد أو منقطع ، أو منكسر.



افصل المكنسة من مخرج التيار . ضع المُقبض في الموضع المُنخفض وقلُب المكنسة بحيث يتجه الأرض الى الأعلى. ازل ٤ براغي كما هو مبين في الشكل بواسطة مفك البرغى.



ازل المهيج والحزام المس اطرد الحزام المستعمل.

11-1



بالحروف في خارج الحزام والموجودة كما هو مبيَّن في الصندوٰق (د) ، ازلق الحزام الجديد فوق بكرة المُحرَك(ب).



ادخل المهيج خلال الحزام وضع الحزام

لا بد من إزالة حجاب المهيج (د) كما هو مبين ، بدون وضع دليل

عند تبديل بكرة فرشاة المهيج



اعد الصفيحة الأسفل الى مكانها وثبت ٤ براغي بإحكام.

في دليل الحزام (ج) على المهيّج.

أثناء تبديل الحزام أو المهيج، واعده الحزام (د).

إذا كان فرشاة المهيج متبلية ، لا بد من تبديل المهيج . لفحص حالة الفرشاة، افصل المكنسة من مخرج التيار. حرك طرف بطاقة عبر الصفيحة الأسفل أثناء تدوير المهيج. للاحتفاظ بفعالية التنظيف، حرك طرف بطاقة . عبر الصفيحة الأسفل أثناء تدوير المهيج. للاحتفاظ بفعالية التنظيف،

بدّل المهيج في حالة عدم لمس الفرشاة

٥

۲

بالبطاقة.



الى مكانه. دوّر المهيج وبالتأكّد من أن الحزام غير متضيق بين المهيج وحجاب الميهج.



كيفية التبديل افصل المكنسة عن مخرج التيار . ازل الصفيحة الأسفل والمهيج تبعا لتعليمات جزء "الحزام" الذي يبدأ بشكل ٣-١٠ واطرد المهيج القديم. أتبع التعليمات في حزء "الحزام" لإعادة الحزام والمهيج الجديد والصفيحة الأسفل الى أماكنها.

5

2/10/09, 1:16 PM



استطلع بنفسك على هذه التعليمات للصيانة في المنزل لأن الاستخدام المناسب وعناية المكنسة اتضمن كفاءة التنظيف المستمر.

عند تبديل كيس الغبار

افحص كيس الغبار من حين والى آخر. بدل كيس الغبار في حالة أن الغبار وصل الى الخط المنقط المحدد . إذا زاد الغبار عن هذا الخط المحدد، لا تعمل المكنسة بكفاءة.

ملاحظة : جميع السجاجيد الجديدة لها ألياف متدلية قد تمتلئ بكيس الغبار بسرعة أثناء التنظيف بالمكنسة. **تبديل كيس الغب**ار

افصل المكنسة عن مخرج التيار الجداري.



اسحب بـاب الکیس الی الخار ج لفتحه. ضع بـاب الکیس الی جانب.



إزالة كيس المصفاة وتركيبه امسك ياقة كيس الغبار (أ) واسحب ملاحظة من الأنبوب (ب). القديم ولا تستخدمه مرة أخرى. واطرد كيس الغبار المستعمل. وامسك كيس الغبار الجديد كما هو مبين . ضع فتحة في كيس الغبار ملائما لـ (ب) . ادفع (أ) الى (ب) بإحكام. ادخل كيس الغبار.



إعادة باب الكيس الى مكانه اعد باب الكيس الى مكانه من خلال إدخال السدادة في أسفل الباب الى الفتحة (ج). اضغط على أعلى الباب حتي تسمع صوت الإغلاق.



باب المصفاة مصمم لفصله فالباب لا ينكسر في حالة فتحه أكثر جدا بالضغط. لإعادة الإلصاق، ضع المفصلة (ج) من الغطاء ملائما للفتحات الضيقة على جابين منطقة المصفاة.

فحص حجاب المهيج

4

نظرا لأن المكنسة الكهريآئية تلتقط جيدا، نوصاك بأنك تفحص كتلة متراكمة تحت حجاب المهيج كلما تظفت المصفاة. إزالة الكتلة المتراكمة تحت الحجاب تساعدك على أن المكنسة تحتفظ على قوة الالتقاط والشفط المتازة. ازل الكتلة المتراكمة كما يلى:

١. أمضل المكنسة عن مخرج التيار.
 ٢. تأكد من وجود الكتلة التراكمة بعد إزالة المهيج الصفيحة الأسفل (الشكل ٢-١٠) ، وإزالة المهيج (الشكل ٢-١٠) ، وإزالة المهيج (الشكل ٢-١١) ، ورفع حجاب المهيج (الشكل ٢-١٢).

 . أزل أي كتلة وأعد الحجاب والمهيج والصفيحة الأسفل الى أماكنها (الأشكال من ٢-١٣ حتى ٢-١٥)

ARB



كيفية التنظيف ا**فصل الكنسة من مخرج التيار**. المصفاة الثانوية (أ) ، الموجودة في خلف الشبكة في أرض حجيرة كيس الغبار ، والتي تحمي المرك من جزيئات الغبار . إذا أصبحت المصفاة متسخة، اسحب الشبكة واخرجها.

المصفاة العادية (سوداء)

اغسل المصفاةً بألماء البارد يدويا بمسحوق الغسيل العادل ، ثم جففها في الهواء. واعد المصفاة المجففة والشبكة الى مكانهما.



0-1

ستصبح هذه المُصفاة متسخة وتعتاج الى تبديلها مرة كل سنة للاحتفاظ بالتصفية الفعالة. اعد المصفاة الجديدة بهذا الترتيب العكسي. لا تستخدم المكنسة بدون مصفاة ثانوية أو مصفاة نهائية فى مكانها.

۶

المصفاة النهائية تساعد عملية التصفية لعودة

الهواء المنعش الى الغرفة. لإزالة هذه المصفَّة،

افتح الباب أولا في جانب المكنسة (الشكل ٣-٦)

امسك المصفاة (ب) واسحبها الى الخارج

2/10/09, 1:17 PM



زر التشغيل/الإيقاف

 لتشغيل المكنسة (I) ، اضغط على زر التشغيل/الإيقاف نحو موضع التشغيل.

٢. لإيقاف المكنسة (0) ، اضغط على زر التشغيل/الإيقاف نحو موضع الإيقاف.



مقبض النقل يمكنك نقل المكنسة باستخدام مقبض . النقل.



لَصق السجآدة بالمكنسة. استمر في رفع للضربة فقط.



التشغ

مواضع المقبض

مقبض المكنسة الكهرباذية له ثلاثة مواضع ؛ موضع المستقيم لحفظ المكنسة وعند أستخدام أدوات التنظيف ؛ وموضع التشغيل للتشغيل العام على السجادة والأرض ؛ وموضع المنخفض للوصول تحت الأثاث . اضغط على دواسة رخو المقبض لخفض المقبض.



الأثاث أو الستارة ، وعلى السلم أو في

المكنسة على أعلى الأثاث أو السلم لان الضرر قد يحدث في بكرة الفرشاة.

الزوايا. منع المكنسة على الأرض مع المقبض في الموضع المستقيم أثناء استخدام الأدوات الملحقة . لا تضع

نوعان من أدوات التنظيف يمكنك جمعهما للاستخدام : قلبهما للغرض المطلوب. • استخدم ٰطرف الفرشاة لتنظيف الغبار في ا لأثاث وحجاب النافذة ، والكتب ، والمصابيح ، والرفوف. • استخدم طَرف التنجيد لتنظيف الستارة،

لنقل المكنسة من الغرفة الى الأخرى، ضع

المقبض في الموضع المستقيم، وامل المكنسة التي الخلف على العجلات الخلفية

نقل المكنسة

وادفعها الي الأمام.

أ . جمع الأدوات :

والستائر المتجعدة ، والوسادة والأقمشة.

ب. أداة ذات شقوق: . يمكنك استخدام الأدوات الملحقة لتنظيف استخدمها في الزواياً ، على السلم ، ولوح . الأثاث أن الستارة بمعال الساد أو في القاعدة ، وخلف الأثاث. ج . ماسورة التمديد : استخدمها مع الأدوات الملحقة وماسورة ضيقة للوصول الأطول.



تنظيف السجادة الخفيفة الوزن والقابلة للانصهار ضع على وجه السجارة وحرّك المكنسة بين الطرف والأخر. قبل الوصول الى الطرف، اضغط على المقبض. هذا يرفع الفوهة (الموجودة في أمام المكنسة) وويمنع أمام المكنسة بحيث تصل المكنسة آلى طرف السجارة ، وهذا يفصل السجادة تماما. حرّك المكنسة الى الخلف لإعادة التشغيل، واستخدم أمام أسفل المكنسة



٧-٢

HIGH

9-1



3

ضبط ارتفاع السجادة

الأنواع •ضبط وضعية الأعلى : لسجادة بسماكة فتريد قوة

الضغط السهل الأكثر ، بالاحتفاظ بكفاءة التنظيف.

ملاحظة : إذا شعرت بالصعوبة للضغط على المكنسة ، دوّر المقبض الى وضعية الأعلى التالية. التحكم في القوة (بعض الموديلات فقط)

بير مستوى القوة للمكنسة الكهربائية، دوّر



Min Di





البرغي بإحكام. قبل تثبيت المقبض ، يرجى التأكد من أن المقبض ملاذم لجسم وجود الفجوة.

الخطوة ٢. إلصاق الخرطوم والأدوات





۲

ازلق ماسورة التمديد وأداة ذات شقوق معا الى مشبك الحفظ.

2/10/09, 1:17 PM

2

ARB



تعليمات هامة من أجل السلامة

شكرا لكم على شراء مكنسة كهربائية من سامسونج . عند استخدام الجهاز الالكتروني، لا بد من إتباع التحذيرات الأساسية دائما ، بما فيها التعليمات التالية :

يرجى قراءة جميع التنبيهات والتعليمات قبل استخدام هذا الجهاز.

تنىيھات :

لخفض خطر الاحتراق، والصدمات الكهربائية ، أو الجرح :

- لا تترك الجهاز موصولا الى مخرج التيار عند غيابك. افصل قابس المكنسة عن مخرج التيار عند عدم استخدامها ، أو تنظيف المكنسة
 - لا تستخدم المكنسة خارج البيت أو على الأسطح البالة.
 - لا تسمح بالعبث بها كلعبة . خذ العناية العميقة في حالة استخدامها من قبل أو قريب من الأطفال.
 - استخدم المكنسة كما هو مبين في هذا الدليل. استُخدم الملحقات الموصى بها من قبل الصانع.
- لا تستخدم المكنسة بالسلك أو القابس المتضرر . إذا لم يعمل الجهاز كما ينبغى، أو سقطت المكنسة، أو
 - حدث ضرر فيها ، أو تركها خارج البيت أو سقطتها في الماء ، خذها الى مركز الخدمات.
- لا تسحب أو تنقل المكنسة بسلك التيار ، أو لا تستخدُّم السلك كمقبض. لا تغلق الباب على السلك، أو تسحب السلك حول الأطراف أو الزوايا الحادة. لا تستخدم الجهاز على سلك التيار. احفظ السلك بعيدا عن الأسطح الساخنة.
 - لا تفصل قابس المكنسة بإمساك السلك. لفصل القابس، امسك القابس بنفسه ، ولا السلك.
 - لا تمسك القابس أو الجهاز باليد المبللة.
- لا تضع أي شيء في فتحات المكنسة. لا تستخدم المكنسة مع الفتحات المسدودة: احفظ المكنسة خالية من الغبار، النسيل، الشعر وأي شيء قد يخفض سير الهواء.
- احفظ الشعر ، والملابس المتدلية ، الأصّابع وجميع الأجزاء من الجسم بعيدا عن الفتحات والقطع المتحركة. لا تستخدم المكنسة لالتقاط أي شيء مشتعل أو متبخر ، مثل السجائر ، وثقاب العود ، والرماد الحار .
 - - لا تستخدم المكنسة بدون مصفاة العبار وعدم وضع المصفاة في مكانها.
 - أوقف الضوابط قبل فصل القابس.
 - استخدم المكنسة بالعناية الكبيرة في حالة تنظيف السلم. لا تستخدم المكنسة لتنظيف السوائل القابلة للإشتعال أو الانفجار مثل الغازولين . لا تستخدم
 - المكنسة في المناطق التي هناك فيها هذه السوائل. احفظ المكنسة داخل البيت في مكان بارد ، وجاف.

 - لا تستخدم الأسلاك الإضافية وتوصل القابس الى مخرج التيار الذي تياره غير مناسب.
 - تجنب تنظيف الأشياء الحادة بالمكنسة.
 - اوقف هذا الجهاز دائما قبل تنظيف المصافي أو سحب الصفيحة السفلى للصيانة.
 - افصل قابس الأجهزة الكهربائية قبل تنظيفها بالمكنسة الكهربائية.

احفظ هذه التعليمات!

لخفض خطر الصدمات الكهربائية، هذا الجهاز له قابس قطبي مع إحدى ريشات أعرض من الأخرى. هذا القابس مناسب لمخرج التيار القطبي باتجاه واحدة. إذا كان آلقابس غير مناسب للمخرج، قلب القابس . إذا ما زال كان غير مناسب، اتصل بالفني الكهربائي المؤهل لتبديل المرج. لا تغير القابس بأي طريقة.

2/10/09, 1:17 PM