

- · Some content may differ from your device depending on the region
- · Third party services may be terminated or interrupted at any time and Samsung makes no representation or warranty that any content or service will remain available for any period of time.
- This product includes certain free/open source software. The exact terms of the licences, disclaimers, acknowledgements and notices are available on the Samsung's website opensource.samsung.com.

www.samsung.com

To electric socket

Use only Samsung-approved chargers, batteries and cables. Unapproved chargers or cables can

cause battery to explode or damage the device.

socket when not in use to avoid wasting power. The

device should remain close to the electric socket

· Do not remove the battery before removing the

To save energy, unplug the charger when not in use. The charger does not have a power switch, so you must unplug the charger from the electric

charger. This may damage the device.

1. Plug the small end of the charger into the multipurpose jack of the device, and plug the large end of the charger

2. After fully charging, disconnect the device from the charger. First unplug the charger from the device, and then unplug it from the electric socket.

Printed in Korea GH68-38744A English (MEA). 04/2013. Rev. 1.0

Charging the battery

into an electric socket

while charging



Inserting a memory card (optional)

Device layout

4

The device accepts memory cards with maximum capacities of 32 GB. Depending on the memory card manufacturer and type, some memory cards may not be compatible with the



Insert the memory card as shown in the drawing.

- · Formatting the memory card on a computer might cause incompatibility with your device. Format the memory card only on the device.
 - Frequent writing and erasing of data will shorten the lifespan of memory cards.
 - · Do not use sharp tools to remove the memory card from the device

Turning the device on or off

Turning the device on

0

Dial button

Make or answer a call; From

the Home screen, retrieve

recently dialled, missed, or

received numbers

Messages button

Navigation button

menu options

and symbols

QWERTY keyboard

4

From the Home Screen,

scroll left or right to a panel

and select a widget; In the

Enter characters, numbers

Menu screen, scroll through

and hold)

From the Home screen,

access Messages (press

Press and hold [🖜], and then enter the PIN and press the Confirm button, if necessary.

6

6

0

Softkeys

Perform actions indicated at

the bottom of the display

End button Turn the device on or off

(press and hold): End a call:

In the Menu screen, cancel

an input and return to the

From the Home screen

From the Home screen

access the Menu screen; In

the Menu screen, select the

highlighted menu option, or

browse the web page

Home screen

Internet button

Confirm button

confirm an input The key might perform differently, depending on

the region

Turning the device off

Press and hold []

If the battery is fully discharged or removed from the device, the time and date will be reset.

Accessing menus

To access the device's menus or options Coroll to each

Navigation button	Scroll to each menu.
Confirm button	Launch a menu or an application.
<menu></menu>	Open the Menu screen.
<back></back>	Return to the previous screen.
End button	Close the menu or application and return to the Home screen.



- When you access a menu requiring the PIN2, you must enter the PIN2 supplied by the SIM card. For details, contact your service provider
- Samsung is not responsible for any loss of passwords or private information or other damage caused by illegal software.

Locking or unlocking the buttons

From the Home screen, press and hold $[A_A^{It}]$ to lock or unlock

The device displays the following status indicators at the top

坐.

Ø

3

(

W

99

60

Icon Description

SOS message

Normal profile

Silent profile

activated

activated

activated

progress

feature activated

Bluetooth feature

Browsing the web

Music playback in

Alarm activated

Music playback

FM radio on

Memory card

inserted

10:00 Current time

of the screen

Q

G

P

1

8

Icon Description

No signal

Signal strength

No SIM card

Network searching

GPRS network

EDGE network

connected

connected

Battery power level

Call diverting

activated

(SMS)

Call in progress

New text message

New multimedia

message (MMS)

New voicemail

 
New push message

message



Switching to Silent mode

unmute the device



Entering text

Press appropriate alphanumeric buttons to enter characters, numbers, and symbols. To enter characters on the upper half of the buttons, press [Alt]

Changing the text input mode

Predictive text off	Turn off predictive text mode. To turn the predictive text mode on, press Predictive text on .	
Writing language	Change the input language.	
Auto capitalisation Off	Turn off automatic capitalisation mode. To turn the automatic capitalisation mode on, press Auto capitalisation On .	


Other features for text input

Press th Navigati	e on button	Move the cursor.
Press [<	⊠]	Delete characters one by one.
Press ar [⟨⊠]	nd hold	Delete characters quickly.
Press [_	_ ø]	Insert a space.
Press [◄	[ا	Change the line.
Press [{	}]	Change case.

Making or answering a call

- To make a call, enter a phone number and press [-]. To end a call, press [].
- To call a recently dialled number, press [—] to select a number, and press [-] again to dial the number.
- To make a call using the phonebook, press
 <menu> → Contacts, select a contact and press [---]
- To answer an incoming call, press [-].

 Sending and viewing messages



Sending messages

- 1. Press Create message
- 2. Press Add to open the contacts. 3. Select a contact and press Add.
- Or, enter a contact number
- 4. Scroll down and enter a text message.
- See "Entering text" 5. To attach files with the message, press **Options** \rightarrow
- Add multimedia and select files
- 6. Press Send

Viewing messages

Press Inbox and select a message to read.

Managing contacts

Save data, such as names, phone numbers and personal information in the device memory, SIM card, or the memory



 $<\!\!\text{Menu}\!\!>\to \text{Contacts}$



Users can change the memory location by pressing <Menu> \rightarrow Contacts \rightarrow <Options> \rightarrow Settings → Save new contacts to and selecting a memory location.

Adding new contacts

- 1. Press **Create** → a memory location (if necessary).
- 2. Select a number type (if necessary).
- 3. Enter contact information and press the Confirm button

Editing contacts

- 1. Select a contact and press **<Options>** → **Edit**.
- 2. Edit items and press the Confirm button to save

Deleting contacts

Select a contact and press < Options > → Delete

Using the camera



Taking photos

- 1. Aim the lens at the subject and make any adjustments by pressing < Options >
- 2. Press the Confirm button to take a photo. Photos are saved automatically

Recording videos

- Press < Options > → Camcorder.
- Or, press [1] to change from Camera to Camcorder
- 2. Aim the lens at the subject and make any adjustments by pressing <Options>
- 3. Press the Confirm button to start recording.
- 4. Press the **<Stop>** to end recording. Videos are saved automatically

Viewing photos and videos

From the Home screen, press <Menu> \rightarrow My files \rightarrow Images or Videos and select an item to view

Managing calendar



Creating events

- 1. Press < Options > → Create and select an event type.
- 2. Enter details of the event and press <Save>

Select a date and press the Confirm button. To change the calendar view, press < Options > \rightarrow View by \rightarrow Month or

Listening to music



 \bigcirc <Menu> \rightarrow Music

Buttons	Function
Confirm button	Play, pause, or resume music.
Navigation button	 Left: Skip backwards (press); Scan backwards in a file (press and hold). Right: Skip forwards (press); Scan forwards in a file (press and hold). Up/Down: Adjust the volume.
1	Activate the 5.1 channel surround sound system when a headset is plugged.
2	Change the sound effect.
3	Turn shuffle mode on or off.
4	Change the repeat mode.
5	Change the music display.
6	Rate the current track.

Listening to the FM radio



<Menu> → FM Radio

Activating the FM radio 1. Plug a headset into the device

- 2. Press the Confirm button to turn on the FM radio
- 3. Press < Yes > to start automatic tuning. Users may be asked to start automatic tuning when accessing the FM radio for the first time
- 4. Control the FM radio using the following buttons:

Confirm button	Turn the FM radio on or off.
Navigation button	Left/Right: Search for the next available station.Up/Down: Adjust the volume.

- 1. Plug a headset into the device
- 3. Assign a button and press < Select>
- 2. Press <Options> \rightarrow Add to \rightarrow Favourites

Browsing the web



<Menu $> \rightarrow$ Internet



When users access Internet for the first time, users might be prompted to create an Internet profile

Navigating webpages

Buttons	Function
Navigation button	Scroll up or down on a web page.
Confirm button	Select an item.
<back></back>	Return to the previous page.
<options></options>	Open browser options.

Bookmarking webpages

- 1. Press <Options> → Bookmarks → <Add> 2 Enter details and press the Confirm button

Using the alarm



Setting alarms 1. Press < Create >

2. Enter details and press <Save>

Stopping alarms

- When an alarm rings.
- Press < Confirm > to stop the alarm
- Press < Snooze > to silence the alarm for the snooze

Deactivating alarms

Select an item and press < Options > \rightarrow Deactivate alarm.

Using the Bluetooth feature



<Menu> → Apps → Bluetooth

Turning on the Bluetooth feature

- Press <Options> → Settings and set Bluetooth to On
- 2. Set My phone's visibility to allow other devices to search for the device

Finding and pairing with other Bluetooth devices

- 1. Press the Confirm button to find other Bluetooth devices. Select a device and press the Confirm button.
- 3. Press < Yes > to match the PIN between the devices. 4. When the other device accepts the connection, pairing
- is complete. Users might have to enter a PIN, depending on the device.

Turning off the Bluetooth feature

Select <Options> → Settings and set Bluetooth to Off.

1. Select items to send from one of the device's

applications

Settings control how applications and functions operate.

Customising the device

Change them to customise the device. Appearances, sound profiles, call actions, and many more can be customised




Reset

 $\hbox{<Menu>} \to \hbox{Settings}$

Werlu	Description
Sound profiles	Change the alert type, ringtone, volume, etc.
Display	Alter wallpaper, theme, brightness, etc.
Time and date	Change the time and date of the device.
Phone	Change the device language, etc.
Call	Set auto reject, answering mode, call forwarding, fake call, etc.
Backup manager	Back up or restore data.
Security	Set locks or change passwords.
PC connections	Set connection settings with a computer.
Network	Change network profiles settings.
Memory	Clear memory, manage the memory card, or set the default memory location.

 Reset the device.




Installing the SIM card and battery

Remove the back cover and insert the SIM card.

Do not bend or twist the back cover excessively

Doing so may damage the cover.

 2. Insert the battery and replace the back cover.



2. Press <Options> → Send via → Bluetooth



Settings → Sound profiles



To switch to another profiles, select it from the list.

- Changing the ringtone 1. Select a profile and press < Edit>
- 2. Press Voice call ringtone.
- 3. Select a ringtone and press the Confirm button.

Changing the message alert tone

1. Select a profile and press < Edit>

- 2. Press Message alert tone.
- 3. Select a tone and press the Confirm button.

Adjusting the volume of the ringtone

- 1. Select a profile and press < Edit>
- 2. Press Volume → Call alert.
- 3. Adjust the volume and press <Save>

Adjusting the volume of voice during a call

While a call is in progress, press the Navigation button up or

Backing up data

tasks to the memory card. To use this feature, a memory card must be installed. $<\!\!\text{Menu}\!\!> \to \text{Settings} \to \text{Backup manager}$

Back up data, such as contacts, messages, calendar, and



Backing up data

Restoring data

Press Backup, select items to back up and press <Backup>

Press Restore, select items to restore and press < Restore >

Making fake calls



 \frown <Menu> \rightarrow Settings \rightarrow Call \rightarrow Fake call

Activating the fake call feature

- 1. Set Fake call hot key to On.
- 2. Change caller name or number (if necessary).

Making fake calls

Press and hold the Navigation button down.

Using widgets

 
Use widgets to perform specific tasks for applications such as contacts, calendar, memo, and many more

Launching widgets From the Home screen, scroll left or right to see another

panel and select a widget.

Organising widgets

- 1. From the Home screen, select \strace{1}{2} at the top left corner of
- 2. Select a widget for each panel and press <Back>



Available widgets might vary, depending on the region or service provider

Using the SOS message feature

 $<\!\!\text{Menu}\!\!> \to \text{Messages} \to \text{Settings} \to$

Send SOS messages to family or friends in an emergency.

SOS messages

Activating the SOS message feature

- 1. Press Sending options \rightarrow Sending SOS to On. 2. Enter recipient and press the Confirm button.
- Set the number of times to repeat the message
- Press <Back> → <Yes>

Sending SOS messages

- 1. With the keypad locked, press [] four times to send an SOS message to preset number
- 2. To exit SOS mode, press [].



Safety information



This product meets applicable national SAR limits of 2.0 W/kg. The specific maximum SAR values can be found in the SAR information section of this manual.

When carrying the product or using it while worn on your body, maintain a distance of 1.5 cm from the body to ensure compliance with RF exposure requirements.

- SAMSUNG and the SAMSUNG logo are registered trademarks
- Bluetooth® is a registered trademark of the Bluetooth SIG.
- All other trademarks and copyrights are the property of their respective owners.

This safety information contains content for mobile devices Some content may be not applicable to your device. To prevent injury to yourself and others or damage to you evice, read the safety information about your device before using the device

/ Warning

Failure to comply with safety warnings and regulations can cause serious injury or death

Do not use damaged power cords or plugs, or loose electrical

Unsecured connections can cause electric shock or fire.

Do not touch the power cord with wet hands or disconnect the charger by pulling the cord

Do not bend or damage the power cord Doing so may cause electric shock or fire.

Do not use your device while it is charging or touch your device with wet hands

Doing so may cause electric shock

Do not short-circuit the charger or the device Doing so may cause electric shock or fire, or the battery may malfunction or explode.

Do not use your device outdoor during a thunderstorm Doing so may result in electric shock or device malfunction

Use manufacturer-approved batteries, chargers, accessories, and supplies

- Using generic batteries or chargers may shorten the life of your device e the device to malfunction. They may also cause a fire of
- cause the battery to explode.

 Use only Samsung-approved battery and charger specifically designed for your device. Incompatible battery and charger can cause serious injuries or damage to your device.
- Samsung cannot be responsible for the user's safety when using accessories or supplies that are not approved by Samsung.

Do not drop or cause an impact to the charger or the device

- Handle and dispose of the device and charger with care Never dispose of the battery or device in a fire. Never place the battery or device on or in heating devices, such as microwave ovens stoves, or radiators. The device may explode when overheated. Follow all local regulations when disposing of used battery or device.
- Never crush or puncture the device.
- Avoid exposing the device to high external pressure, which can lead to an internal short circuit and overheating.

Protect the device, battery and charger from damage Avoid exposing your device and battery to very cold or very hot temperatures.

- Extreme temperatures can damage the device and reduce the charging capacity and life of your device and battery.
- Prevent the battery from coming into contact with metal objects, as this can create a connection between the + and - terminals of your battery and lead to temporary or permanent battery damage Never use a damaged charger or battery.

Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers The battery may leak.

Your device may overheat and cause a fire

Do not use or store your device in areas with high concentrations of dust or airborne materials

Dust or foreign materials can cause your device to malfunction and may result in fire or electric shock

Do not bite or suck the device or the battery

- Doing so may damage the device or result in an explosion or fire. Children or animals can choke on small parts. If children use the device, make sure that they use the device.

Caution

Failure to comply with safety cautions and regulations can cause injury or property damage

Do not insert the device or supplied accessories into the

Do not handle a damaged or leaking Lithium Ion (Li-Ion)

For safe disposal of your Li-Ion battery, contact your nearest authorised

Doing so may cause suffocation or serious iniuries.

Do not use your device near other electronic devices Most electronic devices use radio frequency signals. Your device may

- interfere with other electronic devices.
- Using an LTE data connection may cause interference with other devices, such as audio equipment and telephones. Do not use your device in a hospital, on an aircraft, or in an

automotive equipment that can be interfered with by radio frequency

- Avoid using your device within a 15 cm range of a pacemaker, if possible, as your device can interfere with the pacemaker.
- To minimise possible interference with a pacemaker, use your device only on the side of your body that is opposite the pacemak
- If you use medical equipment, contact the equipment manufacturer before using your device to determine whether or not the equipment will be affected by radio frequencies emitted by the device. On an aircraft, using electronic devices can interfere with the aircraft's
- of all allicals, surging electronic devices call miletter with the allicals electronic navigational instruments. Make sure the device is turned off during takeoff and landing. After takeoff, you can use the device in flight mode if allowed by aircraft personnel.

interference from your device. Contact the manufacturer for more

Do not expose the device to heavy smoke or fumes Doing so may damage the outside of the device or cause it to malfunction.

· Electronic devices in your car may malfunction, due to radio

If you use a hearing aid, contact the manufacturer for formation about radio interference

The radio frequency emitted by your device may interfere with some hearing aids. Before using your device, contact the manufacturer to determine whether or not your hearing aid will be affected by radio

Do not use your device near devices or apparatuses that emit radio frequencies, such as sound systems or radio Radio frequencies may cause your device to malfunction.

Turn off the device in potentially explosive environments

- Turn off your device in potentially explosive environments instead of removing the battery.
- · Always comply with regulations, instructions and signs in potentially explosive environments.
- Do not use your device at refuelling points (petrol stations), near fuels or chemicals, or in blasting areas.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories
- If you notice strange smells or sounds coming from

your device or the battery, or if you see smoke or liquids leaking from the device or battery, stop using the device immediately and take it to a Samsung Service Centre Failure to do so may result in fire or explosion

· Leaving batteries unused over time may reduce their lifespan and

Follow all instructions in this manual to ensure the longest lifespar

performance. It may also cause the batteries to malfunction of

of your device and battery. Damages or poor performance by failure to follow warnings and instructions can void your manufacturer's warranty.

explode, or cause a fire.

Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle While driving, safely operating the vehicle is your first responsibility. Never use your mobile device while driving, if it is prohibited by law. For your safety and the safety of others, use your common sense and

remember the following tips: Get to know your device and its convenience features, such as speed dial and redial. These features help you reduce the time needed to place or receive calls on your mobile device.
Position your device within easy reach. Make sure you can access

- your wireless device without taking your eyes off the road. If you
- receive an incoming call at an inconvenient time, let your voice answer it for you. Suspend calls in heavy traffic or hazardous weather conditions.
- Rain, sleet, snow, ice, and heavy traffic can be hazardous. Do not take notes or look up phone numbers. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility of driving safely. Dial sensibly and assess the traffic. Place calls when you are not
- moving or before pulling into traffic. Try to plan calls when your call will be stationary. Do not engage in stressful or emotional conversations that may be distracting. Make the person you are talking to aware that you are driving and suspend conversations that could potentially divert your

attention from the road. Care and use your mobile device properly

Keep your device dry

- · Humidity and liquids may damage the parts or electronic circuits in vour device
- Do not turn on your device if it is wet. If your device is already on, turn it off and remove the battery immediately (if the device will not turn off or you cannot remove the battery, leave it as-is). Then, dry
- the device with a towel and take it to a service centre Liquids will change the colour of the label that indicates water damage inside the device. Water damage to your device can void your manufacturer's warranty.

Store your device only on flat surfaces

recommended to use your device at temperatures from 5 °C Do not store your device in very hot areas such as inside a car in the summertime. Doing so may cause the screen to malfunction, result in

Do not store your device in very hot or very cold areas. It is

- damage to the device, or cause the battery to explode. Do not expose your device to direct sunlight for extended periods of time (on the dashboard of a car, for example).
- Store the battery at temperatures from 0 °C to 45 °C Do not store your device with metal objects, such as coins, keys, and necklaces
- r device may be scratched or may malfunction · If the battery terminals come into contact with metal objects, this may

Do not store your device near magnetic fields Your device may malfunction or the battery may discharge from exposure to magnetic fields.

- Magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic field: Do not use your device or applications for a while if the
- device is overheated Prolonged exposure of your skin to an overheated device may cause low temperature burn symptoms, such as red spots and pigmentatio Do not use your device with the back cover removed

The battery may fall out of the device, which may result in damage or If your device has a camera flash or light, do not use it close

to the eyes of people or pets Using a flash close to the eyes may cause temporary loss of vision or

Use caution when exposed to flashing lights

- While using your device, leave some lights on in the room and do not hold the screen too close to your eyes.
 Seizures or blackouts can occur when you are exposed to flashing lights while watching videos or playing Flash-based games for extended periods. If you feel any discomfort, stop using the device
- immediately.
- If anyone related to you has experienced seizures or blackouts while using a similar device, consult a physician before using the device. · If you feel discomfort, such as a muscle spasm, or disoriented, stop

ing the device immediately and consult a physician

To prevent eye strain, take frequent breaks while using the device Reduce the risk of repetitive motion injuries When you repetitively perform actions, such as pressing keys, drawing characters on a touch screen with your fingers, or playing games, you may experience occasional discomfort in your hands, neck, shoulders, or other parts of your body. When using your device for extended periods, hold the device with a relaxed grip, press the keys lightly, and take frequent breaks. If you continue to have discomford during or after such use, stop using the device and consult a physician.

Protect your hearing and ears when using a headset

nearing damage



- · Excessive exposure to loud sounds can caus
- · Exposure to loud sounds while walking may distract your attention and cause an accident.

 Always turn the volume down before plugging the earphones into an audio source and use only the
- minimum volume setting necessary to hear your conversation or music. In dry environments, static electricity can build up in the headset. Avoid using headsets in dry environments or touch a metal object to discharge

Specific Absorption Rate (SAR) certification information

THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR

Your mobile device is a radio transmitter and receiver. It is designed

electromagnetic fields) recommended by international guidelines. The guidelines were developed by an independent scientific organisation (ICNIRP) and include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines use a unit of measurement known

as the Specific Absorption Rate, or SAR. The SAR limit for mobile

Tests for SAR are conducted using standard operating positions with

not to exceed the limits for exposure to radio waves (radio free

static electricity before connecting a headset to the Do not use a headset while driving or riding. Doing so may distract your attention and cause an accident, or may be illegal depending on your region.

Use caution when using the device while walking or moving · Always be aware of your surroundings to avoid injury to yourself or

- · Make sure the headset cable does not become entangled in you arms or on nearby objects Do not carry your device in your back pockets or around
- You could be injured or damage the device if you fall. Do not paint or put stickers on your device
- Paint and s tickers can clog moving parts and prevent prope If you are allergic to paint or metal parts of the device, you may

Do not use the device if the screen is cracked or broken Broken glass or acrylic could cause injury to your hands and face. Take the device to a Samsung Service Centre to have it repaired.

- vehicle are securely mounted. Avoid placing your device and accessories near or in an airbag deployment area. Improperly installed wireless equipment can cause serious injury when airbags inflate rapidly.

Do not drop your device or cause impacts to your device

- Avoid charging your device for more than a week, as overcharging may shorten battery life.
- before use
- Your device may be damaged or may malfunction

Ensure maximum battery and charger life

- Over time, unused device will discharge and must be recharged
- Disconnect the charger from power sources when not in use · Use the battery only for their intended purposes

- Your device may wear out over time. Some parts and repairs are covered by the warranty within the validity period, but damages or deterioration caused by using unapproved accessories are not. When using the device, mind the following
- Hold the device upright, as you would with a traditional phone
- Speak directly into the microphone. Do not cover the antenna area with your hands or other objects. This
 may cause connectivity problems or drain the battery. Internal antenna-

- Do not disassemble, modify, or repair your device
- Any changes or modifications to your device can void your manufacturer's warranty. If your device needs servicing, take your device to a Samsung Service Centre. Do not disassemble or puncture the battery, as this can cause
- explosion or fire. Turn off the device before removing the battery. If you remove the battery with the device turned on, it may cause the device to

When cleaning your device, mind the following

- Wipe your device or charger with a towel or an era
- Clean the battery terminals with a cotton ball or a towel. Do not use chemicals or detergents. Doing so may discolour or

corrode the outside the device or may result in electric shock or fire

Declaration of Conformity

SAMSUNG ELECTRONICS

SAMSUNG

For the following Product : GSM BT Mobile Phone Model(s): GT-S3330

Product details

C € 0168

Declaration & Applicable standards We hereby declare, that the product above is in

> EN 50360 : 2001 / A1 : 2012 EN 62209-1 : 2006 EN 62479 : 2010 EN 62209-2 : 2010 EN 62311 : 2008

EN 62311 : 2008
EN 301 489-01 V1.9.2 (09-2011)
EN 301 489-17 V2.2.1 (09-2012)
EN 301 489-07 V1.3.1 (11-2005)
EN 301 511 V9.0.2 (03-2003)
EN 300 328 V1.7.1 (10-2006)

and the Directive (2011/65/EU) on the restriction of the use of certain hazardous substances in electrical and electronic equipment. The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of t

nts of the R&TTE Directive (1999/5/EC) by application of

following Notified Body(ies):

Samsung Electronics Euro QA Lab. Blackbushe Business Park, Saxony Way,

ofin Joong-Hoon Choi / Lab. Manage (Name and signature of authorised person

Do not use the device for anything other than its intended

Allowing unqualified personnel to service your device may result in damage to your device and will void your manufacturer's warranty. Handle SIM cards, memory cards, or cables with care

Allow only qualified personnel to service your device

- Do not remove a card while the device is transferring or accessing information, as this could result in loss of data and/or damage to the card or device. · Protect cards from strong shocks, static electricity, and electrical
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth. Inserting a card or connecting a cable by force or improperly result in damage to the multipurpose jack or other parts of the
- Emergency calls from your device may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternative method of contacting emergency services
- Samsung is not responsible for the loss of any data

- In the event your device is lost or stolen, change the passwords on your accounts to protect your personal information.

n, password, or PIN.

Do not distribute copyright-protected material

Malware and viruses

To protect your device from malware and viruses, follow usage tips. Failure to do so may result in damages o loss of data that may not be covered by the warranty service Do not download unknown applications

- Do not visit untrusted websites.
- · If the device behaves abnormally, run an antivirus program to check
- downloaded applications and files. Install antivirus programs on your computer and run them regularly to check for infection.

Do not distribute copyright-protected material without the permission of the content owners. Doing this may violate copyright laws. The manufacturer is not liable for any legal issues caused by the user's illegal use of copyrighted material

- Delete suspicious messages or email from unknown senders
- Run an antivirus program on your device before you launch newly

· Do not edit registry settings or modify the device's operating system

the device transmitting at its highest certified power level in all tested frequency bands. The highest SAR values under the ICNIRP guidelines

EXPOSURE TO RADIO WAVES

devices is 2.0 W/kg.

Head SAR 0.832 W/kg Body-worn SAR 1.090 W/kg

During use, the actual SAR values for this device are usually well

below the values stated above. This is because, for purposes of system

efficiency and to minimise interference on the network, the operating

power of your mobile device is automatically decreased when full r

Maximum SAR for this model and conditions under which it was recorded

ded for the call. The lower the power output of the device, the A body-worn SAR test has been performed on this device at a separation distance of 1.5 cm. To meet RF exposure guidelines during

Organisations such as the World Health Organisation and the US Food and Drug Administration have suggested that if people are concerned

experience itching, eczema, or swelling of the skin. When this happens, stop using the device and consult your physician.

- Install mobile devices and equipment with caution Ensure that any mobile devices or related equipment installed in you

Correct disposal of this product

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with

other household waste To prevent possible harm to the environment or human from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources Abusehold users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for

Correct disposal of batteries in this product

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

· If bent or deformed, your device may be damaged or parts may

health from uncontrolled waste disposal, please separate these items

This EEE is compliant with RoHS

(Applicable in countries with separate collection systems)

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

Representative in the EU

Yateley, Hampshire, GU46 6GG, UK (Place and date of issue)

This is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product

Avoid disturbing others when using the device in public

- When inserting a card or connecting a cable to your device, make sure that the card is inserted or the cable is connected to the prope

Ensure access to emergency services

Protect your personal data and prevent leakage or misuse of sensitive information

While using your device, be sure to back up important data

 When disposing of your device, back up all data and then reset your device to prevent misuse of your personal information.
 Carefully read the permissions screen when downloading applications. Be particularly cautious with applications that have

access to many functions or to a significant amount of your personal

- · Check your accounts regularly for unapproved or suspicious use.lf you find any sign of misuse of your personal information, contact your service provider to delete or change your account information.

Avoid using applications from unknown sources and lock your device

- Set a password and change it regularly. · Deactivate wireless features, such as Bluetooth, when not in use.
- body-worn operation, the device must be positioned at least 1.5 cm

and want to reduce their exposure, they could use a hands-free accessory to keep the wireless device away from the head and body during use, or reduce the amount of time spent using the dev For more information, visit www.samsung.com/sar and search for you device with the model number

(Waste Electrical & Electronic Equipment) (Applicable in countries with separate collection systems)