

- * Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
- * Depending on your country, your phone and accessories may appear different from the illustrations in this guide.

SAMSUNG ELECTRONICS



World Wide Web
<http://www.samsungmobile.com>

Printed in Korea
Code No.:GH68-08532A
English. 12/2005. Rev. 1.1



SGH-X490 User's Guide

 zones

What will you start?



 Mobile . . .



Important safety precautions



Failure to comply with the following precautions may be dangerous or illegal.

Drive safely at all times

Do not use a hand-held phone while driving. Park the vehicle first.

Switch off the phone when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.

Be aware of special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.


Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency calls

Key in the emergency number for your present location, then press .

Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

Accessories and batteries

Use only Samsung-approved accessories and batteries. Use of any unauthorised accessories could damage your phone and may be dangerous.



- The phone could explode if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions.

Qualified service

Only qualified service personnel may repair your phone.

For more detailed safety information, see "Health and safety information" on page 58.



About this Guide

This User's Guide provides you with condensed information about how to use your phone. To quickly learn the basics for your phone, please refer to "Get started" and "Step outside of the phone."

In this guide, the following instruction icons appear:

- Indicates that you need to pay careful attention to the subsequent information regarding safety or phone features.
- Indicates that you can get more information on the referenced page.
- Indicates that you need to press the Navigation keys to scroll to the specified option and then select it.
- [] Indicates a key on the phone. For example, [OK].
- < > Indicates a soft key, whose function is displayed on the phone screen. For example, <Menu>.

- **Simple, compact design with Intenna**
Samsung's powerful intenna technology allows the best call quality without an annoying external antenna.

Special features of your phone

- **Tri-band operation**
Use your phone in worldwide GSM networks, in any of 900, 1800, and 1900 bands.



- **Web browser**
Access the wireless web to get up-to-the-minute information and a wide variety of media content.



- **Contacts**
Store home, office, or cellular phone numbers for your contacts.

- **Multimedia Message Service (MMS)**
Send and receive MMS messages with a combination of text, images, and audio.



- **Java**
Enjoy Java™-based embedded games and download new games.



- **Calendar**
Write memos to keep track of your schedule.



- **Voice recorder**
Record memos or sounds.



- **Calculator**
Perform basic calculations.



- **Timer and stopwatch**
Count down to a specific event or measure the time it takes to do your exercise or work.



- **Alarm**
Use your phone as an alarm clock to wake you up in the morning or notify you of an impending event.

Contents

Unpack **6**

Make sure you have each item

Your phone **6**

Buttons, features, and locations

Get started **7**

First steps to operating your phone

Install and charge the phone 7

Power on or off 8

Keys and display 9

Access menu functions 11

Customise your phone 12

Make/Answer calls 13

Step outside of the phone **14**

Begin with your games, web, and other special features

Play games 14

Browse the web 14

Use Contacts 15

Send messages 16

View messages 17

Use Calendar 18

Enter text **19**

ABC, T9, Number, and Symbol modes

Call functions **21**

Advanced calling features

Menu functions **25**

All menu options listed

Solve problems **56**

Help and personal needs

Health and safety information **58**

Index **65**

Overview of menu functions

To access Menu mode, press <Menu> in Idle mode.

| | | | | | | | |
|------------------------|--------|-----------------------------------|--------|---------------------|--------|--------------------|--------|
| 1 Call register | ▶ p.25 | 3 Applications (continued) | ▶ p.29 | 7 Profiles | ▶ p.44 | 9 Settings | ▶ p.49 |
| 1 Missed calls | ▶ p.25 | 6 Timer | ▶ p.33 | 1 Incoming calls | ▶ p.44 | 1 Clock | ▶ p.49 |
| 2 Received calls | ▶ p.26 | 7 Stopwatch | ▶ p.33 | 2 Messages | ▶ p.45 | 2 Display | ▶ p.49 |
| 3 Dialed calls | ▶ p.26 | 8 SIM AT* | ▶ p.33 | 3 Power on/off | ▶ p.45 | 3 Greeting message | ▶ p.50 |
| 4 Delete all | ▶ p.26 | 4 Messages | ▶ p.33 | 4 Connection tone | ▶ p.45 | 4 Language | ▶ p.50 |
| 5 Call time | ▶ p.26 | 1 Short messages | ▶ p.33 | 5 Key tone | ▶ p.45 | 5 Security | ▶ p.50 |
| 6 Call costs* | ▶ p.27 | 2 Multimedia messages | ▶ p.35 | 6 Minute minder | ▶ p.45 | 6 Internet | ▶ p.52 |
| 2 Multimedia | ▶ p.27 | 3 Push messages | ▶ p.38 | 7 Quiet mode | ▶ p.45 | 7 Extra settings | ▶ p.53 |
| 1 Sounds | ▶ p.27 | 4 Preset messages | ▶ p.38 | 8 Alerts on call | ▶ p.45 | 8 Reset settings | ▶ p.54 |
| 2 Images | ▶ p.28 | 5 Voice mail | ▶ p.38 | 8 Contacts | ▶ p.46 | 9 Network services | ▶ p.54 |
| 3 Games | ▶ p.28 | 6 Broadcast | ▶ p.38 | 1 Find name | ▶ p.46 | 0 Side key | ▶ p.56 |
| 4 Delete all | ▶ p.29 | 7 Settings | ▶ p.39 | 2 Add entry | ▶ p.46 | | |
| 5 Memory status | ▶ p.29 | 8 Memory status | ▶ p.41 | 3 Speed-dial list | ▶ p.47 | | |
| 3 Applications | ▶ p.29 | 5 t-zones | ▶ p.41 | 4 Copy all to phone | ▶ p.48 | | |
| 1 Alarm | ▶ p.29 | 6 Calendar | ▶ p.42 | 5 Delete all | ▶ p.48 | | |
| 2 Calculator | ▶ p.30 | | | 6 Group setting | ▶ p.48 | | |
| 3 To do list | ▶ p.30 | | | 7 Own number | ▶ p.48 | | |
| 4 Voice recorder | ▶ p.31 | | | 8 Memory status | ▶ p.48 | | |
| 5 Conversion | ▶ p.32 | | | 9 SDN* | ▶ p.49 | | |

* Shows only if supported by your SIM card.

Unpack

Make sure you have each item



Phone



Battery



Travel Adapter



User's Guide

You can obtain various accessories from your local Samsung dealer.

- The items supplied with your phone and the accessories at your Samsung dealer may vary, depending on your country or service provider.

Your phone

Buttons, features, and locations



Get started

First steps to operating your phone

SIM card information

When you subscribe to a cellular network, you receive a plug-in SIM (Subscriber Identity Module) card loaded with your subscription details, such as your PIN, and available optional services.


Install and charge the phone

1 Remove the battery.



If the phone is already on, first turn it off by holding [Power].

2 Insert the SIM card.

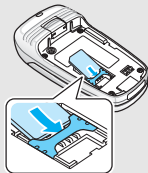


Make sure that the gold-coloured contacts on the card face down into the phone.

3 Install the battery.




4 Plug the travel adapter into the phone.

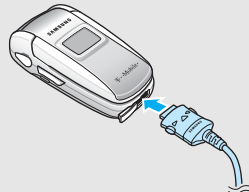

5 Plug the adapter into a standard AC wall outlet.


6 When the phone is completely charged (the battery icon becomes still), unplug the adapter from the power outlet.

- 7 Remove the adapter from the phone.

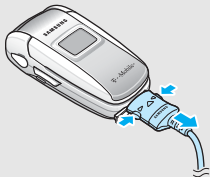

Low battery indicator

When the battery is low:


- a warning tone sounds,
- the battery low message displays, and
- the empty battery icon  blinks.

If the battery level becomes too low, the phone automatically turns off. Recharge your battery.


Power on or off

Power on

Do not turn on the phone when mobile phone use is prohibited.

1. Open the phone.
2. Press and hold [] to turn on the phone.
3. If necessary, enter the PIN and press <OK>.

Power off

1. Open the phone.
2. Press and hold [].

Keys and display

Keys



Perform the function indicated on the bottom line of the display.



In Idle mode, access the following menus directly.

- Up: **Multimedia**
- Down: **Find name**
- Left: **Create** in **Short messages**
- Right: **Calendar**

In Menu mode, scroll through menu options.



In Menu mode, select the highlighted menu option or confirm input.



Make or answer a call.

In Idle mode, retrieve the recent numbers dialed, missed, or received.

In Menu mode, select the highlighted menu option or confirm input.



Delete characters from the display.

In Menu mode, return to the previous menu level.

In Idle mode, press and hold to create an event. ► p. 18



End a call.

Press and hold to switch the phone on and off.

In Menu mode, cancel input and return the phone to Idle mode.



Enter numbers, letters, and some special characters.

In Idle mode, press and hold [1] to access your voicemail. Press and hold [0] to enter an international call prefix.



Enter special characters.

In Idle mode, press and hold [#] to activate or deactivate Quiet mode. Press and hold [*] to insert a pause between numbers.




Adjust the phone volume.

In Idle mode, with the phone open, adjust the keypad tone volume. With the phone closed, press and hold to activate the external display.

Display

Layout

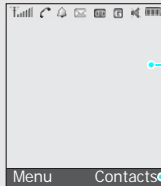
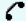










Icons
display various icons.

Text and graphics
display messages,
instructions, and
information you enter.

**Soft key function
indicators**
show the current
functions assigned to the
soft keys.


Icons

-  Received signal strength
-  Call in progress
-  Out of your service area; you cannot make or receive calls
-  GPRS network active
-  Alarm set
-  New message
-  New voicemail
-  Call ringer set to vibrate
▶ p. 44
-  Quiet mode active ▶ p. 45
-  Battery power level

Access menu functions

Use the soft keys

The roles of the soft keys vary depending on the function you are using. The bottom line of the display indicates their current role.

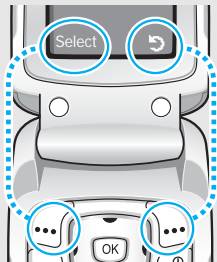

Press the left soft key to select the highlighted option.

Press the right soft key to return to the previous menu level.

Select an option

1. Press the appropriate soft key.
2. Press the Navigation keys to move to the next or previous option.
3. Press **<Select>** or **[OK]** to confirm the function displayed or option highlighted.
4. To exit, choose either of the following methods:
 - Press **<↩>** or **[C]** to move up one level.
 - Press **[↶[®]]** to return to Idle mode.

Use shortcuts

Press the number key corresponding to the option you want.

Customise your phone

Display language

1. In Idle mode, press <Menu> and select **Settings** → **Language** → **Text language**.
2. Select a language.

Call ringer melody

1. In Idle mode, press <Menu> and select **Profiles** → **Incoming calls** → **Default melodies** or **Sounds**.
2. Select a ringtone.

Idle mode Wallpaper

You can set wallpaper for the idle screen on the main display.

1. In Idle mode, press <Menu> and select **Settings** → **Display** → **Wallpaper** → **Default wallpapers** or **Images**.
2. Select an image.

Menu mode Skin colour

You can change the colour for the display components, such as title bars and highlight bars.

1. In Idle mode, press <Menu> and select **Settings** → **Display** → **Colour theme**.
2. Select a colour pattern.

Quiet mode

You can switch the phone to Quiet mode to avoid disturbing other people.

Press and hold [#] in Idle mode.



Phone lock

You can protect the phone against unauthorised use with a phone password. The phone will require the password on power-up.



1. In Idle mode, press <Menu> and select **Settings** → **Security** → **Change password**.
2. Enter the default password, **00000000** and press <OK>.
3. Enter a new 4- to 8-digit password and press <OK>.
4. Enter the new password again and press <OK>.
5. Select **Phone lock**.
6. Select **Enable**.
7. Enter the password and press <OK>.

Make/Answer calls

Make a call

1. Enter an area code and phone number.
2. Press [].
3. To end the call, press [].

Answer a call

1. When the phone is ringing, press [].
2. To end the call, press [].

Adjust the volume during a call

Press [ / ].

Step outside of the phone

Begin with your games, web, and other special features

Play games

Launch a game

1. In Idle mode, press <Menu> and select **Multimedia** → **Games**.
2. Select a game.

Play SnowBallFight

1. After loading a game, press any key twice.
2. Press [#].
3. Select **New Game**.

Play BubbleSmile

After loading a game, select **START GAME** → the game mode you want.

Browse the web

Using a built-in web browser, you can get easy access to t-zones to receive a variety of up-to-date services and information and to enjoy downloads of web content.

Launch the web browser

In Idle mode, press <Menu> and select **t-zones**. ▶ p. 41

Navigate the web

- To scroll through browser items, press [Up] or [Down].
- To select an item, press [OK] or <Select>.
- To return to the previous page, press <↶> or [C].
- To return to the home page, press and hold [C].
- To access options, press [#].

Use Contacts

Add an entry

To the phone's memory:

1. In Idle mode, enter a phone number and press <**Save**>.
2. Select **Phone** → a number type.
3. Enter a name and press <**OK**>.
4. To save additional information, press [Left] or [Right] to scroll to the field you want.
5. Specify contact information: Mobile/Home/Office/Fax/Other/E-Mail/Note/Group/Graphic/Alert.
6. Press <**OK**> or <**Select**>.

To the SIM card:

1. In Idle mode, enter a phone number and press <**Save**>.
2. Select **SIM**.
3. Enter a name and press <**OK**>.

Find an entry

1. In Idle mode, press [Down].
2. Enter the first few letters of the name you want.
3. Scroll to the name you want.
4. For entries saved on the SIM card, press [↵] to dial.
For entries saved in the phone's memory, scroll to a number and press [↵] to dial.

Send messages

Send a text message (SMS)

1. In Idle mode, press [Left].
2. Enter the message text and press [OK].
3. Enter a destination number and press <OK>, or press <Contacts> to retrieve one from Contacts.
4. Press <Send> to send the message.

Send a multimedia message (MMS)

1. In Idle mode, press <Menu> and select **Messages** → **Multimedia messages** → **Create**.
2. Press <Add> on the **Subject** line.
3. Enter the message subject and press <OK>.

4. Press <Add> on the **Picture** line and add an image.
5. Press <Add> on the **Sound** line and add a sound.
6. Press <Add> on the **Message** line and enter the message text.
7. Press <Opt.> and select **Done**.
8. When you have finished, press <Opt.> and select **Send**.
9. Select **Phone number** or **E-mail address** and enter a destination and press <OK>. Or, select **Recent log** or **Contacts** and select a destination, and press <Select>.
10. Press <Send> to send the message.

View messages

View a text message

When a notification appears:

1. Press <**View**>.
2. Select the message from the Inbox.

From the Inbox:

1. In Idle mode, press <**Menu**> and select **Messages** → **Short messages** → **Inbox**.
2. Select a message.

View a multimedia message

When a notification appears:

1. Press <**View**>.
2. Select the message from the Inbox.

From the Inbox:

1. In Idle mode, press <**Menu**> and select **Messages** → **Multimedia messages** → **Inbox**.
2. Select a message.

Access a voicemail

1. In Idle mode, press and hold [**1**].
2. Follow the instructions from the system.

Use Calendar

Create a new memo

1. In Idle mode, press and hold [C].
2. Enter a memo about the event and press <OK>.
3. Select an event type.
4. Select a date from the calendar.
5. For **Call**, enter a phone number you need to dial and press <OK>.
For **Anniversary**, skip to step 7.
6. Enter the time for the event and press <OK>.
7. Press <Yes> to set an alarm.
8. Enter the time for the alarm to ring and press <OK>.
9. Select an alarm tone.

Access your schedule

1. In Idle mode, press [Right].
2. Select a date.
3. Press [Left] or [Right] to access the other events scheduled for the selected day.

Enter text

ABC, T9, Number, and Symbol modes

You can enter text for some features such as Messages, Contacts, or Calendar, using ABC mode, T9 mode, Number mode, and Symbol mode.

Changing the text input mode

- Press the right soft key and select the input mode you want.
- Press and hold the right soft key to quickly switch between T9 mode and ABC mode.
- Press and hold [#] to quickly switch to Number mode.
- Press and hold [*] to quickly switch to Symbol mode.

Using ABC mode

Press the appropriate key until the character you want appears on the screen.

| Key | Characters in order displayed | |
|-----|-------------------------------|------------|
| | Upper case | Lower case |
| 1 | . @ , - ? ! ' : 1 | |
| 2 | A B C 2 | a b c 2 |
| 3 | D E F 3 | d e f 3 |
| 4 | G H I 4 | g h i 4 |
| 5 | J K L 5 | j k l 5 |
| 6 | M N O 6 | m n o 6 |
| 7 | P Q R S 7 | p q r s 7 |
| 8 | T U V 8 | t u v 8 |
| 9 | W X Y Z 9 | w x y z 9 |
| 0 | 0 | |

Tips for using ABC mode

- To enter the same letter twice or to enter a different letter on the same key, wait for the cursor to move to the right automatically or press [Right]. Then, enter the next letter.

- Press [#] to insert a space.
- Press [*] to change case. Lower case (No indicator), Initial capital (↑), and Capital lock (⬆) are available.
- Press the Navigation keys to move the cursor.
- Press [C] to delete characters one by one. Press and hold [C] to clear the display.

Using T9 mode

T9 is a predictive text input mode that allows you to key in any character using single keystrokes.

Entering a word in T9 mode

1. Press [2] to [9] to start entering a word. Press each key once for each letter.
For example, press [4], [3], [5], [5], and [6] to enter *hello* in T9 mode.
T9 predicts the word that you are typing, and it may change with each key that you press.
2. Enter the whole word before editing or deleting characters.

3. When the word displays correctly, go to step 4. Otherwise, press [0] to display alternative word choices for the keys that you have pressed. For example, *of* and *me* use [6] and [3].
4. Press [#] to insert a space and enter the next word.

Tips for using T9 mode

- Press [1] to enter periods or apostrophes automatically.
- Press [#] to insert a space.
- Press [*] to change case. Lower case (No indicator), Initial capital (↑), and Capital lock (⬆) are available.
- Press the Navigation keys to move the cursor.
- Press [C] to delete characters one by one. Press and hold [C] to clear the display.

Adding a new word to the T9 dictionary

This feature may not be available for some languages.

1. Enter the word that you want to add.

2. Press **[O]** to display alternative words for your key presses. When there are no more alternative words, **Spell** appears on the bottom line.
3. Press **<Spell>**.
4. Enter the word you want using ABC mode and press **<OK>**.

Using Number mode

Number mode enables you to enter numbers.
Press the keys corresponding to the digits you want.

Using Symbol mode

Symbol mode enables you to insert symbols.

| To | Press |
|---------------------------|-------------------------------|
| display more symbols | [Up] or [Down]. |
| select a symbol | the corresponding number key. |
| clear the entered symbols | [C] . |
| insert the symbols | <OK> . |

Call functions

Advanced calling features

Making a call



1. In Idle mode, enter the area code and phone number.
2. Press **[↵]**.

- Press **[C]** to clear the last digit or press and hold **[C]** to clear the whole display. You can move the cursor to edit an incorrect digit.
- Press and hold **[*]** to enter a pause between numbers.

Making an international call

1. In Idle mode, press and hold **[O]**. The **+** character appears.
2. Enter the country code, area code, and phone number, then press **[↵]**.

Redialling recent numbers


1. In Idle mode, press [>] to display the list of recent numbers.
2. Scroll to the number you want and press [].

Making a call from Contacts


Once you have stored a number in Contacts, you can dial the number by selecting it from Contacts. ▶ p. 46

You can also use the speed dial feature to assign your most frequently called numbers to specific number keys. ▶ p. 47

You can quickly dial a number from the SIM card using its location number assigned when stored.

1. In Idle mode, enter a location number and press [#].
2. Press [Up] or [Down] to scroll through other numbers.
3. Press <Dial> or [>] to dial the number you want.

Ending a call


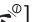
Close the phone or press [].

Answering a call

When you receive an incoming call, the phone rings and displays the incoming call image.


Press [>] or <Accept> to answer the call.

Tips for answering a call

- When **Anykey answer** is active, you can press any key to answer a call, except for <Reject>, [], and [▲/▼]. ▶ p. 54
- When **Active folder** is active, you can simply open the phone. ▶ p. 54
- Press <Reject> or [] to reject a call.
- Press and hold [▲/▼] to reject a call or mute the ringer, depending on the **Side key** setting. ▶ p. 56

Viewing missed calls

If you have missed calls, the screen displays how many calls you have missed.

1. Press <**Missed**>.
2. If necessary, scroll through the missed calls.
3. Press [] to dial the number you want.

Using the headset

Use the headset to make or answer calls without holding the phone.



Connect the headset to the jack on the left side of the phone. The button on the headset work as listed below:



| To | Press |
|----------------------|----------------------------|
| redial the last call | and hold the button twice. |
| answer a call | and hold the button. |
| end a call | and hold the button. |

Options during a call

You can access a number of functions during a call.


Adjusting the volume during a call

Use [/] to adjust the earpiece volume during a call.

Press [] to increase the volume level and [] to decrease the volume level.

Making a second call

You can make another call if your network supports it.

1. Press <**Options**> and select **Hold** to put the call on hold.
2. Make the second call in the normal way.
3. Press <**Options**> and select **Swap** to switch between the calls.
4. Press <**Options**> and select **End held call** to end the call on hold.
5. To end the current call, press [].

Answering a second call

You can answer an incoming call while already on the phone, if your network supports it and you have activated the call waiting feature. ► p. 55

1. Press [] to answer the call. The first call is automatically put on hold.
2. Press <Options> and select **Swap** to switch between the calls.
3. Press <Options> and select **End held call** to end the call on hold.
4. To end the current call, press [].

Using the Speakerphone feature

Use the Speakerphone feature to talk and listen with the phone a short distance away.

Press <Spkr on> to activate the Speakerphone feature. Press <Normal> to switch back to the earpiece.

Using In-call options

Press <Options> to access the following options during a call:

- **Hold/Retrieve:** place the current call on hold, or retrieve the call.
- **Swap:** switch between the current call and a call on hold during a multi-party call.
- **Join:** set up a multi-party call by adding a caller on hold to a currently active call. You can include up to 5 people on a multi-party call.
- **Split:** have a private conversation with one multi-party call participant. The other participants can converse with each other. After the private conversation, select **Join** to return to the multi-party call.
- **Mute/Unmute:** switch off the phone's microphone so that the other person on the phone cannot hear you, or switch it back on.
- **New call:** place a new call.
- **Contacts:** access the Contacts list.

- **Message:** read an incoming message or send a new message.
- **Mute keys/Send keys:** switch the key tones on or off.

To communicate with answering machines or computerised telephone systems, **Send keys** must be selected.
- **Send DTMF:** send the DTMF (Dual tone multi-frequency) tones as a group. The DTMF tones are the tones used in phones for tone dialling, sounding when you press the number keys. This option is helpful for entering a password or an account number when you call an automated system, like a banking service.
- **End held call:** disconnect the call currently on hold.
- **SIM AT:** access additional services provided by your SIM card, such as news, weather forecast, sports, entertainment, and location services. This option is available if you use a SIM card supporting SIM Application Toolkit menus.

Menu functions

All menu options listed

Call register *(Menu 1)*


Use this menu to view the calls you have dialled, received, or missed, and the length of calls. You can also check the cost of your calls, if your SIM card supports this function.

To access this menu, press <**Menu**> in Idle mode and select **Call register**.

Missed calls *(Menu 1.1)*

This menu displays the most recently received calls that you did not answer.

Accessing a call record

1. Press [Up] or [Down] to scroll through the call list.
2. Press [**OK**] to view the details of a call, or press [] to dial a number.

Using call record options

While viewing call details, press <**Options**> to access the following options:

- **Call back:** dial the selected number.
- **Send message:** send an SMS or MMS message to the selected number.
- **Edit:** edit the number.
- **Delete:** delete the selected call record.
- **Delete all:** delete all records.

Received calls *(Menu 1.2)*

This menu displays the most recent calls you have received.

Dialled calls *(Menu 1.3)*

This menu displays the most recent calls you have dialled.

Delete all *(Menu 1.4)*

Use this menu to delete all of the records in each call type.

1. Press <**Select**> to select the call types to be cleared.
2. Press <**OK**>.
3. Press <**Yes**> to confirm the deletion.

Call time *(Menu 1.5)*

This menu displays the time log for calls made and received. The actual time invoiced will vary.

- **Last call time:** check the length of your last call.
- **Total sent:** check the total length of all the calls you have dialled.
- **Total received:** check the total length of all the calls you have received.
- **Reset timers:** reset the call timers. You need to enter the phone password.

The password is preset to **00000000**. You can change this password. ▶ p. 51

Call costs *(Menu 1.6)*

This network feature displays the cost of calls. This menu is available only if your SIM card supports this feature. Note that this is not intended to be used for billing purposes.

- **Last call cost:** check the cost of your last call.
- **Total cost:** check the total cost of all of your calls. If the total cost exceeds the maximum cost set in **Set max cost**, you must reset the counter before you can make another call.
- **Max cost:** check the maximum cost limit set in **Set max cost**.
- **Reset counters:** reset the cost counters.
- **Set max cost:** set the maximum cost authorised for your calls.
- **Price/Unit:** set the price per unit that is applied when the cost of your calls is calculated.

Multimedia *(Menu 2)*

The **Multimedia** menu allows you to access images, sounds, and games stored in the phone's memory. Furthermore, you can easily access the t-zones online portal for downloading new multimedia contents.

In Idle mode, press [Up] to quickly access this menu.

Sounds *(Menu 2.1)*

This menu displays sounds you have downloaded, received in messages, or imported from your computer.

Playing a sound clip

Scroll to a sound clip. The clip plays.

Using sound options

While playing a sound clip, press <**Options**> to access the following options:

- **Set as ringtone:** set the file as your ringtone or as a ringtone for a Contacts entry.
- **Rename:** change the file name.

Menu functions

- **Delete:** delete the file.
- **Properties:** access the file properties.

Downloading a sound clip

You can download sound clips from the specified web page of t-zones.

1. From a sound screen, select **t-music**.
2. Search for a sound clip and follow the onscreen instructions to download it.

Images *(Menu 2.2)*

This menu displays images you have downloaded, received in messages, or imported from your computer.

Viewing an image

1. Scroll to an image and press **<View>**.
2. Press [Left] or [Right] to access the other images.

Using image options

While viewing an image, press **<Options>** to access the following options:

- **Send:** send the file via MMS.

- **Set as wallpaper:** set the image as wallpaper for the idle screen.
- **Rename:** change the file name.
- **Delete:** delete the file.
- **Properties:** access the file properties.

Downloading an image

You can download images from the specified web page of t-zones.

1. From an image screen, select **More pictures**.
2. Search for an image and follow the onscreen instructions to download it.

Games *(Menu 2.3)*

Use this menu to play embedded games. You can also download and store Java applications.

Playing an embedded game

1. Select a game.
2. For **SnowBallFight**, press any key twice to go to the startup screen. Press [#] and select **New Game**.

For **BubbleSmile**, select **START GAME** → a game mode.

Using game options

Scroll to a game and press <**Options**> to access the following options:

- **Launch**: launch the selected game.
- **Delete**: delete the game.
- **Properties**: access the game properties.

Downloading a game

You can download games from the specified web page of t-zones.

1. From a game screen, select **t-games**.
2. Search for a game and follow the onscreen instructions to download it.

Delete all *(Menu 2.4)*

Use this menu to delete all media items in each media box.

Memory status *(Menu 2.5)*

You can access memory information for media items.

Applications *(Menu 3)*

Use this menu to set alarms and store tasks on the calendar. You can also use convenient features, such as voice recorder, calculator, converter, timer, and stopwatch.

Alarm *(Menu 3.1)*

Use this menu to set alarms. The alert type for a normal alarm corresponds to the call alert type settings. A wake-up alarm is not affected by your sound profiles.

Setting an alarm

1. Select the type of alarm.
2. Press <**Options**> and select **Alarm day**.
3. Press <**Select**> to select the days on which the alarm rings and press <**OK**>.

4. Enter the time for the alarm to ring and press **<OK>**.
5. Press **<Options>** and select **Alarm tone**.
6. Select an alarm tone.

Stopping an alarm

- For a non-wake-up alarm, press **<Confirm>**.
- For a wake-up alarm, press **<Confirm>**.
Press **<Snooze>** to cause it to sound again after 5 minutes. You can do this a maximum of 5 times.

Removing an alarm

1. Select an alarm you want to remove from the list.
2. Press **<Options>** and select **Remove alarm**.
3. Press **<Yes>**.

Setting the alarm to ring even if the phone is off

From the Alarm screen, select **Auto power** → **On**.

If the phone is off when it is time for the alarm to ring, the phone switches on and sounds the alarm.

Calculator (Menu 3.2)



Use this menu to perform basic arithmetic functions such as addition, subtraction, multiplication, and division.

1. Enter the first number.
Press [**✖**] to insert a decimal point.
2. Press [**#**] to access the math function you want.
3. Enter the second number.
4. Press **<=>** to view the result.
5. If necessary, repeat from step 2 to confirm the calculation.

To do list (Menu 3.3)

Use this menu to access tasks you have created on the calendar.

The following icons on the list indicate the task status:

-  Uncompleted task
-  Completed task






While viewing a task, press <**Options**> to access the following options:

- **Add**: add a new task. ▶ p. 43
- **Mark**: change the task status.
- **Edit**: edit the task content.
- **Move**: move the task to a different date.
- **Copy**: copy the task to a different date.
- **Delete**: delete the task.
- **Delete all**: delete all tasks.

Voice recorder (Menu 3.4)

Use this menu to record and review voice memos.

Record (Menu 3.4.1)

1. Select  to start recording.
2. Speak into the microphone.
 - Select  to pause the recording.
 - Select  to resume the recording.
3. When you have finished, select . The voice memo is automatically saved.
4. Select  to review the voice memo.

Voices (Menu 3.4.2)






Use this menu to access voice memos you have recorded.



Playing a voice memo

Select a voice memo and select .

During playback:

- Use the following buttons on the display:

| Buttons | Function |
|---|-------------------|
|  | Pauses playback. |
|  | Resumes playback. |
|  | Moves forward. |
|  | Moves backward. |
|  | Stops playback. |

- Press [ / ] to adjust the volume.

Using voice memo options

While reviewing a voice memo, press <**Options**> to access the following options:

- **Send**: send the file via MMS.
- **Rename**: change the file name.
- **Delete**: delete the file.
- **Properties**: access the file properties.

Delete all (Menu 3.4.3)

Use this menu to delete all voice memos you have recorded.

Settings (Menu 3.4.4)

Use this menu to configure settings for recording a voice memos.

- **Recording time**: select a voice recording mode.
Normal: record a voice memo within the limit of the currently available memory.
Limit size(for MMS): record a voice memo for adding to an MMS message.
- **Volume**: select a volume level for playing a voice memo.

- **Default name**: change the default prefix of file names for saving voice memos.

Memory status (Menu 3.4.5)

You can access memory information for voice memos.

Conversion (Menu 3.5)

Use this menu for common conversions, such as length and temperature.

1. Select a converter.
2. Enter the value to be converted and press [Down].
 - Press [*****] to insert a decimal point.
 - Press [**#**] to change the temperature to above zero (+) or below zero (-).
3. Press [Left] or [Right] to select the original unit on the **From** line and press [Down].
4. Select the unit to which you want to convert on the **To** line.
5. Press <**OK**>. The equivalent value for the amount you entered displays.

Timer *(Menu 3.6)*

Use this menu to set a period of time for the phone to count down. The phone will sound an alarm when the specified period of time has expired.

Starting the timer

1. Press <**Set**>.
2. Enter the length of time you want to count down and press <**OK**>.
3. Press <**Start**> to start counting down.

Stopping the timer

- Press any key to stop the timer when it rings.
- Press <**Stop**> on the Timer screen to stop the timer before it rings.

Stopwatch *(Menu 3.7)*

Use this menu to measure elapsed time. The maximum time is 10 hours.

1. Press <**OK**> to start the stopwatch.
2. Press <**OK**> to check an interval. You can repeat this step for a total of 4 intervals.

SIM AT *(Menu 3.8)*

This menu is available if you use a SIM-AT card that supports SIM Application Tool kit menus and provides additional services, such as news, weather, sports, entertainment, and location services. Available services may vary, depending on your service provider's plans. For details, see your SIM card instructions or contact your service provider.

Messages *(Menu 4)*

Use the **Messages** menu to send and receive text messages or multimedia messages. You can also use push message, voicemail, and cell broadcast message features.

To access this menu, press <**Menu**> in Idle mode and select **Messages**.

Short messages *(Menu 4.1)*

Short Message Service (SMS) allows you to send and receive text messages that may include simple pictures, animated images, and melodies.

Create (Menu 4.1.1)

You can create and send a text message.

In Idle mode, press [Left] to quickly access this menu.

1. Enter your message.

The maximum number of characters allowed in a message varies by service provider. If your message exceeds the maximum number of characters, the phone will split the message.

2. Press <**Options**> to access the following options for creating a message:

- **Text:** change the text attributes.
- **Add media:** attach a picture, animated image, or a melody.
- **Preset messages:** add a text template to text.

3. When you have finished, press [OK].

4. Enter a destination number and press <**OK**>, or press <**Contacts**> to retrieve one from Contacts.

5. To send the message to more than one recipient, fill in additional destination fields.

6. Press <**Send**> to send the message.

Inbox (Menu 4.1.2)

This folder stores all of the SMS messages you have received.

While viewing a message, press <**Options**> to access the following options:

- **Message reply:** reply to the sender.
- **Call back:** call the sender.
- **Delete:** delete the message.
- **Cut address:** extract URLs, e-mail addresses, or phone numbers from the message.
- **Send:** send the message to other people.
- **Edit:** edit the message.
- **Extract media:** save media content from the message to your phone's memory.

Outbox (Menu 4.1.3)

This folder stores SMS messages that you have sent or you have saved for later use.

While viewing a message, press <**Options**> to access the following options:

- **Delete**: delete the message.
- **Cut address**: extract URLs, e-mail addresses, or phone numbers from the message.
- **Send**: send or resend the message.
- **Edit**: edit the message.
- **Transfer**: move the message between the phone's memory and the SIM card.

Delete all (Menu 4.1.4)

Use this menu to delete all of your messages in each message box.

1. Press <**Select**> to select the message boxes to be cleared.
2. Press <**Delete**>.
3. Press <**Yes**> to confirm the deletion.

Multimedia messages (Menu 4.2)

Multimedia Message Service (MMS) delivers messages containing a combination of text, image, and audio, from phone to phone or from phone to e-mail.

Create (Menu 4.2.1)

You can create and send an MMS message.

1. Press <**Add**> on the **Subject** line.
2. Enter the message subject and press <**OK**>.
3. Move to the **Picture** or **Sound** line and press <**Add**>.
4. Select an image or sound and press <**Add**>.



- The maximum size allowed for a message can differ, depending on your service provider.
- Depending on the file type or DRM (Digital Rights Management) system, some files may not be able to be forwarded.

5. Move to the **Message** line and press <**Add**>.
6. Enter the message text.
7. Press <**Opt.**> and select **Done**.



8. Press <**Opt.**> to access the following options for editing the message:
 - **Add page:** add pages. Move to each page by pressing [Left] or [Right].
 - **Page timing:** change the duration of page display. After the specified time, the display automatically scrolls to the next page.
 - **Text effect:** change the text attributes.
 - **Clear subject/Clear picture/Clear sound/Clear message:** clear the subject, image, sound, or text.
 - **Delete page:** delete an added page.
9. When you have finished, press <**Opt.**> and select **Send**.
10. Enter a phone number or e-mail address from one of the following options:
 - **Recent log:** select a number or address from the destinations to which you have sent messages recently.
 - **Contacts:** retrieve a number or address from Contacts.
 - **Phone number:** enter a phone number.

- **E-mail address:** enter an e-mail address.

11. To send the message to more than one recipient, fill in additional destination fields.
12. Press <**Send**> to send the message.

Inbox (Menu 4.2.2)

This folder stores MMS messages that you have received. The following icons are available to show the message status:

-  MMS notification
-  MMS

Depending on the DRM (Digital Rights Management) system, messages having web content may not be able to be forwarded.

While viewing a message, press <**Opt.**> to access the following options:






- **Reply:** reply to the sender.
- **Replay:** replay the message.
- **Delete:** delete the message.
- **Forward:** forward the message to other people.
- **Call back:** call the sender.

- **Cut media:** save media content from the message to your phone's memory.
- **Cut address:** extract URLs, e-mail addresses, or phone numbers from the message.
- **Properties:** access the message properties.

Outbox (Menu 4.2.3)

This folder stores MMS messages that the phone has sent or has failed to send.

The following icons are available to show the message status:

-  currently being sent
-  sent
-  trying to send again
-  sending failed
-  opened by the recipient

While viewing a message, press <**Opt.**> to access the following options:

- **Delete:** delete the message.
- **Replay:** replay the message.

- **Send:** send or resend the message.
- **Properties:** access the message properties.

Draft (Menu 4.2.4)

This folder stores messages you have saved to send at a later time. Messages interrupted while created are also saved in this message folder.

While viewing a message, press <**Opt.**> to access the following options:

- **Edit:** edit the message.
- **Replay:** replay the message.
- **Delete:** delete the message.
- **Properties:** access the message properties.

Delete all (Menu 4.2.5)

Use this menu to delete all of the messages in each message folder.

1. Press <**Select**> to select the message folders to be cleared.
2. Press <**Delete**>.
3. Press <**Yes**> to confirm the deletion.

Push messages (Menu 4.3)

Use this menu to access messages from web servers.

- **Inbox:** access push messages you have received.
- **Setting:** determine whether or not your phone receives push messages.

Always: the phone receives push messages.

Never: the phone rejects push messages.

Optional: the phone receives push messages from the specified web server.

- **Delete all:** delete all of the push messages.

Preset messages (Menu 4.4)

Use this menu to make text templates of frequently used messages so that you can retrieve and insert them when composing a message.

1. Select an empty location.
2. Enter a message and press **<OK>**.

Voice mail (Menu 4.5)

Use this menu to store the number of the voicemail server and access your voicemails.

- If not pre-configured, you must enter the voicemail server number before accessing the server. Your service provider can give you the number.

- **Connect to voice server:** connect to the voicemail server to allow you to listen to your messages.
- **Voice server number:** change the voicemail server number or name.

Broadcast (Menu 4.6)

The Cell Broadcast (CB) service delivers SMS messages on various topics, such as the weather or traffic.

Use this menu to change the settings for the service and to access broadcast messages.

- **Read:** access broadcast messages you have received.

The **Temporary** box saves network messages until the phone is switched off. Press <**Options**> and select **Save** when a text notification appears to save to the **Archive** box.

The **Archive** box saves network messages indefinitely.

- **Receive:** select to receive broadcast messages, or not.
- **Channel:** indicate the channels from which you wish to receive broadcast messages. Please contact your service provider for details.
- **Language:** select the preferred languages in which broadcast messages display.

Settings *(Menu 4.7)*

Use this menu to set up various options for using messaging service.

Short messages *(Menu 4.7.1)*

You can configure SMS settings.

- **Service center:** store or change the number of your SMS server.

- **Validity period:** set the length of time your messages are stored in the SMS server.
- **Message type:** set the default message type. The network can convert the messages into the selected format.
- **Reply path:** allow recipients to reply to you through your SMS server.
- **Delivery report:** set the network to inform you when your messages have been delivered.
- **Character support:** select a character encoding type. If you select **Automatic**, the phone switches the encoding type from GSM-alphabet to Uni-code if you enter a Unicode character. Use of Unicode encoding will reduce the maximum number of characters in a message to about half. If this menu is not shown, your phone provides automatic character encoding by default.

Multimedia messages (Menu 4.7.2)

You can configure MMS settings.

- **Send settings:** set up the options for sending MMS messages:
 - Priority:** set the priority level of messages.
 - Validity period:** set the length of time messages are stored in the MMS server.
 - Delivery after:** set a time delay before messages are sent.
 - Delivery report:** set the network to inform you when your messages have been delivered.
 - Read reply:** send a read-reply request along with your messages.
- **Receive settings:** set up the options for receiving MMS messages.
 - Home reception:** determine if your phone retrieves new messages automatically when you are in your home service area.

Roaming reception: determine if your phone retrieves new messages automatically when you are roaming on another network.

- You may be additionally charged for receiving MMS messages when you are roaming.

Reception within home network or abroad has the following options:

- **Manual:** the phone displays notifications. Use the **Retrieve** option to manually download new messages.
- **Automatic:** the phone automatically retrieves messages from the server.
- **Reject:** the phone rejects all messages.
 - Anonymous reject:** reject messages from unknown senders.
 - Ads reject:** reject advertisements.
 - Report allowed:** set the network to inform the sender when a message has been delivered to you.

- **MMS profiles:** configure required network settings for MMS.

Check with your service provider before you change any MMS settings on your phone.

Current profile: select a profile to be used for MMS.

Profile setting: customise the options for each profile:

- **Profile name:** assign a name to the MMS profile.
- **Server URL:** enter the address of your MMS server.
- **Proxy use:** activate or deactivate the proxy server when connecting to the GPRS network.
- **GPRS setting:** customise the settings required for connecting to the GPRS network.

IP address: (When **Proxy use** is enabled) enter the gateway address.

IP port: (When **Proxy use** is enabled) enter the port number.

DNS1 and **DNS2:** (When **Proxy use** is disabled) enter the primary and secondary DNS (Domain Name Server) addresses.

APN: enter the access point name of the GPRS network gateway.

Login ID: enter the user ID.

Password: enter the password.

Memory status *(Menu 4.8)*

Use this menu to access memory information for SMS and MMS messages.

t-zones *(Menu 5)*

Using the **t-zones** menu, you can launch the Wireless Application protocol (WAP) browser on your phone and access t-zones, a WAP service provided by T-Mobile. You can access up-to-date information and a wide variety of media content, such as games, wallpapers, and ringtones from t-zones.

To access this menu, press <**Menu**> in Idle mode and select **t-zones**.

You will be additionally charged for accessing t-zones and downloading media content.

Navigating the web

| To | Press |
|------------------------------|-------------------|
| scroll through browser items | [Up] or [Down]. |
| select a browser item | [OK] or <Select>. |
| return to the previous page | <↶> or [C]. |
| return to the homepage | and hold [C]. |


Using web page options

From any web page, press [#] to access the following options:

- **GoTo URL:** enter a URL address manually.
- **Bookmark:** switch to the **Bookmark** menu.
▶ p. 52
- **Short messages:** access **Inbox** and **Outbox** in the **Short messages** menu. You can also create and send a new SMS message. ▶ p. 33
- **Multimedia:** switch to the **Multimedia** menu.
▶ p. 27

- **Home:** return to the homepage.
- **Back:** return to the previous page.
- **Show URL:** display the URL address of the current web page. You can also set the current page as the homepage for the web browser.
- **Reload:** reload the current page with updated information.

Exiting the browser

Press [] to end the network connection and exit the browser.

Calendar *(Menu 6)*

The Calendar feature enables you to keep track of important dates and events.

To access this menu, press <Menu> in Idle mode and select **Calendar**.

In Idle mode, press [Right] to quickly access this menu.

Consulting the calendar

When you access the **Calendar** menu, the calendar in Month view appears with today's date indicated by a blue box.

Selecting a date on the calendar

- Press [Left] or [Right] to move by day.
- Press [Up] or [Down] to move by week.

Using calendar options

From the calendar, press <**Options**> to access the following options:

- **Add memo**: add a new event.
- **Go to date**: enter a specific date.
- **View all**: access all events. Move to the other events by pressing [Left] or [Right].
- **Delete day**: delete the events stored for the selected date.
- **Delete all**: delete all events stored on the calendar.





Creating an event

You can store events on the calendar. More than one event per day can be stored.

1. Select a date on the calendar.
2. Press <**Options**> and select **Add memo**.
3. Enter a memo about the event and press <**OK**>.
4. Select an event type.
5. For **Call**, enter a phone number you need to dial and press <**OK**>. For **Anniversary**, skip to step 7.
6. Enter the event time and press <**OK**>.
7. Press <**Yes**> to set an alarm for the event.
8. Enter the time for the alarm to ring and press <**OK**>.
9. Select an alarm tone.

Viewing an event

Once you have scheduled events, the following icons and the number of events for a specific day appears at the bottom of the calendar.

-  Scheduler
-  Tasks (To do items)
-  Calls
-  Anniversaries

Accessing an event

1. Select a date on the calendar to display the events for the day.
2. Press [Left] or [Right] to access the other events scheduled for the selected day.

Using event options

While viewing an event, press <**Options**> to access the following options:

- **Add:** add a new event.
- **Delete:** delete the event.
- **Edit:** edit the event.
- **Move:** move the event to a different day.
- **Copy:** copy the event to a different day.

Profiles *(Menu 7)*

Use this menu to customise various sound settings, such as the call ringer, message ringer, and alert sounds to be used in various situations.

To access this menu, press <**Menu**> in Idle mode and select **Profiles**.

Incoming calls *(Menu 7.1)*

Use this menu to change the sound settings for incoming calls.

- **Default melodies:** select one of the default melodies to be used as your ringtone.
- **Sounds:** select a downloaded melody to be used as your ringtone.
- **Ring volume:** select a ringtone volume.
- **Alert type:** specify how you are to be informed of incoming calls.

Messages *(Menu 7.2)*

Use this menu to change the sound settings for incoming SMS messages and MMS messages individually.

- **Tone:** select one of several message tones.
- **Alert type:** specify how you are to be informed when a message comes in.
- **Repetition:** specify how often the phone informs you of a new message.

Power on/off *(Menu 7.3)*

Use this menu to turn on or off the melody that the phone sounds when it is switched on or off.

Connection tone *(Menu 7.4)*

Use this menu to set the phone to beep when an outgoing call is connected to the system.

Key tone *(Menu 7.5)*

Use this menu to select the tone that the phone sounds when you press a key.

- You can adjust the keypad tone volume using [▲/▼] in Idle mode.

Minute minder *(Menu 7.6)*

Use this menu to set the phone to beep every minute during a call to keep you informed of the length of your call.

Quiet mode *(Menu 7.7)*

Use this menu to set how the phone acts to alert you to a specific event while in Quiet mode.

Alerts on call *(Menu 7.8)*

Use this menu to set the phone to beep when you receive a new message or when the time for an alarm comes during a call.

Contacts (Menu 8)

You can store phone numbers on your SIM card and in your phone's memory. The SIM card and phone's memory are physically separate, but they are used as a single entity called Contacts.

To access this menu, press <Menu> in Idle mode and select **Contacts**, or press <Contacts> in Idle mode.

Find name (Menu 8.1)

Use this menu to search for numbers in Contacts.

- In Idle mode, press [Down] to quickly access this menu.

Finding an entry

1. Enter the first few letters of the name that you want to find.
2. Scroll to the name you want.
3. For entries saved on the SIM card, press [↵] to dial.

For entries saved in the phone's memory, scroll to a number and press [↵] to dial.

Using Contacts options

While viewing contact details, press <Options> to access the following options:

- **Send message:** send an SMS or MMS message to the selected number.
- **Assign speed dial:** assign a speed dial number to the selected number.
- **Edit number:** edit the selected number.
- **Change name:** change the name of the selected contact.
- **Delete entry:** delete the contact.
- **Copy:** copy the selected number to the phone's memory or to the SIM card.

Add entry (Menu 8.2)

Use this menu to add a new contact to Contacts.

Storing a number in the phone's memory

1. Select **Phone**.
2. Select a number type.

3. Enter information and press <**Save**> or <**OK**>.
4. Enter a name and press <**OK**>.
5. To save additional information, press [Left] or [Right] to scroll to the field you want.
6. Enter information or change settings.
 - **Mobile/Home/Office/Fax/Other**: press <**Options**> and select **Edit number** and add a number in any category.
 - **E-Mail**: press <**Edit**> and assign an e-mail address.
 - **Note**: press <**Edit**> and add a memo about the person.
 - **Group**: press <**Options**> and assign the contact to a caller group.
 - **Graphic**: press <**Options**> and assign an image as a caller ID image to alert you to a call from the person.
 - **Alert**: press <**Options**> and assign a ringtone to alert you to a call from the person.
7. Press <**OK**> or <**Select**>.

Storing a number on the SIM card

1. Select **SIM**.
2. Enter a phone number and press <**Save**>.
3. Enter a name and press <**OK**>.

Speed-dial list *(Menu 8.3)*

Use this menu to assign speed dial numbers (2 to 9) for 8 of your most frequently called numbers

Assigning speed dial entries

1. Select a key location from **2** to **9**. Key **1** is reserved for your voicemail server.
2. Select **Edit number**
3. Enter a phone number or press <**Contacts**> to retrieve a number from Contacts.
4. Press <**OK**>.

Managing speed dial entries

While viewing the Speed-dial list screen, press <**Select**> to access the following options:

- **Edit number**: enter a number or assign a different number to a key.

Menu functions

- **Change name:** change an entry name.
- **Delete:** clear the speed dial setting for a key.

Dialling speed dial entries

In Idle mode, press and hold the appropriate key.

Copy all to phone (Menu 8.4)

Use this menu to copy all of the contacts stored on the SIM card to the phone's memory.

Delete all (Menu 8.5)

Use this menu to delete all contacts stored on the SIM card or in the phone's memory.

1. Press <**Select**> to select the memory locations to be cleared.
2. Press <**Delete**>.
3. Press <**Yes**> to confirm the deletion.

Group setting (Menu 8.6)

Use this menu to change the properties of caller groups.

From each caller group, the following options are available:

- **Melody:** select a ringtone to alert you when a call comes in from a member of the group.
- **Change name:** change the group name.
- **View image:** check the group ID image to be displayed when a call comes in from a member of the group.

Own number (Menu 8.7)

Use this feature to check your phone numbers or to assign a name to each of the numbers. Changes made here do not affect the actual subscriber numbers on your SIM card.

Memory status (Menu 8.8)

Use this menu to check the number of contacts you have stored in Contacts.

SDN *(Menu 8.9)*

Use this menu to view the list of Service Dialling Numbers (SDN) assigned by your service provider, including emergency numbers and numbers for directory enquiries. This menu is available if your SIM card supports SDN.

1. Scroll to the number you want.
2. Press <Dial> or [↵].

Settings *(Menu 9)*

The **Settings** menu provides you with various setting options to customise the phone to your preferences and needs. You can also reset the settings to their default status.

To access this menu, press <Menu> in Idle mode and select **Settings**.

Clock *(Menu 9.1)*

Use this menu to change the time and date displayed on your phone. Before setting the time and date, set your time zone in the **Set world time** option.

- **Set time:** enter the current time.
- **Set date:** enter the current date.
- **Set world time:** set your local time zone or find out what time it is in another part of the world.
 1. Press [Left] or [Right] to scroll to the city you want. As the time line moves, the time and date of the given zone display.
 2. Press <Set> and select **Set local** to save the city as your local time zone.

To apply daylight savings time, press <Set> and select **Set DST**.

- **Set format:** select a time and date format.

Display *(Menu 9.2)*

Use this menu to change settings for the display and backlight.

Wallpaper *(Menu 9.2.1)*

You can set up the idle screen on the main display.

- **Default wallpapers:** select one of the default images to be displayed.

Menu functions

- **Images:** select a downloaded image to be displayed.
- **Text position:** select a text position. If you do not want text to display in Idle mode, select **Off**.
- **Text style:** select a font style or colour.

Colour theme (Menu 9.2.2)

You can select a skin colour pattern for Menu mode.

Backlight time (Menu 9.2.3)

You can select the length of time the backlight of the main display and the keypad stays on.

- **On:** select the length of time the backlight stays on.
- **Dim:** select the length of time the display stays on in Dim mode after the backlight turns off. After a specified time, the display turns off.

LCD Brightness (Menu 9.2.4)

You can adjust the brightness of the main and external displays for varying lighting conditions.

Dialling font colour (Menu 9.2.5)

Use this menu to select a font colour for the numbers entered while dialling.

Show caller information (Menu 9.2.6)

Use this menu to set the phone to display missed call notifications with the most recently missed caller's information.

Greeting message (Menu 9.3)

Use this menu to enter the greeting that is displayed briefly when the phone is switched on.

Language (Menu 9.4)

Use this menu to select one of several languages for the display text or the text input mode.

Security (Menu 9.5)

Use this menu to protect the phone against unauthorised use by managing the several access codes of your phone and SIM card.

If you enter an incorrect PIN/PIN 2 three times in succession, the SIM card is blocked. To unblock it, you need to enter your PUK/PUK2 (Personal Unblocking Key). The codes are supplied by your service provider.

PIN check *(Menu 9.5.1)*

The 4-to 8-digit PIN (Personal Identification Number) protects your SIM card against unauthorised use. When this feature is enabled, the phone requires your PIN each time it is switched on.

Change PIN *(Menu 9.5.2)*

Use this menu to change your PIN. The PIN check feature must be enabled to change the PIN.

Phone lock *(Menu 9.5.3)*

Use this menu to lock the phone from unauthorised use.

When this feature is enabled, you must enter a 4- to 8-digit phone password each time the phone is switched on.

The password is preset to **00000000**. To change the password, use the **Change password** menu.

Change password *(Menu 9.5.4)*

Use this menu to change your phone password.

Privacy *(Menu 9.5.5)*

Use this menu to lock access to MMS messages, images, or sounds.

1. Press **<Select>** to select the items to lock.
2. Press **<OK>**.
3. Enter the phone password and press **<OK>**.

When a privacy option is enabled, you must enter the phone password to access the locked items.

SIM lock *(Menu 9.5.6)*

This menu allows your phone to work only with the current SIM by assigning a SIM lock code. You must enter the SIM lock code to use a different SIM card.

FDN mode *(Menu 9.5.7)*

If supported by your SIM card, Fixed Dialling Number (FDN) mode restricts your outgoing calls to a limited set of phone numbers. When this feature is enabled, you can make calls only to phone numbers stored on the SIM card.

Change PIN2 (Menu 9.5.8)

If supported by your SIM card, use this menu to change your current PIN2.

Internet (Menu 9.6)

Use this menu to connect your phone to the Internet services. You can also set up connection profiles for connecting your phone to the network and launching the web browser.

Bookmark (Menu 9.6.1)

Use this menu to save URL addresses in order to quickly access web pages.

Adding a bookmark

1. Select an empty location.
2. Enter a URL address and press **<OK>**.
3. Enter a title for the bookmark and press **<OK>**.

Using bookmark options

After saving an item, press **<Select>** to access the following options:

- **Go:** access the bookmarked web page.

- **Edit:** edit the URL address and title of the bookmark.
- **Delete:** delete the bookmark.

Go to URL (Menu 9.6.2)

Use this menu to manually enter a URL address and access the associated web page.

Clear cache (Menu 9.6.3)

Use this menu to clear the cache, which is the temporary memory that stores the recently accessed web pages.

Profile settings (Menu 9.6.4)

Use this menu to create and customise connection profiles containing the settings for launching the web browser.

- Your phone is suited for connecting to the network by default. If you change the settings without first checking with your service provider, the web browser feature may not work properly.

For each profile, the following options are available:

- **Profile name:** enter a profile name.

- **Bearer:** select the network bearer type.
- **Proxy use:** activate or deactivate the proxy server.
- **GPRS setting:** customise the following GPRS network settings:
 - IP address:** (When **Proxy use** is enabled) enter the IP address of the proxy server.
 - IP port:** (When **Proxy use** is enabled) enter the port number of the proxy server.
 - DNS1 and DNS2:** (When **Proxy use** is disabled) enter the primary and secondary DNS (Domain Name Server) addresses.
 - APN:** enter the access point name of the GPRS network gateway.
 - Login ID:** enter the user ID.
 - Password:** enter the password.
- **GSM setting:** customise the following GSM network settings:
 - IP address:** (When **Proxy use** is enabled) enter the IP address of the proxy server.

IP port: (When **Proxy use** is enabled) enter the port number of the proxy server.

DNS1 and DNS2: (When **Proxy use** is disabled) enter the primary and secondary DNS (Domain Name Server) addresses.

Dial Number: enter the PPP phone number.

Login ID: enter the user ID.

Password: enter the password.

Data call type: select a call type for the data transmission.

Current profile *(Menu 9.6.5)*




Use this menu to select a connection profile to be used for accessing the web browser.


Extra settings *(Menu 9.7)*

You can turn the automatic redialling or answering feature on or off.

- **Auto redial:** set the phone to make up to 10 attempts to redial a phone number after an unsuccessful call.

Menu functions

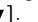- **Active folder:** answer an incoming call by opening the phone and end a call by closing the phone.
- **Anykey answer:** answer an incoming call by pressing any key, except for <Reject>, [, and [/].

When this feature is deactivated, you must press [] or <Accept> to answer a call.

Reset settings (Menu 9.8)

Use this menu to reset the phone's settings you have changed.

1. Select a setting category to be reset.
2. Press <Yes> to confirm the reset.
3. Enter the phone password and press <OK>.

The password is preset to **00000000**. You can change this password. ▶ p. 51

Network services (Menu 9.9)

Use this menu to access network services. Please contact your service provider to check their availability and subscribe to them, if you wish.

Call diverting (Menu 9.9.1)

This network service reroutes incoming calls to a phone number that you specify.

1. Select a call diverting option:
 - **Divert always:** divert all calls.
 - **Busy:** divert calls when you are on another call.
 - **No reply:** divert calls when you do not answer the phone.
 - **Unreachable:** divert calls when you are not in an area covered by your service provider or when your phone is switched off.
 - **Cancel all:** cancel all call diverting options.
2. Select the type of calls to be diverted.
3. To activate call diverting, press <Activate>. To deactivate call diverting, press <Remove>.
4. Enter the number to which calls are to be diverted and press <OK>.
5. If you selected **No reply**, select the length of time the network delays before diverting a call.

Call barring (Menu 9.9.2)

This network service allows you to restrict your calls.

1. Select a call barring option:
 - **All outgoing**: prohibit all outgoing calls.
 - **International**: prohibit international calls.
 - **International except to home**: only allow calls to numbers within the current country when you are abroad, and to your home country.
 - **All incoming**: prohibit incoming calls.
 - **Incoming while abroad**: prohibit incoming calls when you use your phone outside of your home country.
 - **Cancel all**: cancel all call barring settings, allowing to be sent and received normally.
 - **Change barring password**: change the call barring password.
2. Select the type of calls to be barred.
3. Press <**Activate**>. To deactivate call barring, press <**Deactivate**>.
4. Enter the call barring password and press <**OK**>.

Call waiting (Menu 9.9.3)

This network service informs you when someone is trying to reach you while you are on another call.

1. Select the type of calls to which the call waiting option will apply.
2. Press <**Activate**>. To deactivate call waiting, press <**Deactivate**>.

Network selection (Menu 9.9.4)

This network service allows you to either automatically or manually select the network used while roaming outside of your home area. You can select a network other than your home network only if there is a valid roaming agreement between the two.

Caller ID (Menu 9.9.5)

This network service allows you to prevent your phone number from being displayed on the phone of the person being called. If you select **Default**, the phone will use the default setting provided by the network.



Some networks do not allow the user to change this setting.

Band selection *(Menu 9.9.6)*

For the phone to make and receive phone calls, it must register with an available network. Your phone can handle any of Combined GSM 900/1800 and GSM 1900, and support automatic switching between three bands.

The country where you purchased your phone determines the default band that it uses. When you travel abroad, you may need to change to an appropriate band.

Side key *(Menu 9.0)*

Use this menu to set whether the phone mutes the call ringer or rejects a call if you press and hold [▲/▼] when a call comes in.

Solve problems

Help and personal needs

To save the time and expense of an unnecessary service call, perform the simple checks in this section before contacting a service professional.

When you switch on your phone, the following messages may appear:

"Insert SIM"

- Be sure that the SIM card is correctly installed.

"Enter password"

- The automatic locking function has been enabled. You must enter the phone's password before you can use the phone.

"Enter PIN"

- You are using your phone for the first time. You must enter the PIN supplied with the SIM card.
- The PIN check feature is enabled. Every time the phone is switched on, the PIN has to be entered. To disable this feature, use the **PIN check** menu.


“Enter PUK”

- The PIN code has been entered incorrectly three times in succession, and the SIM card is now blocked. Enter the PUK supplied by your service provider.


“No service,” “Network failure,” or “Not done” displays

- The network connection has been lost. You may be in a weak signal area. Move and try again.
- You are trying to access an option for which you have no subscription with your service provider. Contact the service provider for further details.

You have entered a number but it was not dialled

- Be sure that you have pressed [.
- Be sure that you have accessed the right cellular network.
- Be sure that you have not set an outgoing call barring option.

Your correspondent cannot reach you

- Be sure that your phone is switched on. ([]) pressed for more than one second.)
- Be sure that you are accessing the correct cellular network.
- Be sure that you have not set an incoming call barring option.




Your correspondent cannot hear you speaking

- Be sure you have switched off the microphone.
- Be sure you are holding the phone close enough to your mouth. The microphone is located at the bottom of the phone.

The phone starts beeping and “Battery low” flashes on the display

- Your battery is insufficiently charged. Recharge the battery.

The audio quality of the call is poor

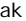- Check the signal strength indicator on the display () . The number of bars indicates the signal strength from strong () to weak () .

- Try moving the phone slightly or moving closer to a window if you are in a building.

No number is dialled when you re-call a Contacts entry

- Use the **Find name** menu to ensure the number has been stored correctly.
- Re-store the number, if necessary.

The battery doesn't charge properly or the phone sometimes turns itself off

- Wipe the charging contacts both on the phone and on the battery with a clean soft cloth.

If the above guidelines do not help you to solve the problem, take note of:

- The model and serial numbers of your phone
- Your warranty details
- A clear description of the problem

Then contact your local dealer or Samsung after-sales service.

Health and safety information

SAR Certification Information

This phone meets European Union (EU) requirements concerning exposure to radio waves.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured to not exceed the limits for exposure to radio-frequency (RF) energy, as recommended by the EU Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through the periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit recommended by the EU Council is 2.0 W/kg.*

The highest SAR value for this model phone was **0.996 W/kg**.

SAR tests are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a new model phone is available for sale to the public, compliance with the European R&TTE Directive must be shown. This directive includes as one of its essential requirements the protection of the health and safety of the user and any other person.

* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. The SAR values may vary, depending on national reporting requirements and the network band.

Precautions when using batteries

- Never use a charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power. Talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries, and recharge your battery only with Samsung-approved chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.

Health and safety information

- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0°C (32°F).
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and – terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Road safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When you are driving a car, driving is your first responsibility. When using your wireless phone while driving, follow local regulations in the country or region you are in.

Operating environment

Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research. If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other medical devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy.

Your physician may be able to assist you in obtaining this information.

Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Switch off your phone in any facility where posted notices require you to do so.

Potentially explosive environments

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.


Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Emergency calls

This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies.

To make or receive calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. Switch on the phone.
2. Key in the emergency number for your present location. Emergency numbers vary by location.
3. Press [].

Certain features like Call Barring may need to be deactivated before you can make an emergency call. Consult this document and your local cellular service provider.

Other important safety information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. Improperly installed wireless equipment could result in serious injury if the air bag inflates.
- Switch off your phone before boarding an aircraft. It is dangerous and illegal to use wireless phones in an aircraft because they can interfere with the operation of the aircraft.

- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Care and maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep your phone and all its parts and accessories out of the reach of small children and pets. They may accidentally damage these things or choke on small parts.
- Keep the phone dry. Precipitation, humidity, and liquids contain minerals that corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.

Health and safety information

- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, stove, or radiator. The phone may explode when overheated.
- When the phone or battery gets wet, the label indicating water damage inside the phone changes colour. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.
- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

Index

- A**
 - ABC mode, text input • 19
 - Active folder • 54
 - Alarm • 29
 - Answering
 - call • 22
 - second call • 24
 - Anykey answer • 54
 - Auto redial • 53
 - B**
 - Background image • 49
 - Backlight time, set • 50
 - Band selection • 56
 - Barring, calls • 55
 - Battery
 - charging • 7
 - low indicator • 8
 - precautions • 59
 - Broadcast messages • 38
 - Browser, web • 41
 - C**
 - Calculator • 30
 - Call costs • 27
 - Call records
 - dialled • 26
 - missed • 25
 - received • 26
 - Call time • 26
 - Caller ID • 55
 - Calls
 - answering • 22
 - barring • 55
 - diverting • 54
 - holding • 24
 - making • 21
 - redialling • 22
 - rejecting • 22
 - waiting • 55
 - CB (Cell Broadcast) messages • 38
 - Characters, enter • 19
 - Connection tone • 45
 - Contacts
 - adding • 46
 - deleting • 46, 48
 - finding • 46
 - options • 46
 - speed-dialling • 47
 - Conversion • 32
 - Creating messages
 - MMS • 35
 - SMS • 34
 - D**
 - Date, set • 49
 - Deleting
 - call records • 26
 - contacts • 46, 48
 - events • 44
 - games • 29
 - images • 28
 - MMS • 36, 37
 - SMS • 34, 35
 - sounds • 28
 - Dialled calls • 26
 - Dialling font colour, set • 50
 - Display
 - backlight, set • 50
 - brightness • 50
 - icons • 10
 - language • 50
 - layout • 10
 - settings • 49
 - Diverting, calls • 54
 - DRM (Digital Rights Management) • 35, 36
 - DTMF tones, send • 25
- E**
 - Emergency calls • 62
 - F**
 - FDN (Fixed Dialling Number) mode • 51
 - Forwarding, MMS • 36
 - G**
 - Games • 28
 - Greeting message • 50
 - H**
 - Health and safety • 58
 - Holding, call • 24
 - I**
 - Icons, description • 10
 - Images, downloaded • 28
 - Inbox, messages

- MMS • 36
- SMS • 34
- International calls • 21
- Internet
 - accessing • 41
 - setting • 52
- K**
- Keypad tones
 - selecting • 45
 - sending/muting • 25
 - volume • 45
- L**
- Language, select • 50
- Last number, redial • 22
- Locking
 - media items • 51
 - phone • 51
 - SIM card • 51
- Low battery indicator • 8
- M**
- Memory status
 - contacts • 48
 - media items • 29
 - messages • 41
- Message tone • 45

- Messages
 - cell broadcast • 38
 - greeting • 50
 - MMS • 35
 - push • 38
 - SMS • 33
 - voice • 38
- Minute minder • 45
- Missed calls • 25
- MMS messages
 - creating/sending • 35
 - deleting • 36, 37
 - setting • 40
 - viewing • 36
- Multiparty-call • 24
- N**
- Names
 - entering • 19
 - searching • 46
- Network band, select • 56
- Network selection • 55
- Network services • 54
- Numbers
 - searching • 46
 - storing • 46, 47

- O**
- Outbox, messages
 - MMS • 37
 - SMS • 34
- P**
- Password
 - call barring • 55
 - phone • 51
- Phone
 - care and maintenance • 63
 - display • 10
 - icons • 10
 - locking • 51
 - password • 51
 - resetting • 54
 - switching on/off • 8
 - unpacking • 6
- PIN, change • 51
- PIN2, change • 52
- Power on/off tone • 45
- Preset messages • 38
- Privacy • 51
- Problems, solve • 56
- Push messages • 38

- Q**
- Quiet mode
 - entering • 12
 - setting • 45
- R**
- Received calls • 26
- Received messages
 - MMS • 36
 - SMS • 34
- Redialling
 - automatically • 53
 - manually • 22
- Resetting phone • 54
- Ringer
 - incoming calls • 44
 - messages • 45
- Road safety • 60
- Roaming • 55
- S**
- Safety
 - information • 58
 - precautions • 1
- Security, calls • 50
- Sent messages
 - MMS • 37
 - SMS • 34, 35

- SIM card, insert • 7
- Skin colour • 50
- SMS messages
 - creating/sending • 34
 - deleting • 34, 35
 - setting • 39
 - viewing • 34
- Sound profiles • 44
- Sounds, downloaded • 27
- Speed-dial • 47
- Stopwatch • 33
- Switching on/off
 - microphone • 24
 - phone • 8

T

- Templates, message • 38
- Text, enter • 19
- Time zone, set • 49
- Time, set • 49
- Timer • 33
- t-zones • 41

V

- Voice memos
 - deleting • 32
 - options • 32
 - playing • 31

- recording • 31
 - setting • 32
- Voicemail
 - access • 38
 - server number • 38

W

- Waiting call • 55
- Wallpaper • 49
- Web browser, access • 41
- World time • 49

Declaration of Conformity (R&TTE)

For the following product :

GSM900/GSM1800/GSM1900

Portable Cellular Telephone

(Product description)

SGH-X490

(Model name)

Manufactured at :

- Samsung Electronics Co., Ltd, 94-1, Insoo-Dong, Gumi City, Kyung-Buk, Korea,
730-350

(factory name, address)

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

Safety : EN 60950-1:2001
EMC : EN 301 489-01 V1.4.1 (2002-08)
EN 301 489-07 V1.2.1 (2002-08)

SAR : EN 50360:2001
EN 50361:2001

Network : EN 301 511 v9.0.2 (2003-03)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Balfour House, Churchfield Road,
Walton-on-Thames, Surrey, KT12 2TD, UK
Identification mark: 0168

CE0168

The technical documentation kept at :

Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)

Samsung Electronics Euro QA Lab.
Blackbushe Business Park,Saxony Way,
Yateley, Hampshire,GU46 6GG, UK
2005.06.17



Yong-Sang Park / S. Manager
(place and date of issue) (name and signature of authorized person)

■ It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.