

**SAMSUNG**

**GPRS TELEPHONE**  
**SGH-C110**



# Contents

<b>Important Safety Precautions .....</b>	<b>7</b>
<b>Unpacking .....</b>	<b>9</b>
<b>Your Phone .....</b>	<b>10</b>
Phone Layout.....	10
Display .....	13
Service Light .....	15
<b>Getting Started .....</b>	<b>16</b>
Installing the SIM Card .....	16
Charging a Battery .....	18
Switching the Phone On/Off.....	20
Locking or Unlocking the Keypad .....	21
<b>Call Functions .....</b>	<b>22</b>
Making a Call.....	22
Adjusting the Volume .....	24
Answering a Call .....	25
Viewing Missed Calls.....	26
Switching Quickly to the Silent Mode.....	28
<b>Selecting Functions and Options .....</b>	<b>29</b>
<b>Phonebook .....</b>	<b>31</b>
Storing a Number with a Name .....	31
Using Phonebook Entry Options.....	34
Dialling a Number from the Phonebook .....	36
Speed-Dialling .....	37
Searching for and Dialling a Number in the Phonebook .....	38
Editing a Caller Group .....	40
Deleting All Phonebook Entries.....	41
Checking the Memory Status .....	42

## Contents

<b>Entering Text .....</b>	<b>43</b>
Changing the Text Input Mode .....	44
Using the T9 Mode .....	45
Using the Symbol Mode.....	46
Using the Upper/Lower-Case Character Modes ..	47
Using the Number Mode .....	48
<b>Options During a Call .....</b>	<b>49</b>
Putting a Call on Hold .....	49
Switching the Microphone Off (Mute) .....	50
Muting/Sending Key Tones .....	51
Sending DTMF Tones .....	51
Searching for a Number in the Phonebook .....	52
Using the SMS Service .....	52
Answering a Second Call .....	53
Making a Multiparty Call .....	53
<b>Using the Menus.....</b>	<b>56</b>
Accessing Menu Functions by Scrolling .....	56
Accessing Menu Functions by Using Shortcuts ...	57
List of Menu Functions .....	58
<b>Messages .....</b>	<b>63</b>
Inbox ( <i>Menu 1.1</i> ).....	63
Outbox ( <i>Menu 1.2</i> ).....	64
Write New ( <i>Menu 1.3</i> ) .....	66
Templates ( <i>Menu 1.4</i> ) .....	68
Settings ( <i>Menu 1.5</i> ) .....	69
Delete All ( <i>Menu 1.6</i> ).....	71
My Objects ( <i>Menu 1.7</i> ) .....	71
Memory Status ( <i>Menu 1.8</i> ).....	72
Voice Mail ( <i>Menu 1.9</i> ).....	72
Broadcast ( <i>Menu 1.10</i> ) .....	73

<b>Call Records .....</b>	<b>75</b>
Missed Calls (Menu 2.1) .....	75
Received Calls (Menu 2.2) .....	75
Dialled Calls (Menu 2.3) .....	76
Delete All (Menu 2.4) .....	76
Call Time (Menu 2.5) .....	77
Call Cost (Menu 2.6) .....	77
<b>Sound Settings .....</b>	<b>79</b>
Ring Tone (Menu 3.1) .....	79
Ring Volume (Menu 3.2) .....	79
Alert Type (Menu 3.3) .....	80
Keypad Tone (Menu 3.4) .....	80
Message Tone (Menu 3.5) .....	81
Power On/Off (Menu 3.6) .....	82
Alerts on Call (Menu 3.7) .....	82
Extra Tones (Menu 3.8) .....	83
<b>Phone Settings .....</b>	<b>84</b>
My Settings (Menu 4.1) .....	84
Greeting Message (Menu 4.2) .....	85
Own Number (Menu 4.3) .....	86
Language (Menu 4.4) .....	86
Security (Menu 4.5) .....	87
Display Settings (Menu 4.6) .....	90
Extra Settings (Menu 4.7) .....	91
Short Cut (Menu 4.8) .....	92
Reset Settings (Menu 4.9) .....	93
<b>Organiser .....</b>	<b>94</b>
Calendar (Menu 5.1) .....	94
To Do List (Menu 5.2) .....	97
Time & Date (Menu 5.3) .....	100
Alarm (Menu 5.4) .....	101
Calculator (Menu 5.5) .....	102
Currency Exchange (Menu 5.6) .....	103

## Contents

<b>Network Services .....</b>	<b>104</b>
Call Diverting ( <i>Menu 6.1</i> ) .....	104
Call Barring ( <i>Menu 6.2</i> ) .....	106
Call Waiting ( <i>Menu 6.3</i> ) .....	108
Network Selection ( <i>Menu 6.4</i> ).....	109
Caller ID ( <i>Menu 6.5</i> ) .....	110
Closed User Group ( <i>Menu 6.6</i> ).....	110
<b>Fun Box.....</b>	<b>112</b>
Games ( <i>Menu 7.1</i> ) .....	112
WAP Browser ( <i>Menu 7.2</i> ) .....	113
Downloads ( <i>Menu 7.3</i> ).....	120
<b>Solving Problems .....</b>	<b>122</b>
<b>Access Codes .....</b>	<b>125</b>
Phone Password .....	125
PIN .....	126
PUK.....	126
PIN2.....	127
PUK2 .....	127
Barring Password .....	128
<b>Health and Safety Information.....</b>	<b>129</b>
SAR Certification Information.....	129
Precautions When Using Batteries.....	130
Road Safety .....	132
Operating Environment .....	132
Electronic Devices .....	133
Potentially Explosive Environments .....	135
Emergency Calls .....	136
Other Important Safety Information .....	137
Care and Maintenance .....	138
<b>Glossary .....</b>	<b>140</b>
<b>Index .....</b>	<b>144</b>

# Important Safety Precautions

Read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal.

## **Road Safety at All Times**

Do not use a hand-held phone while driving; park the vehicle first.

## **Switching Off When Refuelling**

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

## **Switching Off in an Aircraft**

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

## **Switching Off in Hospitals**

Switch off your phone near medical equipment. Follow any regulations or rules in force.

## **Interference**

All wireless phones may be subject to interference, which could affect their performance.

## **Special Regulations**

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger (in a hospital for example).

## Important Safety Precautions

### Sensible Use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

### Emergency Call

Ensure the phone is switched on and in service. Key in the emergency number for your present location, then press the  key. You must deactivate any unnecessary features before you can make an emergency call. Give all the necessary information as accurately as possible. Do not end the call until given permission to do so.

### Water Resistance

Your phone is not water-resistant. Keep it dry.

### Accessories and Batteries

Use only Samsung-approved accessories and batteries. Use of any unauthorised accessories could damage your phone and may be dangerous.

### Qualified Service

Only qualified service personnel may repair your phone.

For more detailed safety information, see "Health and Safety Information" on page 129.

#### **CAUTION**

RISK OF EXPLOSION IF A BATTERY IS  
REPLACED BY AN INCORRECT TYPE.  
DISPOSE OF USED BATTERIES ACCORDING TO  
THE INSTRUCTIONS.

# Unpacking

Your package contains the following items:



Handset



Travel Adapter



Battery



User's Manual

The items supplied with your phone may be different, depending on your country.

In addition, you can obtain the following accessories for your phone from your local Samsung dealer:

- Travel adapter
- Straight headset
- Simple handsfree car kit
- Standard battery
- Car charger
- Car cradle
- Data kit
- Battery charger
- Hand strap

# Your Phone

## Phone Layout

The following illustration shows the main elements of your phone:



<b>Key</b>	<b>Description</b>
------------	--------------------



*In the menu facility*, scrolls through the menu options and phonebook memory.

*In idle mode*, allows you to access your favourite menu options directly (for more information on shortcuts, see page 92).



*In the menu facility*, returns to the previous menu level and selects the current menu respectively.

*When entering text*, moves the cursor left and right respectively.

*In idle mode*, allows you to access your favourite menu options directly (for more information on shortcuts, see page 92).



(soft keys)

Performs the functions indicated by the text above them (on the bottom line of the display).



*When entering text*, deletes characters from the display.

*In the menu facility*, returns to the previous menu level.

*In idle mode*, launches the WAP (Wireless Application Protocol) Browser directly.

### Key

### Description (continued)



Makes or answers a call.

*When held down in idle mode, recalls the last number dialed or received.*

*In the menu facility, selects a menu option or stores information that you have entered (such as a name) in the phone or SIM memory.*




Ends a call.

*When held down, switches the phone on and off.*

*In the menu facility, cancels your input and returns to the idle mode.*



*When held down in idle mode, accesses your voice mail.*

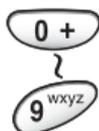

Enters numbers, letters and some special characters.



Enters special characters.



Performs various functions.



(on the side of the phone)

During a call, adjusts the earpiece volume.

*In idle mode, adjusts the key volume.*


*In the menu facility, scrolls through the menu options and phonebook memory.*

## Display

---

### Display Layout

The display comprises of three areas.

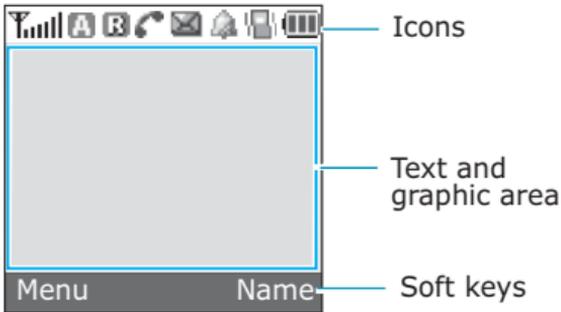

Area	Description
First line	Displays various icons (see page 14).
Middle lines	Display messages, instructions and any information that you enter (number to be dialled, for example).
Last line	Shows the functions currently assigned to the two soft keys.

### Icons

Icon	Description
	Shows the received signal strength. The greater the number of bars, the better the signal strength.
	Appears when you are out of your home area and have registered with a different network; for example, when travelling in other countries.
	Appears when a call is in progress.
	Appears when you are connected to the GPRS network.
	Appears when you are entering text to indicate the current text input mode.
	Appears when the keys are locked.
	Appears when a new text message has been received.
	Appears when a new voice mail message has been received.
	Appears when you set the alarm.
	Appears when the silent mode is active or you set the <b>Alert Type</b> menu option ( <b>Menu 3.3</b> ), so that the phone vibrates when you receive a call; for further details, see page 28 and page 80.
	Appears when the Call Diverting feature is activated.

**Icon**    **Description** *(continued)*

Appears when the mute mode is active.



Shows the level of your battery. The more bars you see, the more power you have left.

## Backlight

The display and keypad are illuminated by a backlight. When you press any key, the backlight turns on and remains on for a given period of time, depending on the **Back Light** menu option (**Menu 4.6.2**). Then it dims and finally switches to the digital clock, conserving your battery power.

To specify the length of time for which the backlight is active, set the **Back Light** menu; see page 90 for further details.

## Service Light

---

The service light is on the top left on the phone. It flashes when services are available on the phone.

To activate or deactivate use of the service light, set the **Service Light** menu option (**Menu 4.6.3**); see page 91 for further details.

# Getting Started

## Installing the SIM Card


---

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and so on.

**Important!** The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card.


Keep all SIM cards out of the reach of small children.

1. If necessary, switch off the phone by holding down the  key until the power-off image is displayed.
2. Remove the battery. To do so:
  - ① Slide the battery catch on the back of the phone and hold it in that position.
  - ② Lift the battery away, as shown.

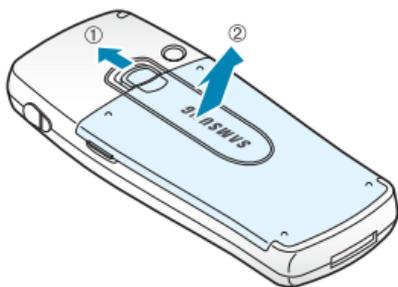


- Slide the SIM card into the SIM card holder so that the holder locks the card in position.


Make sure that the cut corner is top right and the gold contacts of the card face into the phone.

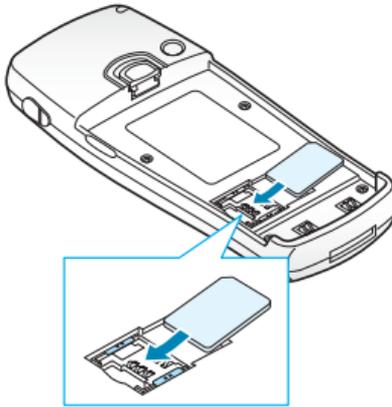

**Note:** When you need to remove the SIM card, slide it, as shown below, and take it out of the holder.

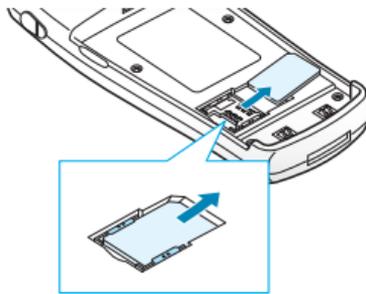


- Place the battery so that the tabs on the end align with the slots at the bottom of the phone.

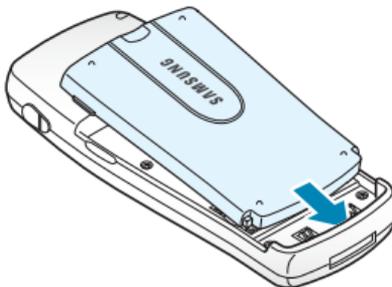

## Getting Started

5. Push the battery down until it clicks into place. Make sure that the battery is properly installed before switching on the phone.

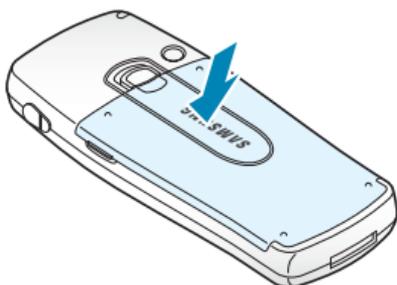

## Charging a Battery


---

Your phone is powered by a rechargeable Li-ion battery. A travel adapter is provided with your phone. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.

The phone can be used while the battery is charging, but this will cause the battery to charge more slowly.

**Note:** You must fully charge the battery before using your phone for the first time. A discharged battery is fully recharged in approximately 200 minutes.

1. With the battery in position on the phone, connect the lead from the travel adapter to the bottom of the phone.

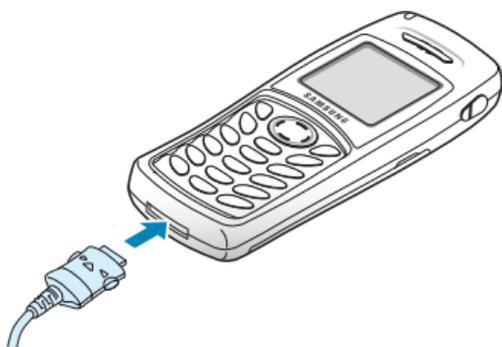

2. Connect the adapter to a standard AC wall outlet.
3. When charging is finished, disconnect the adapter from the power outlet and from the phone by pressing the buttons on both sides of the connector and pulling the connector out.



**Note:** Do not remove the battery from the phone while it is charging without first unplugging the adapter. If you do so, the phone may be damaged.

### Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain, you will hear a warning tone and a message will be repeated at regular intervals on the display. If this happens, your phone will turn off the backlight to conserve the remaining battery power.


When the battery becomes too weak for the phone to operate, it switches off automatically.

# Switching the Phone On/Off

---

1. Hold down the  key until the phone switches on.
2. If the phone asks for a password, key in the password and press the **OK** soft key. The phone password is factory set to 00000000. For further details, see page 125.
3. If the phone asks for a PIN, key in the PIN and press the **OK** soft key. For further details, see page 126.

The phone searches for your network and when it finds it, the idle screen, illustrated below, appears. Now, you can make or receive a call.

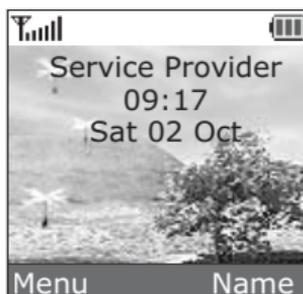

**Note:** The display language is factory set to English. To change the language, use the **Language** menu option (**Menu 4.4**); for further details, refer to page 86.

4. When you wish to switch off the phone, hold down the  key until the power-off image is displayed.

**Note:** If you locked the keypad, you must unlock it before switching the phone off by pressing the **Unlock** soft key and the  key.

## Locking or Unlocking the Keypad

---

You can lock the keypad to avoid pressing keys by mistake.

Press and hold the  key in idle mode until the  icon and "Keypad Locked" appear on the display.

You can answer incoming calls using any keys or dial emergency calls, even if you lock the keypad. To place an emergency call, enter an emergency number. When the confirmation message appears, press the **Yes** soft key or the  key. When you end the call, your phone returns to the key lock mode immediately.

To exit the key lock mode, press the **Unlock** soft key and then press the  key again. "Keypad Unlocked" appears and the  icon is no longer displayed.

You can also set the phone to automatically lock the keypad in the **Auto Key Lock** menu option (**Menu 4.1.3**). For further details, see page 85.

# Call Functions

## Making a Call

---

When the idle screen is displayed, key in the area code and phone number, and press the  key.

**Note:** If you have checked the **Auto Redial** option in the **Extra Settings** menu (**Menu 4.7**), the number is redialled automatically up to ten times when the person does not answer the call or is already on the phone; see page 92 for further details.

## Making an International Call

1. Press and hold down the  key. The + character appears.
2. Key in the country code, area code and phone number and press the  key.

## Correcting the Number

To clear...	Then...
The last digit displayed	Press the  key.
Any other digit in the number	Press the (  or  ) key until the cursor is immediately to the right of the digit to be cleared. Press the  key. You can also insert a missing digit simply by pressing the appropriate key.
The whole display	Hold down the  key for more than one second.

## Ending a Call

When you have finished your call, briefly press the  key.

## Redialling the Last Number

The phone stores the numbers you dialled, received, or missed if the callers are identified; see “Call Records” on page 75 for further details.

To recall any of these numbers, proceed as follows:

1. If you have typed any characters on the display, clear the display by holding down the  key for more than one second.
2. Press the  key to display a list of the last numbers in the order in which the calls were made.
3. Use the  and  keys to scroll through the numbers until the required number is highlighted.

4. <b>To...</b>	<b>Then...</b>
Dial the number highlighted	Press the  key.
Edit the number highlighted	Press the <b>Options</b> soft key, select the <b>Edit</b> option and change the number as required.
Delete the number highlighted	Press the <b>Options</b> soft key and select <b>Delete</b> .
Delete all numbers on the list	Press the <b>Options</b> soft key and select <b>Delete All</b> . For details, see page 76.

### Making a Call from the Phonebook

You can store phone numbers that you use regularly in the SIM card or in the phone's memory, which are collectively called Phonebook.

Once you have stored numbers in Phonebook, you can dial a number by pressing a few keys or assign your most frequently-used numbers to number keys using the Speed Dial feature.

For further details on the Phonebook features, refer to page 31.

### Adjusting the Volume

---

During a call, if you want to adjust the earpiece volume, use the volume keys on the left side of the phone.

Press the ▲ key to increase and the ▼ key to decrease the volume.



In idle mode, you can adjust the key volume using the same keys.

## Answering a Call

---

When somebody calls you, the phone rings and shows the incoming call animation.

If the caller can be identified, the caller's phone number or name, if stored in your phonebook, is displayed.

**Note:** While the phone is ringing, you can mute the ring tone. Hold down one of the volume keys on the left side of the phone.

1. Press the  key or the **Accept** soft key to answer the incoming call.

If the **Anykey Answer** option in the **Extra Settings** menu (**Menu 4.7**) is checked, you can press any key to answer a call except for the  key and the **Reject** soft key (see page 92).

To reject an incoming call, press the **Reject** soft key.

2. End the call by pressing the  key.

**Note:** You can answer a call while using the phonebook or menu features.

### Viewing Missed Calls

---

If you are unable to answer a call for any reason, you can find out who was calling you, provided that this service is available. In this way, you can call the person back, if necessary.

The number of missed calls is displayed on the idle screen immediately after a call was missed.

To view the missed call immediately, proceed as follows:

1. Press the **View** soft key.

The number corresponding to the most recent missed call is displayed, if available.

2. <b>To...</b>	<b>Then press the...</b>
Scroll through the missed calls	 or  key.
Call the number displayed	 key.
Edit or delete a missed call number	<b>Select</b> soft key (see the next page).

## Editing a Missed Call Number

**Note:** If the number corresponding to the missed call is not available, the **Edit** option is not displayed.

1. Press the **Options** soft key.
2. Press the  or  key to highlight the **Edit** option.
3. Press the **Select** soft key.
4. Change the number as required.

5. <b>To...</b>	<b>Then press the...</b>
Call the number	 key.
Store the number	<b>Save</b> soft key and enter the name and location required (for further details, refer to page 31).

## Deleting a Missed Call

1. Press the **Options** soft key.
2. If necessary, press the  or  key to highlight the **Delete** option.
3. Press the **Select** soft key.

You can press the  key at any time to exit the Missed Call feature.

**Note:** You can access the Missed Call feature at any time by selecting the **Missed Calls** menu option (**Menu 2.1**); for further details, see page 75.

### Switching Quickly to the Silent Mode

The silent mode is convenient when discretion is required and you wish to stop the phone from making any noise, in a theatre for example.

In idle mode, to switch your phone quickly to the silent mode, simply press and hold down the  key until the "Silent Mode" message and vibration icon () are displayed.

In the silent mode, your phone changes the sound settings as follows:

Option	New Setting
Alert Type	Vibration
Keypad Tone	Off
SMS Tone	Light + Vibration
SMS-CB Tone	Light Only
Power Off Tone	Off
Extra Tones ( <b>Menu 3.7</b> )	Off

To exit the silent mode and reactivate the previous sound settings, press and hold down the  key again until "Exit Silent Mode" appears. The vibration icon () is no longer displayed.

**Note:** When you turn off the phone, Silent mode is automatically deactivated.

# Selecting Functions and Options

Your phone offers a set of functions that allow you to customise your phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked  and . Each menu or sub-menu allows you to view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context; the label on the bottom line of the display just above each key indicates its current role.

Example:



Press the left soft key to access the menu facility.

Press the right soft key to access the Phonebook feature.

## Selecting Functions and Options

To view the various functions/options available and select the one required, proceed as follows:

1. Press the appropriate soft key.

2. <b>To...</b>	<b>Then press the...</b>
Select the: <ul style="list-style-type: none"><li>• Function displayed</li></ul> or <ul style="list-style-type: none"><li>• Option highlighted</li></ul>	<b>Select</b> soft key or the <b>)</b> key.
View the next function or highlight the next option in a list	⏪ key or ▼ key on the left side of the phone.
Move back to the previous function or option in a list	⏩ key or ▲ key on the left side of the phone.
Move back up one level in the structure	( key, ⏪ soft key or  key.
Exit the structure without changing the settings	 ① key.

In some functions, you may be asked for a password or PIN. Enter the required code and press the **OK** soft key.

**Note:** When you access a list of options, your phone highlights the current option. If, however, there are only two options, such as **On/Off** or **Enable/Disable**, your phone highlights the option that is not currently active, so that you can select it directly.

# Phonebook

You can store phone numbers and their corresponding names in the memory of your SIM card. In addition, you can store up to 500 numbers in the phone memory. The SIM card and phone memories, although physically separate, are used as if they were a single entity, called the phonebook.

**Note:** Depending on the manufacturer of your SIM card, the maximum number of phone numbers the SIM card can store may differ.

## Storing a Number with a Name

---

There are two ways to store a number:

- Using the **Save** soft key in idle mode
- Using the **New Entry** option in the phonebook menu

## Storing a Number in Idle Mode

As soon as you start to enter a number, **Save** appears above the left soft key to allow you to store the number in the phonebook.

1. Key in the number to be stored.

**Note:** If you make a mistake while entering a number, correct it using the  key. For further details, refer to page 22.

2. When you are sure that it is correct, press the **Save** soft key.

## Phonebook

3. Select an icon to identify the category of the number to be stored. Three categories are available:

 Mobile phone number

 Office number

 Home number

To select the category, press the ( or ) key, followed by the **Select** soft key.

4. Choose a memory, either **SIM** or **Phone**, by pressing the  or  key and press the **Select** soft key.

**Note:** If you change phones, any numbers stored in your SIM card memory will automatically be available with the new phone, whereas any numbers stored in the phone memory must be stored again.

5. Enter a name and press the **OK** soft key.

The maximum length of a name depends on your SIM card. For information on how to enter characters, see page 43.

The phone now displays the first free location in the selected memory. If that memory is full, the first free location in the other memory is displayed.

6. If you do not want to save the number and name in the suggested location, press the  key to clear the location number and enter your preferred location by pressing the number keys.
7. Press the **OK** soft key to store the name and number.

After storing, the phone displays the phonebook entry or name just created.

8. To...	Then press the...
Use the entry options	<b>Options</b> soft key.
Return to the idle screen	 <b>⓪</b> key.

## Storing a Number Using the Phonebook Menu

1. When the idle screen is displayed, press the **Name** soft key.
2. Scroll to **New Entry** by pressing the  or  key and press the **Select** soft key.
3. Select an icon to identify the category of the number to be stored.

**Note:** The E-mail icon () is available in this step. It allows you to save an E-mail address instead of a phone number.

4. Choose a memory, either **SIM** or **Phone**, by pressing the  or  key and press the **Select** soft key.
5. Enter a name and press the **OK** soft key.

The maximum length of a name depends on your SIM card. For information on how to enter characters, see page 43.

6. Enter the number or E-mail address and press the **Save** soft key.
7. If you do not want to save the number and name in the suggested location, press the  key to clear the location number and enter your preferred location by pressing the number keys.

## Phonebook

8. Press the **OK** soft key to store the name and number.

After storing, the phone displays the phonebook entry or name just created.

To...	Then press the...
Use the entry options	<b>Options</b> soft key.
Return to the idle screen	 key.

## Using Phonebook Entry Options

While accessing any phonebook entry, press the **Options** soft key to use the options for the entry.

To...	Then press the...
Select the highlighted option	<b>Select</b> soft key or the <b>)</b> key.
Highlight a different option	 or  key until the required option is highlighted.

The following options are available:

**Paste:** allows you to paste the selected number into the normal dialling mode. Use this option to dial a number similar to one in the phonebook, a different extension in the same office, for example.

Use the  key to change the number as required; refer to page 22 for further details. When you are ready to dial, press the  key.

**Edit:** allows you to edit the phonebook entry.

Select **One Entry** to change one of the numbers associated with the selected name. If you then change the name, the number is saved separately. Select **All Entry** to change the name assigned to the entry.

**Delete:** allows you to delete the selected name and number(s) from the phonebook. You are asked to confirm that you wish to delete the name and number(s) by pressing the **Yes** soft key.

**Copy:** allows you to copy the selected number to another location. You can select a memory location and change the location number for the new number.

**Caller Group:** allows you to assign the entry to a caller group so that the phone alerts you in a particular way when the corresponding person calls you. Select one of the ten groups available.

To remove an entry from a group, select the **No Group** option.

For more information on how to change caller group properties, see page 40.

**Add Entry:** allows you to add a new number to the currently selected name.

# Dialling a Number from the Phonebook

---

Once you have stored phone numbers in the phonebook, you can dial them easily and quickly by using the location numbers that were assigned to them in the phonebook.

## Dialling a Number from the SIM Card

1. In Idle mode, enter the location number of the number you want to dial and press the  key.  
The list of the entries in the SIM card appears.
2. If necessary, scroll through the list using the Up or Down key.
3. When the number displays, press the **Dial** soft key or  key.

## Dialling a Number from the Phone's Memory

1. In Idle mode, press and hold the **0** key. A **+** appears.
2. Enter the location number of the number you want and press the  key.  
The list of the entries in the phone's memory appears.
3. If necessary, scroll through the list using the Up or Down key.
4. When the number displays, press the **Dial** soft key or  key.

## Speed-Dialling

---

You can assign up to eight phone numbers from Phonebook that you use most frequently to the number keys (**2** to **9**), and then dial them easily whenever you want, simply by pressing and holding the associated number key.

### Setting Up Speed-Dial Entries

1. When the idle screen is displayed, press the **Name** soft key.
2. Scroll to **Speed Dial** by pressing the  or  key and press the **Select** soft key.
3. Select the key to which you wish to assign the speed-dialling feature (keys  to ) and press the **OK** soft key.

**Note:** If you have already assigned a number to the key, the **Options** soft key replaces the **OK** soft key. Go to Step 6.

4. Select the required phonebook entry from the list and press the **View** soft key.
5. Select the required number if the entry has more than one number, by pressing the  or  key and press the **Select** soft key.
6. Once you have assigned a number to the selected key, the four options are available when you press the **Options** soft key:

**Change:** allows you to assign a different number to the key.

**Delete:** allows you to clear the setting so that no number is assigned to the key.

**Delete All:** allows you to clear the settings for all keys so that no numbers are assigned to any of the keys.

**Number:** allows you to view the number assigned to the key.

7. When you have finished, press the  or  key.

### Speed-Dialling from the Phonebook

To speed-dial the numbers assigned to keys  to , press and hold down the appropriate key.

**Note:** Memory location 1 is reserved for your Voice Mail server number.

## Searching for and Dialling a Number in the Phonebook

---

After storing numbers in the phonebook, you can search for them in two ways:

- By name
- By caller group

### Searching for a Number by Name

1. When the idle screen is displayed, press the **Name** soft key.
2. Press the **Select** soft key when **Search** is highlighted. You are asked to enter a name.
3. Enter the start of the name that you wish to find.

The phonebook entries are listed, starting with the first entry matching your input. This entry is also highlighted.

4. <b>To...</b>	<b>Then press the...</b>
View the high-lighted entry	<b>View</b> soft key.
Select a different entry	⤵ or ⤴ key until the required entry is highlighted.
Look for a name starting with a different letter	ⓧ key to clear the letters already entered and then press the key labelled with the required letter.

- Once you have found the required entry, press the ⤵ key to dial the number, or press the **Options** soft key to access the phonebook entry options; for further details, see page 34.

## Searching for a Number by Caller Group

- When the idle screen is displayed, press the **Name** soft key.
- Scroll to **Group Search** by pressing the ⤵ or ⤴ key and press the **Select** soft key.
- Enter the first few letters of the group name that you want to find.

The caller groups are listed, starting with the first group matching your input.

- Scroll to the required group by pressing the ⤵ or ⤴ key and press the **View** soft key.

The phonebook entries in the selected caller group are listed.

5. <b>To...</b>	<b>Then press the...</b>
View the high-lighted entry	<b>View</b> soft key.
Select a different entry	← or → key until the required entry is highlighted.

6. Once you have found the required entry, press the ↵ key to dial the number, or press the **Options** soft key to access the phonebook entry options; for further details, see page 34.

## Editing a Caller Group

---

1. When the idle screen is displayed, press the **Name** soft key.
2. Scroll to **Group Edit** by pressing the ← or → key and press the **Select** soft key.
3. Scroll through the group list by pressing the ← or → key.
4. When the required group is highlighted, press the **Options** soft key.
5. Select each option and change the settings, as required. The following options are available:
  - Call ring tone:** allows you to select the ring tone to be used when you receive a voice call from a person in the group.
  - SMS tone:** allows you to select the ring tone to be used when you receive a text message from a person in the group.

**Graphic:** allows you to select the graphic icon to be displayed when you receive a voice call from a person in the group.

**Group Name:** allows you to assign a name to the group; for information on how to enter characters, see page 43.

- When you have finished, press the  or  key.

## Deleting All Phonebook Entries

You can delete all entries in either the phone or SIM card memory or in both memories together.

- When the idle screen is displayed, press the **Name** soft key.
- Scroll to **Delete All** by pressing the  or  key and press the **Select** soft key.

3. <b>To...</b>	<b>Then press the...</b>
Select the memory(ies) to be cleared	<b>Mark</b> soft key.
Cancel the selection	<b>Unmark</b> soft key.
Delete all entries in the selected memory(ies)	<b>Delete</b> soft key.

- Enter the phone password and press the **OK** soft key.

**Note:** The password is preset to 00000000. To change it, see page 88.

## Phonebook

5. When the confirmation message is displayed, press the **Yes** soft key.
6. When you have finished, press the  or  key.

## Checking the Memory Status

---

You can check how many names and numbers are stored in the phonebook (SIM card and phone memories) or how many free locations remain.

1. When the idle screen is displayed, press the **Name** soft key.
2. Select the **Memory Status** option by pressing the  or  key and press the **Select** soft key.
3. Press the  or  key to view the number of entries in the card and phone memories in relation to the total capacity of each memory.
4. When you have finished, press the  or  key.

# Entering Text

When using your phone, you will often need to enter text. For example, when storing a name in the phonebook, creating your personal greeting, or scheduling events in your calendar. You can enter alphanumeric characters by using your phone's keypad.

You are provided with the following text input modes:

- **T9 mode**

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter – when you press the  key once, J, K, or L may be displayed. The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional upper/lower-case character modes.

- **Symbol mode**

This mode allows you to enter symbols, such as punctuation marks.

- **Upper/lower-case character modes**

These modes allow you to enter letters by pressing the key labelled with the required letter once, twice, three, or four times until the letter is displayed.

- **Number mode**


This mode allows you to enter numbers.

### Changing the Text Input Mode

---

When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the display.

Example: Writing a text message

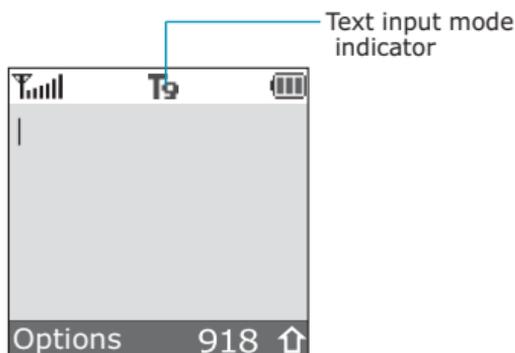

To select the...	Then press the  soft key until...
T9 mode	<b>T9</b> is displayed. See page 45.
Symbol mode	<b>⌘</b> is displayed. See page 46.
Upper-case character mode	<b>A</b> is displayed. See page 47.
Lower-case character mode	<b>a</b> is displayed. See page 47.
Number mode	<b>1</b> is displayed. See page 48.

**Note:** Additional text input modes may be available, depending on your country.

## Using the T9 Mode

---

The T9 predictive text input mode allows you to key in any character using single keystrokes. This text input mode is based on a built-in dictionary.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press each key only once for one letter.

Example: To enter *HELLO* in the T9 mode, press , , ,  and .

The word that you are typing appears in the display. It may change with each key that you press.

2. Enter the whole word before editing or deleting the keystrokes.
3. If the word is correct, start entering the next word.

Otherwise, press the ,  or  key repeatedly to display alternative word choices for the keys that you have pressed.


Example: Both *OF* and *ME* have the sequence , . The phone displays the most commonly used choice first.

4. Complete each word with a space by pressing the  key.
  - To type words not found in the T9 mode, change the text input mode to the upper/lower-case character input mode.

## Entering Text

- To enter full stops, hyphens or apostrophes, press the **1<sup>oo</sup>** key. The T9 mode applies grammar rules to ensure that the correct punctuation is used.


Example: **1<sup>oo</sup>** is used twice to display two punctuation marks:

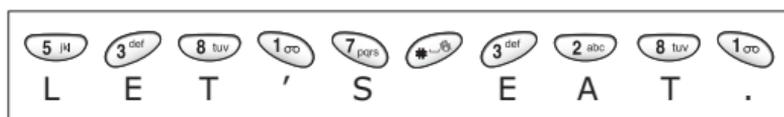

- To change the case in the T9 mode, use the **\*<sup>ab</sup>** key. There are two cases:  
**to** Lower case  
**To** Upper case
- You can move the cursor by using the **(** and **)** keys. To delete letters, press the **⌫** key. Press and hold down the **⌫** key to clear the display.

## Using the Symbol Mode

The Symbol mode enables you to insert symbols in a text message.

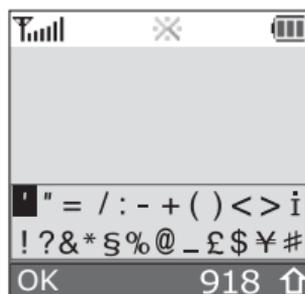

Use the navigation keys to scroll to the required symbol and then press the **OK** soft key to insert the highlighted symbol into your message.

## Using the Upper/Lower-Case Character Modes

Use the  to  keys to enter your text.

1. Press the key labelled with the required letter:
  - Once for the first letter
  - Twice for the second letter
  - And so on
2. Select the other letters in the same way.

**Note:** The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to move right automatically, and then select the next letter.

Refer to the table below for more information about the characters available.

Key	Characters in the Order Displayed	
	Upper Case	Lower Case
1	Space . 1 ! ? & i ÷ §	. % @ _ £ \$ ¥ ¤ §
2	A B C 2 Ä Å Æ Ç Γ	a b c 2 à á â ã æ ç
3	D E F 3 É Δ Φ	d e f 3 è é φ
4	G H I 4 Θ Ψ	g h i 4 ì ψ
5	J K L 5 Λ	j k l 5 λ
6	M N O 6 Ñ Ø Ö ö	m n o 6 ñ ø ò ö
7	P Q R S 7 Π Σ Ξ	p q r s 7 β Σ Ξ
8	T U V 8 Ü ü	t u v 8 ù ü
9	W X Y Z 9 Ω	w x y z 9 ω
0	0 * # , ; ' " =	/ : - + ( ) < >

**Note:** The characters available in these modes may be different, depending on your country.

## Entering Text

- To insert a space, press the  key.
- You can move the cursor by using the ( and ) keys. To delete letters, press the  key. Press and hold down the  key to clear the display.

## Using the Number Mode

---

The Number mode enables you to enter numbers in a text message (a telephone number for example). Press the keys corresponding to the required digits before manually switching back to the appropriate text input mode.

# Options During a Call

Your phone provides a number of control functions that you can use during a call.

## Putting a Call on Hold

---

You can place the current call on hold whenever you want. You can make another call while you have a call in progress if this service is supported by the network. Of these two calls, one is active and the other is on hold and you can swap between the calls.

To place a call on hold, simply press the **Hold** soft key. You can reactivate the call whenever you want, by pressing the **Unhold** soft key.

To make a call while you have a call in progress, proceed as follows:

1. Key in the phone number that you wish to dial or look it up in the phonebook.
2. Press the  key to dial the second call.

The first call is automatically put on hold.

Or alternatively, proceed as follows.

1. Put the current call on hold by pressing the **Hold** soft key.
2. Make the second call in the normal way.

To swap between the two calls, simply press the **Swap** soft key.

The current call is placed on hold and the call on hold is reactivated so that you can continue conversing with the other party.

When you have finished, end each call normally by pressing the  key.

### Switching the Microphone Off (Mute)

You can temporarily switch your phone's microphone off, so that the other party cannot hear you.

Example: You wish to say something to another person in the room but do not want the caller to hear you.

To switch the microphone off temporarily, proceed as follows:

1. Press the **Options** soft key.
2. If necessary, press the  key to highlight the **Mute** option.
3. Press the **OK** soft key.

The other party can no longer hear you.

To switch the microphone back on, proceed as follows:

1. Press the **Options** soft key.
2. If necessary, press the  key to highlight the **Unmute** option.
3. Press the **OK** soft key.

The other party can hear you again.

## Muting/Sending Key Tones

---

These options allow you to turn the key tones off or on. If the **Mute keys** option is selected, your phone does not transmit the key tones. It allows you to press keys without hearing annoying key tones during a call.

**Note:** To communicate with answering machines or computerised telephony systems, the **Send keys** option must be selected.

## Sending DTMF Tones

---

You can send the DTMF (dual tone multi-frequency) tones corresponding to a number entered during a call.

This option is helpful when submitting a password or account number to an automated system, like a banking service.

To send DTMF tones, proceed as follows:

1. When you are connected to the teleservice system, press the **Options** soft key.
2. Press the  key to highlight the **Send DTMF** option.
3. Press the **OK** soft key.
4. Enter the number you wish to send and press the **OK** soft key.  
The tones corresponding to the number displayed are sent.

**Note:** You can also search for a number in the phonebook by pressing the **Name** soft key. For a more detailed description of the Phonebook feature, refer to page 31.

### Searching for a Number in the Phonebook

---

You can search for a number in the phonebook during a call.

1. Press the **Options** soft key.
2. Press the  key to highlight the **Phonebook** option.
3. Press the **OK** soft key.

The phonebook entries are listed.

4. Enter the name that you wish to find.

If you enter the start of the name, the phonebook entries are listed, starting with the first entry matching your input. The entry is also highlighted.

5. Scroll to an entry by pressing the  or  key, and press the **View** soft key to view the highlighted entry.

For a more detailed description of the Phonebook feature, refer to page 31.

### Using the SMS Service

---

If you receive an SMS (Short Message Service) message during a call, the message icon  flashes in the display. The **SMS Service** option enables you to use this feature.

For further details on the SMS service, refer to page 63.

## Answering a Second Call

---

You can answer an incoming call while you have a call in progress, if this service is supported by the network and you have set the **Call Waiting** menu option (**Menu 6.3**) to **Activate** (see page 108). You will be notified of an incoming call by a call waiting tone.

To answer a call while you have a call in progress, proceed as follows:

1. Press the  key to answer the incoming call. The first call is automatically put on hold.
2. To switch between the two calls, press the **Swap** soft key.

To end a held call, press the **Options** soft key and select the **End Held Call** option.

3. To end the current call, press the   key.

## Making a Multiparty Call

---

A multiparty call is a network service that allows up to six people to take part simultaneously in a multiparty or conference call. For more information, contact your service provider.

### Setting up the Multiparty Call

1. Call the first participant in the normal way.
2. Call the second participant in the normal way. The first call is automatically put on hold.
3. To join the first participant to the multiparty call, press the **Options** soft key and select the **Join** option.

## Options During a Call

4. To add a new person to the multiparty call, call the person in the normal way, then press the **Options** soft key and select the **Join** option.

You can add incoming callers by answering the call and pressing **Options**, followed by **Join**. Repeat as required.

## Having a Private Conversation With One Participant

1. Press the **Options** soft key and choose the **Select one** option.

The list of call participants appears.

2. Highlight the required person, by pressing the  or  key, followed by the **Select** soft key or the  key.
3. Select the **Private** option.

Now you can talk privately to that person. The other participants can continue to converse with each other.

4. To return to the multiparty call, press the **Options** soft key and select **Join**.

All of the multiparty call participants can now hear each other.

## Dropping One Participant

1. Press the **Options** soft key and choose the **Select one** option.

The list of call participants appears.

2. Highlight the required person, by pressing the  or  key, followed by the **Select** soft key or the  key.

3. Select **Remove**.

The call is ended with that participant, but you can continue to talk to the other participants.

4. End the multiparty call by pressing the  key.

# Using the Menus

The phone offers a range of functions that allow you to tailor it to your needs. These functions are arranged in menus and sub-menus.

The menus and sub-menus can be accessed by scrolling using the navigation keys or by using the shortcuts.

## Accessing Menu Functions by Scrolling

1. In idle mode, press the **Menu** soft key to access the menu facility.
2. Scroll using the  and  keys to reach the required main menu, **Phone Settings** for example. Press the **Select** soft key or the  key to enter the menu.
3. If the menu contains any sub-menus, **Language** for example, you can access them by scrolling using the  and  keys and pressing the **Select** soft key.

If the menu that you have selected contains further options, repeat the same procedure.

4. To...	Then press the...
Scroll through the menus	 or  key or use the  and  keys on the left side of the phone.
Confirm the chosen setting	<b>Select</b> soft key or the  key.
Return to the previous menu level	 soft key or the  key.
Exit the menu without changing the settings	  key.

## Accessing Menu Functions by Using Shortcuts

---

The menu items (menu, sub-menus and options) are numbered and can be accessed quickly by using their shortcut numbers. The shortcut number is shown in the bottom right next to the  soft key on the display. Simply press the **Menu** soft key and key in the required number.

### Notes:

- The numbers assigned to each menu option are indicated in the list on page 58. They may not match the menu number on the phone. It depends on the services supported by your SIM card.
- For the menu number 10, press the  key.

Example: Accessing the **Language** option.

1. Press the **Menu** soft key.
2. Press  for **Phone Settings**.
3. Press  for **Language**.

The languages available are displayed directly.

# List of Menu Functions

---

The following list shows the menu structure available and indicates the:

- Number assigned to each option
- Page on which you can find a description of each feature

**Note:** If you use a SIM AT card that provides additional services, the **SIM AT** menu is displayed first when you press the **Menu** soft key to enter the menu facility. For further details, refer to your SIM card instructions.

## 1. Messages (see page 63)

- 1.1 Inbox
- 1.2 Outbox
- 1.3 Write New
- 1.4 Templates
- 1.5 Settings
  - 1.5.1 Setting 1\*
  - 1.5.2 Setting 2\*
  - 1.5.3 Common Setting
- 1.6 Delete All
- 1.7 My Objects
  - 1.7.1 My Melody
  - 1.7.2 My Picture
  - 1.7.3 My Animation
  - 1.7.4 Delete All
- 1.8 Memory Status
  - 1.8.1 SIM memory
  - 1.8.2 PHONE memory
  - 1.8.3 CB memory
- 1.9 Voice Mail
  - 1.9.1 Connect to Voice Server
  - 1.9.2 Voice Service Number

---

\* Shown only if supported by your SIM card.

## 1. Messages *(continued)*

- 1.10 Broadcast
  - 1.10.1 Read
  - 1.10.2 Receive
  - 1.10.3 Channel List
  - 1.10.4 Language

## 2. Call Records *(see page 75)*

- 2.1 Missed Calls
- 2.2 Received Calls
- 2.3 Dialed Calls
- 2.4 Delete All
- 2.5 Call Time
  - 2.5.1 Last Call Time
  - 2.5.2 Total Sent
  - 2.5.3 Total Received
  - 2.5.4 Reset Timers
- 2.6 Call Cost<sup>\*</sup>
  - 2.6.1 Last Call Cost
  - 2.6.2 Total Cost
  - 2.6.3 Max Cost
  - 2.6.4 Reset Counters
  - 2.6.5 Set Max Cost
  - 2.6.6 Price/Unit

## 3. Sound Settings *(see page 79)*

- 3.1 Ring Tone
- 3.2 Ring Volume
- 3.3 Alert Type
  - 3.3.1 Light Only
  - 3.3.2 Melody
  - 3.3.3 Vibration
  - 3.3.4 Vibra+Melody
- 3.4 Keypad Tone
  - 3.4.1 Off
  - 3.4.2 Cool
  - 3.4.3 Piano
  - 3.4.4 Tone
  - 3.4.5 Beep
- 3.5 Message Tone
  - 3.5.1 SMS Tone
  - 3.5.2 SMS-CB Tone

### 3. Sound Settings *(continued)*

- 3.6 Power On/Off
  - 3.6.1 Off
  - 3.6.2 Classical
  - 3.6.3 Cheerful
- 3.7 Alerts on Call
- 3.8 Extra Tones
  - 3.8.1 Error Tone
  - 3.8.2 Minute Minder
  - 3.8.3 Connect Tone

### 4. Phone Settings (see page 84)

- 4.1 My Settings
  - 4.1.1 Wallpaper
  - 4.1.2 Menu Style
  - 4.1.3 Auto Key Lock
- 4.2 Greeting Message
- 4.3 Own Number
  - 4.3.1 Number 1
  - 4.3.2 Number 2
- 4.4 Language
- 4.5 Security
  - 4.5.1 PIN Check
  - 4.5.2 Change PIN
  - 4.5.3 Phone Lock
  - 4.5.4 Change Password
  - 4.5.5 SIM Lock
  - 4.5.6 FDN Mode\*
  - 4.5.7 Change PIN2\*
- 4.6 Display Settings
  - 4.6.1 Brightness
  - 4.6.2 Back Light
  - 4.6.3 Service Light
  - 4.6.4 Graphic Logo
- 4.7 Extra Settings
  - 4.7.1 Auto Redial
  - 4.7.2 Anykey Answer
- 4.8 Short Cut
  - 4.8.1 Key up
  - 4.8.2 Key down
  - 4.8.3 Key right
  - 4.8.4 Key left
- 4.9 Reset Settings

\* Shown only if supported by your SIM card.

## 5. **Organiser** (see page 94)

- 5.1 Calendar
- 5.2 To Do List
- 5.3 Time & Date
  - 5.3.1 Set Time
  - 5.3.2 Set Date
  - 5.3.3 World Time
  - 5.3.4 Time Format
- 5.4 Alarm
  - 5.4.1 Once Alarm
  - 5.4.2 Daily Alarm
  - 5.4.3 Morning Call
  - 5.4.4 Remove Alarm
  - 5.4.5 Autopower
- 5.5 Calculator
- 5.6 Currency Exchange

## 6. **Network Services** (see page 104)

- 6.1 Call Diverting
  - 6.1.1 Divert Always
  - 6.1.2 Busy
  - 6.1.3 No Reply
  - 6.1.4 Unreachable
  - 6.1.5 Cancel All
- 6.2 Call Barring
  - 6.2.1 All Outgoing
  - 6.2.2 International
  - 6.2.3 International Except to Home
  - 6.2.4 All Incoming
  - 6.2.5 Incoming While Abroad
  - 6.2.6 Cancel All
  - 6.2.7 Change Barring Password
- 6.3 Call Waiting
  - 6.3.1 Voice Calls
  - 6.3.2 Fax Calls
  - 6.3.3 Data Calls
  - 6.3.4 Cancel All
- 6.4 Network Selection
  - 6.4.1 Automatic
  - 6.4.2 Manual

## 6. Network Services *(continued)*

- 6.5 Caller ID
  - 6.5.1 Default
  - 6.5.2 Hide Number
  - 6.5.3 Send Number
- 6.6 Closed User Group
  - 6.6.1 Index List
  - 6.6.2 Outside Access
  - 6.6.3 Default Group
  - 6.6.4 Deactivate\*

## 7. Fun Box *(see page 112)*

- 7.1 Games
  - 7.1.1 Honey Ball
  - 7.1.2 Hamster Box
- 7.2 WAP Browser
  - 7.2.1 Home
  - 7.2.2 Favorite
  - 7.2.3 http://
  - 7.2.4 Settings
  - 7.2.5 Clear Cache
- 7.3 Downloads
  - 7.3.1 Games & More
  - 7.3.2 Sounds
  - 7.3.3 Pictures
  - 7.3.4 DNS Setting

---

\* Shown only if the Closed User Group feature is active.

# Messages

The SMS (Short Message Service) function is a network service and may not be supported by your network. Messages can be sent by text, fax, E-mail and paging messaging systems, provided that these services are supported by your network. To send text messages by phone, you must obtain the number of the SMS centre from your service provider.

When the message icon  appears, you have received new text messages. If the message memory is full, an error message is displayed and you cannot receive any new messages. Use the **Delete** option in your inbox and outbox to delete obsolete messages.

When you receive a new message in the key lock mode, you cannot view it without unlocking the keypad. To do so, press the **Unlock** soft key and the  key.

## **Inbox** *(Menu 1.1)*

---

The inbox is used to store the messages that you have received.

When you select this menu, the list of messages in the inbox is displayed with the senders' phone numbers or names, if available in your phonebook.

1. Select the message you wish to read from the list and press the **View** soft key to view the message contents.
2. To scroll through the message, press the  or  key.
3. To scroll to the previous or next message, press the  or  key.

## Messages

While reading a message, you can choose the following options by pressing the **Options** soft key:

**Delete:** allows you to delete the message.

**Send:** allows you to resend the message. For further information on how to send a message, see page 66.

**Reply:** allows you to reply to the sender by sending a text message.

**Call Back:** allows you to call the sender back.

**Cut Address:** allows you to extract URL or E-mail addresses or phone numbers from the message text, so that you can save them in the phone memory.

**Move To Phone:** allows you to move the message from the SIM card to the phone memory. This option is only available when you select a message stored in the SIM card.

**Move To Sim:** allows you to move the message from the phone memory to the SIM card. This option is only available when you select a message stored in the phone memory.

**Select Objects:** allows you to save media objects, such as sounds or images, from the message into your phone. You can then use the objects when writing a message; for details, see page 68.

## Outbox *(Menu 1.2)*

---

The outbox is used to store the messages that you have already sent or will send.

When you select this menu, the list of messages in the outbox is displayed with the recipients' phone numbers or names, if available in your phonebook.

1. Select the message you wish to read from the list and press the **View** soft key to view the message contents.
2. To scroll through the message, press the  or  key.
3. To scroll to the previous or next message, press the  or  key.

While reading a message, you can choose the following options by pressing the **Options** soft key:

**Delete:** allows you to delete the message.

**Send:** allows you to (re)send the message. For further information on how to send a message, see page 66.

**Cut Address:** allows you to extract URL or E-mail addresses or phone numbers from the message text, so that you can save them in the phone memory.

**Move To Phone:** allows you to move the message from the SIM card to the phone memory. This option is only available when you select a message stored in the SIM card.

**Move To Sim:** allows you to move the message from the phone memory to the SIM card. This option is only available when you select a message stored in the phone memory.

**Select Objects:** allows you to save media objects, such as sounds or images, from the message into your phone. You can then use the objects when writing a message; for details, see page 68.

### Write New *(Menu 1.3)*

---

Via this menu, you can write and send a text message.

**Note:** You can enter up to 918 alphanumeric characters for your message. If you add media objects to the message, the number of characters you can enter is decreased.

### Creating a Simple Text Message

1. Create your message as required.

**Note:** For information on how to enter characters, refer to page 43.

2. When you have completed your message, press the **Options** soft key. The following options are available:

**Send:** allows you to send the message. The message will be deleted after sending.

**Save and Send:** allows you to save a copy of the message in the specified memory and then send the message to the required destination. You can read the message in your outbox.

**Save:** allows you to save the message to the specified memory so that it can be sent later. You can read the message in your outbox.

For information about the **Text Formatting, Add Objects, Add Templates, Add Phonebook, Add Bookmark** and **Language** options, see "Creating a Message Using the Options" on page 67.

3. Select **Send** or **Save and Send**, and press the **Select** soft key.

If you just want to save the message, select **Save**. After saving the message, the phone returns to the **Messages** menu.

4. Select the memory in which the message is to be saved and press the **OK** soft key.
5. Enter a destination number.

To look for a number in your phonebook, press the **Name** soft key and select one from the list.

6. Press the **OK** soft key. The message is sent.

**Note:** If the phone fails to send the message, it asks you if you want to retry. Press the **OK** soft key to resend it. Otherwise, press the **Exit** soft key.

## Creating a Message Using the Options

1. Create your message as required.
2. Press the **Options** soft key.
3. Select one of the following options as required by using the **↵** and **⏪** keys and pressing the **Select** soft key:

**Text Formatting:** allows you to format the style of the text. For the **Size** attribute, the **Normal**, **Large** and **Small** sizes are available. For the **Underline** and **Strikethrough** attributes, select **On** or **Off**. The attributes can be combined.

**Add Objects:** allows you to add a sound, picture, or animated images to the message. Select the category of object to be added. You can select the various factory-set items or choose an item received within a message.

**Add Templates:** allows you to apply one of the preset message templates to the text. Select one of the five messages predefined via the **Templates** menu option (**Menu 1.4**); for further details, see below.

**Add Phonebook:** allows you to insert a phonebook entry in your message. Select the appropriate entry in the list.

**Add Bookmark:** allows you to add the address of a Web page stored in your Favorite list (**Menu 7.2.2**). Select the Web page from the list.

**Language:** allows you to change the language to be used in the T9 input mode. Select the language to be used.

4. Complete the message, and send or save it by following the procedure from Step 3 on page 66.

## Templates *(Menu 1.4)*

---

Using this menu, you can preset up to five messages that you use most frequently.

Scroll through the template list using the **←** and **→** keys. When the required message template is highlighted, press the **Options** soft key.

**Edit:** allows you to write a new message or edit the selected message.

**Note:** For information on how to enter characters, refer to page 43.

**Send Message:** allows you to recall the selected message. Once you have completed the message, you can send, save and send, or simply save it. For details on how to send a message, see page 66.

**Delete:** allows you to delete the selected message. You are asked to confirm the deletion by pressing the **Yes** soft key.

## Settings *(Menu 1.5)*

---

Via this menu, you can set up default SMS information. A setting group is a collection of settings required to send messages. The number of setting groups available depends on the capacity of your SIM card.

### Notes:

- The setting options available in this menu may be different, depending on your service provider.
- The last setting group accessed is used automatically when you send a message.

**Setting x** (where **x** is the setting group number): each group has its own sub-menu.

Service Centre: allows you to store or change the number of your SMS centre required when sending messages. You must obtain this number from your service provider.

Default Destination: allows you to store the default destination number. The number will automatically be displayed on the Destination screen when you create a message.

Default Type: allows you to set the default message type (Text, Fax, Email, and Paging). The network can convert the messages into the selected format.

## Messages

Default Validity: allows you to set the length of time for which your text messages will be stored at the message centre while attempts are made to deliver them.

Setting Name: allows you to give a name to the setting group currently being defined.

**Common Setting**: the following options are available:

Reply Path: allows the recipient of your SMS message to send you a reply message via your message centre, if the service is provided by the network.

Delivery Reports: allows you to activate or deactivate the report function. When this function is activated, the network informs you whether your message has been delivered or not.

Bearer Selection: allows you to switch between **GSM** and **GPRS**.

## Delete All *(Menu 1.6)*

This menu option allows you to delete all of the messages in each message box. You can also delete all of your messages at one time.

To...	Press the...
Select a message box to clear	<b>←</b> or <b>→</b> key. To delete all of your messages, select <b>All Messages</b> .
Place a check mark	<b>Mark</b> soft key.
Remove the check mark	<b>Unmark</b> soft key.
Delete the marked messages	<b>Delete</b> soft key.

When a confirmation message is displayed, press the **Yes** soft key to confirm.

## My Objects *(Menu 1.7)*

After saving any objects received in messages into your phone memory, using the **Select Objects** option, you can see the objects in this menu.

Three categories of objects are available:

- **My Melody**
- **My Picture**
- **My Animation**

To delete a selected object, press the **Delete** soft key.

## Messages

You can delete all objects using the **Delete All** option (**Menu 1.7.4**).

To...	Then press the...
Select a category of objects to be deleted	<b>Mark</b> soft key.
Cancel the selection	<b>Unmark</b> soft key.
Delete the objects in the selected category(ies)	<b>Delete</b> soft key.

If you want to delete all objects, select **All Objects**.

## Memory Status *(Menu 1.8)*

---

This menu shows how many messages are currently stored in the SIM, phone and cell broadcast (CB) memories.

## Voice Mail *(Menu 1.9)*

---

This menu provides you with a way of accessing your voice mailbox (if provided by your network).

The following options are available:

**Connect to Voice Server:** before using this feature, you must enter the voice server number obtained from your service provider (see menu **1.9.2**). You can then select this option and simply press the **OK** soft key to listen to your messages.

To quickly connect to the voice server, press and hold down the  key in idle mode.

**Voice Service Number:** allows you to change the voice mail server number, if necessary.

To...	Then press the...
Enter the server number	Corresponding numeric keys.
Correct a digit	 key.
Move the cursor to the left/right without clearing the digit	<b>( or )</b> key.

**Note:** Voice Mail is a network feature. Please contact your service provider for more information.

## **Broadcast** *(Menu 1.10)*

---

This network service allows you to receive text messages on various topics, such as the weather or traffic. Messages are displayed immediately they are received, provided that:

- The phone is in idle mode
- The **Receive** option is set to **Enable**
- The message channel is currently active in the channel list

The following options are available:

**Read:** lets you view the message. **Volatile** displays the messages from the network, but loses its contents as soon as the phone is switched off. Scroll through the message using the  and  keys. While reading a message, press the **Save** soft key to store the message in the **Archive** box for later retrieval.

## Messages

**Receive:** allows you to enable or disable the reception of broadcast messages.

**Channel List:** allows you to indicate the channels from which you wish to receive broadcast messages. The following options are available.

Select: used to enable or disable channels in the list by marking or unmarking them respectively.

Add Channel: used to declare the ID and title for a new channel.

Delete: used to remove a channel from the list.

Edit: used to change the ID and title of an existing channel.

**Language:** allows you to select your preferred language to be used when displaying cell broadcast messages.

Please contact your service provider for more information.

# Call Records

Via this menu, you can view the:

- Missed, received, or dialled calls
- Length of a call you made or received
- Cost of your calls

**Note:** You can access all numbers in the three types of call records by pressing the  key in idle mode.

## Missed Calls *(Menu 2.1)*

---

This option lets you view the most recent 20 unanswered calls.

The number or name, if available, is displayed, together with the date and time when the call was received. By pressing the **Options** soft key, you can:

- Edit the number, if available, and save it in the phonebook
- Delete the call from the list

You can also dial the number by pressing the  key.

## Received Calls *(Menu 2.2)*

---

This option lets you view the most recent 20 phone calls answered.

The number or name, if available, is displayed, together with the date and time when the call was received. By pressing the **Options** soft key, you can:

- Edit the number, if available, and save it in the phonebook
- Delete the call from the list

You can also dial the number by pressing the  key.

### Dialled Calls *(Menu 2.3)*

---

This option lets you view the most recent 20 numbers dialled.

The number or name, if available, is displayed, together with the date and time when the call was made. By pressing the **Options** soft key, you can:

- Edit the number and save it in the phonebook
- Delete the number

You can also dial the number by pressing the  key.

### Delete All *(Menu 2.4)*

---

You can delete all numbers stored in each call record.

To...	Then press the...
Select the type(s) of calls to be deleted	 or  key, followed by the <b>Mark</b> soft key.
Cancel the selection	<b>Unmark</b> soft key.
Delete all calls of the selected type	<b>Delete</b> soft key.

When a confirmation message is displayed, press the **Yes** soft key to confirm.

## Call Time *(Menu 2.5)*

---

This option lets you view the timers for calls made and received.

**Note:** The actual time invoiced for calls by your service provider may vary, depending on network features, such as rounding-off for billing purposes.

The following timers are available:

**Last Call Time:** length of the last call.

**Total Sent:** total length of all calls made since the timer was last reset.

**Total Received:** total length of all calls received since the timer was last reset.

**Reset Timers:** option used to reset the call timers; you must first enter the phone password (see page 125) and then press the **OK** soft key.

## Call Cost *(Menu 2.6)*

---

This feature lets you view the cost of calls. Depending on your SIM card, this menu option may not be shown.

The following timers are available:

**Last Call Cost:** cost of the last call made.

**Total Cost:** total cost of all calls made since the cost counter was last reset. If the total cost exceeds the maximum cost set via the **Set Max Cost** option, you can no longer make any calls until you reset the counter.

## Call Records

**Max Cost:** maximum cost set via the **Set Max Cost** option (see below).

**Reset Counters:** option used to reset the cost counter; you must first enter your PIN2 (see page 127) and then press the **OK** soft key.

**Set Max Cost:** option used to enter the maximum cost that you authorise for your calls; you must first enter your PIN2 (see page 127) and then press the **OK** soft key.

**Price/Unit:** option used to set the cost of one unit; this price per unit is applied when calculating the cost of your calls; you must first enter your PIN2 (see page 127) and then press the **OK** soft key.

# Sound Settings

You can use the Sound Settings feature to customise various settings, such as the:

- Ring melody, volume and type
- Sounds made when you press a key, make an error or receive a message

**Note:** When the phone is in the silent mode (see page 28), you cannot change the sound settings.

## Ring Tone *(Menu 3.1)*

---

This option allows you to select the required ring melody.

You can choose between many different melodies. If you have downloaded any sounds from the Internet or EasyGPRS programme, you can use them in this menu.

## Ring Volume *(Menu 3.2)*

---

This option allows you to adjust the ring volume to one of five levels.

Use the  and  keys or the  and  keys on the left side of the phone.

### Alert Type *(Menu 3.3)*

---

This option allows you to specify how you are to be informed of any incoming calls.

The following options are available:

**Light Only:** only the backlight is switched on; the phone neither rings nor vibrates.

**Melody:** the phone rings using the ring melody selected via the **Ring Tone** menu option (**Menu 3.1**); see page 79.

**Vibration:** the phone vibrates but does not ring.

**Vibra+Melody:** the phone first vibrates three times and then starts ringing.

### Keypad Tone *(Menu 3.4)*

---

This option allows you to select the tone that the keypad generates when you press a key.

The following options are available:

**Off:** the keys do not make any sound.

**Cool:** each key, when pressed, generates a pure sound.

**Piano:** each key, when pressed, generates a different note in the musical scale.

**Tone:** each key, when pressed, makes a different sound.

**Beep:** each key, when pressed, makes the same sound.

## Message Tone *(Menu 3.5)*

---

This option allows you to select how the phone informs you that a new message has been received.

### **SMS Tone** *(Menu 3.5.1)*

This option allows you to select how the phone informs you that a new SMS message has been received.

The following options are available:

**Off:** the phone does not use the SMS tone.

**Light Only:** the service light on the top left of the phone flashes.

**Vibration:** the phone vibrates.

**Single Beep:** the phone beeps once.

**SMS Tone X:** the phone uses an SMS tone. You are provided with several SMS tones.

### **SMS-CB Tone** *(Menu 3.5.2)*

This option allows you to select how the phone informs you that a new cell broadcast (CB) message has been received.

The following options are available:

**Off:** the phone does not use the CB tone.

**Light Only:** the service light on the top left of the phone flashes.

**Vibration:** the phone vibrates.

**Single Beep:** the phone beeps once.

**SMS-CB Tone X:** the phone uses a CB tone. You are provided with several CB tones.

### **Power On/Off** *(Menu 3.6)*

---

This option allows you to turn on or off the sounds that the phone generates when it is switched on and off.

The following options are available:

**Off:** when you switch the phone on and off, you do not hear a jingle.

**Classical:** when you switch the phone on and off, you hear the default jingle.

**Cheerful:** when you switch the phone on and off, you hear a cheerful jingle.

### **Alerts on Call** *(Menu 3.7)*

---

This option allows you to choose whether or not the phone informs you when you receive a new message or when an alarm goes off during a call.

The following options are available:

**Off:** the phone doesn't actively alert you to incoming messages or alarms. It only displays the corresponding notification.

**On:** the phone alerts you with a beep and displays the corresponding notification.

## Extra Tones *(Menu 3.8)*

---

You can customise various other tones used by the phone.

<b>To turn a given tone...</b>	<b>Then press the...</b>
On	<b>On</b> soft key. A check mark is displayed in front of the option.
Off	<b>Off</b> soft key. The check mark is no longer displayed.

The following options are available:

**Error Tone:** indicates whether the phone must beep to inform you if you have made a mistake.

**Minute Minder:** indicates whether the phone must beep every minute during an outgoing call to keep you informed of the length of your call.

**Connect Tone:** indicates whether the phone must beep when the phone connects to the network.

# Phone Settings

Many different features of your phone can be customised to suit your preferences. All of these features are accessed via the **Phone Settings** menu.

## My Settings *(Menu 4.1)*

---

You can change the background image and the menu display style according to your preference.

### Wallpaper *(Menu 4.1.1)*

This option allows you to change the background image (wallpaper) to be displayed in idle mode.

To change the background image, proceed as follows:

1. Scroll through the list by pressing the **←** or **→** key.

You have various preset images available. You can also select a blank background or any images downloaded from the Internet or the EasyGPRS programme.

2. Press the **View** soft key when the required image is highlighted.

The selected image is displayed.

3. After viewing the image, press the **Select** soft key to display it on the idle screen.

4. To display the...	Press the...
Current date and time on top of the wallpaper image	<b>Yes</b> soft key.
Wallpaper image only	<b>No</b> soft key.

## Menu Style *(Menu 4.1.2)*

This option allows you to select the menu display style. You can choose either **Zoom Style** or **Cycle Style**.

## Auto Key Lock *(Menu 4.1.3)*

This menu option allows you to set the phone to automatically lock the keys if no key is pressed within a given period of time. This feature is useful to avoid pressing keys by mistake.

To use this feature, select the length of time for which the phone waits before it locks the keypad. **15 Sec**, **30 Sec**, **1 Min** and **2 Min** are available.

If you do not want to use this feature, select **Off**.

**Note:** You can manually lock the keypad. For further details, see page 21.

## Greeting Message *(Menu 4.2)*

This option allows you to set a greeting message to be displayed briefly when the phone is switched on. When you select this menu option, the current message is displayed.

To...	Then press the...
Clear the existing message	 key and hold it down until the message is cleared.
Enter a new message	Appropriate alphanumeric keys.
Change the text input mode	↑ soft key.

For information on how to enter characters, refer to page 43.

### Own Number *(Menu 4.3)*

---

This feature allows you to:

- Assign a name to your own phone number registered on your SIM card
- Edit the name and number

This function is a memory aid, which you can use to check your own phone number if you need to do so.

Any changes made here do not in any way affect the actual subscriber number on your SIM card.

### Language *(Menu 4.4)*

---

You can select a display language. When the language option is set to **Automatic**, the language is automatically selected according to the language of the SIM card used.

**Note:** Depending on your country, service provider, or software version of the phone, the **Automatic** option may not display.

## Security *(Menu 4.5)*

---

The Security feature enables you to restrict the use of your phone to:

- The people of your choice
- The types of calls of your choice

Various codes and passwords are used to protect the features of your phone. They are described in the following sections (see also pages 125-128).

### **PIN Check** *(Menu 4.5.1)*

When the PIN Check feature is enabled, you must enter your PIN each time you switch the phone on. Consequently, any person who does not have your PIN cannot use your phone without your approval.

**Note:** Before disabling the PIN Check feature, you must enter your PIN.

To change your PIN, refer to the **Change PIN** menu option (**Menu 4.5.2**).

The following options are available.

**Disable:** the phone connects directly to the network when you switch it on.

**Enable:** you must enter the PIN each time the phone is switched on.

### **Change PIN** *(Menu 4.5.2)*

This feature allows you to change your current PIN to a new one, provided that the PIN Check feature is enabled. You must enter the current PIN before you can specify a new one.

Once you have entered a new PIN, you are asked to confirm it by entering it again.

### **Phone Lock** *(Menu 4.5.3)*

When the Phone Lock feature is enabled, the phone is locked and you must enter the 4 to 8-digit phone password each time the phone is switched on.

The password is factory set to 00000000. To change the phone password, refer to the **Change Password** menu option (**Menu 4.5.4**).

Once the correct password has been entered, you can use the phone until you switch it off.

The following options are available.

**Disable:** you are not asked to enter the phone password when you switch the phone on.

**Enable:** you are required to enter the phone password when you switch the phone on.

### **Change Password** *(Menu 4.5.4)*

The Change Password feature allows you to change your current phone password to a new one. You must enter the current password before you can specify a new one.

The password is factory set to 00000000. Once you have entered a new password, you are asked to confirm it by entering it again.

## **SIM Lock** *(Menu 4.5.5)*

When the SIM Lock feature is enabled, your phone only works with the current SIM. You must enter the SIM lock code.

Once you have entered the SIM lock code, you are asked to confirm it by entering it again.

To unlock the SIM, you must enter the SIM lock code.

## **FDN Mode** *(Menu 4.5.6)*

The FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers.

The following options are available.

**Disable:** you can phone any number.

**Enable:** you can only call phone numbers stored in the phonebook. You must enter your PIN2.

**Note:** Not all SIM cards have a PIN2. If your SIM card does not, this menu option is not displayed.

To change your PIN2, refer to the **Change PIN2** menu option (**Menu 4.5.7**) below.

## **Change PIN2** *(Menu 4.5.7)*

The Change PIN2 feature allows you to change your current PIN2 to a new one. You must enter the current PIN2 before you can specify a new one.

Once you have entered a new PIN2, you are asked to confirm it by entering it again.

**Note:** Not all SIM cards have a PIN2. If your SIM card does not, this menu option is not displayed.

### Display Settings *(Menu 4.6)*

---

In this menu, you can customise the settings for the lights and the display.

#### **Brightness** *(Menu 4.6.1)*

This option allows you to adjust the brightness of the display to see it better in different lighting conditions.

To adjust the display brightness, proceed as follows.

1. Adjust the brightness using the  and  keys or the  and  keys on the left side of the phone.
2. When you are satisfied, press the **OK** soft key to save the selection.

#### **Back Light** *(Menu 4.6.2)*

You can select whether or not the phone uses the backlight. A marginal increase in standby/talk time can be achieved by turning the backlight off.

Select the length of time for which the backlight is on. The backlight turns on when you press a key or receive a call or message and lights up for the specified length of time. Then it dims and finally switches to the digital clock, conserving your battery power.

## Service Light *(Menu 4.6.3)*

This option allows you to select whether or not the service light on the top left of the phone is used and in which colour it flashes.

Select one of the three colours available. When the phone is ready for use, the service light will flash in the chosen colour.

If you do not wish to use the service light, select **Off**.

## Graphic Logo *(Menu 4.6.4)*

This option allows you to display your operator's logo instead of its name.

**Off**: the operator name is displayed in idle mode.

**On**: the operator logo stored in your phone is displayed in idle mode; if no logo has been stored, the operator name is displayed.

## Extra Settings *(Menu 4.7)*

---

You can turn the automatic redialling or answering features on or off.

To turn a feature...	Then press the...
On	<b>On</b> soft key. A check mark is displayed in front of the option.
Off	<b>Off</b> soft key. The check mark is no longer displayed.

## Phone Settings

The following options are available.

**Auto Redial:** when this option is checked, the phone makes up to ten attempts to redial a phone number after an unsuccessful call.

**Note:** The interval between two call attempts varies.

**Anykey Answer:** when this option is checked, you can answer an incoming call by pressing any key, except the  key, the  key and the **Reject** soft key. To reject the call, press the  key or the **Reject** soft key.

When this option is unchecked, you can only press the  key or the **Accept** soft key.

## Short Cut *(Menu 4.8)*

---

The navigation keys can be used as shortcut keys. When held down in idle mode, they allow you to access specific menu options directly.

To assign a shortcut to a key, proceed as follows:

1. Select the key to be used as a shortcut key by pressing the  or  key and press the **Select** soft key.
2. Select the menu option to be assigned to the key by pressing the  or  key.

**Note:** To deactivate a shortcut key, select the **None** option.

3. Press the **Select** soft key to save the selection.

## Reset Settings *(Menu 4.9)*

---

You can easily reset your phone to its default settings. To do so, proceed as follows:

1. Select the **Reset Settings** menu option.
2. Enter the 4 to 8-digit phone password and press the **OK** soft key.

**Note:** The password is preset to 00000000. To change this password, refer to page 88.

# Organiser

The Organiser feature enables you to:

- View the calendar and organise your schedule
- Define a list of things to do
- Set the current date and time
- Set the alarm so that the phone rings at a specific time (to remind you of an appointment for example)
- Use the phone as a calculator for basic mathematical equations or currency exchange operations

## Calendar *(Menu 5.1)*

---

With the Calendar feature, you can:

- Consult the calendar
- Write memos to keep track of your schedule and trigger an alarm if necessary

### Consulting the Calendar

When you select the **Calendar** menu option (**Menu 5.1**), the calendar is displayed. The following options are available when you press the **Options** soft key.

**Search All:** displays all memos set starting with the oldest, regardless of the day. To scroll through the memos, press the  or  key.

**Delete All:** allows you to delete all memos. You are asked to confirm your action.

**Go to date:** allows you to jump to a specific date.

**Exit:** exits the Calendar feature and returns to the idle mode.

## Writing a Memo

To write or edit a memo on a specific date, proceed as follows.

1. Select the required date in the calendar, using the navigation keys.

**Note:** To skip to the previous or next month, press the ▲ or ▼ key on the left side of the phone.

2. Press the **Select** soft key.

An empty memo screen is displayed to allow you to enter your memo.

3. Enter your memo and then press the **OK** soft key.

**Note:** For information on how to enter characters, refer to page 43.

You are asked if you wish to set the alarm.

4. If you want the alarm to ring on the chosen day, press the **Yes** soft key. Otherwise, press the **No** soft key.

5. If you pressed the **Yes** soft key, set the time for the alarm and press the **OK** soft key.

You can select a melody for the alarm by pressing the **Melody** soft key.

The colour of the date is changed to green to indicate that a memo exists.

When the alarm time for a memo expires and the phone sounds the selected alarm melody, press the **View** soft key to view the memo. Alternatively, press the **Exit** soft key or  key to stop the alarm.

### Viewing a Memo

When you select a day for which a memo already exists on the calendar, the most recent memo on that day is displayed.

If several memos exist, you can browse through them using the  and  keys.

To add a new memo on the same day, press the **New** soft key.

The following options are available when you press the **Options** soft key:

**Edit:** allows you to change the memo text.

**Alarm:** allows you to set an alarm to ring on the chosen day. If the alarm is already set, you can change or remove it.

**Delete:** allows you to delete the memo.

**Copy to:** allows you to copy the memo to another date.

**Move to:** allows you to change the date and/or time of the memo.

## To Do List *(Menu 5.2)*

---

This feature allows you to:

- Draw up a list of tasks to be done
- Assign a priority and deadline to each task
- Sort the tasks by priority and status mark

### Creating the To Do List

1. Press the **New** soft key.

2. Enter the first task.

**Note:** You can enter up to 40 characters. For information on how to enter characters, see page 43.

3. Press the **OK** soft key.

4. Select high, normal or low priority using the  or  key and press the **Select** soft key.

5. Enter your deadline.

If you do not want to set a deadline, press the **Skip** soft key.

6. Press the **OK** soft key.

## Editing the To Do List

If tasks are already defined in the To Do List when you select the **To Do List** menu option (**Menu 5.2**), the current contents are displayed with a status mark and priority (📌 for high, 📄 for normal and 📅 for low).

The following options are available:

To...	Then...
View the details for a specific task	<ul style="list-style-type: none"> <li>• Highlight the task.</li> <li>• Press the <b>View</b> soft key.</li> <li>• Scroll through the tasks using the  and  keys, if necessary.</li> </ul>
Change the status of a specific task	<ul style="list-style-type: none"> <li>• Highlight the task.</li> <li>• Press the  key to mark the task as completed as of the current date and time.</li> </ul> <p>or</p> <ul style="list-style-type: none"> <li>• Highlight the task.</li> <li>• Press the <b>Options</b> soft key.</li> <li>• Select the <b>Mark</b> option.</li> <li>• Select the appropriate status (<b>Done</b> or <b>Undo</b>).</li> </ul>
Create a new task	<ul style="list-style-type: none"> <li>• Press the <b>Options</b> soft key.</li> <li>• Select the <b>New</b> option.</li> <li>• Enter the text, priority and deadline for the task.</li> </ul>
Edit an existing task	<ul style="list-style-type: none"> <li>• Highlight the task.</li> <li>• Press the <b>Options</b> soft key.</li> <li>• Select the <b>Edit</b> option.</li> <li>• Change the text, priority and deadline for the task.</li> </ul>

To...	Then...
Sort the existing tasks by priority or status	<ul style="list-style-type: none"> <li>• Press the <b>Options</b> soft key.</li> <li>• Select the <b>Sort</b> option.</li> <li>• Select the sort criterion (<b>High</b>, <b>Low</b>, <b>Done</b>, or <b>Undo</b>).</li> </ul>
Copy a task	<ul style="list-style-type: none"> <li>• Highlight the task.</li> <li>• Press the <b>Options</b> soft key.</li> <li>• Select the <b>Copy</b> option.</li> <li>• Change the text, priority, and deadline for the task as required.</li> </ul>
Copy a task to the calendar	<ul style="list-style-type: none"> <li>• Highlight the task.</li> <li>• Press the <b>Options</b> soft key.</li> <li>• Select the <b>Copy to calendar</b> option.</li> <li>• Change the text and deadline for the task and set the alarm as required.</li> </ul>
Delete a task	<ul style="list-style-type: none"> <li>• Highlight the task.</li> <li>• Press the <b>Options</b> soft key.</li> <li>• Select the <b>Delete</b> option.</li> </ul>
Delete all tasks	<ul style="list-style-type: none"> <li>• Press the <b>Options</b> soft key.</li> <li>• Select the <b>Delete All</b> option.</li> <li>• Confirm the deletion by pressing the <b>OK</b> soft key.</li> </ul>
Exit the To Do List	<ul style="list-style-type: none"> <li>• Press the <b>Options</b> soft key.</li> <li>• Select the <b>Exit</b> option.</li> </ul>

### Time & Date *(Menu 5.3)*

---

This option allows you to change the current time and date displayed. You can also check the current time for Greenwich Mean Time (GMT) and 21 major cities around the world.

The following options are available:

**Set Time:** allows you to enter the current time. You can choose the time format via the **Time Format** menu option (**Menu 5.3.4**).

**Note:** Before setting the time, you must specify your time zone in the **World Time** menu option (**Menu 5.3.3**).

**Set Date:** allows you to enter the day, month and year.

**World Time:** allows you to check the current time for Greenwich Mean Time (GMT) and 21 major cities around the world, using the **(** and **)** keys.

The screen shows the:

- City name
- Current date and time
- Time difference between the selected city and your city if you have set the local time (see below for further details) or GMT (by default)

To select the time zone in which you are located, proceed as follows:

1. Select the city corresponding to your time zone by pressing the **(** or **)** key one or more times. The local date and time are displayed.
2. Press the **Set** soft key.

**Time Format:** allows you to change the time format to **24 Hours** or **12 Hours**.

## Alarm *(Menu 5.4)*

---

This feature allows you to:

- Set the alarm to ring at a specific time
- Set the phone to switch on automatically and ring the alarm even if the phone is switched off (**Autopower** menu option set to **Enable**)

The following options are available.

**Once Alarm:** the alarm rings only once and is then deactivated.

**Daily Alarm:** the alarm rings every day at the same time.

**Morning Call:** the alarm rings to wake you up in the morning.

To set the alarm, proceed as follows:

1. Choose the type of alarm to be set and press the **Select** soft key.
2. Enter the required time.
3. Press the **OK** soft key.
4. If you select **Morning Call** in Step 1, select the repeat option: **Monday to Friday** or **Monday to Saturday**.

**Remove Alarm:** deactivates all alarm settings.

**Autopower:** if this option is set to **Enable**, the alarm will ring at the specified time, even when the phone is switched off. If the menu option is set to **Disable** and the phone is switched off at the specified time, the alarm will not ring.

To stop the alarm when it rings, press the **Exit** soft key or the  key.

## Organiser

**Note:** You can also stop the alarm even if your phone is in the key lock mode.

When setting or viewing an alarm, the following options are available when you press the **Options** soft key.

**Remove Alarm:** allows you to deactivate the current alarm.

**Alarm Sound Set:** allows you to select the alarm melody.

## Calculator *(Menu 5.5)*

---

With this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

### Using the Calculator

1. Enter the first number using the numeric keys.

**Notes:**

- To erase any mistakes and clear the display, press the  key.
  - To include a decimal point or a bracket, press the left soft key until the required symbol is displayed.
2. Press the right soft key until the required arithmetic symbol appears: + (add), - (subtract), \* (multiply), / (divide).
  3. Enter the second number.
  4. Repeat Steps 1 to 3 as many times as required.
  5. To calculate the result, press the  key.

## Currency Exchange *(Menu 5.6)*

---

Using this menu option, you can make currency conversions.

1. Enter the current exchange rate of your source currency and press the **OK** soft key.

You can insert a decimal point by pressing the  key.

2. Enter the amount for which you wish to conduct the currency conversion and press the **OK** soft key.

The local currency amount you entered and the equivalent value in the foreign currency are displayed.

3. Press the **Exit** soft key to exit the currency convertor.

# Network Services

These menu functions are network services. Please contact your service provider to check their availability and subscribe to them, if you so wish.

## Call Diverting *(Menu 6.1)*

---

This network service enables incoming calls to be rerouted to the number that you specify.

Example: You may wish to divert your business calls to a colleague while you are on holiday.

Call diverting can be set up in the following ways:

**Divert Always:** all calls are diverted.

**Busy:** calls are diverted if you are already on the phone.

**No Reply:** calls are diverted if you do not answer the phone.

**Unreachable:** calls are diverted if you are not in an area covered by your service provider or when your phone is switched off.

**Cancel All:** all call diverting options are cancelled.

You can specify individual diverting options for each of the following call types:

- Voice calls only
- Fax calls only
- Data calls only

To set your call diverting options, proceed as follows:

1. Select the type of call diverting required by pressing the  or  key until the appropriate option is highlighted, and then press the **Select** soft key.
2. Select the type of calls to be diverted by pressing the  or  key until the appropriate option is highlighted and then press the **Select** soft key.

The current status is displayed. If the option has already been set, the number to which the calls are diverted is displayed.

3. <b>To...</b>	<b>Then press the...</b>
Activate call diverting	<b>Activate</b> soft key. Go to Step 4.
Change the call number	<b>Change</b> soft key. Go to Step 4.
Deactivate call diverting	<b>Remove</b> soft key.

4. Enter the number to which the calls are to be diverted and press the **OK** soft key.  
To enter the international code, press the  key until the **+** sign is displayed.
5. If you have entered the **No Reply** option, set the length of time for which your phone rings before the call is diverted and press the **Select** soft key.

The phone sends your settings to the network and the network's acknowledgement is displayed.

You can deactivate all call diverting settings by selecting the **Cancel All** option.

### Call Barring *(Menu 6.2)*

---

The call barring network service allows you to restrict your calls.

Call barring can be set up in the following ways:

**All Outgoing:** calls cannot be made.

**International:** international calls cannot be made.

**International Except to Home:** when abroad, calls can be made only to numbers within the current country and to your home country, which is the country where your home network provider is located.

**All Incoming:** calls cannot be received.

**Incoming While Abroad:** calls cannot be received when you are using your phone outside your home service area.

**Cancel All:** all call barring settings are deactivated; calls can be made and received normally.

You can specify individual barring options for each of the following call types:

- Voice calls only
- Fax calls only
- Data calls only

To set your call barring options, proceed as follows:

1. Select the type of call barring required by pressing the  or  key until the appropriate option is highlighted and then press the **Select** soft key.
2. Select the type of calls to be barred by pressing the  or  key until the appropriate option is highlighted and then press the **Select** soft key.

3. Press the **Activate** soft key to confirm your settings.
4. Enter your call barring password supplied by your service provider.

The phone sends your settings to the network and the network's acknowledgement is displayed.

To deactivate specific call barring settings, proceed as follows:

1. Select the call barring option to be deactivated.
2. Select the type of call to which this option applies.
3. Press the **Deactivate** soft key.
4. Enter your call barring password supplied by your service provider.

The phone sends your settings to the network and the network's acknowledgement is displayed.

You can also deactivate all call barring settings by selecting the **Cancel All** option.

**Change Barring Password:** you can set and change the call barring password obtained from your service provider using this option. You must enter the current password before you can specify a new one.

Once you have entered a new password, you are asked to confirm it by entering it again.

### Call Waiting *(Menu 6.3)*

---

This network service enables you to be informed when someone is trying to reach you during another call.

You can specify individual call waiting options for each of the following call types:

- Voice calls only
- Fax calls only
- Data calls only

To set your call waiting options, proceed as follows:

1. Select the type of calls to which the call waiting option is to be applied by pressing the  or  key until the appropriate option is highlighted and then press the **Select** soft key.

The screen informs you whether call waiting is activated or deactivated.

2. You can activate or deactivate the call waiting feature as necessary by using the **Activate** or **Deactivate** soft key respectively.

To return to the previous screen, press the **Exit** soft key.

You can also deactivate all call waiting settings by selecting the **Cancel All** option.

## Network Selection *(Menu 6.4)*

---

The Network Selection feature enables you to indicate whether the network used when roaming (outside your home area) is selected automatically or manually.

**Note:** You can select a network other than your home network only if it has a valid roaming agreement with your home network.

To indicate whether the network is to be selected automatically or manually when roaming, proceed as follows:

1. When **Network Selection** is displayed, press the **Select** soft key.
2. Press the  or  key until the appropriate option is highlighted and then press the **OK** soft key.

If you select **Automatic**, you are connected to the first available network when roaming.

If you select **Manual**, the phone scans for the available networks. Go to Step 3.

3. Press the  or  key until the preferred network is highlighted and then press the **OK** soft key.

You are connected to that network.

### Caller ID *(Menu 6.5)*

---

You can prevent your phone number from being displayed on the phone of the person being called.

**Note:** Some networks do not allow the user to change this setting.

The following options are available:

**Default:** the default setting provided by the network is used.

**Hide Number:** your number is not displayed on the other person's phone.

**Send Number:** your number is sent each time you make a call.

### Closed User Group *(Menu 6.6)*

---

This network service allows incoming and outgoing calls to be restricted to a selected user group. You may be a member of up to ten user groups.

For details on how to create, activate and use a closed user group, contact your service provider.

Example: A company lends SIM cards to its employees and wants to restrict outgoing calls to members of the same team.

If you select the **Closed User Group** menu, you can enter the CUG function. You can now access the following options after pressing the **Select** soft key:

**Index List:** lets you list, add or delete CUG index numbers. The list of current CUG indexes appears.

Add a new CUG index as advised by your service provider or delete a selected group.

To...	Then press the...
Scroll through the existing CUG indexes	← or → key.
Add a new CUG index	<b>Options</b> soft key, select the <b>Add</b> option, and enter the index.
Delete a CUG index	<b>Options</b> soft key and select the <b>Delete</b> option.
Activate a CUG index	<b>Options</b> soft key and select the <b>Activate</b> option.

**Outside Access:** lets you enable or disable calls to numbers other than those nominated for the Closed User Group. This feature depends on the nature of your CUG subscription. Please check with your service provider.

**Default Group:** you may set a default CUG with your service provider. If you have done so, you can enable the **Default Group** option on your phone. When making a call, you are given the option of using your default CUG, instead of selecting one from the list.

**Deactivate:** deactivates the CUG function. This menu appears only when the default group is enabled or a CUG index is selected.

# Fun Box

The **Fun Box** menu contains several fun options.

## Games *(Menu 7.1)*

---

There are two games provided with your phone.

Scroll to the required game, using the  and  keys and press the **Select** soft key. For further details on the game, refer to the on-screen help.

For each game, the following options are available:

**New Game:** allows you to start a new game.

**High Score:** shows you the High Score table.

**Key Info:** shows you which keys do what within the game.

**Continue:** allows you to continue a previously saved game. This option is only available when a game has already been saved.

<b>While you are playing a game, to...</b>	<b>Press the...</b>
Pause or resume the game	 key.
Exit the game	 key.

At the end of the game, if your score is ranked fifth or higher, you can enter a name of up to ten characters.

## WAP Browser *(Menu 7.2)*

---

Your phone is equipped with a WAP (Wireless Application Protocol) Browser to allow you to access and navigate the Wireless Web via your phone.

### Home *(Menu 7.2.1)*

This option allows you to connect the phone to the network and load the homepage of the Wireless Web service provider.

The content of the WAP Browser startup homepage depends on your Wireless Web service provider. To scroll through the screen, use the  and  keys.

**Note:** To access the startup homepage from any other screen in the WAP Browser, use the **Home** option. For more information on the WAP Browser menus, see page 114.

### Navigating the WAP Browser

To...	Then...
Scroll through and select browser items	Press the  or  key until the  symbol points to the required item or the item is highlighted, and then press the <b>OK</b> soft key to confirm the selection.
Select a numbered item	Press the corresponding numeric key.
Return to the previous page	Press the <b>Back</b> soft key or the  key.
Return to the startup homepage	Select the <b>Home</b> menu option; for more information on this option, see page 114.

To...	Then...
Change text entry modes	Press the  key one or more times.
Use the symbol mode	Press the  key. Select a symbol from the list and press the ✓ soft key to insert it.
Enter a space	Press the  key.
Edit text	<ol style="list-style-type: none"> <li>① Set the cursor to the right of the character(s) to be corrected.</li> <li>② Press the  key as required.</li> <li>③ Enter the correct character(s).</li> </ol>

**Note:** For further details about the text entry modes, see page 43.

### Exiting the WAP Browser

To exit the browser at any time, simply press the  key.

### Selecting and Using Browser Menu Options

Various menu options are available when you are using the WAP Browser to navigate the Wireless Web.

To access a menu option, proceed as follows:

1. Press and hold the  key.  
A menu is displayed.
2. Highlight the required menu option by pressing the  and  keys.

3. Select the option by pressing the ✓ soft key.
4. If necessary, select the secondary option using the ⤵ and ⤴ keys, and press the ✓ soft key to confirm.

**Note:** The menus may vary, depending on your version of the WAP Browser.

The following menu options are available:

**Home:** takes you back at any time to the homepage of the Wireless Web service provider.

**Go To URL:** allows you to manually enter the URL address of the web page you want to access.

**Show URL:** displays the URL address of the current web page.

**Reload:** reloads the current page.

**Settings:** gives you access to the following setting features.

Homepage: allows you to change the startup homepage manually.

Scroll Mode: lets you select the scroll mode to either **Block** or **Smooth**, or set the speed for scrolling to the next screen at either **Fast**, **Medium**, or **Slow**.

Send Referrer: allows you to set the browser to send HTTP referrer information to the web server each time the browser is launched.

Key Press Timeout: allows you to set how long the phone waits after you have pressed a key in the text entry mode before moving the cursor to the right. You can select **Fast**, **Medium**, or **Slow**.

## Fun Box

Set Proxy: allows you to change the proxy server without ending the current WAP session.

Circuit Prompt: allows you to indicate whether you wish to be informed each time a WAP session is opened. Select **ON** to display the prompt, or **OFF** not to display it.

Security: displays all security-related information, such as Connection Prompt, Secure Prompt, Current Certificate and Encryption.

Advanced: provides you with the following options:

- Go To URL: allows you to manually enter the URL address of the web page you want to access.
- Restart Browser: restarts the WAP browser.
- Downloads: enables or disables auto download of the media objects, such as images or background sound on the current page.
- View Title Region: allows you to set whether or not the browser displays the title of the current page. You can also set the browser to wrap text on the page to the display size, so that you can see all the text on the line.

**About**: provides you with information about the copyright and the version of the Openwave Browsers.

## **Favorite** (Menu 7.2.2)

This option allows you to store the URL addresses of your favourite Web sites. You can access this menu directly by pressing and holding down the  key while using the WAP Browser.

To store a URL address, proceed as follows:

1. Select an empty location and press the **Select** soft key.
2. Enter the address and press the **Enter** soft key.
3. Enter a name for your favourite Web site and press the **OK** soft key.

After saving your favourites, you can use the following options by pressing the **Select** soft key:

**Goto URL:** takes you to the associated site.

**Edit:** allows you to change the address and the name of the selected item.

**Delete:** allows you to delete the selected item.

## **http://** (Menu 7.2.3)

This option allows you to manually enter the URL address of the Web site that you wish to access. You can access this menu directly by pressing and holding down the  key in the WAP Browser.

For further details about the text entry modes, see page 43.

**Settings** (Menu 7.2.4)

This option allows you to set up five proxy servers for the WAP Browser. Contact your service provider for details about the parameters to be declared.

For each server, the following parameters are available:

<b>Parameter</b>	<b>Description</b>
<b>Profile Name</b>	Name that you wish to assign to the HTTP proxy server.
<b>Homepage URL</b>	Address of your startup homepage. When the default homepage is displayed, you can delete it using the  key and enter your own choice.
<b>Security</b>	Data transmission mode. Choose <b>Secure</b> to protect your data against unauthorised access; otherwise, choose <b>Non-Secure</b> .
<b>IP Address</b>	WAP gateway address required to connect to the Internet.
<b>Bearer</b>	Bearer to be used for each type of network address accessed; <b>GPRS</b> or <b>Data</b> .

The remaining options depend on the **Bearer** setting, as indicated on the following page:

When the bearer is set to **Data**

Parameter	Description
<b>Login Name</b>	PPP server login ID.
<b>Password</b>	PPP server password.
<b>Dial-up Number</b>	PPP server phone number.
<b>Data Call Type</b>	<b>Analogue</b> or <b>ISDN</b> .

When the bearer is set to **GPRS**

Parameter	Description
<b>User Name</b>	User ID required to connect to the GPRS network.
<b>Password</b>	Password required to connect to the GPRS network.
<b>APN</b>	Access point name used for the address of the GPRS network gateway.

**Note:** The WAP Browser settings may vary, depending on the service provider. Contact your service provider for more information.

### **Clear Cache** (Menu 7.2.5)

You can clear the information stored in the cache (the phone's temporary memory used to store the most recently accessed Web pages).

Press the **Yes** soft key to confirm the deletion. Otherwise, press the **No** soft key.

## Downloads *(Menu 7.3)*

---

You can download sounds, images, or MIDlets (Java applications running on mobile phones) from various sources using the WAP Browser and store them in your phone. This menu allows you to access downloaded web contents.

**Note:** Java services may be unavailable, depending on the service provider.

### Games & More *(Menu 7.3.1)*

This menu option allows you to launch a MIDlet and access various menu options.

#### Launching a MIDlet

To launch a MIDlet, proceed as follows:

1. From the Downloads screen, select the **Games & More** option.
2. Scroll to the required MIDlet and press the **Launch** soft key.
3. Start the game by pressing the **Start** or **Play** soft key.

#### Using the Menus

From the Main Screen press the **Menu** soft key to access the following options:

**Info:** displays information about the selected MIDlet, such as the file size, application version, vendor and the location of the jad file, which is the MIDlet description file. You can delete the MIDlet by pressing the **Remove** soft key on the Info screen.

**Remove:** removes the selected MIDlet. When the confirmation message appears, press the **Remove** soft key. To cancel your selection, press the **Cancel** soft key.

## **Sounds** *(Menu 7.3.2)*

In this menu, you can view the list of sounds downloaded from the server. You can set the downloaded sounds as the current ring tone.

When the memory is full, a warning message is displayed and the phone rejects additional sounds until you erase obsolete ones.

## **Pictures** *(Menu 7.3.3)*

In this menu, you can view the list of pictures downloaded from the server. You can set the downloaded pictures as the current background image.

When the memory is full, a warning message is displayed and the phone rejects additional pictures until you erase obsolete ones.

## **DNS Setting** *(Menu 7.3.4)*

The DNS (Domain Name Server) address of the Java server is factory-set, but sometimes you may need to change it. In this menu, you can enter the required DNS address.

# Solving Problems

Before contacting the after-sales service, perform the following simple checks. They may save you the time and expense of an unnecessary service call.

## When you switch your phone on, the following messages may appear

### Insert SIM Card

- Check that the SIM card is correctly installed.

### Phone Locked Enter Password

- The automatic locking function has been enabled. You must enter the phone's password before you can use the phone.

### Enter PIN

- You are using your phone for the first time. You must enter the Personal Identification Number supplied with the SIM card.
- The PIN Check feature is enabled. Each time the phone is switched on, the PIN must be entered. To disable this feature, use the **PIN Check** menu option (**Menu 4.5.1**).

### Enter PUK

- The PIN code was entered incorrectly three times in succession and the phone is now blocked. Enter the PUK supplied by your network operator.

## **“No service”, “Network failure” or “Not done” is displayed**

- The network connection was lost. You may be in a weak signal area (in a tunnel or surrounded by buildings). Move and try again.
- You are trying to access an option for which you have not taken out a subscription with your service provider. Contact the service provider for further details.

## **You have entered a number but it was not dialled**

- Have you pressed the  key?
- Are you accessing the right cellular network?
- You may have set an outgoing call barring option.

## **Your correspondent cannot reach you**

- Is your phone switched on (the  key pressed for more than one second)?
- Are you accessing the right cellular network?
- You may have set an incoming call barring option.

## **Your correspondent cannot hear you speaking**

- Have you switched off the microphone?
- Are you holding the phone close enough to your mouth? The microphone is located at the bottom of the phone.

### **The phone starts beeping and “\*\*Warning\*\* Low Battery” flashes on the display**

- The battery is insufficiently charged. Recharge it.

### **The audio quality of the call is poor**

- Check the signal strength indicator on the display (📶); the number of bars indicates the signal strength from strong (📶) to weak (📶).
- Try moving the phone slightly or moving closer to a window if you are in a building.

### **No number is dialled when you recall a phonebook entry**

- Check that the number has been stored correctly, by using the Phonebook Search feature.
- Re-store the number, if necessary.

If the above guidelines do not help you to solve the problem, take a note of:

- The model and serial numbers of your phone
- Your warranty details
- A clear description of the problem

Then contact your local dealer or Samsung after-sales service.

# Access Codes

There are several access codes that are used by your phone and its SIM card. These codes help you protect the phone against unauthorised use.

When requested for any of the codes explained below, key in the appropriate code (displayed as asterisks) and press the **OK** soft key. If you make a mistake, press the  key one or more times until the incorrect digit is cleared and then continue entering the correct code.

The access codes, except for the PUK and PUK2 codes can be changed using the **Security** menu options (**Menu 4.5**). See page 87 for further details.

**Important!** Avoid using access codes resembling emergency numbers, such as 112, so that you do not dial an emergency number accidentally.

## Phone Password

---

The Phone Lock feature uses the phone password to protect your phone against unauthorised use. The phone password is supplied with the phone and is factory set to 00000000.

To...	Refer to...
Activate/deactivate the Phone Lock feature	Page 88 ( <b>Menu 4.5.3</b> ).
Change the phone password	Page 88 ( <b>Menu 4.5.4</b> ).

### PIN

---

The Personal Identification Number or PIN (4 to 8 digits) protects your SIM card against unauthorised use. It is usually supplied with the SIM card.

If you enter an incorrect PIN three times in succession, the code is disabled and cannot be used until you re-enable it by entering the PUK (see below).

To...	Refer to...
Activate/deactivate the PIN Check feature	Page 87 ( <b>Menu 4.5.1</b> ).
Change the PIN	Page 88 ( <b>Menu 4.5.2</b> ).

### PUK

---

The 8-digit PUK (**PIN Unblocking Key**) is required to change a disabled PIN. The PUK may be supplied with the SIM card. If not, or you have lost it, contact your service provider.

To re-enable your PIN, proceed as follows:

1. Key in the PUK and press the **OK** soft key.
2. Enter a new PIN of your choice and press the **OK** soft key.
3. When the **Confirm New PIN** message is displayed, key in the same code again and press the **OK** soft key.

If you enter an incorrect PUK ten times in succession, the SIM card becomes invalid. Contact your service provider for a new card.

## PIN2

---

The PIN2 (4 to 8 digits), supplied with some SIM cards, is required to access specific functions, such as setting the maximum cost of a call. These functions are available if supported by your SIM card.

If you enter an incorrect PIN2 three times in succession, the code is disabled and you cannot access the functions until you re-enable it by entering the PUK2.

To change the PIN2, refer to page 89 (**Menu 4.5.7**).

## PUK2

---

The 8-digit PUK2 (**PIN Unblocking Key 2**), supplied with some SIM cards, is required to change a disabled PIN2. If you lose the code, contact your service provider.

To re-enable your PIN2, proceed as follows.

1. Key in the PUK2 and press the **OK** soft key.
2. Enter a new PIN2 of your choice and press the **OK** soft key.
3. When the **Confirm PIN2** message is displayed, key in the same code again and press the **OK** soft key.

If you enter an incorrect PUK2 ten times in succession, you will not be able to access the functions requiring the PIN2. Contact your service provider for a new card.

## Barring Password

---

The 4-digit barring password is required when you use the Call Barring function. You obtain the password from your service provider when you subscribe to this function. You can change this password in the **Call Barring** menu option (**Menu 6.2**). See page 107 for further details.

# Health and Safety Information

## SAR Certification Information

---

This phone meets European Union (EU) requirements concerning exposure to radio waves.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured, so as not to exceed the limits for exposure to radio-frequency (RF) energy, as recommended by the EU Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as SAR (Specific Absorption Rate). The SAR limit recommended by the EU Council is 2.0 W/kg.\*

The highest SAR value for this model phone was 0.915 W/kg.

---

\* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. The SAR values may vary depending on national reporting requirements and the network band.

## Health and Safety Information

SAR tests are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a new model phone is available for sale to the public, compliance with the European R&TTE Directive must be shown. This directive includes as one of its essential requirements the protection of the health and safety of the user and any other person.

## Precautions When Using Batteries

---

Your phone is powered by a rechargeable Li-ion standard battery.

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby times are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.

- Battery charging times depend on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and life-time of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).
- Do not short-circuit the battery. Accidental short circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the back of the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuit.

## Health and Safety Information

- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

## Road Safety

---

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, make sure that you are following the special regulations in a given area or country.

## Operating Environment

---

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

## Electronic Devices

---

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

### Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on
- Should not carry the phone in a breast pocket
- Should use the ear opposite the pacemaker to minimise potential interference

If you have any reason to suspect that interference is taking place, switch off your phone immediately.

### Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

### **Other Medical Devices**

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

### **Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

### **Posted Facilities**

Switch off your phone in any facility where posted notices require you to do so.

## Potentially Explosive Environments

---

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

## Emergency Calls

---

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember that to make or receive any calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call, proceed as follows:

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 112 or any other official emergency number). Emergency numbers vary by location.
3. Press the  key.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not end the call until given permission to do so.

## Other Important Safety Information

---

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch off your phone before boarding an aircraft. The use of wireless phones in an aircraft may be dangerous to the operation of the aircraft, and is illegal.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

### Care and Maintenance

---

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children.
- Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
- Do not touch the phone with wet hands while it is charging. Doing so may give you an electric shock or damage the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.

- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, a stove, or a radiator. The phone may explode when overheated.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.



# Glossary

To help you understand the main technical terms and abbreviations used in this booklet and take full advantage of the features on your mobile phone, here are a few definitions.

## **Call Barring**

Ability to restrict outgoing and incoming calls.

## **Call Diverting**

Ability to reroute calls to another number.

## **Call Holding**

Ability to put one call on standby while answering or making another call; you can then switch between the two calls, as required.

## **Call Waiting**

Ability to inform users that they have an incoming call when engaged on another call.

## **Dual Band**

Ability to operate with both DCS (1800 MHz) and GSM (900 MHz) networks. The phone automatically uses the network with strongest signal and even switches networks during a call within the same operator's network.

**GPRS (General Packet Radio Service)**

New non-voice value-added service that allows information to be sent and received across a mobile telephone network. GPRS guarantees continuous connection to the Internet for mobile phone and computer users. It is based on the Global System for Mobile Communication (GSM), circuit-switched cellular phone connections and the Short Message Service (SMS).

**GSM (Global System for Mobile Communication)**

International standard for cellular communication, guaranteeing compatibility between the various network operators. GSM covers most European countries and many other parts of the world.

**Java**

Programming language generating applications that can run on all hardware platforms, whether small, medium or large, without modification. It has been promoted for and geared heavily to the Web, both for public Web sites and Intranets. When a Java programme runs from a Web page, it is called a *Java applet*. When it is run on a mobile phone or pager, it is called a *MIDlet*.

**Line Identification Services (Caller ID)**

Services allowing subscribers to view or block the telephone numbers of callers.

**Multiparty Calling**

Ability to establish a conference call involving up to five additional parties.

### **Phone Password**

Security code used to unlock the phone when you have selected the option to lock it automatically each time it switches on.

### **PIN (Personal Identification Number)**

Security code that protects the phone/SIM against unauthorised use. The PIN is supplied by the service provider with the SIM card. It may be a four to eight-digit number and can be changed, as required.

### **PUK (PIN Unblocking Key)**

Security code used to unlock the phone when an incorrect PIN has been entered three times in succession. The eight-digit number is supplied by the service provider with the SIM card.

### **Roaming**

Use of your phone when you are outside your home area (when travelling for example).

### **SDN (Service Dialling Numbers)**

Telephone numbers supplied by your network provider and giving access to special services, such as voice mail, directory inquiries, customer support, and emergency services.

### **SIM (Subscriber Identification Module)**

Card containing a chip with all the information required to operate the phone (network and memory information, as well as the subscriber's personal data). The SIM card fits into a small slot on the back of the phone and is protected by the battery.

**SMS (Short Message Service)**

Network service sending and receiving messages to and from another subscriber without having to speak to the correspondent. The message created or received can be displayed, received, edited, or sent.

**Soft Keys**

Two keys marked  and  on the phone, the purpose of which:

- Varies according to the function that you are currently using
- Is indicated on the bottom line of the display just above the corresponding key

**Voice Mail**

Computerised answering service that automatically answers your calls when you are not available, plays a greeting (optionally in your own voice) and records a message.

# Index

## A

- Access codes 125
- Accessories 9
- Alarm 101
- Alert Type 80
- Animations 68, 71
- Answering
  - a call 25
  - a second call 53
- Anykey Answer 92
- Auto Key Lock 85
- Auto Redial 92
- Autopower 101

## B

- Background image 84
- Backlight 15, 90
  - brightness 90
- Barring
  - calls 106
  - password 107, 128
- Battery
  - charging 18
  - low battery indicator 19
  - precautions 130
- Brightness 90
- Broadcast 73
- Browser
  - WAP 113

## C

- Calculator 102
- Calendar 94
- Caller
  - groups 35, 39, 40
  - ID 110
- Calls
  - answering
    - a call 25
    - a second call 53
  - barring 106
  - cost 77
  - dialled 76
  - diverting 104

- emergency 136
- ending 23
- holding 49
- international 22
- making 22
- missed 26, 75
- multiparty 53
- received 75
- records 75
- redialling 23
  - automatically 92
- rejecting 25
- speed-dialling 37
- time 77
- via phonebook 38
- waiting 108

## Card

- installing the SIM 16

## Care 138

## Changing

- barring password 107
- password 88
- PIN 88
- PIN2 89
- text entry modes 44

## Characters

- changing mode 44
- entering 43

## Charging batteries 18

## Closed User Group 110

## Conference call 53

## Connect

- to voice server 72
- tone 83

## Copying

- memos 96
- phonebook numbers 35
- tasks 99

## Correcting numbers 22

## Cost of calls 77

## CUG 110

## Currency Exchange 103

**D**

- Date setting 100
- Deleting
  - call records 27, 76
  - memos 94, 96
  - messages 64, 65, 71
  - missed calls 27, 75
  - phonebook
    - numbers 35, 41
  - tasks 99
- Dialled calls 76
- Display 13
  - brightness 90
  - icons 14
  - language 86
  - settings 90
- Diverting calls 104
- Downloads 120
- DTMF tones
  - sending 51

**E**

- Earpiece volume 24
- Editing
  - caller groups 40
  - memos 96
  - messages 63
  - missed calls 27, 75
  - phonebook
    - numbers 35
  - tasks 98
- Electronic devices 133
- Emergency calls 136
- Error tone 83
- Explosive environments 135
- Extra Settings 91
- Extra Tones 83

**F**

- FDN mode 89
- Fixed Dial Number mode 89
- Fun Box 112
- Functions
  - selecting 29

**G**

- Games 112
- Graphic Logo 91
- Greeting Message 85
- Groups
  - caller 35, 39, 40
  - user 110

**H**

- Health information 129
- Hearing aids 133
- Holding calls 49

**I**

- Icons 14
- Identifying callers 38, 39, 40, 110
- Images
  - background 84
  - messages 68, 71
- Inbox 63
- Incoming text messages 63
- Internet 113

**K**

- Key tones
  - adjusting volume 24
  - muting 51
  - selecting 80
  - sending 51
- Keys
  - auto lock 85
  - description 11
  - location 10
  - locking 21, 85
  - shortcut 92
  - soft 29

**L**

- Language 86
- Last number redial 23
- Length of calls 77, 83

## Index

Letters  
    changing mode 44  
    entering 43  
Light  
    backlight 15, 90  
    service 15, 91  
Locking  
    keys 21, 85  
    phone 88  
    SIM card 89  
Logo  
    graphic 91  
Low battery indicator 19  
Lower-case characters  
    entering 47

## M

Maintenance 138  
Medical devices 134  
Melodies 68, 71, 79  
Memory status  
    message 72  
    phonebook 42  
Memos  
    copying 96  
    deleting 94, 96  
    editing 96  
    writing 95  
Menus  
    list 58  
    scrolling 56  
    shortcuts 57  
    style 85  
Messages 63  
    broadcast 73  
    deleting 71  
    greeting 85  
    inbox 63  
    memory status 72  
    objects 71  
    outbox 64  
    settings 69  
    templates 68  
    tone 81  
    voice mail 72  
    write new 66  
Microphone mute 50  
Minute Minder 83

Missed Calls 26, 75  
Morning Call 101  
Multiparty calls  
    dropping 55  
    making 53  
    private conversation  
        54  
Muting  
    key tones 51  
    microphone 50  
My Objects 71  
My Settings 84

## N

Names  
    entering 43  
    searching/dialling 38  
    storing 31  
Network Selection 109  
Network Services 104  
Numbers  
    adding phonebook 35  
    copying  
        phonebook 35  
    correcting 22  
    deleting 35  
    editing phonebook 35  
    fixed dial 89  
    mode 48  
    own 86  
    pasting phonebook 34  
    redialling 23  
    searching/dialling 38  
    storing 31  
    voice server 73

## O

Objects  
    message 68, 71  
Operator logo 91  
Options  
    selecting 29  
Organiser 94  
Outbox 64  
Outgoing text messages 64  
Own Number 86

**P**

- Pacemakers 133
- Password
  - barring 128
  - changing 107
  - phone 125
  - changing 88
- Pasting phonebook numbers 34
- Phone
  - lock 88
  - password 125
  - settings 84
- Phonebook 31
  - adding entries 35
  - caller groups 35, 39, 40
  - copying 35
  - deleting 35, 41
  - editing 35
  - memory status 42
  - options 34
  - pasting 34
  - searching/dialling 38
  - speed-dialling 37
  - storing numbers/names 31
- Pictures
  - background 84
  - downloading 121
  - messages 68, 71
- PIN 126
  - changing 88
  - checking 87
- PIN2 127
  - changing 89
- Power On/Off tone 82
- Problem solving 122
- PUK 126
- PUK2 127

**R**

- Radio-frequencies 129
- Reading text messages 63
- Received Calls 75

- Redialling
  - automatically 92
  - last number 23
- Rejecting calls 25
- Reset Settings 93
- Ring
  - tone 79
  - type 80
  - volume 79
- Road safety 132
- Roaming 109

**S**

- Safety
  - batteries 130
  - explosive environments 135
  - information 129, 137
  - operating environment 132
  - precautions 7
  - road 132
- Schedule 94
- Searching in phonebook 38
- Security 87
- Selecting functions/options 29
- Sending
  - DTMF tones 51
  - key tones 51
  - messages 66
- Service light 15, 91
- Settings 69
  - alarm 101
  - date 100
  - display 90
  - extra 91
  - language 86
  - phone 84
  - reset 93
  - security 87
  - sound 79
  - time 100
- Shortcut 92
- Silent mode 28

## Index

SIM card  
installing 16  
locking 89

SMS  
message icon 63  
setup 69  
using 52, 63

Soft keys 29

Solving problems 122

Sound Settings 79

Sounds  
downloading 121  
messages 68

Speed-dialling 37

Switching on/off  
microphone 50  
phone 20  
silent mode 28  
tone 82

Symbol mode 46

**T**

T9 mode 45

Tasks  
defining 97  
editing 98

Templates 68

Text  
changing mode 44  
entering 43

Time  
call 77  
format 100  
setting 100  
world 100

Time & Date 100

To Do List 97

Tone  
connect 83  
error 83  
extra 83  
keypad 80  
message 81  
minute minder 83  
power on/off 82  
ring 79

Travel adapter 18

## U

Unlocking keypad 21, 85

Upper-case characters  
entering 47

User groups 110

## V

Vibration 28, 80

Voice mail 72

Voice server 73

Volume  
adjusting 24  
selecting the ring 79

## W

Waiting  
calls 53, 108

Wallpaper 84

WAP Browser 113

World Time 100

Write New 66

Writing  
memos 95  
text messages 66

## SGH-C110 GPRS Telephone Quick Reference Card

Access the  
Menu  
Functions

- ① Press the **Menu** soft key.
- ② Scroll using the  and  keys through the list of the menus until you reach the required menu.
- ③ Press the **Select** soft key.
- ④ Scroll using the  and  keys through the list of the options until the required one is selected.
- ⑤ Press the **Select** soft key.

- Each of the two soft keys ( and ) perform the function indicated by the text above it on the bottom line of the display.

Switch On/Off  
Press and hold the  key.

Make a Call  
① Enter the number.  
② Press the  key.

End a Call  
Briefly press the  key.

View Missed  
Calls  
Immediately  
After Missing  
Them  
① Press the **View** soft key.  
② Scroll using the  and  keys through the missed calls.  
③ To return the call, press the  key.



Answer a Call	Press the  key.
Adjust the Volume	Press the  or  key on the left side of the phone.
Choose the Alert Type	<ol style="list-style-type: none"> <li>Select the <b>Alert Type</b> menu option (<b>Menu 3.3</b>).</li> <li>Select an option: <ul style="list-style-type: none"> <li>• <b>Light Only</b></li> <li>• <b>Melody</b></li> <li>• <b>Vibration</b></li> <li>• <b>Vibra + Melody</b></li> </ul> </li> <li>Press the <b>Select</b> soft key.</li> </ol>
Store Numbers in Phonebook	<ol style="list-style-type: none"> <li>Enter the number.</li> <li>Press the <b>Save</b> soft key.</li> <li>Select an icon for label.</li> <li>Press the <b>Select</b> soft key.</li> </ol>

Store Numbers in Phonebook (continued)	<ol style="list-style-type: none"> <li>Select a memory, and press the <b>Select</b> soft key.</li> <li>Enter the name.</li> <li>Press the <b>OK</b> soft key.</li> <li>If necessary, change the location.</li> <li>Press the <b>OK</b> soft key.</li> <li>Press the  key to return to Idle Mode.</li> </ol>
Search for a Number in Phonebook	<ol style="list-style-type: none"> <li>Press the <b>Name</b> soft key.</li> <li>Select the <b>Search</b> option.</li> <li>Enter the start of the name.</li> <li>To scroll through the names, press the  and  keys.</li> <li>Press the <b>View</b> soft key.</li> <li>To scroll through the numbers, press the  and  keys.</li> <li>Press the  key to dial.</li> </ol>

# Declaration of Conformity (R&TTE)

## For the following product :

GSM 900/GSM 1800 Dualband Digital  
Portable Cellular Telephone

(Product description)

SGH-C110

(Model name)

## Manufactured at:

Samsung Electronics Co. Ltd, 94-1, Imsu-Dong, Gumi City, Kyung Buk,  
Korea, 730-350\*

(factory name, address)

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

Safety	: EN 60950:2000
EMC	: EN 301 489-01 v1.4.1 (2002-08) EN 301 489-07 v1.2.1 (2002-08)
SAR	: EN 50360:2001 EN 50361:2001
Network	: EN 301 511 v9.0.2 (2003-03)

We hereby declare the [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Claremont House, 34 Molesey Road,  
Walton-on-Thames, KT12 4RQ, UK  
Identification mark: 168

CE0168

## The technical documentation kept at:

Samsung Electronics Euro QA Lab.

which will be made available upon request.

(Representative in the EU)

Samsung Electronics Euro QA Lab.  
Blackbushe Business Park, Saxony Way,  
Yateley, Hampshire, GU46 6GG, UK  
2004. 03. 16



In-Seop Lee / S. Manager

(place and date of issue)

(name and signature of authorised person)

\* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.

\* Some of the contents of this manual may differ from your phone, depending on the software installed or your service provider.



World Wide Web  
<http://www.samsungmobile.com>

Printed in Korea  
Code No.: GH68-05468A  
English. 06/2004. Rev. 1.0