



SGH-B200 User's Guide

Some of the contents in this guide may differ from your phone depending on the software of the phone or your service provider.

World Wide Web
<http://www.samsungmobile.com>

Printed in Korea
Code No.:GH68-18702A
English (CIS). 04/2008. Rev. 1.0


Silent mode Press and hold # in Idle mode to disable all sounds on the phone. To exit, press and hold this key again.

SOS mode Press C 4 times in Idle mode with the keypad locked to send an SOS message to preset phone numbers. Once the SOS message is sent, the phone will change to SOS mode and will receive calls only from the registered recipients. Upon receiving a call from the SOS message recipients, the phone will automatically answer the call. Press ☎ to exit SOS mode.

Keypad lock mode Press and hold * in Idle mode to lock the keypad and ignore accidental key pressing. To unlock, press **Unlock** and then *.

Display


Your phone is in Idle mode when you are not on a call or using a menu. You must be in Idle mode to dial a phone number.

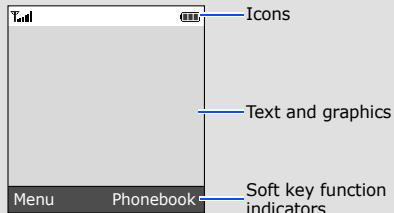

Using the menus

In Idle mode, press the **Menu** soft key to enter the main menu.

Labels at the bottom corners of the display show the current soft key functions. Press the left soft key or right soft key to perform the function indicated.

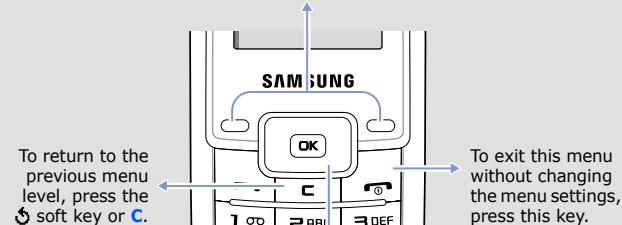


Use the 4-way navigation keys as shortcuts to access your favourite menus.


- In Idle mode, press the **Menu** soft key.
- Select **Phone settings** → **Shortcuts**.
- Select a key.
- Select a menu to be assigned to the key.

Installing the SIM card and battery

- Remove the battery cover and insert the SIM card.

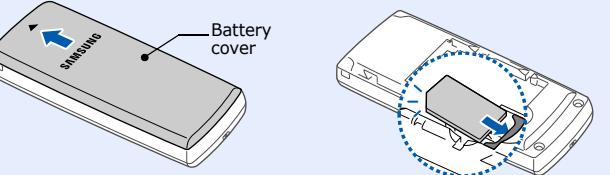


- Install the battery and reattach the battery cover.

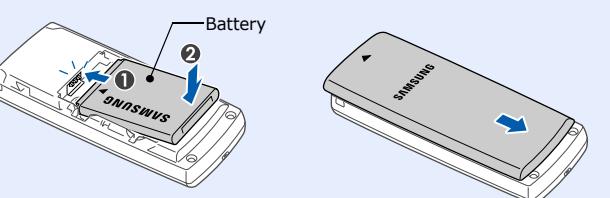


Charging the battery

- Plug the supplied travel adapter.

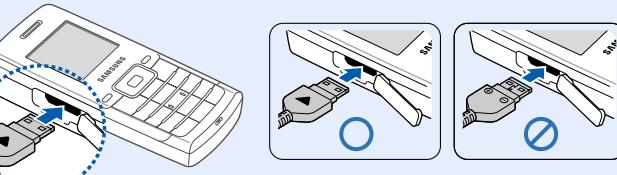


- When charging is finished, unplug the travel adapter.

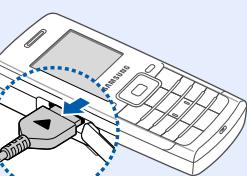

Note: Do not remove the battery from the phone without unplugging the travel adapter first. Otherwise, the phone may be damaged.

Phone layout and key functions

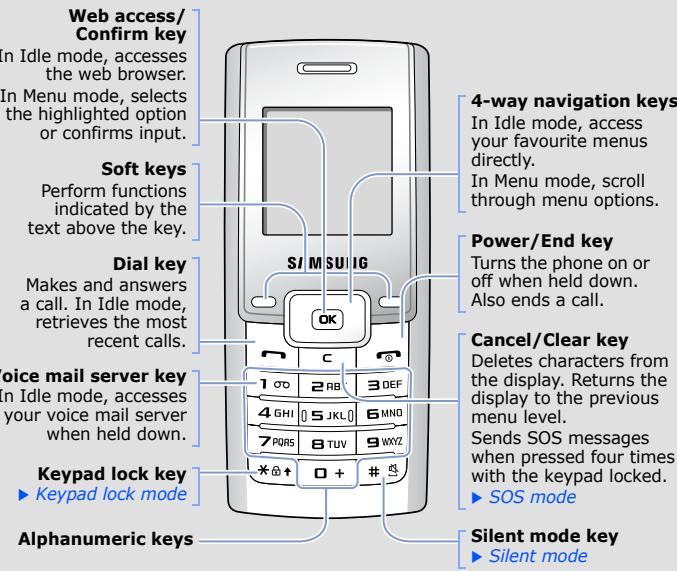

Adjusting the volume

- In Idle mode, press the **Menu** soft key.
- Select **Sound settings** → **Ring volume**.
- Press **Up** or **Down** to adjust the volume level.
- Press the **OK** soft key.

While a call is in progress, press **Up** or **Down** to adjust the earpiece volume.

Changing a ringtone for calls

- In Idle mode, press the **Menu** soft key.
- Select **Sound settings** → **Ring tone**.
- Select a ringtone.

Redialling recent numbers

- In Idle mode, press ☎.
- Press **Up** or **Down** to scroll to the number you want.
- Press ☎ to dial the number.

Entering text

Changing the text input mode

In a text input field, press the right soft key until the input mode indicator you want appears.

T9 mode

- Press 2 to 9 to start entering a word. Press each key once for one letter.
- The word you are entering appears on the display. It may change with each keypress. Finish entering the word before editing or deleting any keystrokes.
- Example: To enter "Hello" in T9 mode, press 4, 3, 5, 5, and 6.
- To display alternative word choices, press 0.
- Press # to insert a space and enter the next word.

ABC mode

Press the keys labelled with the letter you want once for the first letter, twice for the second letter, and so on.

For example, press 2 three times to enter "C" and 5 two times to enter "K."

Menu map

1. SIM AT*	4.7 Alert on call	7.5 To do list
2. Call records	4.8 Power on/off	7.6 Voice memo
2.1 Missed calls	4.9 Extra tones	7.7 Currency exchange
2.2 Received calls	5. Messages	8. Phonebook
2.3 Dialled calls	5.1 Text messages	8.1 Search
2.4 Delete all	5.2 Multimedia messages	8.2 New entry
2.5 Call time	5.3 Push messages	8.3 Group search
2.6 Call cost*	5.4 Configuration messages	8.4 Edit group
3. Network services	5.5 SOS messages	8.5 Speed dial
3.1 Call diverting	6. Funbox	8.6 Delete all
3.2 Call barring	6.1 WAP browser	8.7 Memory status
3.3 Call waiting	6.2 FM Radio	8.8 SDN*
3.4 Network selection	6.3 Games	9. Phone settings
3.5 Caller ID	6.4 Sounds	9.1 Display settings
3.6 Closed user group	6.5 Images	9.2 Greeting message
4. Sound settings	6.6 Delete all	9.3 Own number
4.1 Ring tone	6.7 Memory status	9.4 Language
4.2 Ring volume	7. Organiser	9.5 Security
4.3 Alert type	7.1 Alarm	9.6 Extra settings
4.4 Keypad tone	7.2 Calendar	9.7 Shortcuts
4.5 Keypad volume	7.3 Time & Date	9.8 Connection settings
4.6 Message tone	7.4 Calculator	9.9 Reset settings

* Show only if supported by your SIM card.

Number mode

Press the keys corresponding to the digits you want.

Symbol mode

Press the number keys corresponding to the symbol you want and press the **OK** soft key. You can press **Up** or **Down** to display more symbols.

Tips for entering text

- To move the cursor, press the Navigation keys.
- To delete characters one by one, press **C**. To clear the display, press and hold **C**.
- To insert a space between characters, press **#**.
- To change case in T9 mode or ABC mode, press *****.
- To enter punctuation marks in T9 mode or ABC mode, press **1**.

Sending an SMS message

- In Idle mode, press the **Menu** soft key.
- Select **Messages** → **Text messages** → **Write new**.
- Enter the message text.
- Press the **Options** soft key and add items using the following options:
 - Add objects**: add sounds, images, or animated images.
 - Add templates**: add text templates.
 - Add emoticon**: add emoticons.
 - Add phonebook**: add Phonebook contacts.
 - Add bookmark**: add bookmark items.
- Press the **Options** soft key and select **Send only** or **Save and send**.
- If you select **Save and send**, select a memory location.
- Enter destination numbers.
- Press the **Options** soft key or **OK** and select **Send message** to send the message.

Menu	Description
Menu > Messages > Text messages or Multimedia messages > Settings or Setup	Set options for using messaging services.
Menu > Messages > Text messages or Multimedia messages > Delete all	Delete messages in each message box or all messages at once.
Menu > Messages > Text messages or Multimedia messages > Memory status	Check memory information for messages.
Menu > Messages > Text messages > Voice mail	Access your voice mail server and listen to messages on the network.
Menu > Messages > Text messages > Broadcast	Change settings for the service and access broadcast messages.
Menu > Messages > Multimedia messages > MMS profile	Select or configure a connection profile to be used for MMS.
Menu > Messages > Push messages	Change the settings for the service and access or delete push messages.
Menu > Messages > Configuration messages	Access or delete messages containing network parameters from your service provider.

Menu	Description
Menu > Messages > SOS messages	Activate the SOS message feature. Enter recipients and select the repeat mode.
Menu > Funbox > WAP browser	Launch and configure the web browser.
Menu > Funbox > FM Radio	Listen to music or news via the FM radio on your phone. First, you must connect your phone with the headset, which serves as a radio antenna.
Menu > Funbox > Games, Sounds, or Images	Access games, sounds, or images in your phone's memory.
Menu > Funbox > Delete all	Delete games, sounds, or images in each media box, or all media files at once.
Menu > Funbox > Memory status	Check the amount of memory in use for games, sounds, and images.
Menu > Organiser > Alarm	Set an alarm to sound at a specific time.
Menu > Organiser > Calendar	Keep track of daily or monthly schedule.
Menu > Organiser > Time & Date	Set the current time and date manually and set your local time zone.
Menu > Organiser > Calculator	Perform basic arithmetic functions.
Menu > Organiser > To do list	Create a list of tasks and assign a deadline to each task.

Emergency calls

Key in the emergency number for your present location, then press **OK**. Do not end the call until given permission to do so.

Small children and your phone

Keep the phone and all its parts including accessories out of reach of small children.

Accessories and batteries

Use only Samsung-approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorised accessories could damage your phone and may be dangerous.

CAUTION Risk of explosion if a battery is replaced by an incorrect type.
Dispose of used batteries according to the instructions.

 At very high volume, prolonged listening to a headset can damage your hearing.

Qualified service

Only qualified service personnel may repair your phone.

Correct disposal of this product

(Waste Electrical & Electronic Equipment)

 (Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

Quick feature reference

This section provides brief explanations of features on your phone.

Menu	Description
Menu > SIM AT	Use a variety of additional services offered by your service provider.
Menu > Call records > Missed calls, Received calls, or Dialled calls	View the most recent calls you have dialled, received, or missed.
Menu > Call records > Delete all	Delete the call logs in each call type or all logs at once.
Menu > Call records > Call time	View the duration of recent calls you have dialled and received. Also reset the time counter.
Menu > Call records > Call cost	View the cost of your calls, if supported by your SIM card.
Menu > Network services	Access network services offered by your service provider.
Menu > Sound settings > Ring tone or Ring volume	Select a ringtone for incoming calls or a volume level.
Menu > Sound settings > Alert type	Select an alert type for the call ringer.
Menu > Sound settings > Keypad tone or Keypad volume	Select a tone which the phone sounds when you press a key or a volume level.

Menu	Description
Menu > Sound settings > Message tone	Select the alert ringtone for incoming SMS, MMS, and broadcast messages, or set how often you are informed of a new message.
Menu > Sound settings > Alert on call	Set the phone to alert you when you receive a new message or when the time for an alarm comes during a call.
Menu > Sound settings > Power on/off	Select the melody that the phone sounds when it is switched on or off.
Menu > Sound settings > Extra tones	Set additional tones for the phone.
Menu > Messages > Text messages or Multimedia messages > Inbox, Outbox, or Draft	Read received, sent, or saved messages.
Menu > Messages > Text messages or Multimedia messages > Write new	Create and send messages to other mobile phones.
Menu > Messages > Text messages or Multimedia messages > Templates or Emoticon templates	Preset templates of frequently used messages or emoticons.

Menu	Description
Menu > Phone settings > Greeting message	Enter the greeting message to be displayed when the phone is switched on.
Menu > Phone settings > Own number	Check your phone numbers or assign a name to them.
Menu > Phone settings > Language	Select a language to be used for the display text.
Menu > Phone settings > Security	Protect the phone against unauthorised use.
Menu > Phone settings > Security > Mobile Tracker	Track your phone when it is stolen or lost. When someone tries to use your phone with other SIM card, the phone will automatically send the preset tracking message to your family or friends. This feature may be unavailable due to certain features supported by your service provider.
Menu > Phone settings > Extra settings	Set the automatic redialling feature or the answering method.
Menu > Phone settings > Shortcuts	Set the Navigation keys as shortcuts to access your favourite menus directly.
Menu > Phone settings > Connection settings	Create and customise the profiles containing the settings for connecting your phone to the network.
Menu > Phone settings > Reset settings	Reset the phone to the factory default settings.

Samsung Electronics SAMSUNG Declaration of Conformity (R&TTE)

We, declare under our sole responsibility that the product

GSM Mobile Phone : SGH-B200

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950-1 : 2001 +A11:2004
EMC	EN 301 489-1 V1.5.1 (11-2004) EN 301 489-7 V1.2.1 (08-2002)
SAR	EN 50360 : 2001 EN 62209-1 : 2006
RADIO	EN 301 511 V9.0.2 (03-2003)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Balfour House, Churchfield Road,
Walton-on-Thames, Surrey, KT12 2TD, UK
Identification mark: 0168

The technical documentation kept at :
Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)

Samsung Electronics Euro QA Lab.
Blackbus Business Park, Saxony Way,
Yateley, Hampshire, GU46 8GG, UK
2008.02.26
(place and date of issue)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.

CE 0168

Yong-Sang Park / S. Manager
(name and signature of authorised person)