

GT-E1280 user guide


- Some of the contents in this guide may differ from your device depending on the software of the device or your service provider.
- Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time.
- This product includes certain free/open source software. The exact terms of the licenses, disclaimers, acknowledgements and notices are available on the Samsung's website opensource.samsung.com.

www.samsung.com

Printed in Korea
GH68-37515B
English (EU), 09/2012, Rev. 1.0



Device layout

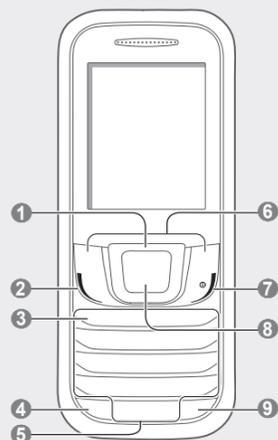

1

Navigation key

From the Home screen, access user-defined menus; In the Menu screen, scroll through menu options
Pre-defined menus might differ, depending on your service provider

2

Dial Key

Make or answer a call; From the Home screen, retrieve recently dialed, missed, or received numbers

3

Voicemail key

From the Home screen, access voice mails (press and hold)

4

Keypad lock key

From the Home screen, lock or unlock the keypad (press and hold)

5

Alphanumeric keys

6

Softkeys

Perform actions indicated at the bottom of the display

7

Power key

Turn the device on or off (press and hold); End a call; In the Menu screen, cancel an input and return to the Home screen

8

Confirm key

In the Menu screen, select the highlighted menu option, or confirm an input
The key might perform differently, depending on your region

9

Silent mode key

From the Home screen, activate or deactivate the silent mode (press and hold)

Your device displays the following status indicators on the top of the screen:

Icon	Description
	No SIM card
	No signal
	Signal strength
	Battery power level
	Call in progress
	Call diverting activated
	New text message (SMS)
	SOS message feature activated

Icon	Description
	Normal profile activated
	Silent profile activated
	Connected with PC
	Alarm activated
	FM radio on
	Roaming (outside of normal service area)
	Current time


Installing the SIM card and battery

- Remove the back cover and insert the SIM card.



! Do not bend or twist the back cover excessively. Doing so may damage the cover.

- Insert the battery and replace the back cover.

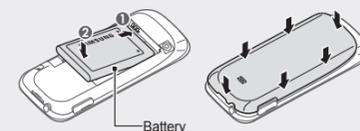

Charging the battery



- Plug a charger into the multipurpose jack.
- Unplug the charger when charging is complete.

- Use only Samsung-approved chargers, batteries, and cables. Unapproved chargers or cables can cause batteries to explode or damage your device.
- Do not remove the battery before removing the charger. This may damage the device.

To save energy, unplug the charger when not in use. The charger does not have a power switch, so you must unplug the charger from the electric socket when not in use to avoid wasting power. The device should remain close to the electric socket while charging.

Turning your device on or off

Turn your device on

Press and hold the Power key, then enter your PIN and press <OK>, if necessary.

Turn your device off

Press and hold the Power key.

If the battery is fully discharged or removed from the device, the time and date will be reset.

Accessing menus

To access your device's menus or options,

Navigation key	Scroll to each menu.
Confirm key	Launch a menu or an application.
<Menu>	Open the Menu screen.
<Back>	Return to previous screen.
	Close menu or application and return to the Home screen.

- When you access a menu requiring the PIN2, you must enter the PIN2 supplied by the SIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damage caused by illegal software.

Entering text

Change the text input mode

Press [#]	Change to uppercase, lowercase, or switch to Number mode.
Press and hold [#]	Switch between T9 and ABC mode. Depending on your region, you might be able to use an input mode for your specific language.
Press [*]	Switch to Symbol mode.
Press and hold [*]	Select an input mode or change input language.

T9 mode

- Press the appropriate alphanumeric keys to enter an entire word.
- When the word displays correctly, press [0] to insert a space. If the word does not display, press the Navigation key up or down to select an alternate word.

ABC mode

Press an appropriate alphanumeric key until the character you want appears on the display.

Number mode

Press an appropriate alphanumeric key to enter a number.

Symbol mode

Press an appropriate alphanumeric key to enter a symbol.

Other features for text input

Navigation key	Move the cursor.
Press <Clear>	Delete characters one by one.
Press and hold <Clear>	Delete characters quickly.
Press [0]	Insert a space.
Press [1]	Enter punctuation marks.

Making or answering a call

- To make a call, enter a phone number and press [call].
- To end a call, press [end call].
- To call a recently dialed number, press [recently dialed] to select a number, and press [recently dialed] again to dial the number.
- To make a call using the phonebook, press <Menu> → <Contacts> → <Contact list> select a contact and press [call].
- To answer an incoming call, press [answer].

Sending and viewing messages

<Menu> → Messages

Send a message

- Press **Create message**.
- Press <Options> → **Add recipients** → **Contact list** to open the phonebook.
- Select a contact and press <Options> → **Add**. Or, enter a contact number.
- Scroll down and enter a text message.
- Press <Options> → **Send**.

View a message

Press **Inbox** and select a message to read.

Managing your contacts

Save your data such as names, phone numbers and personal information in the device memory, SIM card.

<Menu> → Contacts

Add a new contact

- Press **Create contact** → a memory location (if necessary).
- Select a number type (if necessary)
- Enter contact information and press the Confirm key.

Edit a contact

- Select a contact and press <Options> → **Edit**.
- Edit items and press the Confirm key to save.

Delete a contact

Select a contact and press <Options> → **Delete**.

You can change the memory location by pressing <Menu> → **Contacts** → **Management** → **Save new contacts to** and selecting a memory location.

Using the alarm

<Menu> → Alarms

Set a new alarm

- Press <Select>.
- Enter details and press <Save>.

Stop an alarm

When an alarm rings,

- Press <Confirm> to stop the alarm.
- Press <Snooze> to silence the alarm for the snooze period.

Deactivate an alarm

- Select an item and press <Select>.
- Set **Alarm activation to Off**.

Managing your calendar

<Menu> → Calendar

Create an event

- Press <Options> → **Create**.
- Enter details of the event and press <Options> → **Save**.

Listening to the FM radio

<Menu> → FM radio

Activate the FM radio

- Plug a headset into the device.
- Press the Confirm key to turn on the FM radio.
- Press <Yes> to start automatic tuning. You will be asked to start automatic tuning when accessing the FM radio for the first time.
- Control the FM radio using the following keys:

Keys	Function
Confirm key	Turn the FM radio on or off.
Navigation key	<ul style="list-style-type: none"> Left/Right: Fine-tune the frequency; Search for the next available station (press and hold). Up/Down: Adjust the volume.

Add a radio station to the favourites list

- Plug a headset into the device.
- Press <Options> → **Add to Favourites**.
- Assign a key and press <Select>.

Customising your device

Settings control how applications and functions operate. Change them to customise the device. Appearances, sound profiles, call actions and many more can be customised.

<Menu> → Settings

Menu	Description
Profiles	Change alert type, ringtone, volume, etc.
Display	Alter wallpaper, theme, brightness, etc.
Time and date	Change time and date of the device.
Phone	Change device language, etc.
Applications	Set application settings.
Security	Set locks or change passwords.
Network	Change network profiles settings.
Memory	Clear phone memory, manage the memory status.
Reset	Reset the device.

Adjusting the sound profiles

<Menu> → Settings → Profiles

Change the ringtone

- Select a profile and press <Options> → **Edit**.
- Press **Call ringtone**.
- Choose a ringtone and press the Confirm key.

Change the message alert tone

- Select a profile and press <Options> → **Edit**.
- Press **Message alert tone**.
- Choose a tone and press the Confirm key.

Adjust the volume of the ringtone

- Select a profile and press <Options> → **Edit**.
- Press **Volume** → **Call alert type**.
- Adjust the volume and press <Save>.

Adjust the volume of voice during a call

While a call is in progress, press the Navigation key up or down to adjust the volume.

To switch to another profile, select it from the list.

Using shortcuts

<Menu> → Settings → Phone → Shortcuts

Edit shortcuts

- Select a Navigation key and press <Option> → **Change**.
- Select an application to assign and press the Confirm key.

Customising the Home screen

Customise your Home screen with your favourite applications, contacts, calendar, and many more.

<Menu> → Settings → Display → Shortcuts toolbar

Customize the shortcuts toolbar

- Press <Options> → **Edit**.
- Select items to add to the shortcuts toolbar and press <Save>. New items can be added to empty spaces.

Using the SOS message feature

Send an SOS message to your family or friends in an emergency.

 <Menu> → Messages → Settings → SOS messages

Activate the SOS message feature

- Press **Sending options** → <Change> and set **Sending SOS to On**.
- Enter recipient and press <Options> → **Save**.
- Set the number of times to repeat the message.
- Press <Back> → <Yes>.

Send an SOS message

- With the keypad locked, press [] four times to send an SOS message to preset numbers.
- To exit SOS mode, press [].

Making fake calls

 <Menu> → Settings → Applications → Call → Fake call

Activate the fake call feature

Press **Fake call hot key** and set to **On**.

Make a fake call

- Press and hold the Navigation key down.
- With the keys locked, press the Navigation key down four times.



Safety information



This product meets applicable national SAR limits of 2.0 W/kg. The specific maximum SAR values can be found in the SAR information section of this manual.

When carrying the product or using it while worn on your body, maintain a distance of 1.5 cm from the body to ensure compliance with RF exposure requirements.

Trademarks

- SAMSUNG and the SAMSUNG logo are registered trademarks of Samsung Electronics.
- All other trademarks and copyrights are the property of their respective owners..

This safety information contains content for mobile devices. Some content may be not applicable to your device. To prevent injury to yourself and others or damage to your device, read the safety information about your device before using the device.

Warning: Prevent electric shock, fire, and explosion

Do not use damaged power cords or plugs, or loose electrical sockets

Do not touch the power cord with wet hands or disconnect the charger by pulling the cord

Do not bend or damage the power cord

Do not use your device while it is charging or touch your device with wet hands

Do not short-circuit the charger or the device

Do not drop or cause an impact to the charger or the device

Do not charge the battery with the charger that is not approved by the manufacturer

Do not use your device during a thunderstorm
Your device may malfunction and your risk of electric shock is increased.

Do not handle a damaged or leaking Lithium Ion (Li-Ion) battery
For safe disposal of your Li-Ion battery, contact your nearest authorised service centre.

Handle and dispose of the device and charger with care

- Use only Samsung-approved battery and charger specifically designed for your device. Incompatible battery and charger can cause serious injuries or damage to your device.

- Never dispose of the battery or device in a fire. Follow all local regulations when disposing of used battery or device.
- Never place the battery or device on or in heating devices, such as microwave ovens, stoves, or radiators. The device may explode when overheated.
- Never crush or puncture the device. Avoid exposing the device to high external pressure, which can lead to an internal short circuit and overheating.

Protect the device, battery and charger from damage

- Avoid exposing your device and battery to very cold or very hot temperatures.
- Extreme temperatures can damage the device and reduce the charging capacity and life of your device and battery.
- Prevent the battery from coming into contact with metal objects, as this can create a connection between the + and – terminals of your battery and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

Caution: Follow all safety warnings and regulations when using your device in restricted areas

Do not use your device near other electronic devices

Most electronic devices use radio frequency signals. Your device may interfere with other electronic devices.

Do not use your device near a pacemaker

- Avoid using your device within a 15 cm range of a pacemaker, if possible, as your device can interfere with the pacemaker.
- To minimise possible interference with a pacemaker, use your device only on the side of your body that is opposite the pacemaker.

Do not use your device in a hospital or near medical equipment that can be interfered with by radio frequency

If you use medical equipment, contact the equipment manufacturer before using your device to determine whether or not the equipment will be affected by radio frequencies emitted by the device.

If you use a hearing aid, contact the manufacturer for information about radio interference

The radio frequency emitted by your device may interfere with some hearing aids. Before using your device, contact the manufacturer to determine whether or not your hearing aid will be affected by radio frequencies emitted by the device.

Turn off the device in potentially explosive environments

- Turn off your device in potentially explosive environments instead of removing the battery.
- Always comply with regulations, instructions and signs in potentially explosive environments.
- Do not use your device at refuelling points (petrol stations), near fuels or chemicals, or in blasting areas.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or accessories.

Turn off your device when on an aircraft

Your device may interfere with the aircraft's electronic navigation instruments.

Your device may interfere with automotive equipment

Electronic devices in your car may malfunction, due to radio interference from your device. Contact the manufacturer for more information.

Comply with all safety warnings and regulations regarding mobile device usage while operating a vehicle

While driving, safely operating the vehicle is your first responsibility. Never use your mobile device while driving, if it is prohibited by law. For your safety and the safety of others, use your common sense and remember the following tips:

- Get to know your device and its convenience features, such as speed dial and redial. These features help you reduce the time needed to place or receive calls on your mobile device.
- Position your device within easy reach. Make sure you can access your wireless device without taking your eyes off the road. If you receive an incoming call at an inconvenient time, let your voicemail answer it for you.
- Suspend calls in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice, and heavy traffic can be hazardous.
- Do not take notes or look up phone numbers. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility of driving safely.
- Dial sensibly and assess the traffic. Place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary.
- Do not engage in stressful or emotional conversations that may be distracting. Make the person you are talking to aware that you are driving and suspend conversations that could potentially divert your attention from the road.
- Use your device to call for help. Dial a local emergency number in the case of fire, traffic accidents, or medical emergencies.
- Use your device to help others in emergencies. If you see a car accident, a crime in progress, or a serious emergency where lives are in danger, call a local emergency number.

- Call roadside assistance or a special, non-emergency assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle that you know to be stolen, call a number that is designated for reporting these types of situations.

Proper care and use of your mobile device

Keep your device dry

- Humidity and liquids may damage the parts or electronic circuits in your device.
- Do not turn on your device if it is wet. If your device is already on, turn it off and remove the battery immediately (if the device will not turn off or you cannot remove the battery, leave it as-is). Then, dry the device with a towel and take it to a service centre.
- Liquids will change the colour of the label that indicates water damage inside the device. Water damage to your device can void your manufacturer's warranty.

Do not use or store your device in areas with high concentrations of dust or airborne materials

Dust or foreign materials can cause your device to malfunction and may result in fire or electric shock.

Store your device only on flat surfaces

If your device falls, it may be damaged.

Do not store your device in very hot or very cold areas. It is recommended to use your device at temperatures from 5 °C to 35 °C

- Your device can explode if left inside a closed vehicle, as the internal temperature can reach up to 80 °C.
- Do not expose your device to direct sunlight for extended periods of time (on the dashboard of a car, for example).
- Store the battery at temperatures from 0 °C to 45 °C.

Do not store your device with metal objects, such as coins, keys, and necklaces

- Your device may be scratched or may malfunction.
- If the battery terminals come into contact with metal objects, this may cause a fire.

Do not store your device near magnetic fields

- Your device may malfunction or the battery may discharge from exposure to magnetic fields.
- Magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, may be damaged by magnetic fields.
- Do not use carrying cases or accessories with magnetic closures or allow your device to come into contact with magnetic fields for extended periods of time.

Do not store your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers

- The battery may leak.
- Your device may overheat and cause a fire.

Do not drop your device or cause impacts to your device

- The screen of your device may be damaged.
- If bent or deformed, your device may be damaged or parts may malfunction.

Do not use your device or applications for a while if the device is overheated

Prolonged exposure of your skin to an overheated device may cause low temperature burn symptoms, such as red spots and pigmentation.

If your device has a camera flash or light, do not use it close to the eyes of people or pets

Using a flash close to the eyes may cause temporary loss of vision or damage to the eyes.

Use caution when exposed to flashing lights

- While using your device, leave some lights on in the room and do not hold the screen too close to your eyes.
- Seizures or blackouts can occur when you are exposed to flashing lights while watching videos or playing Flash-based games for extended periods. If you feel any discomfort, stop using the device immediately.

Reduce the risk of repetitive motion injuries

When you repetitively perform actions, such as pressing keys, drawing characters on a touch screen with your fingers, or playing games, you may experience occasional discomfort in your hands, neck, shoulders, or other parts of your body. When using your device for extended periods, hold the device with a relaxed grip, press the keys lightly, and take frequent breaks. If you continue to have discomfort during or after such use, stop using the device and consult a physician.

Ensure maximum battery and charger life

- Avoid charging your device for more than a week, as overcharging may shorten battery life.
- Over time, unused device will discharge and must be recharged before use.
- Disconnect the charger from power sources when not in use.
- Use the battery only for their intended purposes.

Use manufacturer-approved batteries, chargers, accessories, and supplies

- Using generic battery or charger may shorten the life of your device or cause the device to malfunction.
- Samsung cannot be responsible for the user's safety when using accessories or supplies that are not approved by Samsung.

Do not bite or suck the device or the battery


- Doing so may damage the device or cause an explosion.
- If children use the device, make sure that they use the device properly.

Do not insert the device or supplied accessories into the eyes, ears, or mouth

Doing so may cause suffocation or serious injuries.

When using the device:

- Hold the device upright, as you would with a traditional phone.
- Speak directly into the microphone.
- Do not touch the device's internal antenna. Doing so may result in reduced call quality or cause the device to emit unintended levels of radio frequency (RF) energy.

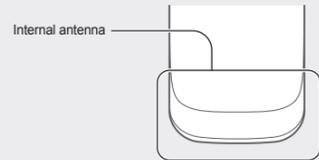

Protect your hearing and ears when using a headset



- Excessive exposure to loud sounds can cause hearing damage.
- Exposure to loud sounds while driving may distract your attention and cause an accident.
- Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.
- In dry environments, static electricity can build up in the headset. Avoid using headsets in dry environments or touch a metal object to discharge static electricity before connecting a headset to the device.

Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in countries with separate collection systems)
This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

This EEE is compliant with RoHS.

Correct disposal of batteries in this product



(Applicable in countries with separate collection systems)
This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

SAMSUNG ELECTRONICS 

Declaration of Conformity (R&TTE)

We, **Samsung Electronics**
declare under our sole responsibility that the product

GSM Mobile Phone : GT-E1280

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950-1 : 2006 + A12 : 2011
SAR	EN 50368 : 2001 / AC 2006
	EN 62209-1 : 2006
	EN 62209-2 : 2010
	EN 62479 : 2010
EN 62311 : 2008	
EMC	EN 301 489-01 V1.9.2 (09-2011)
	EN 301 489-07 V1.3.1 (11-2005)
RADIO	EN 301 511 V9.0.2 (03-2003)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[V] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Forsyth House, Churchfield Road, Wallon-on-Thames, Surrey, KT12 2TD, UK*
Identification mark: 0168

The technical documentation kept at :
Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)

Samsung Electronics Euro QA Lab,
Blackbushe Business Park, Saxony Way,
Yateley, Hampshire, GU46 6GG, UK*
2012.09.07

Joong-Hoon Choi / Lab Manager
(name and signature of authorised person)

*It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your product.

