Features of your new air conditioner

Cool Summer Offer

On those hot sweltering summer days and long restless nights, there is no better escape from the heat than the cool comforts of home. Your new air conditioner brings an end to exhausting hot summer days and lets you rest. This summer, beat the heat with your own air conditioner.

Cost Efficient System

Your new air conditioner not only provides maximum cooling power in the summer, but can also be an efficient heating method in the winter with the advanced "Heat pump" system. This technology is up to 300% more efficient than electrical heating, so you can further reduce its running cost. Now, meet year-round needs with one air conditioner.

Look for Everywhere

The elegant and harmonious design gives priority to the aesthetics of your space and complements any of your existing interior decor. With its soft color and rounded-edge shape, the new air conditioner adds class to any room. Enjoy what your air conditioner offers both functionally and esthetically.

Compact and easy-to-use cassette type

Designed to be installed into most types of suspended ceiling, the cassette type air conditioner is ideal for business and commercial accommodations.

Fresh cool/warm air can be provided through the controllable 1, 2 or 4 sides of the unit.

All functions of the air conditioner will be controlled easily via a remote control.

Contents

Safety precautions	. 3
Checking before use	. 9
Viewing the parts	12
Cleaning and maintaining the air conditioner	12
Appendix	16

This product has been determined to be in compliance with the Low Voltage Directive (2006/95/EC), the Electromagnetic Compatibility Directive (2004/108/EC) and the Machinery Directive (2006/42/EC) of the European Union.



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

Before using your new air conditioner, please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance.

Because the following operating instructions cover various models, the characteristics of your air conditioner may differ slightly from those described in this manual. If you have any questions, call your nearest contact center or find help and information online at www. samsung.com.

Important safety symbols and precautions:

A WARNING	Hazards or unsafe practices that may result in severe personal injury or death.
CAUTION Hazards or unsafe practices that may result in minor personal in or property damage.	
0	Follow directions.
0	Do NOT attempt.
•	Make sure the machine is grounded to prevent electric shock.
B	Cut-off the power supply.
®	Do NOT disassemble.

FOR INSTALLATION





Use the power line with the power specifications of the product or higher and use the power line for this appliance only. In addition, do not use an extension line.

- Extending the power line may result in electric shock or fire.
- Do not use an electric transformer. It may result in electric shock or fire.
- ▶ If the voltage/frequency/rated current condition is different, it may cause fire.

The installation of this appliance must be performed by a qualified technician or service company.

Failing to do so may result in electric shock, fire, explosion, problems with the product, or injury.

Install a switch and circuit breaker dedicated to the air conditioner.

Failing to do so may result in electric shock or fire.

Fix the outdoor unit firmly so that the electric part of the outdoor unit is not exposed.

Failing to do so may result in electric shock or fire.

FOR INSTALLATION





Do not install this appliance near a heater, inflammable material. Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops). Do not install this appliance in a location where gas may leak.

This may result in electric shock or fire.

Never install the outdoor unit in a location such as on a high external wall where it could fall.

If the outdoor unit falls, it may result in injury, death or property damage.



This appliance must be properly grounded. Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- Failure to do so may result in electric shock, fire, an explosion, or other problems with the product.
- Make sure to use a socket-outlet with ground.

FOR INSTALLATION





Install your appliance on a level and hard floor that can support its weight.

Failing to do so may result in abnormal vibrations, noise, or problems with the product.

Install the draining hose properly so that water is drained correctly.

Failing to do so may result in water overflowing and property damage.

When installing the outdoor unit, make sure to connect the draining hose so that draining is performed correctly.

▶ The water generated during the heating operation by the outdoor unit may overflow and result in property damage.

In particular, in winter, if a block of ice falls, it may result in injury, death or property damage.

FOR POWER SUPPLY





When the circuit breaker is damaged, contact your nearest service center.



Do not pull or excessively bend the power line. Do not twist or tie the power line. Do not hook the power line over a metal object, place a heavy object on the power line, insert the power line between objects, or push the power line into the space behind the appliance.

This may result in electric shock or fire.

FOR POWER SUPPLY





When not using the air conditioner for a long period of time or during a thunder/ lightning storm, cut the power at the circuit breaker.

Failing to do so may result in electric shock or fire.

FOR USING





If the appliance is flooded, please contact your nearest service center.

Failing to do so may result in electric shock or fire.

If the appliance generates a strange noise, a burning smell or smoke, cut-off the power supply immediately and contact your nearest service center.

Failing to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power line.

Do not touch the appliance or power line.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

To reinstall the air conditioner, please contact your nearest service center.

- Failing to do so may result in problems with the product, water leakage, electric shock, or fire.
- A delivery service for the product is not provided. If you reinstall the product in another location, additional construction expenses and an installation fee will be charged.
- Especially, when you wish to install the product in an unusual location such as in an industrial area or near the seaside where it is exposed to the salt in the air, please contact your nearest service center.

FOR USING





Do not touch the circuit breaker with wet hands.

► This may result in electric shock.

Do not strike or pull the air conditioner with excessive force.

This may result in fire, injury, or problems with the product.

Do not place an object near the outdoor unit that allows children to climb onto the machine.

This may result in children seriously injuring themselves.

Do not turn the air conditioner off with the circuit breaker while it is operating.

Turning the air conditioner off and then on again with the circuit breaker may cause a spark and result in electric shock or fire.

After unpacking the air conditioner, keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

If a child places a bag over its head, it may result in suffocation.

Do not insert your fingers or foreign substances into the outlet when the air conditioner is operating or the front panel is closing.

► Take special care that children do not injure themselves by inserting their fingers into the product.

Do not touch the front panel with your hands or fingers during the heating operation.

► This may result in electric shock or burns.

Do not insert your fingers or foreign substances into the air inlet/outlet of the air conditioner.

► Take special care that children do not injure themselves by inserting their fingers into the product.

Do not use this air conditioner for long periods of time in badly ventilated locations or near infirm people.

➤ Since this may be dangerous due to a lack of oxygen, open a window at least once an hour.

FOR USING

WARNING



- If any foreign substance such as water has entered the appliance, cut-off the power supply and contact the nearest service center.
- Failing to do so may result in electric shock or fire.
- Do not attempt to repair, disassemble, or modify the appliance yourself.
 - Do not use any fuse (such as cooper, steel wire, etc.) other than the standard fuse.
 - Failing to do so may result in electric shock, fire, problems with the product, or injury.

FOR USING





Do not place objects or devices under the indoor unit.

▶ Water dripping from the indoor unit may result in fire or property damage.

Check that the installation frame of the outdoor unit is not broken at least once a year.

Failing to do so may result in injury, death or property damage.

Max current is measured according to IEC standard for safety and current is measured according to ISO standard for energy efficiency.

- Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.
 - This may result in electric shock, fire, problems with the product, or injury.

Do not operate the appliance with wet hands.

This may result in electric shock.

Do not spray volatile material such as insecticide onto the surface of the appliance.

As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not drink the water from the air conditioner.

► The water may be harmful to humans.

Do not apply a strong impact to the remote controller and do not disassemble the remote controller.

Do not touch the pipes connected with the product.

This may result in burns or injury.

FOR USING

CAUTION



O Do not use this air conditioner to preserve precision equipment, food, animals, plants or cosmetics, or for any other unusual purposes.

► This may result in property damage.

Avoid directly exposing humans, animals or plants from the air flow from the air conditioner for long periods of time.

This may result in harm to humans, animals or plants.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

For use in Europe: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

FOR CLEANING





O not clean the appliance by spraying water directly onto it. Do not use benzene, thinner or alcohol to clean the appliance.

▶ This may result in discoloration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, cut-off the power supply and wait until the fan stops.

Failing to do so may result in electric shock or fire.

FOR CLEANING





Take care when cleaning the surface of the heat exchanger of the outdoor unit since it has sharp edges.

▶ To avoid cutting your fingers, wear thick cotton gloves when cleaning it.



O Do not clean the inside of the air conditioner by yourself.

- For cleaning inside the appliance, contact your nearest service center.
- ▶ When cleaning the internal filter, refer to the descriptions in the 'Cleaning and maintaining the air conditioner' section.
- Failure to do may result in damage, electric shock or fire.

Checking before use

Operation ranges

The table below indicates the temperature and humidity ranges the air conditioner can be operated within.

Refer to the table for efficient use.

MODE	OU	TDOOR TEMPERATURE	INDOOR TEMPERATURE	INDOOR HUMIDITY
	2.6kW			
	3.5kW	-10°C/14°F to 46°C/115°F		
COOLING	5.2kW		18°C/64°F to 32°C/90°F	
	6.0kW	-15°C/5°F to 46°C/115°F		
	7.1kW	-15°C/5°F to 50°C/122°F		
	2.6kW			
	3.5kW	-15°C/5°F to 24°C/75°F		80% or less
HEATING	5.2kW		27°C/81°F to less	
	6.0kW	-20°C/-4°F to 24°C/75°F		
	7.1kW	-20 C/-4 F t0 24 C/73 F		
	2.6kW			
DRYING	3.5kW	-10°C/14°F to 46°C/115°F		
	5.2kW		18°C/64°F to 32°C/90°F	
	6.0kW	-15°C/5°F to 46°C/115°F		
	7.1kW	-15°C/5°F to 50°C/122°F		

Model: AJ***

Mode	Outdoor temperature	Indoor temperature	Indoor humidity	If out of conditions
Cooling	-5°C/23°F ~46°C/115°F	16°C/61°F~32°C/90°F	80% or less	Condensation may occur on the indoor unit with risk to have either water blow off or drop on the floor.
Heating	-15°C/5°F~24°C/75°F	27°C/81°F or less	-	Internal protection triggers and the air conditioner will stop.
Dry	-5°C/23°F~46°C/115°F	18°C/64°F~32°C/90°F	-	Condensation may occur on the indoor unit with risk to have either water blow off or drop on the floor.



• The standardized temperature for heating is 7°C/45°F. If the outdoor temperature drops to 0°C/32°F or below, the heating capacity can be reduced depending on the temperature condition.

If the cooling operation is used at over 32°C/90°F (indoor temperature), it does not cool at its full capacity.



• The use of the air conditioner at a relative humidity above the expected one (80%) may cause the formation of condensate and the leakage of water drops on the floor.

Checking before use

Maintaining your air conditioner

Internal protections via the unit control system

▶ This internal protection operates if an internal fault occurs in the air conditioner.

Туре	Description
Against cold air	The internal fan will be off to against cold air when the heat pump is heating.
De-ice cycle (Defrost cycle)	The internal fan will be off to against cold air when the heat pump is heating.
Anti-protection of internal battery	The compressor will be off to protect internal battery when the air conditioner operates in Cool mode.
Protect compressor	The air conditioner does not start operating immediately to protect the compressor of the outdoor unit after it has been started.



[•] If the heat pump is operating in Heat mode, De-ice cycle is actuated to remove frost from an outdoor unit that may have deposited at low temperatures.

The internal fan is switched off automatically and restarted only after the de-ice cycle is completed.

Tips on using air conditioner


Here are some tips that you would follow when using your air conditioner.


TOPIC	RECOMMENDATION
Cooling	 If current outside temperatures are much higher than the selected indoor temperature, it may take time to bring the inner temperature to the desired coolness. Avoid drastically turning down the temperature. Energy is wasted and the room does not cool faster.
Heating	Since the air conditioner heats the room by taking heat energy from outdoor air, the heating capacity may decrease when outdoor temperatures are extremely low. If you feel the air conditioner insufficiently heats, using an additional heating appliance in combination with the air conditioner is recommended.

TOPIC	RECOMMENDATION
Frost & De-ice	 When the air conditioner runs in Heat mode, due to temperature difference between the unit and the outside air, frost will form. If this happens: The air conditioner stops heating. The air conditioner will operate automatically in De-ice mode for 10 minutes. The steam produced on the outdoor unit in De-ice mode is safe. No intervention is required; after about 10 minutes, the air conditioner operates again normally. *The unit will not operate when it starts to de-ice.
Fan	• Fan may not operate for about 3~5 minutes at the beginning to prevent any cold blasts while the air conditioner is warming up.
High indoor/ outdoor temperatures	If both indoor and outdoor temperatures are high and the air conditioner is running in Heat mode, the outdoor unit's fan and compressor may stop at times. This is normal; wait until the air conditioner turns on again.
Power failure	If a power failure occurs during the operation of the air conditioner, the operating immediately stops and unit will be off. When power returns, the air conditioner will run automatically.
Protection mechanism	If the air conditioner has just been turned on after operation stops or power being supplied, cool/warm air does not come out for 3 minutes to protect the compressor of the outdoor unit.
Automatic air flow blade control	If the air conditioner is operating in abnormal conditions (such as operating the air conditioner with windows open or when small capacity indoor unit is installed and operating in a room that is too large) indoor can become very humid when the angle of the air flow blade is small and performance of the product may decrease. When indoor humidity increases, indoor unit will automatically detect it and open the air flow blade in wider angle to make sure that performance of the product is stable.

Viewing the parts

Main parts

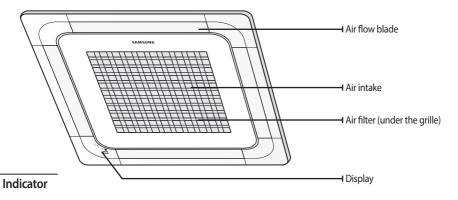

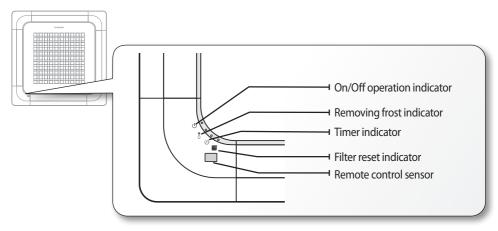



 Your air conditioner and display may look slightly different from the illustration shown above depending on your model.


Cleaning and maintaining the air conditioner

Cleaning the exterior

Wipe the surface of the unit with a slightly wet or dry cloth when needed. Wipe off dirt of odd-shaped area by using a soft brush.



 Do not use Benzene or Thinner. They may damage the surface of the air conditioner and can create a risk of fire.

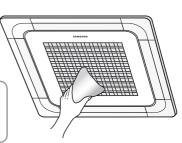


Cleaning and maintaining the air conditioner

Cleaning air filter and grille

Open the front grille.


 Pull both hooks and take the grille downward. Two safety clips are mounted to the front grille to prevent it from dropping.

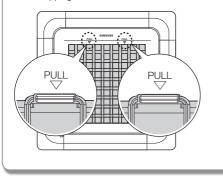

Detach the front grille.


► Remove the safety clip from panel front. (There are two safety clips between grille and panel base.)


If you want to clean the filter only, you do not have to detach the grille. Follow step 4 and 5

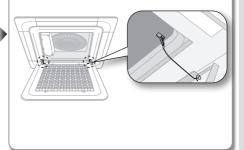

Clean the grille and Air filter with a vacuum cleaner or soft brush. If dust is too heavy, then rinse it with running water and dry it in a ventilated area.

- ► For best conditions, repeat every two weeks.
- ▶ If the Air filter dries in a confined (or humid) area, odors may generate. If it occurs, re-clean and dry it in a well-ventilated area.

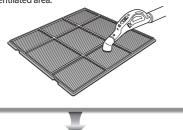

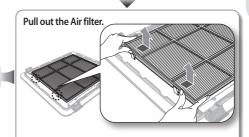

Insert the Air filter back in its original position.

➤ You will hear a click sound when the Air filter is properly placed.



▶ Reverse the above steps to attach the front grille.



- The illustration shown above may differ from yours depending on your model.
- After cleaning the filter, press the Filter Reset button on the remote control for 2 seconds to reset the filter schedule. Filter sign indicator will be on for cleaning time.

Cleaning and maintaining the air conditioner



• If the angle on the air flow blades has been changed by user due to opening the front grille for installation or maintenance, you must turn off the circuit breaker and turn it on again before using the air conditioner.

Otherwise, angles of the each angle can be different or some of the blade may not close when the product is off.

If the air conditioner will not be used for an extended period of time, dry the air conditioner to maintain it in best condition.

- ▶ Dry the air conditioner thoroughly by operating in Fan mode for 3 to 4 hours and cut-off the power supply.
 - There may be internal damage if moisture is left in components.
- ▶ Before using the air conditioner again, dry the inner components of the air conditioner again by running in Fan mode for 3 to 4 hours. This helps remove odors which may have generated from dampness.

Model specification (Dimension and weight)

Dimension and weight			
Туре	Model	Net dimension (WxDxH) (mm)	Net weight(kg)
	AC026FBNDEH	575*250*575	11.0
	AC035FBNDEH	575*250*575	11.0
	AC052FBNDEH	575*250*575	11.7
	AC060FBNDEH	575*250*575	12.0
Indoor unit	AC071FBNDEH	575*250*575	12.0
indoor unit	AJN016NDEHA	575*250*575	11.4
	AJN020NDEHA	575*250*575	11.4
	AJN026NDEHA	575*250*575	11.4
	AJN035NDEHA	575*250*575	11.4
	AJN052NDEHA	575*250*575	11.8

Periodical checks

Refer to the following chart to maintain the air conditioner properly.

Туре	Description	Monthly	Every 4 months	Once a year
	Clean the air filter (1)	•		
	Clean the condensate drain pan (2)			•
Indoor unit	Thoroughly clean the heat exchanger (2)			•
	Clean the condensate drain pipe (2)		•	
	Replace the remote control batteries (1)			•
Outdoor unit	Clean the heat exchanger on the outside of the unit (2)		•	
	Clean the heat exchanger on the inside of the unit (2)			•
	Clean the electric components with jets of air (2)			•
	Verify that all the electric components are firmly tightened (2)			•
	Clean the fan (2)			•
	Verify that all the fan assembly is firmly tightened (2)			•
	Clean the condensate drain pan (2)			•

This check mark requires checking the indoor/outdoor unit periodically, following to the description to maintain the air conditioner properly.



• The described operations should be performed more frequently if the area of installation is very dusty.



• These operations must always be performed by qualified personnel. For more detailed information, see the installation part in the manual.

Appendix

Troubleshooting

Refer to the following chart if the air conditioner operates abnormally. This may save time and unnecessary expenses.

PROBLEM	SOLUTION
The air conditioner does not operate immediately after it has been restarted.	Because of the protective mechanism, the appliance does not start operating immediately to keep the unit from overloading. The air conditioner will start in 3 minutes.
The air conditioner does not work at all.	 Check power status and then operate the air conditioner again. Check if the circuit breaker is switched off. Check if there is a power failure. Check your fuse. Make sure it is not blown out.
The temperature does not change.	Check if you selected Fan mode. Press the Mode button on the remote control to select another mode.
The cool (warm) air does not come out of the air conditioner.	 Check if the set temperature is higher (lower) than the current temperature. Press the Temperature button on the remote control to change the set temperature. Press the Temperature button to decrease or increase the temperature. Check if the air filter is blocked by dirt. Clean the air filter every two weeks. Check if the air conditioner has just been turned on. If so, wait 3 minutes. Cool air does not come out to protect the compressor of the outdoor unit. Check if the air conditioner is installed in a place with a direct exposure to sunlight. Hang curtains on windows to boost cooling efficiency. Check if the cover or any obstacle is not near the outdoor unit. Check if the refrigerant pipe is too long. Check if the air conditioner is only available in Cool mode. Check if the remote control is only available for cooling model.

PROBLEM	SOLUTION
The fan speed does not change.	Check if you selected Auto or Dry mode. The air conditioner automatically adjusts the fan speed to Auto in Auto/Dry mode.
Timer function does not set.	Check if you press the Power button on the remote control after you have set the time.
Odors permeate in the room during operation.	Check if the appliance is running in a smoky area or if there is a smell entering from outside. Operate the air conditioner in Fan mode or open the windows to air out the room.
The air conditioner makes a bubbling sound.	 A bubbling sound may be heard when the refrigerant is circulating through the compressor. Let the air conditioner operate in a selected mode. When you press the Power button on the remote control, noise may be heard from the drain pump inside the air conditioner.
Water is dripping from the air flow blades.	Check if the air conditioner has been cooling for an extended period of time with the air flow blades pointed downwards. Condensation may generate due to the difference in temperature.
Remote control is not working.	 Check if your batteries are depleted. Make sure batteries are correctly installed. Make sure nothing is blocking your remote control sensor. Check that there are strong lighting apparatus near the air conditioner. Strong light which comes from fluorescent bulbs or neon signs may interrupt the electric waves.
The air conditioner does not turn on or off with the wired remote control.	Check if you set the wired remote control for group control.
The wired remote control does not operate.	Check if TEST indicator is displayed on the wired remote control. If so, turn off the unit and switch off the circuit breaker. Call your nearest contact center.
The indicators of the digital display flashes.	Press the Power button on the remote control to turn the unit off and switch the circuit breaker off. Then, switch it on again.

OUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT	COUNTRY	CALL	OR VISIT US ONLINE AT
AUSTRIA	0810 - SAMSUNG (7267864, € 0.07/min)	www.samsung.com	UKRAINE	0-800-502-000	www.samsung.com/ua (Ukrainian)
BELGIUM	02-201-24-18	www.samsung.com/be (Dutch) www.samsung.com/be_fr (French)	MOLDOVA	0-800-614-40	www.samsung.com/ua_ru (Russian)
BOSNIA	051 133 1999	www.samsung.com	U.A.E	800-SAMSUNG (726-7864)	www.samsung.com www.samsung.com
BULGARIA	07001 33 11 , share cost tariff	www.samsung.com/bg	UAL	000-3ANI3UNG (720-7004)	www.samsung.com/ae (English)
CROATIA	062 SAMSUNG (062 726 786)	www.samsung.com/hr	OMAN	800-SAMSUNG(726-7864)	www.samsung.com/ae_ar (Arabic)
CZECH	800 - SAMSUNG (800-726786)	www.samsung.com	KUWAIT	183-2255 (183-CALL)	www.samsung.com/ae (English)
DENMARK	70 70 19 70	www.samsung.com			www.samsung.com/ae_ar (Arabic)
FINLAND	030-6227 515	www.samsung.com	BAHRAIN	8000-4726	www.samsung.com/ae (English) www.samsung.com/ae_ar (Arabic)
FRANCE	01 48 63 00 00	www.samsung.com/fr	CATAD	000 22FF (000 CALL)	www.samsung.com/ae (English)
	0180 6 SAMSUNG bzw. 0180 6 7267864*		QATAR	800-2255 (800-CALL)	www.samsung.com/ae_ar (Arabic)
GERMANY	[HHP] 0180 6 M SAMSUNG bzw.	www.samsung.com	EGYPT	08000-726786	www.samsung.com
	0180 6 67267864*		JORDAN	800-22273 065777444	www.samsung.com/Levant(English
	(*0,20 €/Anruf aus dem dt. Festnetz, aus dem		SYRIA	18252273	www.samsung.com/Levant(English
	Mobilfunk max. 0,60 €/Anruf)		IRAN	021-8255	www.samsung.com
CYPRUS	8009 4000 only from landline	www.samsung.com/gr	MOROCCO	080 100 2255	www.samsung.com
GREECE	80111-SAMSUNG (80111 726 7864) only from land line (+30) 210 6897691 from mobile and land line	www.samsung.com/gr	SAUDI ARABIA	9200-21230	www.samsung.com/sa (Arabic)
HUNGARY	06-80-SAMSUNG(726-7864)	http://www.samsung.com/hu	TURKEY	444 77 11	www.samsung.com
THO TO THE	800-SAMSUNG(726-7864)	neps, ministrigicon, na	ARGENTINE	0800-333-3733	www.samsung.com.ar
ITALIA	[HHP] 800.Msamsung (800.67267864)	www.samsung.com	URUGUAY	000 405 437 33	www.samsung.com
	1800 3000 8282		PARAGUAY	009 800 542 0001	www.samsung.com.py
INDIA	1800 266 8282	www.samsung.com/in	17110100711	0800-124-421 (Demais cidades e regiões)	WWW.surrsurry
LUXEMBURG	261 03 710	www.samsung.com	BRAZIL	4004-0000 (Capitais e grandes centros)	www.samsung.com.br
MONTENEGRO	020 405 888	www.samsung.com		800-SAMSUNG(726-7864)	
NETHERLANDS	0900-SAMSUNG (0900-7267864) (€ 0,10/Min)	www.samsung.com	CHILE	[HHP] 02-24828200	www.samsung.com/cl
NORWAY	815 56480	www.samsung.com	BOLIVIA	800-10-7260	www.samsung.com
POLAND	0 801-172-678* lub +48 22 607-93-33 **	2VIM	COLOMBIA	01-8000 112 112	www.samsung.com/co
	[HHP] 0 801-672-678* lub +48 22 607-93-33**			Bogotá: 6001272	
	*(całkowity koszt połączenia jak za 1 impuls według taryfy operatora)	www.samsung.com/pl	COSTA RICA	0-800-507-7267	www.samsung.com/latin (Spanish)
	** (koszt połączenia według taryfy operatora)				www.samsung.com/latin_en (English)
PORTUGAL	808 20-SAMSUNG(808 20 7267)	www.samsung.com	DOMINICA	1-800-751-2676	www.samsung.com/latin (Spanish) www.samsung.com/latin_en (English)
ROMANIA	08008 SAMSUNG (08008 726 7864) TOLL FREE No.	www.samsung.com/ro	ECUADOR	1-800-10-7267	www.samsung.com/latin (Spanish) www.samsung.com/latin_en (English)
SERBIA	011 321 6899	www.samsung.com/rs			www.samsung.com/latin (Spanish)
SLOVAKIA	0800 - SAMSUNG(0800-726 786)	www.samsung.com	EL SALVADOR	800-6225	www.samsung.com/latin_en (English)
SPAIN	902 - 1 - SAMSUNG (902 172 678)	www.samsung.com	GUATEMALA	1-800-299-0013	www.samsung.com/latin (Spanish)
SWEDEN	0771 726 7864 (SAMSUNG)	www.samsung.com			www.samsung.com/latin_en (English)
SWITZERLAND	0848 - SAMSUNG(7267864, CHF 0.08/min)	www.samsung.com/ch (German) www.samsung.com/ch fr (French)	HONDURAS	800-27919267	www.samsung.com/latin (Spanish) www.samsung.com/latin_en (English)
U.K	0330 SAMSUNG (7267864)	www.samsung.com	JAMAICA	1-800-234-7267	www.samsung.com
EIRE	0818 717100	www.samsung.com	NICARAGUA	00-1800-5077267	www.samsung.com/latin (Spanish)
LITHUANIA	8-800-77777	www.samsung.com/lt			www.samsung.com/latin_en (English)
LATVIA	8000-7267	www.samsung.com/lv	PANAMA	800-7267	www.samsung.com/latin (Spanish) www.samsung.com/latin_en (English)
ESTONIA	800-7267	www.samsung.com/ee	-	0-800-777-08	
RUSSIA	8-800-555-55-55	www.samsung.com	PERU	Desde celulares por favor llamar al número	www.samsung.com/pe
GEORGIA	0-800-555-555	www.samsung.com		336 8686	
	0-800-05-555	www.samsung.com	PUERTO RICO	1-800-682-3180	www.samsung.com
ARMENIA			TRINIDAD &	1-800-SAMSUNG(726-7864)	www.samsung.com
	088-55-55-555	www.samsung.com			
AZERBAIJAN	088-55-55-555 8-10-800-500-55-500(GSM: 7799)	www.samsung.com	TOBAGO VENEZLIELA	0.800.100.5303	MANANCEMENTA COMPA
AZERBAIJAN KAZAKHSTAN			VENEZUELA	0-800-100-5303	www.samsung.com/ve
ARMENIA AZERBAIJAN KAZAKHSTAN UZBEKISTAN KYRGYZSTAN	8-10-800-500-55-500(GSM: 7799)	www.samsung.com		1300 362 603	www.samsung.com/ve www.samsung.com/au
AZERBAIJAN KAZAKHSTAN UZBEKISTAN KYRGYZSTAN	8-10-800-500-55-500(GSM:7799) 8-10-800-500-55-500	www.samsung.com www.samsung.com	VENEZUELA AUSTRALIA	1300 362 603 1-800-10-7267864 [PLDT]	www.samsung.com/au
AZERBAIJAN KAZAKHSTAN UZBEKISTAN	8-10-800-50-55-500(GSM:7799) 8-10-800-500-55-500 00-800-500-55-500	www.samsung.com www.samsung.com	VENEZUELA	1300 362 603	1





Air Conditioner user manual



This manual is made with 100% recycled paper.

imagine the possibilities

Thank you for purchasing this Samsung product.



DB98-34366A-10

