


SAMSUNG

Instruction Manual

DVD-VR350 DVD-VR355

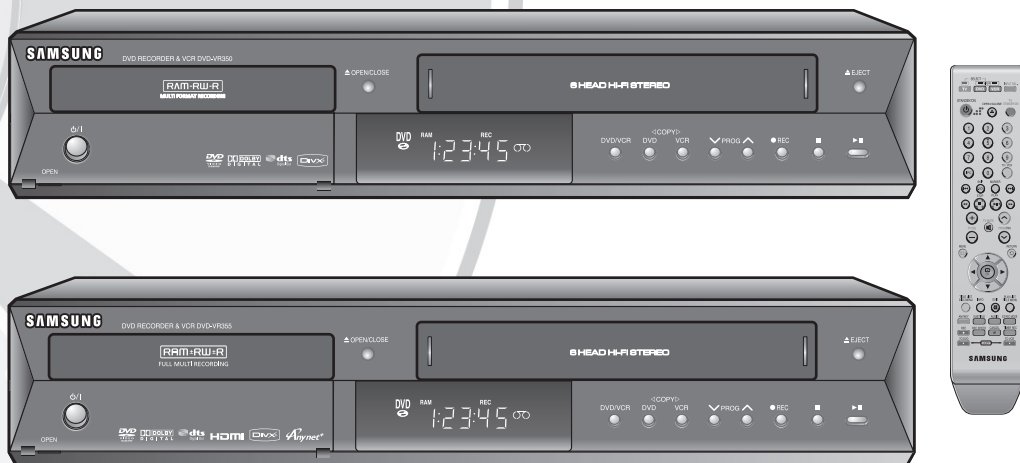

RW
DVD-ReWritable
DVD-R

DVD
RAM/RW/R

DVD
VIDEO

Hi-Fi


AK68-01293A-01



Getting Started

Warning

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

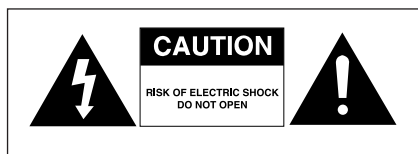

This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.



This symbol indicates important instructions accompanying the product.

Do not install this equipment in a confined space such as a bookcase or similar unit.

WARNING : To prevent damage which may result in fire or electric shock hazard, do not expose this appliance to rain or moisture.

CAUTION : DVD RECORDER & VCR USES AN INVISIBLE LASER BEAM WHICH CAN CAUSE HAZARDOUS RADIATION EXPOSURE IF DIRECTED. BE SURE TO OPERATE RECORDER CORRECTLY AS INSTRUCTED.

CAUTION

THIS PRODUCT UTILIZES A LASER. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE. DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

This product satisfies CE regulations when shielded cables and connectors are used to connect the unit to other equipment. To prevent electromagnetic interference with electric appliances, such as radios and televisions, use shielded cables and connectors for connections.

CAUTION

- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- The Mains plug is used as a disconnect device and shall stay readily operable at any time.

IMPORTANT NOTE

The mains lead on this equipment is supplied with a moulded plug incorporating a fuse. The value of the fuse is indicated on the pin face of the plug. If it requires replacing, a fuse approved to BS1362 of the same rating must be used. Never use the plug with the fuse cover omitted if the cover is detachable.

If a replacement fuse cover is required, it must be of the same colour as the pin face of the plug. Replacement covers are available from your dealer. If the fitted plug is not suitable for the power points in your house or the cable is not long enough to reach a power point, you should obtain a suitable safety approved extension lead or consult your dealer for assistance.

However, if there is no alternative to cutting off the plug, remove the fuse and then safely dispose of the plug. Do not connect the plug to a mains socket, as there is a risk of shock hazard from the bared flexible cord.

To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

The product unit accompanying this user manual is licensed under certain intellectual property rights of certain third parties. This license is limited to private non-commercial use by end-user consumers for licensed contents. No rights are granted for commercial use. The license does not cover any product unit other than this product unit and the license does not extend to any unlicensed product unit or process conforming to ISO/IEC 11172-3 or ISO/IEC 13818-3 used or sold in combination with this product unit. The license only covers the use of this product unit to encode and/or decode audio files conforming to the ISO/IEC 11172-3 or ISO/IEC 13818-3. No rights are granted under this license for product features or functions that do not conform to the ISO/IEC 11172-3 or ISO/IEC 13818-3.

 
Precaution

Important Safety Instructions

Read these operating instructions carefully before using the unit. Follow all the safety instructions listed below. Keep these operating instructions handy for future reference.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Handling Cautions

- Before connecting other components to this recorder, be sure to turn them all off.
- Do not move the recorder while a disc is being played, or the disc may be scratched or broken, and the recorder's internal parts may be damaged.
- Do not put a flower vase filled with water or any small metal objects on the recorder.
- Be careful not to put your hand into the disc tray.
- Do not place anything other than the disc in the disc tray.
- Exterior interference such as lightning and static electricity can affect normal operation of this recorder. If this occurs, turn the DVD Recorder & VCR off and on again with the  button, or disconnect and then reconnect the AC power cord to the AC power outlet. The recorder will operate normally.
- Be sure to remove the disc and turn off the recorder after use.
- Disconnect the AC power cord from the AC outlet when you don't intend to use the recorder for long periods of time.

- Clean the disc by wiping in a straight line from the inside to the outside of the disc.


Maintenance of Cabinet

For safety reasons, be sure to disconnect the AC power cord from the AC outlet.

- Do not use benzene, thinner, or other solvents for cleaning.
- Wipe the cabinet with a soft cloth.

Disc Handling

- Use discs with regular shapes. If an irregular disc (a disc with a special shape) is used, this DVD Recorder & VCR may be damaged.

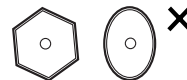

Holding discs

- Avoid touching the surface of a disc where recording is performed.



DVD-RAM, DVD±RW and DVD±R

- Clean with an optional DVD-RAM /PD disc cleaner. Do not use cleaners or cloths for CDs to clean DVD-RAM/DVD±RW/DVD±R discs.



DVD-Video, Audio CD

- Wipe off dirt or contamination on the disc with a soft cloth.

Cautions on handling discs

- Do not write on the printed side with a ball-point pen or pencil.
- Do not use record cleaning sprays or antistatic. Also, do not use volatile chemicals, such as benzene or thinner.
- Do not apply labels or stickers to discs. (Do not use discs fixed with exposed tape adhesive or leftover peeled-off stickers.)
- Do not use scratch-proof protectors or covers.
- Do not use discs printed with label printers available on the market.
- Do not load warped or cracked discs.

Disc Storage

Be careful not to harm the disc because the data on these discs is highly vulnerable to the environment.

- Do not keep under direct sunlight.
- Keep in a cool ventilated area.
- Store vertically.
- Keep in a clean protection jacket.
- If you move your DVD Recorder & VCR suddenly from a cold place to a warm place, condensation may generate on the operating parts and lens and cause abnormal disc playback. In this case, do not connect the plug to the power outlet and wait for two hours. Then insert the disc and try to play again.

Disc Specifications

• DVD-VR350

This unit allows you to record and playback high quality digital images on a DVD-RAM/DVD-RW/DVD-R disc. You can record and edit digital video on DVD-RAM/DVD-RW/DVD-R discs as if they were VCR tapes. (DVD+RW/DVD+R discs can be played, but cannot be recorded.)

• DVD-VR355

This unit allows you to record and playback high quality digital video on DVD-RAM/DVD±RW/DVD±R discs. You can record and edit digital video on DVD-RAM/DVD±RW/DVD±R discs as if they were VCR tapes.

DVD-Video

- A digital versatile disc (DVD) can contain up to 135-minutes of images, 8 audio languages and 32 subtitle languages. It is equipped with MPEG-2 picture compression and Dolby 3D surround, allowing you to enjoy vivid and clear theatre quality images in the comfort of your own home.
- When switching from the first layer to the second layer of a double-layered DVD Video disc, there may be momentary distortion in the image and sound. This is not a malfunction of the unit.
- Once a DVD±R/DVD-RW(V) recorded is finalised, it is playable in a standard DVD player.

Audio CD

- An audio disc on which 44.1kHz PCM Audio is recorded.
- Plays CD-DA format audio CD-R and CD-RW discs. This unit may not be able to play some CD-R or CD-RW discs due to the condition of the recording.

CD-R/-RW

◆ MP3 CD-R/-RW

- Only CD-R discs with MP3 files recorded with ISO9660 or JOLIET format can be played back
- Only MP3 files with the "mp3" or "MP3" extension can be used.
- For MP3 files recorded with a VBR (Variable Bit Rates), from 32 Kbps to 320 Kbps, the sound may cut in out.
- Playable bitrate range is from 56Kbps to 320Kbps.
- The unit can handle a maximum of 1000 files and folders.
- DVD-RAM/DVD±RW/DVD±R discs that contain MP3 files can be played back.

◆ JPEG CD-R/-RW

- Only JPEG files with the ".jpg", ".JPG" extension can be used.
- The unit can handle a maximum of 1000 files and folders.
- Maximum size of progressive JPEG is 3M pixels.
- MOTION JPEG is not supported.
- DVD-RAM/DVD±RW/DVD±R discs that contain JPEG files can be played back.

◆ Using CD-R/-RW

- Use a 700MB (80 minutes) CD-RW/-R disc. If possible, do not use a 800MB (90 minutes) or above disc, as the disc may not play back.
- If the CD-RW/-R disc was not recorded as a closed session, you may experience a delay in the early playback time, and all recorded files may not play.

- Some CD-RW/-R discs may not be playable with this unit, depending on the device which was used to burn them. For contents recorded on CD-RW/-R media from CDs for your personal use, playability may vary depending on contents and discs.

◆ Using MPEG4 disc

- Disc : CD-R/-RW, DVD-RAM, DVD±R/DVD±RW
- MPEG4 File with following extensions can be played : .avi, .divx, .AVI, .DIVX
- MPEG4 Codec Format : DivX 3.11 DivX 4.x DivX 5.x DivX-Pro Xvid
- Motion Compensation : QPEL, GMC
- four CC : MPG4, mpg4, DIV3, divX3, DIVX, divX, DX50, MP43, mp43, XVID, xvid
- Available Audio Format : "MP3", "MPEG1 Audio Layer2", "LPCM", "AC3", "DTS", "MS ADPCM"
- Supported subtitle file formats: .smi, .srt, .sub, .psb, .txt, .ass

DVD±R Disc Playback and Recording

- Once a DVD±R recorded is finalised, it is playable in a standard DVD player.
- You can record onto the available space on the disc and perform editing functions such as giving titles to discs and programmes and erasing programmes before finalising.
- When programming is erased from a DVD±R, that space does not become available. Once an area on a DVD±R is recorded on, that area is no longer available for recording, whether the recording is erased or not.
- It takes about 30 seconds for the unit to complete recording management information after recording finishes.
- This product optimizes the DVD±R for each recording. Optimizing is carried out when you start recording after inserting the disc or turning on the unit. Recording onto the disc may become impossible if optimizing is carried out too many times.
- Playback may be impossible in some cases due to the condition of recording.
- This unit can play back DVD±R discs recorded and finalised with a Samsung DVD video recorder. It may not be able to play some DVD±R discs depending on the disc and the condition of the recording.

DVD-RW Disc Playback and Recording

- Recording and playback can be performed on DVD-RW discs in both V and VR Modes.
- Once a DVD-RW recorded in VR Mode is finalised, you cannot perform additional recording.
- Once a DVD-RW recorded in V Mode is finalised, it becomes DVD-Video.
- In both modes, playback can be performed before and after finalisation, but additional recording, deleting and editing can not be performed after finalisation.
- If you want to record the disc in VR Mode and then record in V Mode, be sure to execute Format. Be careful when executing Format because all the recorded data may be lost.
- For an unused disc, a message that asks whether to initialise a disc or not. If you select "Yes", disc will be formatted in VR mode.
- **DVD-RW(VR mode)**
 - This is a format that is used for recording data on a DVD-RW disc. You can repeat recording, editing, deleting, partial deletion, creation of playlist, and etc.
 - A disc that is recorded in this mode may not be played by existing DVD players.

• DVD-RW(V mode)

- This is a format that is used for recording data on a DVD-RW or DVD-R disc. The disc can be played by an existing DVD player once it has been finalised.
- If a disc that has been recorded in V mode by a different manufacturer's recorder but has not been finalised it cannot be played or additionally be recorded by this recorder.

DVD+RW Disc Playback and Recording

- With DVD+RW discs, there is no difference between DVD-Video format(Video mode) and DVD-Video Recording format (VR mode).
- You can make your own chapters on DVD+RWs and edit them using the Chapter Edit menu.
- Finalising is generally unnecessary when using a DVD+RW disc.

DVD-RAM Disc Playback and Recording

- For cartridge type DVD-RAM discs, remove the cartridge and use the disc only.
- Ensure that the recording mode is set to VR mode. Otherwise, this product will not be able to play the recording.
- You cannot play a DVD-RAM in most DVD players due to compatibility issues.
- Only DVD-RAM standard Version 2.0 discs can be played in this unit.
- DVD-RAM recorded on this unit may not work with other DVD Players. To determine compatibility with these DVD-RAM discs, refer to the user's manual for the player.

※ Use of poor quality DVD-RAM/DVD±RW/DVD±R discs may cause following unexpected problems including, without limitation, recording failure, loss of recorded or edited materials or damage to the recorder.

Do not use the following discs!

- LD, CD-G, CD-I, CD-ROM, DVD-ROM discs should not be used in this product.

[Note]

Disc types that can be played : CD/CD-RW/-R/MP3/JPEG/ DVD-Video/DVD-RAM/DVD±RW/DVD±R.

However, if your DVD-RW/-R disc was recorded with another device, it can be played only if it was recorded and finalised in V mode.

- Some commercial discs and DVD discs purchased outside your region may not be playable with this product. When these discs are played, either "No Disc." or "The disc cannot be played. Please check the regional code of the disc." will be displayed.
- If your DVD-RAM/DVD±RW/DVD±R disc is an illegal copy or is not in DVD video format, it may also not be playable.

◆ Disc compatibility

- A 8X speed DVD+RW or greater disc can be played, but maximum recording speed is 4x.
- Not all brands of discs will be compatible with this unit.

COPY PROTECTION

- Many DVD discs are encoded with copy protection. Because of this, you should only connect your DVD Recorder & VCR directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs.
- This product incorporates copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.
- It is permissible to record television programmes, film, video tapes and other material only in the event that third party copyrights and other rights are not violated.

Protection

- Programme-protected: See page 66 "Locking a Title"
- Disc-protected: See page 75 "Disc Protection"

※ DVD-RAM/DVD±RW/DVD±R discs that are incompatible with the DVD-VIDEO format can not be played with this product.

※ For more information on DVD recording compatibility, consult your DVD-RAM/DVD±RW/DVD±R manufacturer.

Contents

Getting Started

■ Warning	2
■ Precaution	3
Important Safety Instructions.....	3
Handling Cautions	3
Maintenance of Cabinet	3
Disc Handling	3
Disc Storage.....	3
Disc Specifications	4
■ General Features	8
■ Before Reading the User's Manual	9
■ How to use the DVD Recorder & VCR.....	9
■ Unpacking	10
■ Description	12
Front Panel (DVD-VR350).....	12
Front Panel (DVD-VR355).....	12
Front Panel Display	13
Rear Panel (DVD-VR350)	13
Rear Panel (DVD-VR355)	14
Tour of the Remote Control	15

Connecting & Setting Up

■ Connecting DVD Recorder & VCR to the TV using the RF Cable	16
■ Connecting the SCART Cable.....	16
Case 1 : Connecting DVD Recorder & VCR to the TV using the SCART Cable.....	16
Case 2 : Connecting DVD Recorder & VCR to a Satellite Receiver or Other Equipment.....	17
■ Connecting the Audio/Video Cable.....	18
■ Connecting the S-Video Cable	18
■ Connecting the Component Video Cable	19
■ Connecting HDMI/DVI to a TV (DVD-VR355 only) .	20
Case 1 : Connecting to a TV with HDMI Jack	20
Case 2 : Connecting to a TV with DVI Jack	20
■ AV Receiver Connections.....	21
■ Connecting External Devices	21
Case1 : Connecting an external devices to the AV3 jacks.....	21
Case 2 : Connecting a DV Device to the DV IN jack..	21

System Setup 22

■ On-Screen Menu Navigation	22
■ Plug & Auto Setup	22

■ Setting the Date and Time.....	23
■ Auto Setup.....	23
■ Manual Setup	24
■ VIDEO Output CH	25
■ Setting Up the Language Options	25
■ Setting Up the Audio Options	26
■ Setting Up the Display (Video) Options.....	27
■ Progressive scan.....	28
■ Setting Up the Parental Control.....	30
■ VCR Setting.....	31
■ DVD EP Mode Time	32
■ Automatic Chapter Creator.....	32
■ Quick Recording.....	33
■ Anynet+(HDMI-CEC) (DVD-VR355 only).....	33

Playback

◆ DVD Playback	
■ Region code (DVD-Video only)	35
■ Logos of Discs that can be played	35
■ Disc types that can be played	35
■ Playing a Disc.....	36
■ Using the Disc Menu and Title Menu.....	37
■ Using the Search & Skip Functions.....	37
■ Slow Motion Play/Step Motion Play.....	38
■ Using the ANYKEY button.....	39
■ Repeat Play.....	40
■ Selecting the Subtitle Language.....	40
■ Selecting the Audio language.....	41
■ Changing the Camera Angle	41
■ Zooming-In	41
■ Using the Bookmarks	42
■ Using the Markers	43
■ Playing back an Audio CD (CD-DA)/MP3.....	44
Buttons on the Remote Control used for Audio CD(CD-DA)/MP3 playback.....	44
Playing back an Audio CD (CD-DA).....	44
Playing back an MP3 Disc.....	45
Repeat Playback of an Audio/MP3 Disc.....	45
Play Option Mode.....	46
To Programme Tracks	46
■ Playing back a Picture Disc.....	46
■ Playing back an MPEG4 Disc	47

◆ VCR Playback	
■ Playing back a VHS Tape (VCR).....	48
Tracking.....	48
Special VCR Playback Features	48
Variable Search System	49

Recording

◆ DVD Recording	
■ Recordable discs.....	50
Compatibility between Samsung and Other Company's Recorder.....	50
Recording Formats.....	51
■ Recording Mode	51
■ Unrecordable video	52
■ Recording immediately.....	53
■ Recording through a DV Input jack	54
■ Making a One Touch Recording (OTR).....	54
■ Making a Timer Recording	55
■ Editing the Scheduled Record List.....	57
■ Deleting the Scheduled Record List.....	57
■ Using the Video Plus+Feature	58
■ Video Plus+ Extended	58
■ EZ REC MODE	59
◆ VCR Recording	
■ Basic VCR Recording.....	60
■ Check Remaining Time	61
■ Special Recording Features.....	61
■ Copy to DVD or VCR.....	62
To copy from DVD to VCR.....	62
To copy from VCR to DVD.....	63

Editing

■ Playing the Title List	64
Recording on Free space	65
■ Basic Editing (Title List).....	65
Renaming (Labeling) a Title	65
Locking (Protecting) a Title.....	66
Deleting a Title.....	66
Deleting a Section of a Title.....	67
Editing a Chapter.....	67
Dividing a Title	69
■ Advanced Editing (Playlist).....	70
Creating a Playlist	70
Playing Titles in the Playlist	71

Renaming a Playlist Title.....	71
Editing a Scene for the Playlist.....	71
Copying a Playlist to the VCR	74
Deleting a Playlist from the Playlist	74
■ Disc Manager	75
Editing the Disc Name.....	75
Disc Protection	75
Formatting a Disc	76
Finalising a Disc	76
Unfinalising a Disc (V/VR mode).....	77
Delete All Title Lists	78
Edit Compatible	78

Reference

■ Troubleshooting.....	79
■ Specifications	82
■ Warranty	83

General Features

- **DVD-VR350**

This unit allows you to record and playback high quality digital images on a DVD-RAM/DVD-RW/DVD-R disc. You can record and edit digital video on DVD-RAM/DVD-RW/DVD-R discs as if they were VCR tapes. (DVD+RW/DVD+R discs can be played, but cannot be recorded.)

- **DVD-VR355**

This unit allows you to record and playback high quality digital video on DVD-RAM/DVD±RW/DVD±R discs. You can record and edit digital video on DVD-RAM/DVD±RW/DVD±R discs as if they were VCR tapes.

High quality digital audio and video recording and playback

You can record up to approximately 16-hours of video on a double side 9.4 GB DVD-RAM disc, up to 15-hours on a dual-layer 8.5GB DVD±R disc, and up to 8-hours on a 4.7 GB DVD-RAM/DVD±RW/DVD±R disc, depending on the recording mode.

Creating DVD video titles using DVD±RW/DVD±R discs

With the DVD-VR350, VR355 you can create your own DVD video titles on 4.7 GB DVD±RW/DVD±R discs.

A Variety of Recording Options

Select an appropriate recording mode between XP, SP, LP and EP to meet your recording needs. (See page 51)

- XP mode - High quality, about 1 hour
- SP mode - Standard quality, about 2 hours
- LP mode - Low quality, about 4 hours
- EP mode - Lower quality, about 6 or 8 hours
- The dual layer DVD±Rs have approximately double the capacity of single layer DVD±Rs. (See page 35.)

Copying digital camcorder content using DV input jack

Record DV Device onto DVD-RAM/DVD±RW/DVD±R discs or video tape using the DV input jack (IEEE1394-4pin). (See page 54)

High quality progressive scan

Progressive scanning provides high resolution and flicker free images. The 10-bit 54-MHz DAC, 2D Y/C Separating circuitry and Time Base Corrector processor technology provide you with the highest image playback and recording quality. (See page 19)

A variety of functions with easy-to-use user interface

Integrated menu system and messaging functionality allow you to perform the desired operations easily and conveniently. With a DVD-RAM/DVD-RW(VR mode) disc, you can edit recorded images, create playlist, and edit images in specific sequence according to your needs.

MPEG4 playback

This DVD Recorder & VCR can play MPEG4 formats within an avi file.

DivX Certification

DivX, DivX Certified, and associated logos are trademarks of DivXNetworks Inc, and are used under licence.



HDMI (High Definition Multimedia Interface)

HDMI reduces picture noise by allowing a pure digital video/audio signal path from the DVD Recorder & VCR to your TV. (DVD-VR355 only)


















EZ REC MODE

This function allows you Initialise and Finalise a disc automatically. (See page 59)

Before Reading the User's Manual

Make sure to check the following terms before reading the user's manual.

Icons that will be used in manual

Icon	Term	Definition
	DVD	This involves a function available in DVD or DVD-RW(V)/DVD±R discs that have been recorded and finalised.
	RAM	This involves a function available in DVD-RAM.
	-RW	This involves a function available in DVD-RW.
	-R	This involves a function available in DVD-R.
	+RW	This involves a function available in DVD+RW.
	+R	This involves a function available in DVD+R.
	CD	This involves a function available in a data CD (CD-R or CD-RW).
	JPEG	This involves a function available in CD-R/-RW or DVD-RAM/DVD±RW/DVD±R discs.
	MP3	This involves a function available in CD-R/-RW or DVD-RAM/DVD±RW/DVD±R discs.
	MPEG4	This involves a function available in a data CD-R/-RW or DVD-RAM/DVD±RW/DVD±R discs.
	VHS	This involves a function available in VIDEO Tape.
	Caution	This involves a case where a function does not operate or settings may be canceled.
	NOTE	This involves tips or instructions on the page that help each function operate.
	One-Touch button	A function that can be operated by using only one button.
	ANYKEY button	A function that can be operated by using ANYKEY button.

About the use of this user's manual

- 1) Be sure to be familiar with Safety Instructions before using this product. (See pages 2~3)
- 2) If a problem occurs, check the Troubleshooting. (See pages 79~81)

Copyright

©2007 Samsung Electronics Co.
All rights reserved; No part or whole of this user's manual may be reproduced or copied without the prior written permission of Samsung Electronics Co.

How to use the DVD Recorder & VCR

Step 1 : Select the disc type

Please check available disc type before recording.

- DVD-VR355



(DVD+RW/DVD+R discs can be played, but cannot be recorded.)

- DVD-VR355



If you want to repeatedly record on the same disc or you want to edit the disc after recording, select a rewritable DVD±RW or DVD-RAM type disc. If you want to save a recording without any changes, choose a non-rewritable DVD±R.

Step 2 : Format the disc to start recording

Unlike a VCR, the recorder automatically starts formatting when an unused disc is inserted. This is required for the preparation of recording on a disc.

Using a DVD-RAM

This type of disc can be formatted in DVD-Video Recording format (VR mode). You can edit recorded images and create a playlist in a specific sequence according to your requirements.

Using a DVD±RW/+R

- When an unused DVD±RW/+R disc is first inserted, the message "Uninitialised Disc. Do you want to initialise this disc?" will be displayed. If you select Yes, initialising will be start. DVD-RW disc can be formatted in either DVD-Video format (Video mode) or DVD-Video Recording format (VR mode)
- With DVD+RW discs, there is no difference between DVD-Video format (Video mode) and DVD-Video Recording format (VR mode).

Using a DVD-R

Formatting disc is unnecessary and only V mode Recording is supported. You can play this type of disc on various DVD components only when they have been finalised.

- You can only use either the VR or V mode on a DVD-RW, but not both at the same time.
- You can format a DVD-RW to V or VR mode using disc manager. It should be noted that the data of the disc may be lost when changing formats.

Step 3 : Recording

There are two different recording methods: Direct Recording and Timer Recording. Timer recording is classified as a Date : Once, Daily or Weekly.
Recording mode : XP (high quality mode), SP (standard quality mode), LP (long recording mode), and EP (extended mode).

Step 4 : Playing

You can select the title you want to play in a displayed menu and then immediately start playback. A DVD consists of sections called titles, and sub sections called chapters.

During recording, a title is created between two points where you start and stop recording.

Chapters will be created automatically when you finalise recording on DVD-RW/-R discs in V mode.

You can make your own chapters on DVD+RWs and edit them using the Chapter Edit menu.

The chapter's length (interval between chapters) varies according to the recording mode.

Step 5 : Editing a recorded disc

Editing on discs is easier than conventional video tapes. The recorder supports many different edit functions, possible only with DVDs. With a simple and easy edit menu, you can operate various edit functions, such as delete, copy, rename, lock, etc., on a recorded title.

Creating a playlist (DVD-RAM/-RW in VR mode)

With this recorder, you can create a new playlist on the same disc and edit it without the change of the original recording.

Step 6 : Finalising & Playing on other DVD components

To play your DVD on other DVD components, finalising may be necessary. First, finish all editing and recording operations, then finalise the disc.

When using a DVD-RW disc in VR Mode

Although finalising is generally unnecessary when playing the disc on a VR Mode compatible component, a finalised disc should be used for playback.

When using a DVD-RW disc in V mode

The disc should be finalised first to enable playback on anything other than this recorder. No more editing or recording can be made on the disc once it has been finalised.

When using a DVD±R disc

You should finalise the disc to play it on a component other than this recorder. You cannot edit or record on the disc once it has been finalised.



- You can finalise discs automatically using EZ REC MODE. (see page 59)

Unpacking


Accessories

- Audio/Video Cable
- RF Cable for TV Control
- Remote control.
- Batteries for Remote Control (AAA Size)
- User's Manual
- Quick Guide

Preparing the Remote Control

Install Batteries in the Remote Control

- Open the battery cover on the back of the remote control.
- Insert two AAA batteries. Make sure that the polarities (+ and -) are aligned correctly.
- Replace the battery cover.

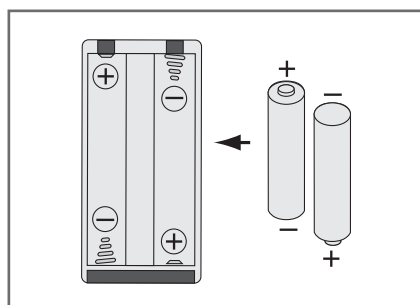

If the remote control does not operate properly:

- Check the polarity +/- of the batteries (Dry-Cell)
- Check if the batteries are drained.
- Check if the remote sensor is blocked by obstacles.
- Check if there is any fluorescent lighting nearby.

Dispose of batteries according to local environmental regulations. Do not put them in the household trash.

To determine whether your television is compatible, follow the instructions below.

1. Switch your television on.
2. Point the remote control towards the television.
3. Press and hold the **TV** button and enter the two-figure code simultaneously corresponding to the brand of your television, by pressing the appropriate number buttons.

Controllable TV Codes

BRAND	SELECT NUMBER
SAMSUNG	TV +01, +02, +03, +04, +05, +06, +35
AKAI	TV +12
BANG & OLUFSEN	TV +22
BLAUPUNKT	TV +09
BRANDT	TV +14
BRIONVEGA	TV +22
CGE	TV +21
CONTINENTAL EDISON	TV +24
FERGUSON	TV +14
FINLUX	TV +02, +17, +21
FISHER	TV +12
FORMENTI	TV +22
GRUNDIG	TV +09, +17, +21
HITACHI	TV +11, +13, +14, +24
IMPERIAL	TV +21
JVC	TV +32
LG	TV +02, +30
LOEWE	TV +02
LOEWE OPTA	TV +02, +22
METZ	TV +22
mitsubishi	TV +02, +16
MIVAR	TV +21, +29
NOKIA	TV +23
NORDMENDE	TV +13, +14, +22, +24
PANASONIC	TV +08, +23, +24, +25, +26, +27
PHILIPS	TV +02, +20, +22
PHONOLA	TV +02, +20, +22
PIONEER	TV +14, +23
RADIOLA	TV +02, +20
RADIOMARELLI	TV +22
REX	TV +23
SABA	TV +13, +14, +22, +23, +24
SALORA	TV +23
SANYO	TV +12, +16
SCHNEIDER	TV +02
SELECO	TV +23
SHARP	TV +10, +16, +31
SIEMENS	TV +09
SINGER	TV +22
SINUDYNE	TV +22
SONY	TV +15, +16
TELEAVA	TV +14
TELEFUNKEN	TV +14, +24, +28
THOMSON	TV +13, +14, +24

BRAND	SELECT NUMBER
THOMSON ASIA	TV +33, +34
TOSHIBA	TV +07, +16, +17, +18, +19, +21
WEGA	TV +22
YOKO	TV +02

Result: If your television is compatible with the remote control, it will switch off. It is now programmed to operate with the remote control.




- If several codes are indicated for your television brand, try each one in turn until you find one that works.
- If you replace the remote control's batteries, you must set the brand code again.

You can then control the television using the following buttons.

Button	Function
STANDBY/ON	Used to switch the television on and off.
INPUT SEL.	Used to select an external source.
TV VOL (+ or -)	Used to adjust the volume of the television.
PROG (^ or v)	Used to select the desired Programme.
TV MUTE	Used to toggle the sound on and off.
0~9	Used to input number directly.


Description

Front Panel (DVD-VR350)

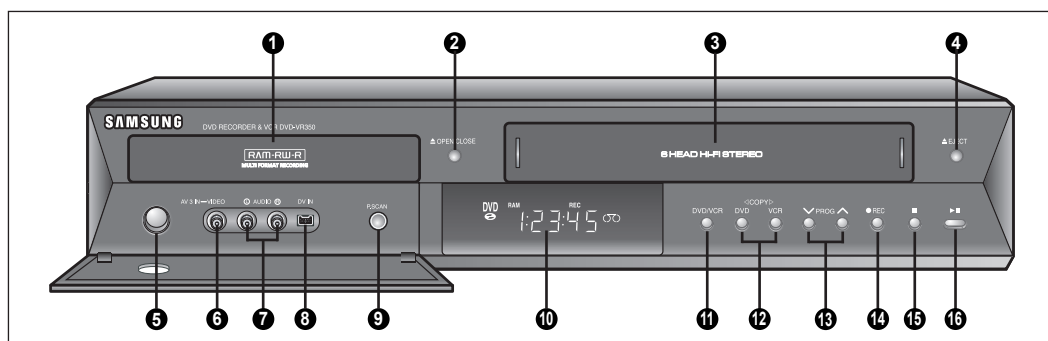


- | | |
|------------------------------|---------------------------|
| 1. DVD DECK | 9. P.SCAN BUTTON |
| 2. DVD OPEN/CLOSE BUTTON | 10. FRONT PANEL DISPLAY |
| 3. VCR DECK | 11. DVD/VCR SELECT BUTTON |
| 4. VCR EJECT BUTTON | 12. COPY BUTTONS |
| 5. STANDBY/ON BUTTON | 13. PROG V / ^ BUTTONS |
| 6. VIDEO INPUT JACK (AV3 IN) | 14. RECORD BUTTON |
| 7. AUDIO INPUT JACK (AV3 IN) | 15. STOP BUTTON |
| 8. DV INPUT JACK | 16. PLAY/PAUSE BUTTON |

Front Panel (DVD-VR355)

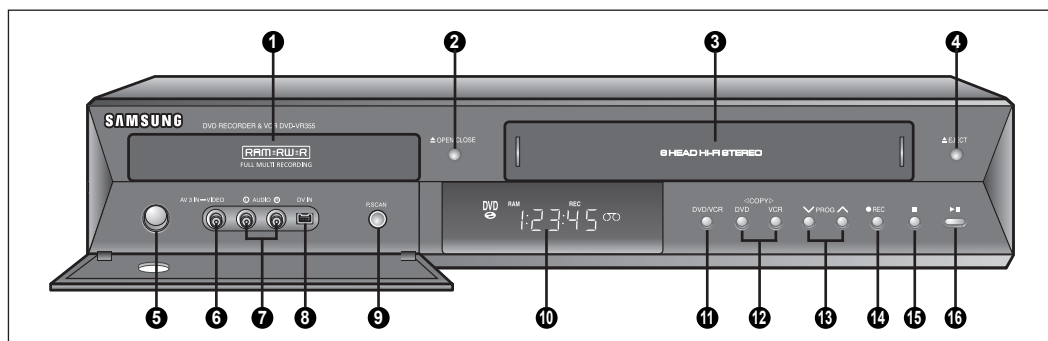


- | | |
|------------------------------|---------------------------|
| 1. DVD DECK | 9. P.SCAN BUTTON |
| 2. DVD OPEN/CLOSE BUTTON | 10. FRONT PANEL DISPLAY |
| 3. VCR DECK | 11. DVD/VCR SELECT BUTTON |
| 4. VCR EJECT BUTTON | 12. COPY BUTTONS |
| 5. STANDBY/ON BUTTON | 13. PROG V / ^ BUTTONS |
| 6. VIDEO INPUT JACK (AV3 IN) | 14. RECORD BUTTON |
| 7. AUDIO INPUT JACK (AV3 IN) | 15. STOP BUTTON |
| 8. DV INPUT JACK | 16. PLAY/PAUSE BUTTON |

Front Panel Display

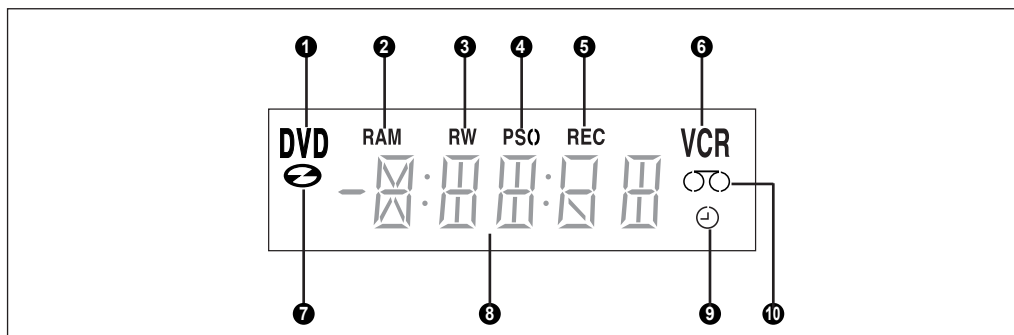


1. DVD is activated.
2. DVD-RAM is activated.
3. DVD(±)R or DVD(±)RW is activated.
4. Progressive Scan mode is activated.
5. Record function is activated.
6. VCR is activated.
7. DVD or CD media is loaded.
8. The time, counter position or current deck status is indicated.
9. When you set a Timer recording, this indicator is illuminated.
10. VHS Video tape is loaded.

Rear Panel (DVD-VR350)

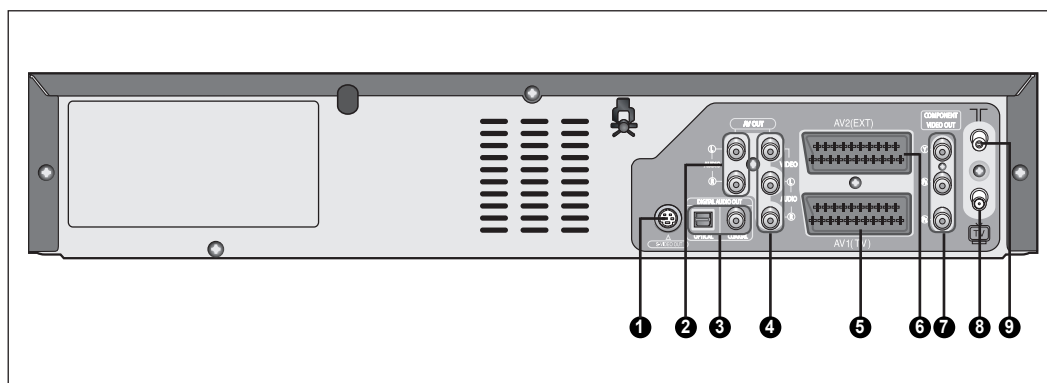

1. S-VIDEO OUT JACK
2. AUDIO L, R OUT JACKS
3. DIGITAL AUDIO OUT JACK (OPTICAL/COAXIAL)
4. AUDIO/VIDEO JACK (AV OUT)
5. AV1 (TV) IN/OUT SCART
6. AV2 (EXT) SCART
7. COMPONENT VIDEO OUT JACKS
8. OUT TO TV CONNECTOR
9. AERIAL IN CONNECTOR


Rear Panel (DVD-VR355)

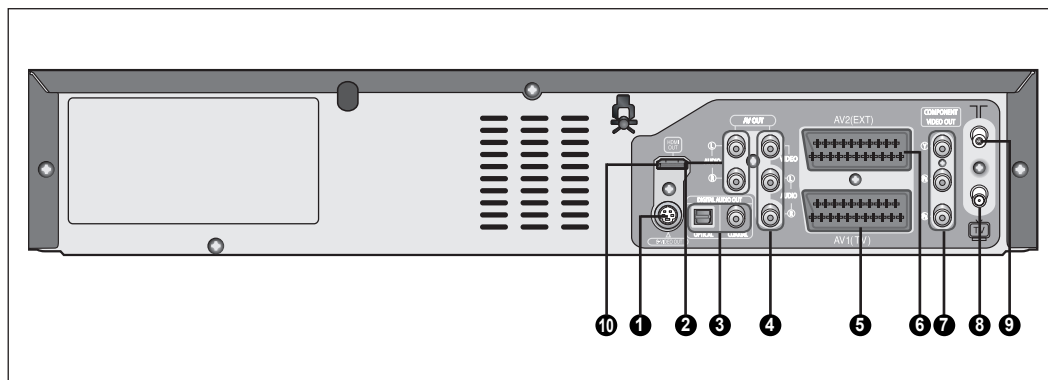

- | | |
|--|----------------------------------|
| 1. S-VIDEO OUT JACK | 6. AV2 (EXT) SCART |
| 2. AUDIO L, R OUT JACKS | 7. COMPONENT VIDEO OUT JACKS |
| 3. DIGITAL AUDIO OUT JACK
(OPTICAL/COAXIAL) | 8. OUT TO TV CONNECTOR |
| 4. AUDIO/VIDEO JACK (AV OUT) | 9. AERIAL IN CONNECTOR |
| 5. AV1 (TV) IN/OUT SCART | 10. HDMI OUTPUT (DVD-VR355 only) |

Tour of the Remote Control

Your DVD Recorder & VCR remote control will work with Samsung televisions and compatible brands.

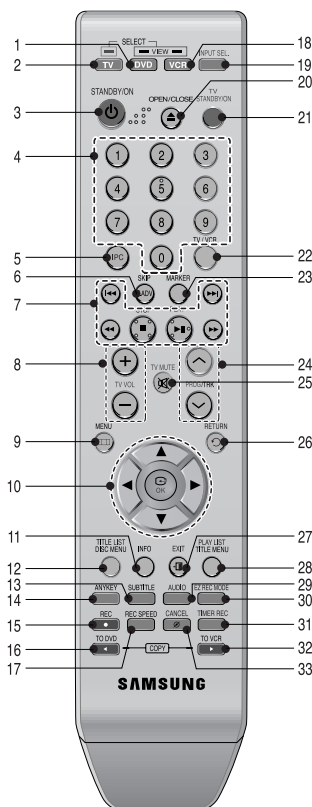

1. DVD Button

Press this when you use a DVD.

2. TV Button

Press this to operate TV.

3. STANDBY/ON Button

4. NUMBER Button

5. IPC Button

6. F.ADV/SKIP Button

7. Playback-related Buttons

Forward/Rewind, Search, Skip, Stop, Play/Still, REC PAUSE

8. TV VOL (Volume) Button

TV volume adjustment

9. MENU Button

Brings up the DVD Recorder & VCR's setup menu.

10. OK/DIRECTION Buttons (▲/▼/◀/▶ Buttons)

11. INFO Button

This will display current setting or disc status.

12. TITLE LIST/DISC MENU Button

Press this to enter the Title List/Disc menu.

13. SUBTITLE Button

Press this to switch the DVD's subtitle language.

14. ANYKEY Button

Press this to view the status of the disc that is being played.

15. REC Button

Press this to make a recording on DVD-RAM/ DVD±RW/±R discs and VHS Video tape.

16. TO DVD copy Button

Press this when you copy from the VCR to the DVD.

17. REC SPEED Button

Press this to set the desired recording time and picture quality.

18. VCR Button

Press this when you use a VCR.

19. INPUT SEL. Button

Select input signal in external input mode (Tuner, AV1, AV2, AV3 or DV input).

20. OPEN/CLOSE Button

To open and close the disc tray.

21. TV STANDBY/ON Button

22. TV/VCR Button

23. MARKER Button

Press this to bookmark or mark a position while playing a disc.

24. PROG/TRK Button

Press this to select a TV channel /Press this to remove the white line.

25. TV MUTE Button

This operates as sound mute (TV mode).

26. RETURN Button

Returns to previous menu.

27. EXIT Button

28. PLAY LIST/TITLE MENU Button

Press this to enter the Edit playlist/Title menu.

29. AUDIO Button

Use this to access various audio functions on a disc (DVD mode).

30. EZ REC MODE Button

31. TIMER REC Button

Press this when you use Timer Recording.

32. TO VCR copy Button



Press this when you copy from the DVD to the VCR.


33. CANCEL Button



Connecting & Setting Up

Connecting DVD Recorder & VCR to the TV using the RF Cable

- Make sure that both the television and the DVD Recorder & VCR are switched off before connecting the cables.
1. Remove the aerial or network input cable from the television.
 2. Connect this cable to the 75Ω aerial jack marked  on the rear of your DVD Recorder & VCR.
 3. Plug the RF Cable supplied into the  jack on your DVD Recorder & VCR.
 4. Plug the other end of the RF Cable into the connector previously used for the aerial on the television.
- To obtain better quality pictures and sound on your television, you can also connect your DVD Recorder & VCR to the television via the SCART cable if your television equipped with type of connection.

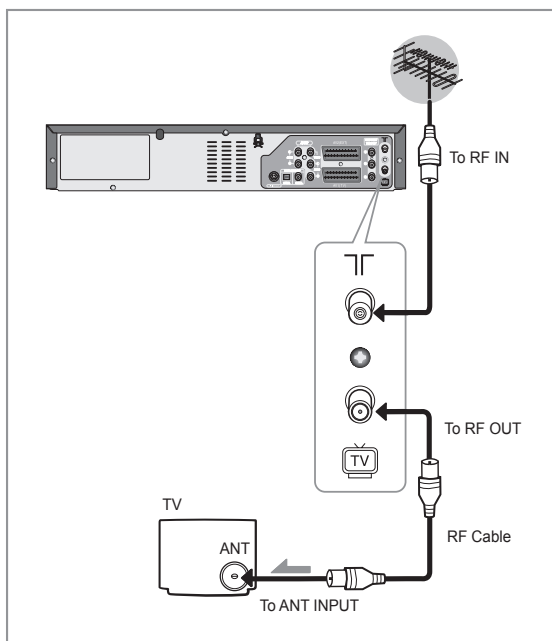


Connecting the SCART Cable

Case 1 : Connecting DVD Recorder & VCR to the TV using the SCART Cable

You can connect your DVD Recorder & VCR to the television using the SCART cable if the appropriate input is available on the television. You thus:

- Obtain better quality sound and pictures
 - Simplify the setting up procedure of your DVD Recorder & VCR
- Regardless of the type of connection chosen, you must always connect the RF Cable. Otherwise, no picture will be visible on the screen when the DVD Recorder & VCR is switched off.
 - Make sure that both the television and the DVD Recorder & VCR are switched off before connecting the cables.

1. Connect the Aerial Cable.
2. Connect one end of the SCART cable to the AV1 (TV) jack on the rear of the DVD Recorder & VCR.
3. Plug the other end into the appropriate connector on the television.

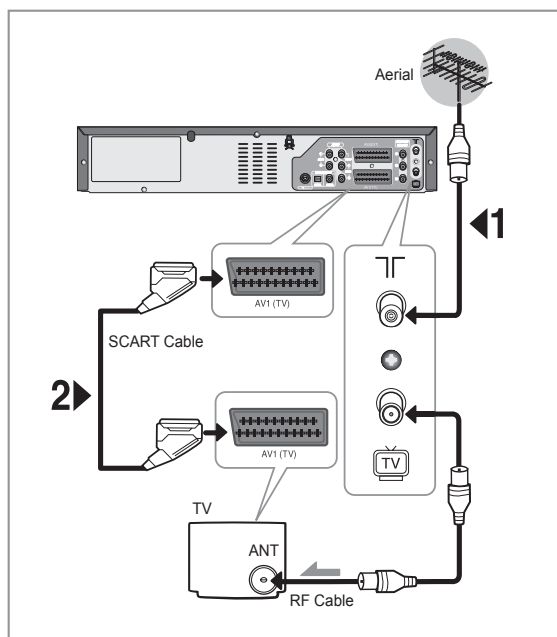

Case 2 : Connecting DVD Recorder & VCR to a Satellite Receiver or Other Equipment

You can connect your DVD Recorder & VCR to a Satellite receiver or other DVD Recorder & VCR using the SCART cable if the appropriate outputs are available on the equipment chosen.

The following illustrations give a few examples of the connection possibilities.

1. AV1(TV): By means of 21-pin Scart Cable


Plug the SCART Cable with satellite receiver or other equipment into the AV1(TV) jack on the rear of the DVD Recorder & VCR.

After making this connection, select the source by pressing the **INPUT SEL.** button for the **AV1** input sources.

2. By means of RF Cable

After making this connection, you must preset the station received through the satellite tuner.

RF output channel of the satellite receiver should be adjusted away from channel 60, which is used by the DVD Recorder & VCR, e.g. re-adjust to channel 59.

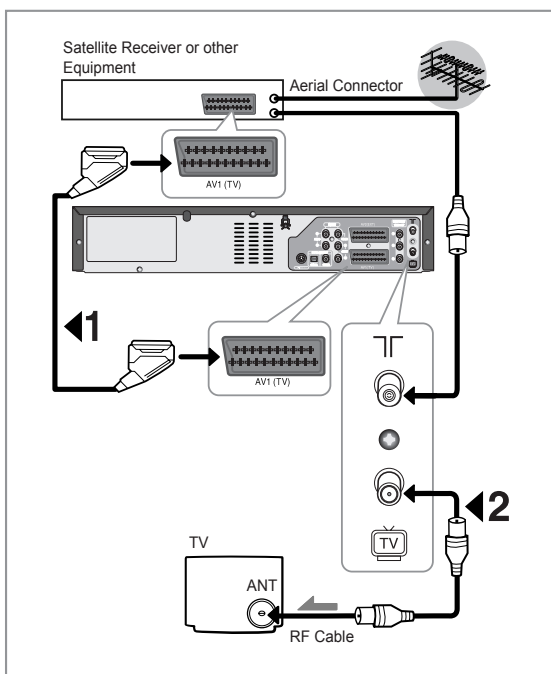

1. AV2 IN (EXT): By means of 21-pin Scart Cable

Plug the SCART Cable with satellite receiver or other equipment into the AV2 (EXT) jack on the rear of the DVD Recorder & VCR.

After making this connection, select the source by pressing the **INPUT SEL.** button for the AV2 input sources.


2. By means of RF Cable

After making this connection, you must preset the station received through the satellite tuner.

RF output channel of the satellite receiver should be adjusted away from channel 60, which is used by the DVD Recorder & VCR, e.g. re-adjust to channel 59.

3. AV1 (TV) : By means of 21-pin Scart Cable


Connect the end of the SCART cable to the AV1 (TV) jack on the rear of the DVD Recorder & VCR. Plug the other end into the appropriate connector on the television.

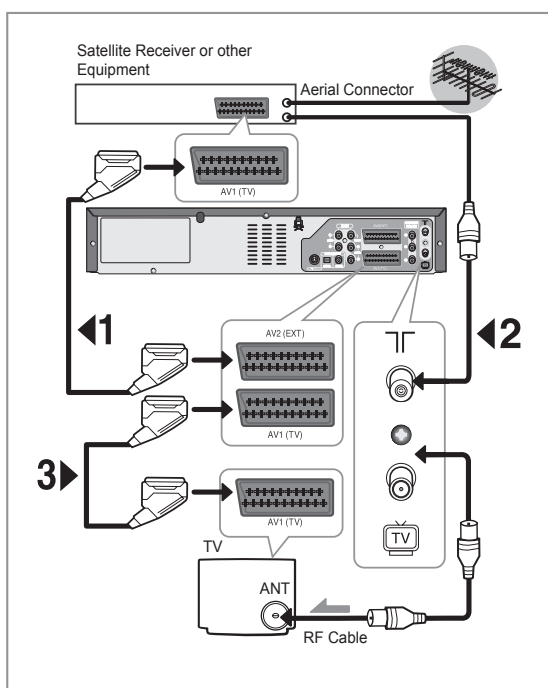

Connecting the Audio/Video Cable

You can connect your DVD Recorder & VCR to the television using the audio/video cable if the appropriate input is available on the television.


1. Connect one end of the video cable into the **VIDEO** output jack on the rear of the DVD Recorder & VCR.
2. Plug the other end of the video cable into the appropriate input connector on the television.
3. Connect one end of the audio cables supplied into the **AUDIO** output jacks on the rear of the DVD Recorder & VCR.
 - Take care to respect the colour coding of the up and down channels.
4. Plug the other end of the audio cables into the appropriate input connectors on the television.

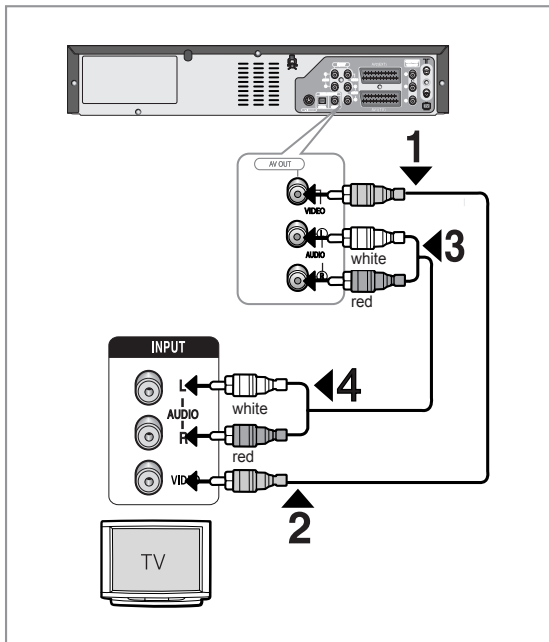

Connecting the S-Video Cable

You will enjoy high quality images. S-Video separates the picture element into black and white(Y) and colour(C) signals to present clearer images than composite video output mode.


1. Connect one end of the S-Video cable into the **S-VIDEO** output jack on the rear of the DVD Recorder & VCR.
2. Plug the other end of the S-Video cable into the appropriate input connector on the television.
3. Connect one end of the audio cable supplied into the **AUDIO** output jacks on the rear of the DVD Recorder & VCR.
 - Take care to respect the colour coding of the up and down channels.
4. Plug the other end of the audio cables into the appropriate input connectors on the television.

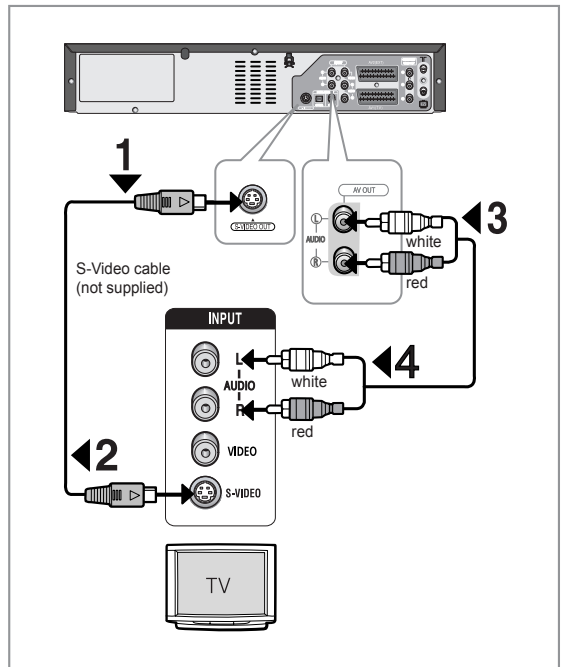

Connecting the Component Video Cable


You will enjoy high quality accurate colour reproduction images. Component video separates the picture element into black and white(Y), blue(P_B), red(P_R) signals to present most clear and clean images.

1. Connect Component video cables between the **COMPONENT VIDEO OUT** jacks on the rear of the DVD Recorder & VCR and **COMPONENT VIDEO IN** jacks on the rear of the TV.
2. Connect audio cables between the audio output jacks on the rear of the DVD Recorder & VCR and **AUDIO IN** jacks on the rear of the TV.
 - Take care to respect the colour coding of the up and down channels.
 - Press the input selector on your TV remote control until the Component signal from the DVD Recorder & VCR appears on your TV screen.

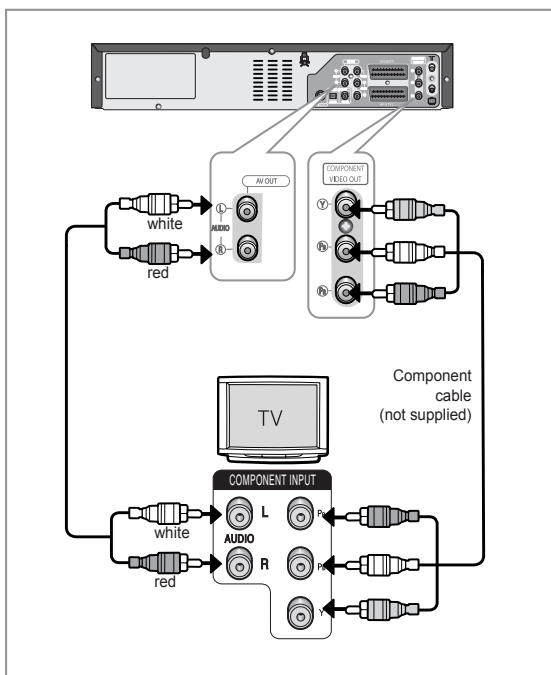

Progressive Scan

Your TV must support progressive scan input to allow to watch progressive scan component video out. (See page 28)

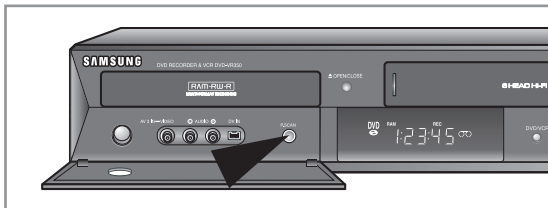

- For more information about Progressive setting, refer to the page 28.
 - Make sure that the colour coded connections match. That is, the Y, P_B and P_R component output jacks of your DVD Recorder & VCR should be connected to the exact corresponding component input jacks on your TV. Otherwise, red or blue images will be displayed on the TV screen.
 - Consumers should note that not all high definition television sets are fully compatible with this product and may cause artifacts to be displayed in the picture. In case of progressive scan picture problems, it is recommended that you switch the connection to the standard definition output.
- If there are questions regarding your Samsung TV set's compatibility with this DVD Recorder & VCR, please contact our customer service centre.


- See your TV User's Manual to find out if your TV supports Progressive Scan. If Progressive Scan is supported, follow the TV User's instructions regarding Progressive Scan settings in the TV's menu system.
- Depending on your TV, the method of connection may differ from the illustration above.
- What is "Progressive Scan"?
Progressive scan has twice as many scanning lines as the interlace output method has. Progressive scanning method can provide better and clearer picture quality.
- You must connect the DVD Recorder & VCR to the component(s) before using the Progressive Scan feature.
- The Component jacks will not output video resolutions above 576p.
To view 720p and 1080i, connect the DVD Recorder & VCR to your TV with the HDMI cable. With HDMI connected, press the **P.SCAN** button to alternate between all available resolutions. (See page 29) (DVD-VR355 only)

Connecting HDMI/DVI to a TV (DVD-VR355 only)

If your TV has a HDMI/DVI input, connect the HDMI/DVI cable to the TV. You will enjoy the best quality images and sounds.

Case 1 : Connecting to a TV with HDMI Jack

- Using the HDMI cable, connect the **HDMI OUT** jack on the rear of the DVD Recorder & VCR to the **HDMI IN** jack of your TV.
- Press the input selector on your TV remote control until the HDMI signal from the DVD Recorder & VCR appears on your TV screen.

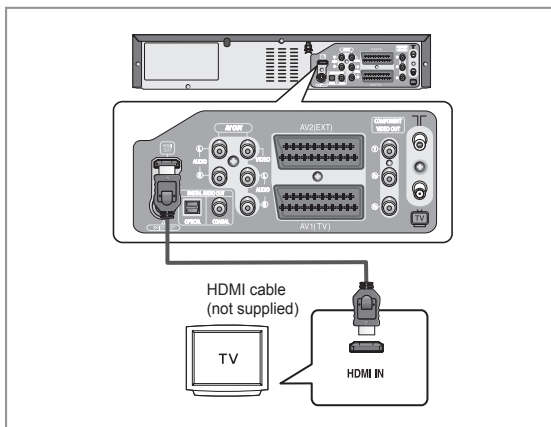


Case 2 : Connecting to a TV with DVI Jack

- Using the DVI Adapter Cable, connect the **HDMI OUT** jack on the rear of the DVD Recorder & VCR to the **DVI IN** jack of your TV.
- Using the audio cables, connect the **AUDIO (red and white) OUT** jacks on the rear of the DVD Recorder & VCR to the **AUDIO (red and white) IN** jacks of your TV. Turn on the DVD Recorder & VCR and TV.
- Press the input selector on your TV remote control until the DVI signal from the DVD Recorder & VCR appears on your TV screen.



- To watch through the HDMI output, set the digital audio output to PCM. (See page 26)
- Depending on the HDMI device (TV/HDMI Receiver) you use, audio may not be supported. If TV does not support Dolby digital/DTS, Audio output is not available when you set Digital output as Bitstream or select DTS On in Audio setup menu. In this case, set the digital audio output to PCM or DTS off.
- If you connect the HDMI cable between Samsung TV, you can operate easily DVD Recorder & VCR using the TV remote control. (This is only available with Samsung TVs that support Anynet+(HDMI-CEC).) (See pages 33~34)
- Please check the *Anynet** logo (If your TV has an *Anynet** logo, then it supports Anynet+ function.)

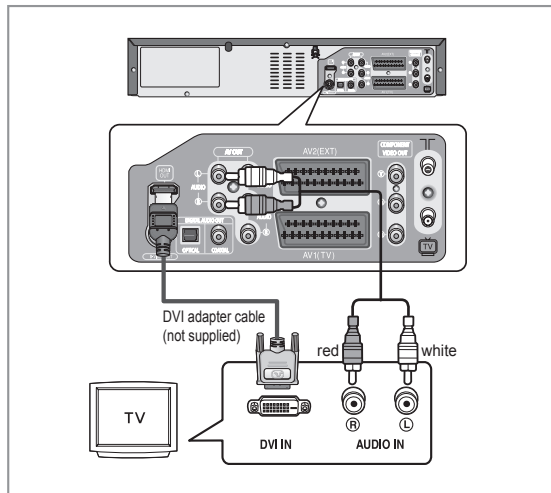

- To change HDMI output resolution, see pages 28~29.
- HDMI (High Definition Multimedia Interface)**
HDMI is an interface to enable the digital transmission of video and audio data with just a single connector. Since HDMI is based on DVI, it is completely compatible with DVI. The only difference between HDMI and DVI is that HDMI supports multi-channel audio. Using HDMI, the DVD Recorder & VCR transmits a digital video and audio signal and displays a vivid picture on a TV having an HDMI input jack.
- HDMI connection description**
HDMI connector - Both uncompressed video data and digital audio data (LPCM or Bit Stream data).
- Though the DVD Recorder & VCR uses a HDMI cable, the DVD Recorder & VCR outputs only a pure digital signal to the TV.
- If TV does not support HDCP (High-bandwidth Digital Content Protection), snow noise appears on the screen.
- Why does Samsung use HDMI?**
Analog TVs require an analog video/audio signal. However, when playing a DVD, the data transmitted to a TV is digital. Therefore either a digital-to-analog converter (in the DVD Recorder & VCR) or an analog-to-digital converter (in the TV) is required. During this conversion, the picture quality is degraded due to noise and signal loss. HDMI technology is superior because it requires no D/A conversion and is a pure digital signal from the DVD Recorder & VCR to your TV.
- What is the HDCP?**
HDCP (High-bandwidth Digital Content Protection) is a system for protecting DVD content outputted via HDMI from being copied. It provides a secure digital link between a video source (PC, DVD, etc) and a display device (TV, projector, etc). Content is encrypted at the source device to prevent unauthorized copies from being made.

AV Receiver Connections

To take full advantage of the movie theatre experience that DVD offers, you may want to connect your DVD Recorder & VCR to a complete Surround Sound system, including an A/V Receiver and six Surround Sound speakers.


If your A/V receiver is equipped with a Dolby Digital Decoder, you have the option to bypass the DVD Recorder & VCR's built-in Dolby Digital Decoder. Use the Digital Audio Out connection below.

To enjoy Dolby digital or DTS sound, you must set up the audio settings. (See page 26)

Manufactured under licence from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

"DTS" and "DTS Digital Out" are trademarks of DTS, Inc.

1. Connect a Digital Audio optical/coaxial cables from the Digital Audio Out jacks on the rear panel of the DVD Recorder & VCR to their corresponding Digital Audio Input jacks on your A/V Receiver:

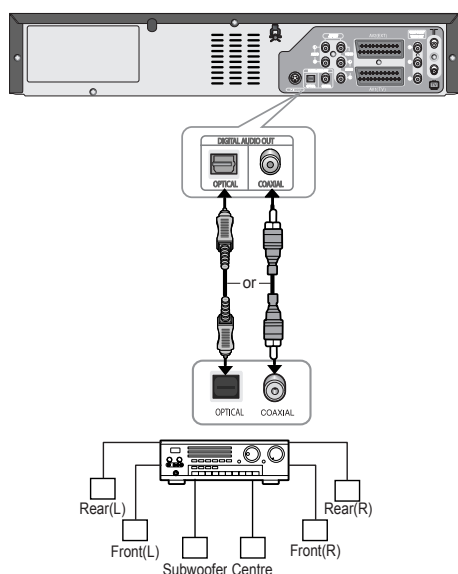


To Digital Audio Input of an A/V Receiver with a Dolby, MPEG2 or DTS Digital Decoder

Connecting External Devices

Case1 : Connecting an external devices to the AV3 jacks

You can connect other audio/video equipment to your DVD Recorder & VCR using audio/video cables if the appropriate outputs are available on the equipment chosen.

1. Connect one end of the video cable into the **VIDEO** input jack on the front of the DVD Recorder & VCR.
2. Plug the other end of the video cable into the appropriate output connector on the other system (VCR or Camcorder, etc).
3. Connect one end of the audio cable supplied into the **AUDIO** input jacks on the front of the DVD Recorder & VCR.
 - Take care to respect the colour coding of the left and right channels.
4. Plug the other end of the audio cable into the appropriate output connectors on the other system (VCR or Camcorder, etc).

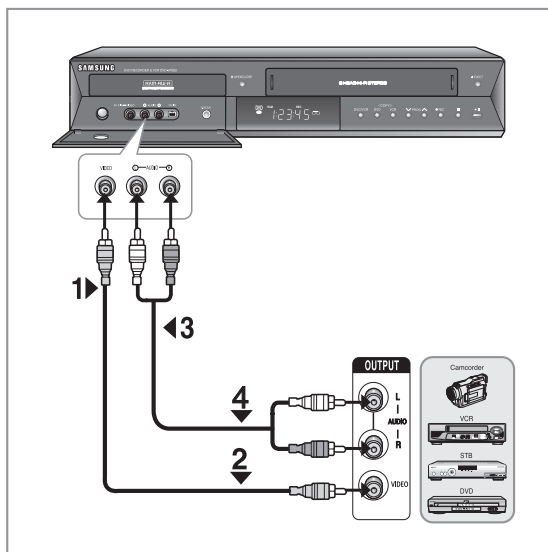

Case 2 : Connecting a DV Device to the DV IN jack

If your DV Device has a DV output jack, connect it to the DV input jack of your DVD Recorder & VCR.


- If your camcorder has a DV output jack, see page 54 for more information.



- If the input is not selected automatically, use **INPUT SEL.** button to select proper input.



System Setup

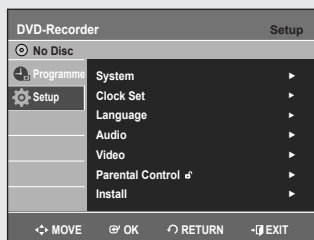

On-Screen Menu Navigation

The on-screen menus allow you to enable or disable various functions on your DVD Recorder & VCR.

*Press the **MENU** button to open the on-screen menu and then use the following buttons to navigate through the on screen menus.*

1. ▲▼, ◀▶ Buttons

Press these buttons on the remote control to move the selection bar ▲▼, ◀▶ to cycle through the menu options.

2. OK Button


Press this button on the remote control to confirm any new settings.

3. RETURN Button

Press this button on the remote control to return to the previous menu screen displayed or to exit the on-screen menu.

4. EXIT Button

Press this button to exit the on-screen menu.

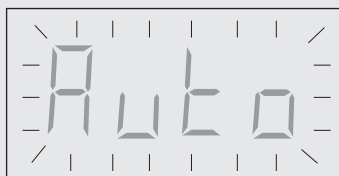

Plug & Auto Setup

The DVD Recorder & VCR will automatically set itself up when it is plugged into the mains for the first time.

TV stations will be stored in memory. The process takes a few minutes. The DVD Recorder & VCR will be ready for use.


1. Connect the RF cable as indicated on page 16.
 - Connecting Your DVD Recorder & VCR to the TV using the RF Cable and Scart cable (or Audio/Video cable).
2. Plug the DVD Recorder & VCR into the mains.
 - "Auto" in the front panel display flickers.
3. Start the auto setup.
4. Start the auto scanning.
5. Check the date and time.

if it is: Correct

Press **OK** button then the data and time will be saved.

if it is: Incorrect

Refer to "Setting the Date and Time" (See page 23) menu, when you want to change the date and time.

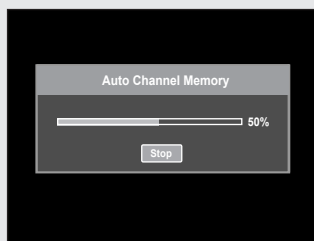



Setting the Date and Time

Your DVD Recorder & VCR contains a 24-hour clock and calendar used to:

- Automatically stop a programme recording
- Preset your DVD Recorder & VCR to record a programme automatically
- You must set the date and time when you purchase the DVD Recorder & VCR.
- Do not forget to reset the time when you change clocks from winter to summer time and vice versa.

1. With the unit in Stop mode/No Disc mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **OK** or **▶** button.
3. Press the **▲▼** buttons to select **Clock Set**, then press the **OK** or **▶** button.
4. Press the **◀▶** buttons to select the hour, minutes, day, month and year.
 - The selected item is highlighted.
5. Press the **▲▼** buttons to increase or decrease the value.
 - The day of the week is displayed automatically.
 - You can hold the **▲▼** buttons down to scroll more quickly through the values.


◆ Setting the clock Automatically

6. Press the **◀▶** buttons to select **Auto Clock**. Press the **▲▼** buttons to select **On**.
7. Press the **OK** button, then the date and time will be saved. If you don't press the **OK** button, it will not be saved.
8. Press the **EXIT** button to exit the menu.



- You must have the aerial connected to set the Auto Clock. Connecting the RF Cable on page 16.
- If you set "Auto Clock" to "On", the Auto Clock set function is activated whenever the DVD Recorder & VCR is turned off. The time is adjusted automatically by making reference to the time signal from the station.

Auto Setup

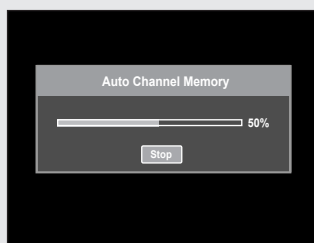

You do not need to preset the stations if you have already set them automatically (See Plug & Auto Setup on page 22).

Your DVD Recorder & VCR contains a built-in tuner used to receive television broadcasts.


You must preset the stations received through the tuner.

This can be done by:

- Plug & Auto Setup (See page 22)
- Auto Setup
- Manual Setup (See page 24)

1. With the unit in Stop mode/No Disc mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **OK** or **▶** button.
3. Press the **▲▼** buttons to select **Install**, then press the **OK** or **▶** button.
4. Press the **▲▼** buttons to select **Auto Setup**, then press the **OK** or **▶** button.

The message "Your data will be lost. Press [OK] to continue, [MENU] to exit." is displayed.

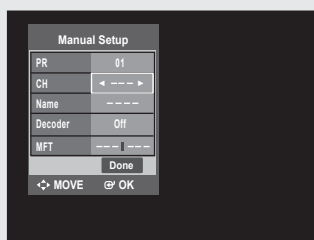


5. Press the **OK** button to start the auto scanning.
 - The first frequency band is scanned and the station found first is displayed and stored.
 - The DVD Recorder & VCR then searches for the second station and so on.
 - When the automatic scanning procedure has finished, the DVD Recorder & VCR switches automatically to programme 1.
 - The number of stations automatically stored by the DVD Recorder & VCR depends on the number of stations that it has found.
6. If you wish to cancel the auto scanning before the end, press the **OK** button.
 - The time and date are set automatically from the broadcast signal. If the signal is weak or ghosting occurs, the time and date may not be set automatically.
 - Once the auto scanning procedure has finished, some stations may have been stored more than once; select the stations with the best reception and delete the ones no longer required.

Manual Setup

If you have already set the stations automatically, you do not need to preset them manually.

1. With the unit in Stop mode/No Disc mode, press the **MENU** button.
2. Press the **▲ ▼** buttons to select **Setup**, then press the **OK** or **▶** button.
3. Press the **▲ ▼** buttons to select **Install**, then press the **OK** or **▶** button.
4. Press the **▲ ▼** buttons to select **Manual Setup**, then press the **OK** or **▶** button.
5. Press the **▲ ▼** buttons to select a **PR** (programme) you wish to edit, delete, or swap, then press the **OK** or **▶** button. Select **Edit**, **Delete** or **Swap** using the **▲ ▼** buttons, then press the **OK** or **▶** button.
 - **Edit** : You can add or edit **PR**(programme). After change PR informations (CH, Name, Decoder, MFT), select **Done**, then press the **OK** button.
 - **CH** : Tune the channel using **◀▶** buttons.
 - **Name** : Display station name automatically detected in broadcasting signal. If not detected, you can edit name by using **▲ ▼◀▶** buttons.
 - **Decoder** : If you set on, you can record scrambled channels using external decoder box.
Before setting on, refer to connecting external decoder box in the page 16.
 - **MFT** : You can tune up the channel frequency better using **◀▶** buttons.
 - **Delete** : the channel information of selected PR(programme) will be removed.
 - **Swap** : You can swap the channel information of two PR(programme). For example, if you wish to swap PR2 and PR5, select swap at PR2, then press the **OK** button at PR5.

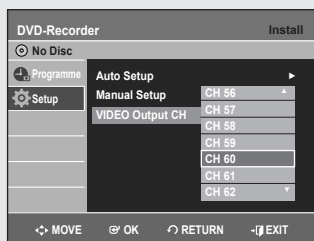

VIDEO Output CH

Your DVD Recorder & VCR output channel may need to be changed if the pictures suffer from interference or if your TV cannot find the pictures.

1. With the unit in Stop mode/No Disc mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **OK** or **►** button.
3. Press the **▲▼** buttons to select **Install**, then press the **OK** or **►** button.
4. Press the **▲▼** buttons to select **VIDEO Output CH**, then press the **OK** or **►** button.
5. Press the **▲▼** buttons to select the desired VIDEO output channel, then press the **OK** or **►** button.



Setting Up the Language Options

If you set audio, subtitle, disc menu, on-screen menu and DivX subtitle language in advance, they will come up automatically every time you watch a movie.

1. With the unit in Stop mode/No Disc mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **OK** or **►** button.
3. Press the **▲▼** buttons to select **Language**, then press the **OK** or **►** button. Language setup menu will be displayed.
4. Press the **▲▼** buttons to select the desired language option, then press the **OK** or **►** button.
 - **Audio** : For the disc audio language.
 - **Subtitle** : For the disc subtitles.
 - **Disc Menu** : For the disc menu contained on the disc.
 - **On-Screen Menu** : For the on-screen menu of your DVD Recorder & VCR.
 - **DivX Subtitle** : Selecting a supported DivX subtitle language by region.

Western	Afrikaans, Basque, Catalan, Danish, Dutch, English, Faeroese, Finnish, French, German, Icelandic, Indonesian, Italian, Malay, Norwegian, Portuguese, Spanish, Swahili, Swedish
Central	English, Albanian, Croatian, Czech, Hungarian, Polish, Romanian, Serbian (Latin), Slovak, Slovenian
Greek	English, Greek
Cyrillic	English, Azeri, Belarusian, Bulgarian, Kazakh, Macedonian, Russian, Serbian, Tatar, Ukrainian, Uzbek

5. Press the **▲▼** buttons to select the desired language, then press the **OK** or **►** button.




- If the selected language is not recorded on the disc, the original pre-recorded language is selected.
- The selected language will only appear if it is supported on the disc.
- If the subtitle language is displayed in broken fonts, change DivX Subtitle to the appropriate region. If it still does not work, the format is not supported.

Setting Up the Audio Options

*Allows you to setup the audio device and sound status settings depending on the audio system in use.
You can also adjust the NICAM mode.*

1. With the unit in Stop mode/No Disc mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **OK** or **▶** button.
3. Press the **▲▼** buttons to select **Audio**, then press the **OK** or **▶** button.
Audio setup menu will be displayed.
4. Press the **▲▼** buttons to select the desired audio option, then press the **OK** or **▶** button.
5. Press the **▲▼** buttons to select the desired item, then press the **OK** or **▶** button.

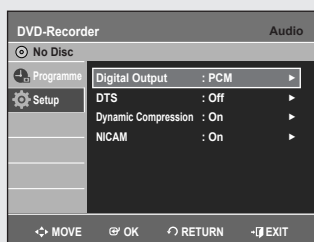


Digital Output

- **PCM** : Converts to PCM (2CH) 48kHz audio. Select PCM when using the Analog Audio Outputs.
- **Bitstream** : Converts to Dolby Digital Bitstream. Select Bitstream when using the Digital Audio Output.



- Be sure to select the correct Digital Output or no audio will be heard.

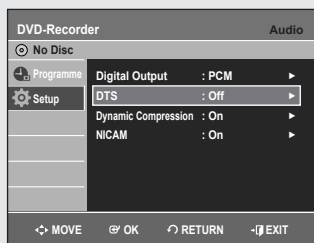


DTS

- **Off** : Doesn't output digital signal.
- **On** : Outputs DTS Bitstream via digital output only. Select DTS when connecting to a DTS Decoder.




- When DTS soundtrack is played, sound is not output from Analog Audio Output.

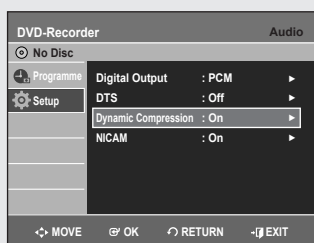

Dynamic Compression

This is only active when a Dolby Digital signal is detected.

- **On** : When Movie soundtracks are played at low volume or from smaller speakers, the system can apply appropriate compression to make low-level content more intelligible and prevent dramatic passages from getting too loud.
- **Off** : You can enjoy the movie with the standard Dynamic Range.

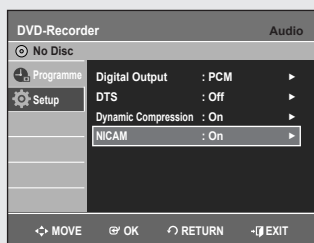

NICAM

NICAM programmes are divided into 3 types.

NICAM Stereo, NICAM Mono and Bilingual (transmission in another language).

NICAM programmes are always accompanied by a standard mono sound broadcast and you can select the desired sound.

- **On** : NICAM mode
- **Off** : Only set at this position to record the standard mono sound during a NICAM broadcast if the stereo sound is distorted due to inferior reception conditions.

Setting Up the Display (Video) Options

This function allows you to setup the TV screen settings.

1. With the unit in Stop mode/No Disc mode, press the **MENU** button.
2. Press the **▲ ▼** buttons to select **Setup**, then press the **OK** or **▶** button.
3. Press the **▲ ▼** buttons to select **Video**, then press the **OK** or **▶** button. Video option menu will be displayed.
4. Press the **▲ ▼** buttons to select the desired video option, then press the **OK** or **▶** button.
5. Press the **▲ ▼** buttons to select the desired item, then press the **OK** or **▶** button.



- Press the **RETURN** or **◀** button to return to the previous menu. Press the **EXIT** button to exit the menu.



TV Aspect

Depending on the type of television you have, you may want to adjust the screen setting. (aspect ratio)

- **4:3 Letter Box** : Select this when you want to see all the 16:9 ratio picture from the DVD, even though you have a TV with a 4:3 ratio screen. Black bars will appear at the top and bottom of the screen.
- **4:3 Pan - Scan** : Select this for conventional size TV when you want to see the central portion of the 16:9 screen. (Extreme left and right side of movie picture will be cut off.)
- **16:9 Wide** : You can view the full 16:9 picture on your wide-screen TV.



3D Noise Reduction (motion adaptive noise reduction)

- **Off** : Normal
- **On** : Provides a clear picture through noise reduction (for recording).



- This function depends on disc type. It may not work for some disc types.



Video Output

You can enjoy high quality image through RGB or Component video connection.

- **Component** : Select this when the Recorder is connected to a TV with Component jack.
- **RGB** : Select this when the Recorder is connected to a TV using SCART cable.

In Component mode, you can set video output to Progressive (P.SCAN) or Interlace, see page 28.

Available video output jacks are as follow.

Available Video Output Jack

Setting mode Output jack		Component mode		RGB Mode
		P.SCAN off mode (Interlace mode)	P.SCAN on mode	
Component Output (Y, P _B , P _R)		O	O (TV in progressive mode)	X
AV1 Scart	R, G, B	X	X	O
	Composite	O	O	X
Composite Video out		O	O	O
S-Video out		O	O	O

Progressive scan

If the TV supports Progressive Scan, press the P.SCAN button on the front of the DVD Recorder & VCR to enjoy.

◆ Setting up the Progressive scan

1. In Stop mode, press the **P.SCAN** button on the front of the DVD Recorder & VCR.
The message "Press [Yes] to confirm Progressive scan mode. Otherwise, press [No]." will appear.
2. Press the ◀▶ buttons to select **Yes**, and then press the **OK** button.
3. Set your TV to Progressive input (using the TV remote control.)



- Progressive setting is only available when the DVD recorder is in stop mode.


◆ Canceling the Progressive scan

1. In Stop mode, press the **P.SCAN** button on the front of the DVD Recorder & VCR.
The message "Press [Yes] to confirm Interlace scan mode. Otherwise, press [No]." will appear.
2. Press the ◀▶ buttons to select **Yes**, and then press the **OK** button.
3. Set your TV to Interlace input (using the TV remote control.)

HDMI/DVI Resolution (DVD-VR355 only)

This setting is used when the unit is connected by HDMI or DVI with Display devices (TV, projector, etc).

- **576P** : 720 x 576
- **720P** : 1280 x 720
- **1080i** : 1920 x 1080

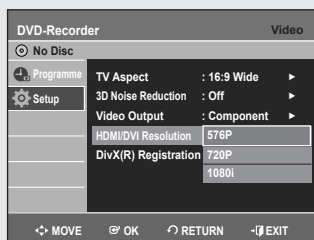

Output selection (DVD-VR355 only)

- Connect the DVD Recorder & VCR to your TV via HDMI or DVI. Set your TV's input to HDMI or DVI.
- Press the **P.SCAN** button while the unit is in Stop mode to select the output resolution.
 - If your TV is connected the HDMI or DVI cable, the output resolution mode changes in the following sequence each time you press the **P.SCAN** button:
 → 576p → 720p → 1080i →
 - If your TV is connected the AV or component cables(without HDMI/DVI cable), the output resolution mode toggles 576p/576i in turn.
- HDMI/DVI cable does not support 576i. Video with 576i resolution can only be viewed through the analog outputs (Composite/S-Video/Component).




- Even if HDMI/DVI cable is connected to your TV, the AV connection outputs only 576i and the component connection outputs only 576p irrespective of the on-screen display.
- Progressive scan automatically activates when HDMI is connected. (Please make sure PS○ is indicated on the front panel of the DVD Recorder & VCR.)
- There will be no HDMI video and audio outputs unless progressive scan function is activated.
- Consult your TV User's Manual to find out if your TV supports Progressive Scan.
If Progressive Scan is supported, follow the TV User's Manual regarding Progressive Scan settings in the TV's menu system.
- If Video Output is set incorrectly, the screen may be blocked.
- The resolutions available for HDMI/DVI output depend on the connected TV or projector. For details, see the user's manual of your TV or projector.
- When the resolution is changed it may take a few seconds for a normal image to appear.
- If you set the HDMI output resolution 720p or 1080i, HDMI output provides better picture quality.



DivX(R) Registration

Please use the Registration code to register this DVD Recorder with the DivX(R) Video On Demand format.
To learn more, visit www.divx.com/vod

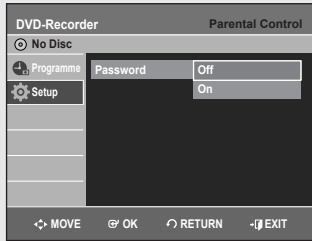

Setting Up the Parental Control




The Parental Control function works in conjunction with DVDs that have been assigned a rating - which helps you control the types of DVDs that your family watches. There are up to 8 rating levels on a disc.

1. With the unit in Stop mode/No Disc mode, press the **MENU** button on the remote control.
2. Press the **▲ ▼** buttons to select **Setup**, then press the **OK** or **▶** button.
3. Press the **▲ ▼** buttons to select **Parental Control**, then press the **OK** or **▶** button.
 - The 'Create the password' message will be displayed.
4. Enter the 4-digit password using the 0 to 9 buttons on the remote control.
 - The 'Confirm the password' message will be displayed.
5. Enter your password again, and then press the **OK** or **▶** button.
6. Press the **▲ ▼** buttons to select **On**, then press the **OK** or **▶** button. The Parental Control screen appears.




■ Refer to Troubleshooting if you forgot your password. (See page 79)

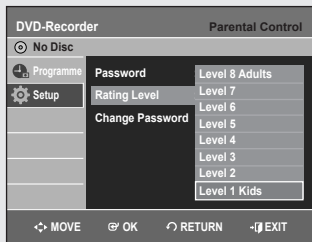

About the Rating Level

1. Press the **▲ ▼** buttons to select **Rating Level**, then press the **OK** or **▶** button.
2. Press the **▲ ▼** buttons to select the rating level you want, then press the **OK** or **▶** button.

For example, if you select up to Level 6, discs that contain Level 7, 8 will not play. A larger number indicates that the programme is intended for adult use only.

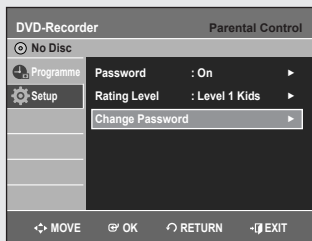

About the Change Password

1. Press the **▲ ▼** buttons to select **Change Password**, then press the **OK** or **▶** button.
 - The 'Enter the password' message will be displayed.
2. Enter the 4-digit password using the number buttons on the remote control.
 - The 'Confirm the password.' message will be displayed.
3. Enter your password again using the 0 to 9 buttons on the remote control.




■ Press the **RETURN** or **◀** button to return to the previous menu. Press the **EXIT** button to exit the menu.

VCR Setting


This function allows you to setup the VCR setting.

1. With the unit in Stop mode/No Disc mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **OK** or **►** button.
3. Press the **▲▼** buttons to select **System**, then press the **OK** or **►** button.
4. Press the **▲▼** buttons to select **VCR**, then press the **OK** or **►** button.
5. Press the **▲▼** buttons to select the desired VCR option, then press the **OK** or **►** button.
6. Press the **▲▼** buttons to select the desired item, then press the **OK** or **►** button.

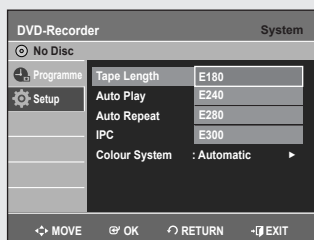

Tape Length


This information is usually printed on the tape box. The menu cycles through: E180, E240, E280, E300. Once the type of cassette is set, the VCR can display the amount of time remaining on the tape when you press the INFO button.

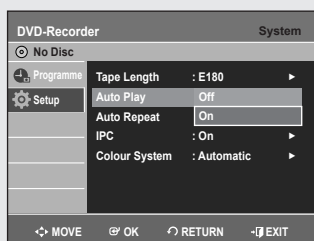

Auto Play


If you want your videotapes to play automatically when you insert them, turn on Auto Play.

- **On** - The VCR will automatically begin playing a video tape when it is inserted, as long as the safety tab of the cassette has been removed.
- **Off** - Auto play is disabled.

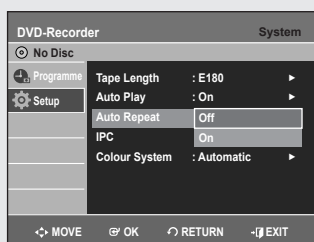

Auto Repeat


It sets the VCR to play a tape repeatedly (unless a tape control is activated : Stop, Fast Forward or Rewind).

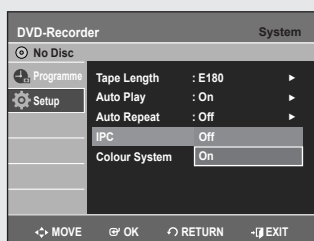

IPC (Intelligent Picture Control)

The intelligent Picture Control Feature allows you to adjust the sharpness of the image automatically, according to your own preferences.


- **On** - the sharpness of the image is adjusted automatically.
- **Off** - To adjust the sharpness manually

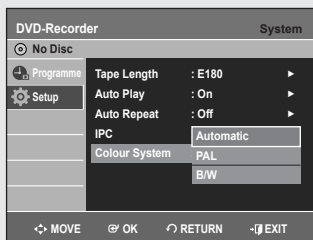

Colour System

Before recording or playing back a tape, you can select the required system standard.

- **Automatic** : When playing back a tape, the system standard is automatically selected by the DVD Recorder & VCR.
- **PAL** : PAL video system
- **B/W** : Black and White.

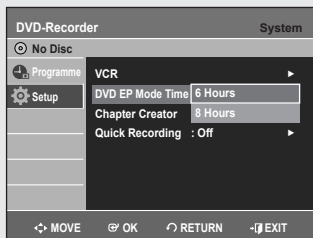

DVD EP Mode Time

You can set the EP (Extended Play) mode's time setting to 6 or 8 hours.

1. With the unit in Stop mode/No Disc mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **OK** or **▶** button.
3. Press the **▲▼** buttons to select **System**, then press the **OK** or **▶** button.
4. Press the **▲▼** buttons to select **DVD EP Mode Time**, then press the **OK** or **▶** button.
5. Press the **▲▼** buttons to select **6 Hours** or **8 Hours**, then press the **OK** or **▶** button.


Automatic Chapter Creator






(V mode)

*A DVD-Video consists of 'Titles' and 'Chapters'.
When you record one programme, it makes one Title.
If you use this function, the Title will be divided into Chapters.*

1. With a disc inserted and the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Setup**, then press the **OK** or **▶** button.
3. Press the **▲▼** buttons to select **System**, then press the **OK** or **▶** button.
4. Press the **▲▼** buttons to select **Chapter Creator**, then press the **OK** or **▶** button.
5. Press the **▲▼** buttons to select **On**, then press the **OK** or **▶** button. Press the **EXIT** button to exit the menu.
6. Set the recording speed by pressing the **REC SPEED** button on the remote control (See page 51 for more information on recording speeds).
7. Press the **REC** button to start recording. The message "Do you want to create the chapter menu after this recording?" is displayed.
8. Press the **◀▶** buttons to select **Yes** and press the **OK** button and recording begins. In XP and SP mode, you must record at least 5 minutes to create a chapter. In LP and EP mode, 15 minutes.

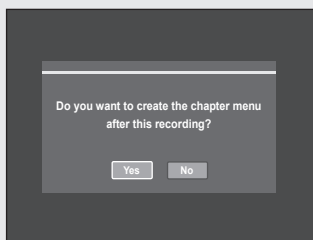

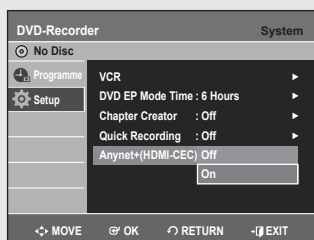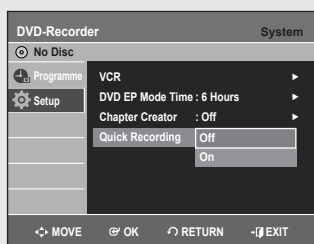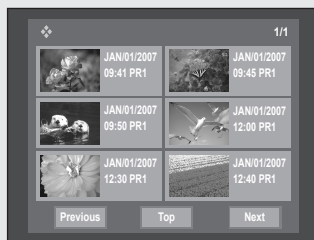

9. Press the **STOP** button to stop recording.

10. To display the created titles, finalise the disc (See page 76) and then press the **TITLE MENU** button. The title menu will be displayed.

11. To display the created chapters, select the desired Title and then press the **DISC MENU** button. The chapter menu for the selected Title will be displayed.



- On DVD-RW discs, additional chapters and titles can be added to a finalised disc by unfinalising and recording again. On DVD-R discs, once finalised, no additional chapters or titles can be recorded.



- The Automatic Chapter Creator function does not work during Timer Recording or when you turn the power off.
- The DVD-R disc cannot be unfinalised.

Quick Recording

If this function is set to on, the DVD Recorder & VCR will power on quickly, which enables you to immediately record a desired channel.

1. With the unit in Stop mode/No Disc mode, press the **MENU** button.
2. Press the **▲ ▼** buttons to select **Setup**, then press the **OK** or **▶** button.
3. Press the **▲ ▼** buttons to select **System**, then press the **OK** or **▶** button.
4. Press the **▲ ▼** buttons to select **Quick Recording**, then press the **OK** or **▶** button.
5. Press the **▲ ▼** buttons to select **On**, then press the **OK** or **▶** button.



- The Quick Recording is set to Off as default.
- If this function is set to on, power consumption will be increased when the unit is powered off.

Anynet+(HDMI-CEC) (DVD-VR355 only)

Anynet+ is a function that can be used to operate the recorder using a Samsung TV remote control, by connecting the DVD Recorder & VCR to a SAMSUNG TV using an HDMI Cable. (see page 20) (This is only available with SAMSUNG TVs that support Anynet+.)




1. With the unit in Stop mode/No Disc mode, press the **MENU** button on the remote control.
2. Press the **▲ ▼** buttons to select **Setup**, then press the **OK** or **▶** button.
3. Press the **▲ ▼** buttons to select **System**, then press the **OK** or **▶** button. The system menu will be displayed.
4. Press the **▲ ▼** buttons to select **Anynet+(HDMI-CEC)**, then press the **OK** or **▶** button. Anynet+(HDMI-CEC) items will be displayed.
5. Press the **▲ ▼** buttons to select **On**, then press the **OK** or **▶** button.



TV Menu

For using Anynet+(HDMI-CEC)

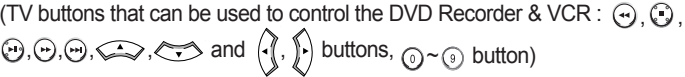1. Connect DVD Recorder & VCR to the TV by using HDMI cable. (See page 20)
2. Set the Anynet+(HDMI-CEC) to "On" on your DVD Recorder & VCR. (see above)
3. Set the Anynet+ function on your TV.
(See the TV instruction manual for more information.)

- You can operate the DVD Recorder & VCR by using TV remote control.
(TV buttons that can be used to control the DVD Recorder & VCR : )
- When you press **Anynet+** button on the TV remote control, the OSD to the left will appear.
- **Select Device**: Use this option to select device.
- **Record**: Use this option to start recording or stop recording.
- **Menu on Device** : Same as **MENU** button () on the DVD Recorder & VCR remote control.
- **Device Operation** : Same as **ANYKEY** button () on the DVD Recorder & VCR remote control.



- By pressing the **PLAY** button of the recorder while watching TV, the TV screen will change to the play screen.
- If you play a DVD when the TV power is off, the TV will power On.
- If you turn the TV off, the DVD Recorder & VCR will power off automatically. (When the DVD recorder & VCR is recording, it can't be powered off.)
- If you change the HDMI to other sources (Composite, Component, RF... etc) in TV while playing the DVD disc, the DVD Recorder & VCR will stop playing. The DVD Recorder & VCR may keep playing certain discs based on their content.



Playback

This section introduces basic functions of playback by disc type.


Read the following information before playing a disc.

Region code (DVD-Video only)




Both the DVD Recorder & VCR and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play. The Region Number for this DVD Recorder & VCR is described on the rear panel of the DVD Recorder & VCR.


Logos of Discs that can be played




Dolby Digital




DTS




Digital Audio




Stereo



PAL broadcast system
in U.K, France,
Germany, etc.










DivX



MP3

Disc types that can be played

Disc Types	Disc Logo content	Recorded content	Disc Shape	Max. Playing Time
DVD-VIDEO		VIDEO AUDIO	Single sided(5")	240 min.
			Double sided(5")	480 min.
			Single sided(3.5")	80 min.
			Double sided(3.5")	160 min.
AUDIO-CD		AUDIO	Single sided(5")	74 min.
			Single sided(3.5")	20 min.
JPEG		JPEG Image	Single sided(5")	-
			Single sided(3.5")	-
MP3		MP3 Audio	Single sided(5")	-
			Single sided(3.5")	-
MPEG4		MPEG4 Movie	Single sided(5")	-
			Single sided(3.5")	-
DVD-RAM		VIDEO AUDIO	Single sided(5") (4.7GB)	1hr (XP: Excellent Quality)
				2 hrs (SP: Standard Quality)
				4 hrs (LP: Long Playback)
				6 or 8 hrs (EP: Extended)
			Double sided(5") (9.4GB)	2 hrs (XP: Excellent Quality)
				4 hrs (SP: Standard Quality)
				8 hrs (LP: Long Playback)
				12 or 16 hrs (EP: Extended)
DVD-RW		VIDEO AUDIO	5" (4.7GB)	1hr (XP: Excellent Quality)
				2 hrs (SP: Standard Quality)
				4 hrs (LP: Long Playback)
				6 or 8 hrs (EP: Extended)
DVD-R		VIDEO AUDIO	Single Layer(5") (4.7GB)	1hr (XP: Excellent Quality)
				2 hrs (SP: Standard Quality)
				4 hrs (LP: Long Playback)
			Dual Layer(5") (8.5GB)	6 or 8 hrs (EP: Extended)
				2 hrs (XP: Excellent Quality)
				4 hrs (SP: Standard Quality)
			5" (4.7GB)	8 hrs (LP: Long Playback)
				11 or 15 hrs (EP: Extended)
				1hr (XP: Excellent Quality)
				2 hrs (SP: Standard Quality)
DVD+RW		VIDEO AUDIO	5" (4.7GB)	4 hrs (LP: Long Playback)
				6 or 8 hrs (EP: Extended)
				1hr (XP: Excellent Quality)
				2 hrs (SP: Standard Quality)
DVD+R		VIDEO AUDIO	Single Layer(5") (4.7GB)	4 hrs (LP: Long Playback)
				6 or 8 hrs (EP: Extended)
				2 hrs (XP: Excellent Quality)
			Dual Layer(5") (8.5GB)	4 hrs (SP: Standard Quality)
				8 hrs (LP: Long Playback)
				11 or 15 hrs (EP: Extended)

Discs that cannot be played

- DVD-Video with a region number other than "2" or "ALL"
- 3.9 GB DVD-R Disc for Authoring.
- A DVD±R/DVD-RW(V) disc which has been recorded and not finalised in a different manufacturer's recorder.
- DVD-ROM/PD/MV-Disc, etc
- CVD/CD-ROM/CDV/CD-G/CD-I



- This DVD Recorder & VCR can only operate with discs that are compatible with DVD-RAM Standard Version 2.0.
- Playback and/or recording may not work for some types of discs, or when specific operations, such as angle change and aspect ratio adjustment, are being performed. Information about the discs is written in detail on the box. Please refer to this if necessary.
- Do not allow the disc to become dirty or scratched, fingerprints, dirt, dust, scratches or deposits of cigarette smoke on the recording surface may make it impossible to use the disc for recording.
- DVD-RAM/±RW/±R discs may not be able to play on some DVD players, depending on the player, disc and the condition of the recording.
- Discs with NTSC programmes recorded on them can be played but cannot be recorded using this product.

Playing a Disc

1. Press the **OPEN/CLOSE** button.
2. Place a disc gently into the tray with the disc's label facing up.
3. Press **OPEN/CLOSE** button to close the disc tray.
 - Your DVD Recorder & VCR closes the disc tray and plays the disc automatically.
 - The recorder does not play discs automatically after being powered on initially.
 - When the recorder is powered on and a disc is in the tray, the unit will be activated and wait in stop status. Press the **PLAY** button to start playback.
4. Press the **STOP** button to stop playback.



- When you stop playing a disc, the DVD Recorder & VCR remembers where you stopped. When you press the **PLAY** button again, it will pick up where you left off. (unless the disc is removed or the DVD Recorder & VCR is unplugged, or if you press the **STOP** button twice.)



- Do not move your DVD Recorder & VCR while playing, as this may cause damage to the disc.
- Make sure to press the **OPEN/CLOSE** button to open or close the disc tray.
- Do not push the disc tray while it is being opened or closed, as this may cause a product malfunction.
- Do not place foreign materials on or in the disc tray.
- Some functions may perform differently or be disabled depending on the disc type. If this occurs, refer to the instructions written on the disc case.
- Be especially careful that children's fingers are not caught between the disc tray and the tray chassis when it closes.
- After turning power on, it will take a few seconds until the DVD Recorder & VCR operates.

Using the Disc Menu and Title Menu

Some discs contain a dedicated menu system that allows you to select special functions for title, chapters, audio track, subtitles, film previews, information on characters, etc.

For DVD-VIDEO disc



Disc Menu : Press the **DISC MENU** button to enter the disc menu of the disc.

- Move to the setup menu related to playback operation.
- You can select audio language and subtitle etc. provided by the disc.

Title Menu : Press the **TITLE MENU** button to move to the title menu of the disc.

- Use this button if the disc contains more than one title.
- Some discs may not support the title menu.

For DVD-RAM/DVD±RW/DVD±R disc



Title List

Press the **TITLE LIST** button to display title list.

The Title List is simply a list of titles on a disc. If a title cannot be played again.

Playlist (DVD-RAM/-RW(VR))

Press the **PLAY LIST** button to display playlist.

A playlist is a custom-made list of titles.

When one playlist is played, only the titles within the playlist will play and then stop. Even if that playlist is deleted, the original recording will not be deleted.



Using the Search & Skip Functions

Searching through a Chapter or Track



During playback, press the **SEARCH** ◀◀ or ▶▶ button on the remote control. Each time you press the **SEARCH** button, the playback speed will change as follows.

DVD-VIDEO/DVD-RAM/ DVD±RW/DVD±R	▶▶ Fast 1/◀◀ Fast 1 → ▶▶ Fast 2/◀◀ Fast 2 → ▶▶ Fast 3/◀◀ Fast 3 → ▶▶ Fast 4/◀◀ Fast 4 → ▶▶ Fast 5/◀◀ Fast 5 → ▶▶ Fast 6/◀◀ Fast 6 →
MPEG4	Fast 1 → Fast 2 → Fast 3
AUDIO CD (CD-DA)	→ X2 → X4 → X8]

- You can scan the programme in reverse order. To return to normal speed playback, press the **▶II** button.



- No sound is heard during Scan (Search) mode, except CDs (CD-DA). (You can hear the sound during forward search (Fast 1) in disc.)

No sound is heard during scanning in all MPEG4 modes.
Depending on the disc type, the sound quality may lower during Fast 1 mode.

Skipping Chapters or Tracks



During playback, press the **◀◀** or **▶▶** button on the remote control.

• If you press the **◀◀** button

If you press the **◀◀** button, it moves to the beginning of the chapter, track or marker (DVD-RAM/-RW(VR mode)).

Pressing the button once again within 3 seconds returns to the beginning of the previous chapter, track or marker (DVD-RAM/-RW(VR mode)).

• If you press the **▶▶** button

If you press the **▶▶** button, it moves to the next chapter, track or marker (DVD-RAM/-RW(VR mode)).

Skipping ahead 30 seconds



In play mode, press **F.ADV/SKIP** button to skip ahead exactly 30 seconds.

Slow Motion Play/Step Motion Play

Slow Motion Play



During Still mode, press the **SEARCH** **◀◀** or **▶▶** button on the remote control for more than 1 second.

- Each time you press the **▶▶** button :
▶ Slow 1 → ▶ Slow 2 → ▶ Slow 3
- Each time you press the **◀◀** button :
◀ Slow 1 → ◀ Slow 2 → ◀ Slow 3

To return to normal speed playback, press the ▶II button.



- Slow motion can play only in the forward direction on MPEG4 discs.

Step Motion Play



During Still mode, press the **F.ADV/SKIP** button on the remote control.

- Each time the button is pressed, a new frame will appear.


To return to normal speed playback, press the **►II** button.



- No sound is heard during STEP or SLOW mode.

Using the ANYKEY button

The ANYKEY functions allows you to easily search for a desired scene by accessing title, chapter, track and time. You can also change the subtitle and audio settings and set some features including Repeat, Angle and Zoom.

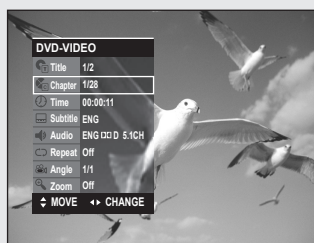

Moving to a desired scene directly




- If you want to move to a certain title, chapter or time, use this function.

1. Press the **ANYKEY** button during playback.
2. Press the **▲ ▼** buttons to select a **Title**, a **Chapter** or a **Time**.
3. Press the **◀ ▶** buttons or number (0~9) buttons to select the desired scene. (In case of searching a time, enter the time in the sequence of hours, minutes, seconds using the number buttons.) Then, press the **OK** button.



- This may not work for some discs. When an audio CD (CD-DA) or an MP3 disc is inserted, according to the disc type, the information display may not be appear.
- The Time Search function does not operate on some discs.
- To make the sub-menu disappear, press the **ANYKEY** or **RETURN** button again.

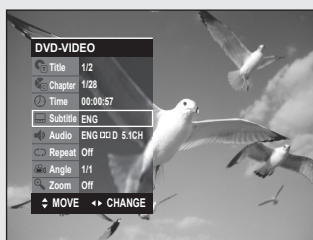

Repeat Play

Playing Repeatedly



1. Press the **ANYKEY** button during playback.
2. Press the **▲ ▼** buttons to select **Repeat**.
3. Select repeat mode using **◀ ▶** button, then press the **OK** button.



- DVD-RAM/-RW(VR mode), unfinalised DVD-RW(V mode) and unfinalised DVD±R do not repeat a chapter.
- To make the sub-menu disappear, press the **ANYKEY** or **RETURN** button again.

Playing a Certain section Repeatedly



1. Press the **ANYKEY** button during playback.
2. Press the **▲ ▼** buttons to select **Repeat**.
3. Press the **◀ ▶** button to select the **A-B**, then press the **OK** button.
4. Press the **OK** button at the point where you want the repeat play to start (A) and press it again at the point where you want the repeat play to stop (B). Repeat playback of the A-B section starts.

- To return to normal playback -

Press the **CANCEL** button to return to normal playback.



- If you set point (B) before five seconds has lapsed, the prohibition mark (⊘) will appear.
- Audio CDs (CD-DA), MP3 and MPEG4 discs do not support the Repeat A-B function.

Selecting the Subtitle Language




Subtitle languages may not work depending on the disc type. This is only available during playback.

*You can also operate this function by pressing the **SUBTITLE** button on the remote control.*

1. Press the **ANYKEY** button during playback.
2. Press the **▲ ▼** buttons to select **Subtitle**, then press the **◀ ▶** buttons to select the desired subtitle language.



- The subtitle display may be different depending on the disc type.
- Some discs allow you to select the language for the disc menu only.
- To make the sub--menu disappear, press the **ANYKEY** or **RETURN** button again.

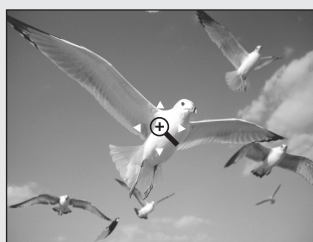

Selecting the Audio language



Audio languages may not work depending on the disc type. This is only available during playback.

You can also operate this function by pressing the AUDIO button on the remote control.

1. Press the **ANYKEY** button during playback.
2. Press the **▲▼** buttons to select **Audio**, then press the **◀▶** buttons to select the desired audio language.



- Audio languages may be different because they are disc-specific.
- Some discs allow you to select the audio language for the disc menu only.
- To make the sub-menu disappear, press the **ANYKEY** or **RETURN** button again.

Changing the Camera Angle



If a DVD-VIDEO contains multiple angles of a particular scene, you can use the Angle function.

If the disc contains multiple angles, the ANGLE appears on the screen.


1. Press the **ANYKEY** button during playback.
2. Press the **▲▼** buttons to select **Angle**, then press the **◀▶** buttons or number (0~9) buttons to select the desired angle scene.



- This function is disc-dependent, and may not work all DVDs.
- This function does not work when a DVD has not been recorded with a multi-camera angle system.
- To make the sub-menu disappear, press the **ANYKEY** or **RETURN** button again.




Zooming-In



1. Press the **ANYKEY** button during playback.
2. Press the **▲▼** buttons to select **Zoom**, then press the **OK** button. () will be displayed.
3. Press **▲▼**, **◀▶** buttons to move to the area you want to enlarge.
4. Press the **OK** button.
 - Each time the **OK** button is pressed, the picture is enlarged up to 4X (four times the normal size). :

DVD-VIDEO/DVD-RAM/DVD±RW/DVD±R

normal size → X2 → X4 → X2 → normal size

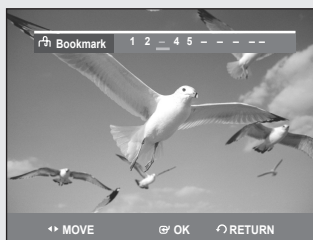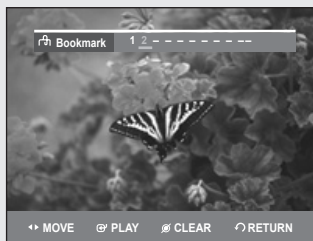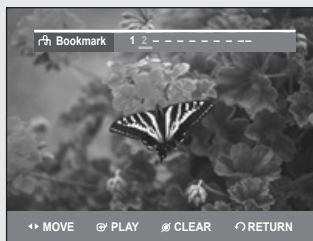

Using the Bookmarks



(V mode)

Set marks at scenes you want to see again so that you can start playback from the marked position.

Setting Bookmarks

1. Press the **MARKER** button during playback.
2. Press the **OK** button when the desired scene appears.
 - The number 1 is displayed and the scene is memorized.
3. Press the ◀▶ button to move to the next position.
4. Press the **OK** button again when the desired scene appears.
 - The number 2 is displayed and the scene is memorized. Repeat above to bookmark other positions. You can bookmark up to 10 scenes.

Playing back a Bookmark


1. Press the **MARKER** button.
2. Press the ◀▶ buttons to select a bookmarked scene.
3. Press the **OK** or ►II button to start playing from the selected scene.

Clearing a Bookmark

1. Press the **MARKER** button.
2. Press the ◀▶ buttons to select a bookmarked scene.
3. Press the **CANCEL** button to delete the selected bookmark.



- When the disc tray is opened and then closed, bookmarks will disappear.

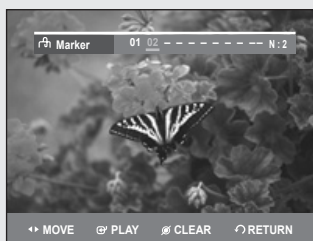


Using the Markers



(VR mode)



Setting Markers

1. Press the **MARKER** button during playback.
2. Press the **OK** button when the desired scene appears.
 - The number 01 is displayed and the scene is memorized.
3. Press the **◀▶** button to move to the next position.
4. Press the **OK** button again when the desired scene appears.
 - The number 02 is displayed and the scene is memorized.
 - DVD-RAM or DVD-RW(VR Mode) discs have the Marker function instead of the Bookmark function. The Marker function allows you to mark up to 99 scenes. Since the scenes may be displayed as many different pages, numbering is necessary. If a disc in use is encoded with disc Protect, Markers cannot be set or delete. Only playback is available.

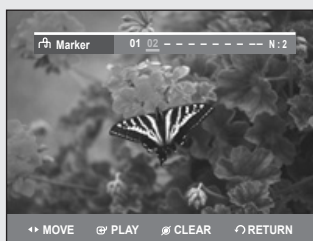


Playing back a Marker

1. Press the **MARKER** button during playback.
2. Press the **◀▶** buttons to select a marked scene.
3. Press the **OK** or **▶II** button to start playing from the selected scene.
 - If you press the **NEXT SKIP (▶II)** button or the **PREVIOUS SKIP (◀◀)** button in marker mode, When the next or current marked point plays for shorter than three seconds, playback starts from the previous marked point.

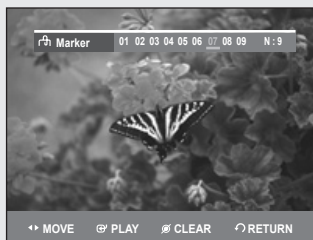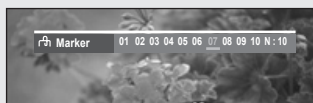

Clearing a Marker


1. Press the **MARKER** button during playback.
2. Press the **◀▶** buttons to select a marked scene. Press the **CANCEL** button to delete the selected mark.
 - When a marker is cleared while DVD-RAM/DVD-RW(VR mode) is playing, marker numbers will change. For example, if the 7th marker is cleared after ten markers are registered, the marker numbers after the eighth will automatically move ahead by one and the 8th marker becomes the 7th.

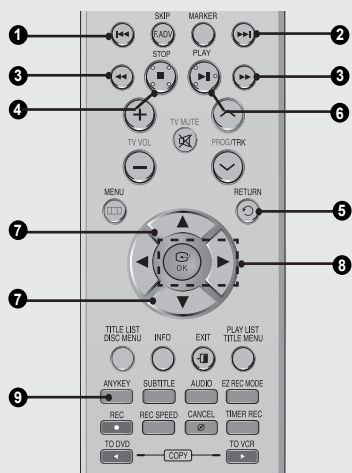

Playing back an Audio CD (CD-DA)/MP3


Buttons on the Remote Control used for Audio CD(CD-DA)/MP3 playback

- 1. ◀◀ button** : Returns to the beginning of the current track when pressed during playback.
If pressed again, your DVD recorder moves to and plays the previous track.
If you press this button within three seconds after playback starts, the previous track will be played.
If you press this button after three seconds, the current track will be replayed from the beginning.
- 2. ▶▶ button** : Plays the next track.
- 3. Press the (◀◀ / ▶▶) buttons** : Fast Play (X2, X4, X8) (Audio CD only)
- 4. ■ button** : Stops a track (song).
- 5. RETURN button** : Moves to the folder to which the current song belongs.
- 6. ▶| button** : Plays a track (song) or Still playback.
- 7. ▲ ▼ button** : Selects a track (song).
- 8. ►, OK button** : Plays the selected track (song).
- 9. ANYKEY button** : To display the play mode window. (Repeat or Play Option).

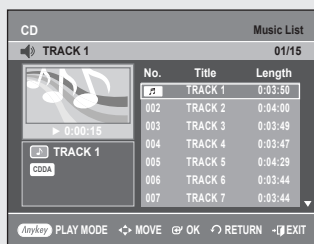

Playing back an Audio CD (CD-DA)


- Insert an audio CD (CD-DA) into the disc tray.
 - The audio CD menu appears and the tracks (songs) are played automatically.
- Press the ▲ ▼ buttons to select the track (song) to start playback from, and then press the OK button.

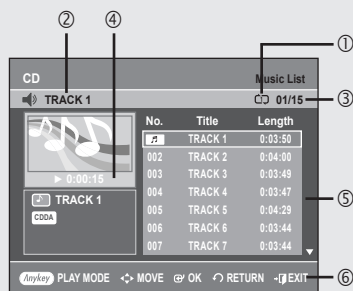


◆ Audio CD (CD-DA) Screen Elements

- 1. Play mode icon.**
- 2. Current track (song)** : Displays the number of the track currently being played.
- 3.** Displays the current play index and total track number.
- 4.** This shows the operating state of a disc and a playback time corresponding to a portion that is currently played.
- 5.** Displays the track list (song list) and the playing time of each track.
- 6.** Button display

Playing back an MP3 Disc

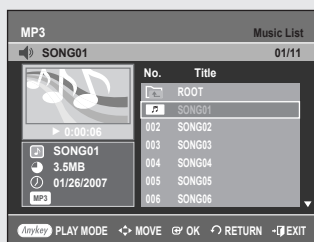


1. Insert an MP3 Disc into the disc tray.
2. Press the ▲▼ buttons to select the **Disc Navigation**, and then press the **OK** or ► button.
3. Press the ▲▼ buttons to select the **Music**, and then press the **OK** or ► button.
4. Press the ▲▼ buttons to select the track (song) you want to hear, and then press the **OK** button.

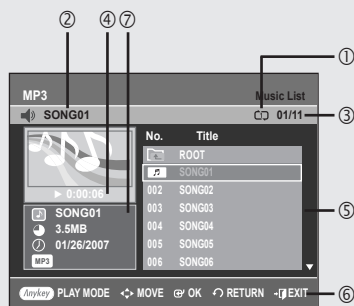

◆ MP3 Screen Elements

1. Play mode icon.
2. **Current track (song)** : Displays the name of the track being played.
3. Displays the current play index and total file number.
4. This shows the operating state of a disc and a playback time corresponding to a portion that is currently played.
5. Displays the mp3 file and folder list (song list).
6. Button display.
7. MP3 file information

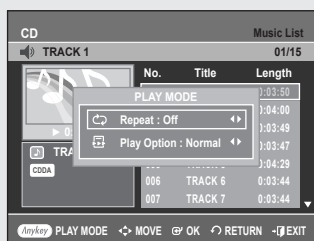


Repeat Playback of an Audio/MP3 Disc



1. During playback, press the **ANYKEY** button.
The Repeat mode will be highlighted.
2. Press the ◀▶ buttons to select the desired repeat mode you want to play repeatedly, then press the **OK** button.
 - Repeat Track (CD (CD-DA)/MP3)
 - Repeat Folder (MP3)
 - Repeat Disc (CD (CD-DA)/MP3)


- To return to normal playback -

Press the **CANCEL** button to return to normal playback.

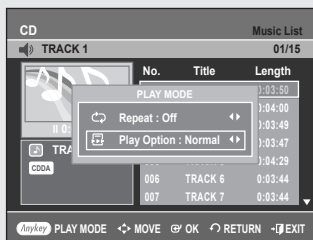

Play Option Mode


1. In the still mode, press the **ANYKEY** button.
The Play option will be highlighted.
2. Press the ◀▶ buttons to select a desired Play option, then press the **OK** button.
 - **Normal** : Tracks on a disc are played in the order in which they were recorded on the disc.
 - **Playlist** : The Playlist playback option allows you to select the order in which you want tracks to play.
 - **Intro [I]** : The first 10 seconds of each track will be played. If you want to listen to the music that you have selected, press the **OK** button or ► button. The play option will be changed to Normal Play. When Intro Play is completed, Normal Play is performed.
 - **Random [R]** : The Random option plays a disc's tracks in random order. After a random list is generated and played completely, another random list is generated and played. Random Play continues until the play option is changed.

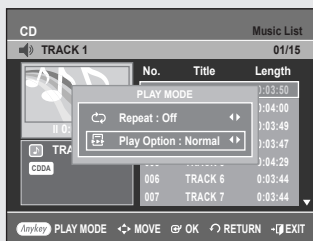

To Programme Tracks

You can register a maximum 30 tracks in the playlist.


1. In the still mode, press the **ANYKEY** button.
The Play option will be highlighted.
2. Press the ◀▶ buttons to select **Playlist**, then press the **OK** button.
Playlist screen is displayed.
3. Press the ▲▼ buttons to select tracks in the order in which you want them to play, then press the **OK** button.
If you playlisted a wrong track, press the ► buttons, then press the ▲▼ buttons to select the wrong track, then press the **CANCEL** button.
4. Press the **PLAY** button to play the playlist.

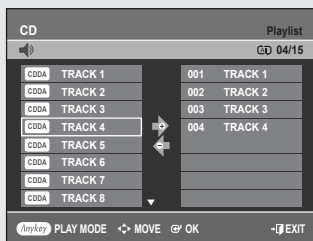






Playing back a Picture Disc

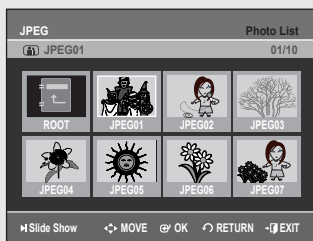

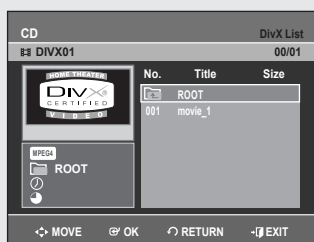



1. Insert a JPEG Disc into the disc tray.
2. Press the ▲▼ buttons to select the **Disc Navigation**, and then press the **OK** or ► button.
3. Press the ▲▼ buttons to select the **Photo**, and then press the **OK** or ► button.
4. Press the ▲▼◀▶ buttons to select a picture.
 - To see the next 8 pictures, press the ►► button.
 - To see the previous 8 pictures, press the ◀◀ button.





- 5-1. If you press the **▶▶** button, the Slide Show Speed screen will appear. Press the **◀▶** buttons to set the slide show speed, then press the **OK** button.
- 5-2. Press the **OK** button with a picture selected in the Album screen and select a display mode (**Album screen** (), **Slide show** (), **Rotation** () or **Zoom** ()) using the **◀▶** buttons, then press the **OK** button.

-  : Returns to the Album screen.
-  : The unit enters slide show mode.
Before the slide show begins the picture interval (Slide show speed) must be set.
-  : Each time the **OK** button is pressed, the picture rotates 90 degrees clockwise.
-  : Each time the **OK** button is pressed, the picture is enlarged up to 4X(four times the normal size).
→ normal size → 2X → 4X → 2X

- Press the **ANYKEY** button to display the menu bar.
- Press the **RETURN** button to clear the menu bar.


Playing back an MPEG4 Disc

MPEG4 files contain the audio and video data.
MPEG4 files with the following extensions can be played.
 - .avi, .divx, .AVI, .DIVX

1. Insert an MPEG4 Disc into the disc tray.
2. Press the **▲▼** buttons to select the **Disc Navigation**, and then press the **OK** or **▶** button.
3. Press the **▲▼** buttons to select the **DivX**, and then press the **OK** or **▶** button.
4. Press the **▲▼** buttons to select the avi file, then press the **OK** or **▶** button.

MPEG4 Function Description

Function	Description
Skip Scene	During play, press the ◀◀ or ▶▶ button, it moves forward or backward 5 minutes.
Search Scene	During play, press the SEARCH (◀◀ or ▶▶) button and press again to search at a faster speed. → Fast 1 → Fast 2 → Fast 3
Slow Motion	In still or step mode, press the SEARCH (▶▶) button on the remote control. → Slow 1 → Slow 2 → Slow 3
Step Motion	In the still or play mode, press the F.ADV/SKIP button on the remote control.

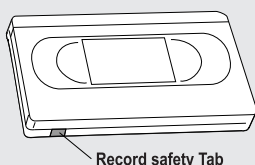

- This unit can play the following video compression formats
MPEG4 Codec format : DivX 3.11 DivX 4.x DivX 5.x DivX-Pro Xvid
Motion Compensation : QPEL, GMC
Audio format : "MP3", "MPEG1 Audio Layer2", "LPCM", "AC3", "DTS", "MS ADPCM"
- Some MPEG4 files created on a personal computer may not be play back.
That is why Codec Type, Version and Higher resolution over specification is not supported.
- Supported subtitle file formats: .smi, .srt, .sub, .psb, .txt, .ass
(The subtitle file should have exactly the same name as the corresponding MPEG4 file name)

Playing back a VHS Tape (VCR)

1. Insert a standard VHS tape into the VCR deck.
 - When a videotape is inserted, power will turn on automatically.
2. Press the **▶II (PLAY/STILL)** button on the remote control or on the front panel of the unit. The videotape will begin to play automatically if the Record Safety Tab is removed and Auto Play is turned on.
3. Press the **■ (STOP)** button on the remote control or on the front panel of the unit.

Tracking

The Tracking adjustment removes the white lines that sometimes appear during playback because of slight differences in recording decks.

During playback, press the **PROG/TRK (^ / ∨)** buttons to remove white lines from the picture.

Special VCR Playback Features

While a videotape is playing, you can enjoy a variety of special playback features.

Still

In Play mode, press **▶II (PLAY/STILL)** button to still a single frame.

Frame Advance

In the Still mode, press **F.ADV/SKIP** button to advance to the next frame.

Fps/Rps

In Play mode, press Forward (**▶▶**) button or Rewind (**◀◀**) button to Fps/Rps at two speeds:

- Picture Search - Press and release repeatedly to advance the tape forward or backward at 2,3,5,7 times normal speed.
- Jet Search - Press and hold to advance the tape forward or backward at 7 times normal speed.

Skip

In Play mode, press **F.ADV/SKIP** button to cue ahead exactly 30 seconds. Press **F.ADV/SKIP** button repeatedly up to 4 times to cue ahead 2 minutes.

Slow motion

In Still mode, press **▶▶** button for slow motion. Press the **▶▶** button repeatedly to play slow motion speed at 1/10, 1/7, 1/5 times. Press the **PLAY** button twice to resume normal viewing.

Variable Search System

Each time you record a cassette on this DVD Recorder & VCR, an index is automatically marked on the tape when recording is started. The Search function allows you to fast-forward or rewind to a specific index and start playback from that point.

- This DVD Recorder & VCR uses a standard indexing system (VISS). As a result, it will recognize any indexes marked by other VCRs using the same system and vice versa.

Go To [0:00:00] Stop

Use this feature when you want to search for the 0:00:00 counter position on a cassette.

1. Press the **CANCEL** button at the point on the tape where you want to set the counter to 0:00:00.
2. While a cassette is stopped, press the **ANYKEY** button.
3. Press the **▲▼** buttons to select **Go To [0:00:00]**, then press the **OK** button. The VCR will rewind or fast forward, searching for the 0:00:00 counter position, and then automatically stop at that position.

End Search




Use this feature when you want to search for a blank position to record a programme on a cassette.

1. While a cassette is stopped, press the **ANYKEY** button.
2. Press the **▲▼** buttons to select **End Search**, then press the **OK** button. The VCR will fast forward, searching for a blank position, and then automatically stop at that position. If the VCR reaches the end of the tape during end search, the tape will be ejected.

Forward/Reverse Intro Scan

Use scan and play when you don't know exactly where a programme is located on a cassette tape.

1. While a cassette is stopped, press the **ANYKEY** button.
2. Press the **▲▼** buttons to select **Forward Intro Scan** or **Reverse Intro Scan**, then press the **OK** button. When an Index mark is found the DVD Recorder & VCR will playback the tape for 5 seconds, after which it will continue searching for the next Index mark.

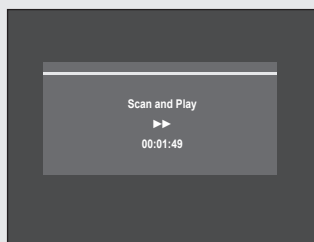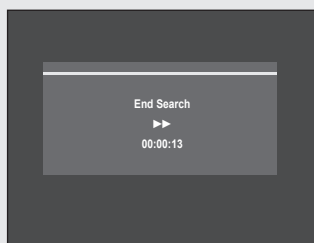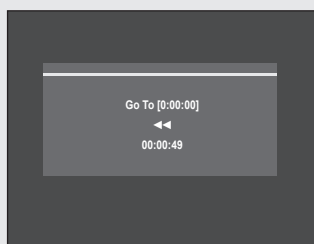



Recording

This section shows various DVD recording methods.

This unit can record on various types of discs.
Before recording, read the following instructions and select the disc type according to your preference.

Recordable discs

This recorder can record on the following discs.

• DVD-VR350

DVD-RAM	DVD-RW	DVD-R

• DVD-VR355

DVD-RAM	DVD-RW	DVD-R	DVD+RW	DVD+R



- DVD±RWs and DVD-RAMs are rewritable.
- DVD±Rs are non-rewritable.

Compatibility between Samsung and Other Company's Recorder

Disc Types	Recording format	Recording Device	Finalising	Additional Recording in Samsung Recorder
DVD-RAM	VR Mode	Samsung	X	Recordable
		Other Company	X	Recordable
DVD-RW	VR Mode	Samsung	finalised	Not recordable
			not finalised	Recordable
		Other Company	finalised	Not recordable
			not finalised	Recordable
	V Mode	Samsung	finalised	Not recordable
			not finalised	Recordable
DVD-R	V Mode	Samsung	finalised	Not recordable
			not finalised	Recordable
		Other Company	finalised	Not recordable
			not finalised	Not recordable
DVD+RW (DVD-VR355 only)	-	Samsung	X	Not recordable in some cases
		Other Company	X	Not recordable in some cases
DVD+R (DVD-VR355 only)	-	Samsung	finalised	Not recordable
			not finalised	Not recordable in some cases
		Other Company	finalised	Not recordable
			not finalised	Not recordable in some cases



- Finalise
 - This closes the DVD-RW/±R so no additional recording can be done.
- Unfinalise
 - This allows additional recording on a DVD-RW disc originally recorded on the DVD Recorder & VCR
 - A DVD-RW disc that has been recorded by DAO (Disc At Once) in a PC cannot be unfinalised.
 - A DVD-RW disc that has been recorded in V mode on a different make of recorder cannot be unfinalised.
 - A DVD±R disc cannot be unfinalised.

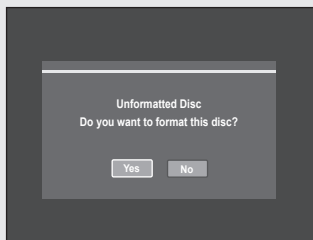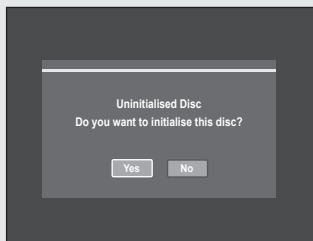DVD-RAM**DVD±RW/+R**

Recording Formats

Since available functions differ depending on the disc type, select a disc that best fits your preferences.

When you insert an unused disc, the following message appears.

DVD-RAM : Use after formatting the disc.

DVD±RW/+R : Use after initialising the disc.

When using a DVD-RW disc, you can change the mode.

Refer to Formatting a Disc on page 76.

DVD-R : Formatting a disc is unnecessary and only V mode Recording is supported.

DVD-RAM/-RW(VR mode)

- This mode involves multiple editing functions (such as deletion of the whole title, partial deletion of a title, etc.).
- Various editing options using a created Playlist.

DVD-RW(V mode)/-R

- Chapters will be created automatically when you finalise recording on DVD-RW/-R discs in V mode.
- Simple editing (erasing titles/changing title name).

DVD+RW

- You can also make your own chapters on DVD+RWs and edit them using the Chapter Edit menu. (see pages 67 to 69)



- You can initialise discs automatically using EZ REC MODE (see page 59).


Recording Mode

Select one of four recording modes by pressing the REC SPEED button repeatedly while the unit is in Stop mode for the desired recording time and picture quality.

In general, picture quality improves as the recording time decreases. In AUTO Mode, the most suitable record mode is adjusted automatically, according to remaining time on the disc and length of the timer recording. This function selects one mode from XP, SP, LP and EP mode and is used in timer recording mode only.

Mode	Characteristic	Recording Times Data Rates
XP (high quality mode)	Select when the video quality is important.	Approx. 1 hour about 8 Mbps
SP (standard quality mode)	Select to record in standard quality.	Approx. 2 hours about 4 Mbps
LP (long recording mode)	Select when a long recording time is required.	Approx. 4 hours about 2 Mbps
EP (extended mode)	Select when a long recording time is required.	Approx. 6 hours/ about 1,2 Mbps Approx. 8 hours/ about 0,8 Mbps
AUTO	for timer recording only see page 56.	Approx 1 to 8 hours Approx 0,8 to 8 Mbps

- The dual layer DVD±Rs have approximately double the capacity of single layer DVD±Rs. (See page 35.)

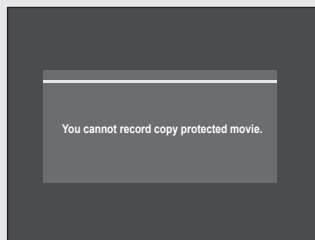

Unrecordable video

Pictures with copy protection cannot be recorded on this DVD Recorder & VCR.

When the DVD Recorder & VCR receives a copy guard signal while recording, recording stops and the following message appears on the screen.

Concerning Copy Control Signals

TV broadcasts that contain copy control signals may have one of the following three signal types, Copy-Free, Copy-Once and Copy-Never. If you want to record a copy-once type programme, use DVD-RW with CPRM in VR Mode and DVD-RAM discs.

Media \ Signal type	Copy-Free	Copy-Once	Copy-Never
DVD-RAM (Ver.2.0)	O	O*	-
DVD+RW	O	-	-
DVD+R	O	-	-
DVD-RW (Ver.1.1)	O	-	-
DVD-RW (Ver.1.1) with CPRM VR mode	O	O*	-
DVD-R	O	-	-

Once **Copy Once** has been recorded, additional recording cannot be performed.

* Compatible with CPRM.

◆ Content Protection for Recordable Media (CPRM)

CPRM is a mechanism that ties a recording to the media on which it is recorded. It is supported by some DVD recorders, but not by many DVD players.

Each blank recordable DVD has a unique 64-bit media ID etched in the BCA. When protected content is recorded onto the disc, it can be encrypted with a 56-bit C2 (Cryptomeria) cipher derived from the media ID.

During playback, the ID is read from the BCA and used to generate a key to decrypt the contents of the disc.

If the contents of the disc are copied to other media, the ID will be absent or wrong and the data will not be decryptable.



Recording immediately



DVD-VR355 only

Before you start

1. Check the antenna cable is connected.
2. Press the **OPEN/CLOSE** button and place a recordable disc on the disc tray.
3. Check the remaining time on the disc.
DVD-RAM/DVD±RW/+R discs should be formatted or initialised in advance before beginning recording. Most new discs are sold unformatted. Make sure to format your unformatted discs before recording.
4. Press the **OPEN/CLOSE** button to close the disc tray.
Wait until **LOAD** disappears from the front panel display.

Recording the current programme you are watching

1. Press the **PROG/TRK** (\wedge/\vee) buttons or number buttons to select the station you want to record.
2. Press the **REC SPEED** button repeatedly, to select the recording speed (quality).

→ SP → LP → EP → XP →

3. Press the **REC** button.

Recording from external equipment you are watching

1. Power on your DVD Recorder & VCR and switch to AV mode by pressing the **INPUT SEL.** button on the remote control. The front panel display changes in the following sequence.

→ PR → AV1 → AV2 → AV3 → DV →

2. Press the **REC SPEED** button repeatedly to select the recording speed (quality).

→ SP → LP → EP → XP →

3. When your DVD Recorder & VCR is in the Stop mode, set the operation mode of your external devices to play mode.
4. Press the **REC** button on your DVD Recorder & VCR when the image from which you want to start recording is displayed.

To pause recording

Press the **PLAY/PAUSE** (\odot) button to pause a recording in progress.

- Press the **PLAY/PAUSE** (\odot) button again to resume recording.
- You can switch channels by pressing the **PROG/TRK** (\wedge/\vee) buttons while recording pauses.

To stop recording

Press the **STOP** button to stop a recording in progress.

- When using DVD-RAM/DVD±RW/DVD±R discs, the message "Updating the disc information. Please wait for a moment." is displayed.



- You can not change the recording mode and the programme while recording.
- Recording will stop automatically if there is no free space left for recording.
- Up to 99 titles can be recorded onto a DVD-RAM/-RW/-R disc, and up to 48 titles onto a DVD+RW/+R disc.
- If the power interrupted due to power failure or other reasons, the title being recorded will not be saved onto the disc.
- Recording will stop automatically if a copy protected image is selected.
- Do not use DVD-R authoring discs with this unit.
- Also refer to the user manual for your External Devices when recording from external equipment using the Audio/Video cable or scart cable.

Recording through a DV Input jack

You may control the Camcorder using the IEEE1394 (DV) interface. Follow these directions to record onto a disc or tape from a camcorder that has a DV output jack.

1. Connect the DV output jack of your camcorder to the DV input jack on the front of your DVD Recorder & VCR using a DV cable.
2. Power on your DVD Recorder & VCR and switch to DV mode by pressing the **INPUT SEL.** button on the remote control.
3. Press the **REC SPEED** button repeatedly to select the recording speed (quality).
 ↳ SP → LP → EP → XP
4. If the input is set to DV, a playback/record menu that enables camcorder control appears on the top of the screen.
5. Select the Play icon on the upper part of the screen to playback the camcorder and find the starting position to copy.
6. To start recording, Press the ◀▶ buttons to select **REC (●)** icon in the top side of the screen, then press the **OK** button.
You can press the **REC** button on the remote control to start recording.
7. Press the **STOP** button on your DVD Recorder & VCR when the recording is finished.



- Some camcorders may not work with your DVD Recorder & VCR even if they have a DV output jack.
- Also refer to the user manual for your camcorder when recording through a DV jack.
- To display playback related icons on the screen, press any direction button on the remote control.

Making a One Touch Recording (OTR)



DVD-VR355 only

One-Touch Recording (OTR) allows you to add recording time in preset minute increments up to 9 hours by pressing the REC button repeatedly.

1. Press the **PROG/TRK** (Λ / ∨) buttons or number buttons to select the station to record.
If you want to record through a connected external component, press the **INPUT SEL.** button to select an appropriate external input (Tuner, AV1, AV2, AV3 or DV input).

2. Press the **REC** button.
3. While in Record mode, press the **REC** button again to activate One-Touch Recording (OTR).
 - Record length 0:30 appears on the On-Screen Display and the DVD Recorder & VCR will record for exactly 30 minutes.
4. Continue pressing **REC** to add recording time in preset minute increments up to 9 hours.
 - The DVD Recorder & VCR stops recording automatically when the time has elapsed.

To stop recording

Press the **STOP** (■) button.
 The message "Press STOP button once more to cancel Timer Record" is displayed.
 Press the **STOP** (■) button again.
 The message "Updating the disc Information. Please wait for a moment" is displayed.



- The timer counter decreases by the minute from 9:00 to 0:00, then the DVD Recorder & VCR stops recording.

Making a Timer Recording



DVD-VR355 only



1. Check the antenna cable is connected.
2. Check the remaining time of the disc.
3. Check the date and time are correct.

Make sure the Clock (Setup-Clock Set) must be set before you proceed with a timer recording.
(See page 23)

1. Press the **OPEN/CLOSE** button, and place a recordable disc on the disc tray.
2. Press the **OPEN/CLOSE** button to close the disc tray.
 Wait until **LOAD** disappears from the front panel display.
3. With the unit in Stop mode, press the **MENU** button.
4. Press the **▲▼** buttons to select **Programme**, then press the **OK** or **▶** button.
 You can go to this step directly by pressing the **TIMER REC** button.
5. Press the **▲▼** buttons to select the **Scheduled Record List**, then press the **OK** or **▶** button twice.
 - The Timer Recording screen is displayed.
6. Fill in the items using the **▲▼◀▶** buttons.
 - ◀▶: Moves to the previous/next item,
 - ▲▼: Sets a value.
 - **To** : Select the media to record DVD or VCR.
 - **Source** : The video input source (AV1, AV2 or AV3), or the broadcasting channel you want to make a timer recording from.
 - **Day** : Set the recording day.
 Daily, MO-SA, MO-FR, W-SA, ...W-SU,
 01MON, ...31WED
 - **Start/End Time** : Start and end time of the timer recording.

◆ Recording Speed (DVD)

AUTO : Select when you want to set video quality automatically. In AUTO Mode, the most suitable record mode is adjusted automatically, according to remaining time on the disc and length of the timer recording. This function selects one mode from XP, SP, LP and EP mode and is used in timer recording mode only.

XP (high quality) : Select when audio and video qualities are important. (Approx. 1 hour)

SP (standard quality) : Select to record in standard quality. (Approx. 2 hours)

LP (low quality) : Select when a long recording time is required. (Approx. 4 hours)

EP (extended mode) : Select when a longer recording time is required. (Approx. 6 hours at 1.2Mbps or Approx. 8 hours at 0.8 Mbps.)

- The dual layer DVD±Rs have approximately double the capacity of single layer DVD±Rs. (See page 35.)

◆ Recording Speed (VCR)

AUTO : Select when you want to set video quality automatically. It depends on remaining time on the VCR tape.

SP : Standard Play, for best picture quality.

LP : Long Play, for maximum recording time (3 times SP).

◆ V/P (VPS/PDC)

VPS : Video Programme System

PDC : Programme Delivery Control

- Do not select V/P unless you are sure the programme you wish to record is broadcast with VPS/PDC. If you do set V/P to On, then you must set up the start-time EXACTLY according to the published TV schedule. Otherwise the timer recording will not operate.



- When you are recording in EP mode on a DVD-RW(V mode)/-R disc, it may not record for the full 6 or 8 hours because the unit uses the VBR (Variable Bit Rate) ENCODING system. For example, if you record a programme with a lot of action, it uses a higher bit rate which in turn consumes more disc memory.

7. Press the **OK** button.

If the timer settings overlap

The first programme has priority. After recording of the first programme is complete, the second programme starts being recorded.

To exit without saving the current setting

Press the **EXIT** or **RETURN** button.

To return to the previous menu


Press the **RETURN** button if you don't want to set a timer recording.

8. Turn the power off to finish the timer recording.

- will blink if disc or tape is not inserted.
- will appear on the front panel. It means that a timer recording is registered.



- The timer recording time may differ from the set time depending on disc status and overall timer recording status (for example, recording times overlapping, or when the previous recording ends within 3 minutes before the start time of the next recording.)

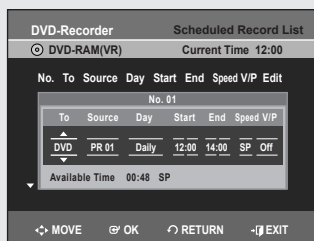


Editing the Scheduled Record List



DVD-VR355 only

Follow these directions to edit the timer record list.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲ ▼** buttons to select **Programme**, then press the **OK** or **▶** button.
3. Press the **▲ ▼** buttons to select the **Scheduled Record List**, then press the **OK** or **▶** button.
4. Press the **▲ ▼** buttons to select the number of the scheduled record list you want to edit, then press the **OK** or **▶** button.
 - The Edit and Delete items are displayed.
5. Press the **▲ ▼** buttons to select **Edit**, then press the **OK** or **▶** button.
 - The Timer Recording screen is displayed. Edit the items you want to modify. See the Timer Recording section for more information on Timer Recording Input items. (See pages 55~56)
6. Press the **OK** button to confirm the edited setting.
7. Press the **EXIT** button after finishing the operation.
The menu screen will disappear.

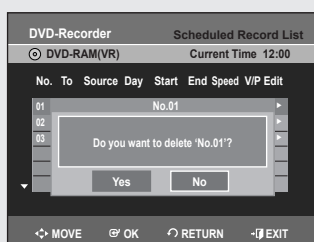

Deleting the Scheduled Record List







DVD-VR355 only

Follow these directions to delete a title from the timer record list.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲ ▼** buttons to select **Programme**, then press the **OK** or **▶** button.
3. Press the **▲ ▼** buttons to select the **Scheduled Record List**, then press the **OK** or **▶** button.
4. Press the **▲ ▼** buttons to select the number of the scheduled record list you want to delete, and then press the **OK** button.
 - The Edit and Delete items are displayed.
5. Press the **▲ ▼** buttons to select **Delete**, then press the **OK** or **▶** button.
 - You will be prompted with the delete confirm message such as ("Do you want to delete No.01?").
6. Press the **◀ ▶** buttons to select **Yes**, then press the **OK** button.
 - The selected title will be deleted from the list.
7. Press the **EXIT** button after finishing the operation.
The menu screen will disappear.



- You can not delete programmes that are currently being recorded.

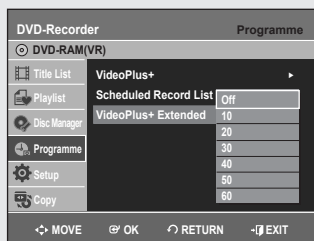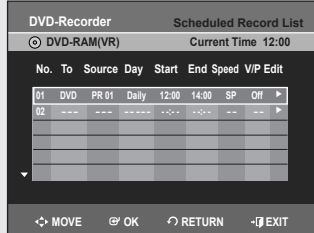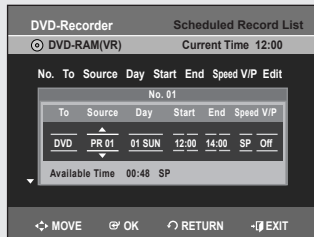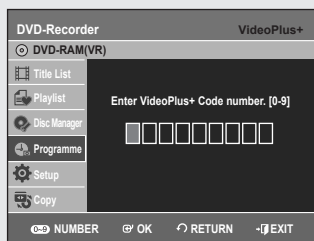

Using the Video Plus+Feature



DVD-VR355 only

Before presetting your DVD Recorder & VCR:

- Switch on both the television and your DVD Recorder & VCR.
- Check that the date and time are correct.
Up to twelve programmes can be preset.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Programme**, then press the **OK** or **▶** button.
3. Press the **▲▼** buttons to select **VideoPlus+**, then press the **OK** or **▶** button.
 - A message is displayed to allow you to enter the Video Plus+ code.
4. Press the number buttons to enter the code of the programme that you want to record in your television magazine.
 - If you want to correct the Video Plus+ code that you are entering:
 - Press the **◀** button until the digit to be corrected is cleared.
 - Enter the correct digit.
5. Press the **OK** button.
 - The information concerning the programme is displayed.
 - When using the Video Plus+ function for the first time with stored stations, the programme number flashes. This one time, you must enter the PR number manually by pressing the **▲▼** buttons.
6. If the programme and times are correct, press the **OK** button.
7. Turn the power off by pressing the **STANDBY/ON** button to activate the timer recoding setting.
8. Refer to pages 55~56 if you want to:
 - Check whether the timer Recording has set correctly or not.
 - Cancel a preset recording.



- The numbers next to each TV programme listing in the magazines or newspapers are Video Plus+ code numbers, which allow you to programme your DVD Recorder instantly with the remote control. Enter the Video Plus+ code for the programme you wish to record.
- Video Plus+ is a trademark of Gemstar Development Corporation. The Video Plus+ system is manufactured under licence from Gemstar Development Corporation.

Video Plus+ Extended

To prevent delays or over-runs the DVD Recorder & VCR has a function called Video Plus+ Extended allowing you to extended the recording time by up to 60 minutes.




- Only use if PDC is not available or set to OFF.

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲▼** buttons to select **Programme**, then press the **OK** or **▶** button.
3. Press the **▲▼** buttons to select the **VideoPlus+ Extended**, then press the **OK** or **▶** button.
4. Press the **▲▼** buttons to select the Video Plus+Extended time, then the press **OK** or **▶** button.
5. Press the **EXIT** button to exit the menu.

EZ REC MODE



DVD-VR355 only

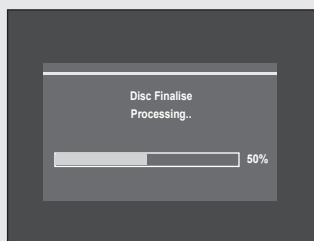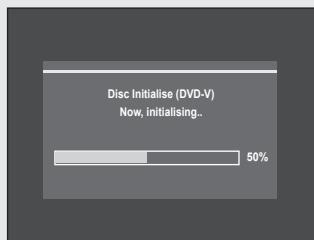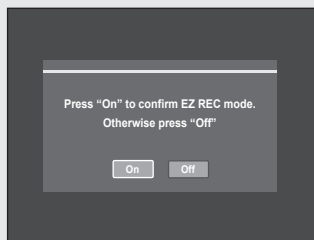

This function allows you Initialise and Finalise a disc automatically.

1. With the unit in Stop mode/No Disc mode, press the **EZ REC MODE** button on the remote control.
2. Press the ◀ ▶ buttons to select **On**, and then press the **OK** button. The **EZ REC MODE** is set up.
3. Insert a disc.
If the disc is new, it will initialise automatically.
4. Press the **REC** button.
5. EZ REC MODE will Automatically Finalise the disc under the following conditions.

- When you press the **OPEN/CLOSE** button on your DVD Recorder & VCR after recording on at least 30% of the disc. The tray will open after the disc has been finalised.
- When the disc is full, it will finalise automatically and the DVD Recorder & VCR will remain in stop mode.
- When you make a timer recording and it occupies at least 30% of the disc, the disc will finalise automatically and the DVD Recorder & VCR will power off. Please note that auto finalisation will not work if the DVD Recorder & VCR has more than one Timer Recording set in the Scheduled Record List.



- If you insert a new DVD-RW disc, it will be formatted in V mode after auto initialising.
- If you select off, you must initialise (see page 51) and finalise the disc manually in the Disc Manager menu.(see page 76)
- The length of Recording is different according to recording mode. (see page 51)

Basic VCR Recording

Before starting

1. Check TV channel and Antenna connections.
2. Check the remaining time on the tape.

You can record a TV show in progress by inserting a blank tape and pressing the ● (REC) button. You can even add time in preset increments up to 9 hours by pressing the ● (REC) button repeatedly.



- Be sure your videotape has a Record Safety Tab. If the tab is missing, you can cover the opening with a small piece of tape.



- Warning: Do not cover this opening unless you are sure you want to record over the tape.

1. Insert a blank VHS tape into the VCR deck.
 - Make sure the tape is long enough to record the entire programme.
2. Press the Number buttons or the **PROG/TRK** (Λ / ∇) buttons to select the desired channel.
Press the **INPUT SEL.** button to select AV1, AV2, AV3 or DV input if recording from an external device connected to the input jacks of the recorder.
3. Press the **REC SPEED** button on the remote control to set the Record Speed to one of the following options:
 - **SP** – Standard Play, for best picture quality.
 - **LP** – Long Play, for maximum recording time (3 times SP).



- The selected Record Speed will appear on the front panel display and on-screen display.

Maximum Recording Time - SP vs. LP

Tape Length	SP (Standard Play)	LP (Long Play)
E180	Approx. 3 hrs	Approx. 6 hrs
E240	Approx. 4 hrs	Approx. 8 hrs
E280	Approx. 4 hrs 40 mins	Approx. 9 hrs 20 mins
E300	Approx. 5 hrs	Approx. 10 hrs



- When you watch or record on the VCR during DVD Recording, some function buttons may not operate.
The message "This function is not available." will be displayed.

4. Press the ● (REC) button on the remote control or front panel.
For options while recording is in progress, see "Special Recording Features".

To pause recording

Press the **PLAY/PAUSE** (⏮) button to pause a recording in progress.

- Press the **PLAY/PAUSE** (⏮) button again to resume recording.
- You can switch channels by pressing the **PROG/TRK** (Λ / ∇) buttons while recording pauses.

To stop recording

Press the **STOP** button to stop a recording in progress.



Check Remaining Time

1. Press **INFO** button on the remote control.
The following information will be displayed.
(Current deck status, recording speed, remaining time, input channel, current time.)

Special Recording Features

While a recording is in progress, you can watch a different media, or add recording time in preset increments.

1. Watch a Different Channel

When you are watching through the Antenna input during recording, press the **TV/VCR** button on the remote control to change to the programme you want to watch.

When you are watching through the AV input during recording, change the input of your TV from AV to Antenna. Change to the programme you want to watch.

2. Watch a different media during recording

You can watch a DVD during VCR recording or watch a Video tape during DVD recording.

- During VCR recording, insert a DVD in the DVD deck. The output will automatically change to the DVD and start playback.
- During DVD recording, insert a Video tape in the VCR deck. The output will automatically change to the VCR and start playback. (Only if tape is missing the safety tab)

3. Add Recording Time

Refer to the One-Touch Recording (OTR).
(See page 54)

4. Recording DVD and VCR at the same time

You can record DVD and VCR at the same time, but both modes must be set up to record separately.

- Press the **DVD/VCR** button to set the unit to DVD or VCR mode.
- Choose input mode Tuner, AV1, AV2, AV3 or DV input for DVD or VCR.
- Choose **REC SPEED** mode for DVD or VCR.
- Press **REC** button for DVD or VCR.




- When the DVD Recorder & VCR is connected to your TV using the S-Video or component video cable, the playback screen on the video tape will not display during DVD recording.
- You cannot record different channels at the same time.
- The DVD and VCR cannot start recording at the exact same time. You must set one to start recording, then the other.

Copy to DVD or VCR



DVD-VR355 only

*You can copy from the DVD to VCR or VCR to DVD.
Check the remaining time on the tape and disc.*

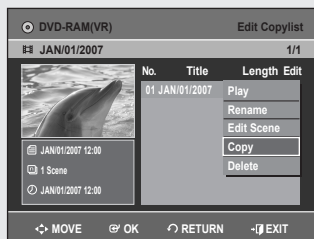

To copy from DVD to VCR



(VR mode)


1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲ ▼** buttons to select **Copy**, then press the **OK** or **▶** button.
3. Press the **▲ ▼** buttons to select **DVD → VCR**, then press the **OK** or **▶** button.
4. Press the **▲ ▼** buttons to select **Edit Copylist**, then press the **OK** or **▶** button.
 - To copy from "Edit Copylist", you need to make a copylist in advance.
 - Select "New Copylist" and create the new playlist. (See page 70)
 - On DVD-RW(V)/DVD+RW/±R disc, you can only use Direct copy function.
5. Press the **▲ ▼** buttons to select desired copylist, then press the **OK** or **▶** button.
6. Press the **▲ ▼** buttons to select **Copy**, then press the **OK** or **▶** button.

Direct copy DVD to VCR

- Insert a DVD disc you want to copy.
- Insert a VHS tape.
- Press the VCR copy button on front panel or remote control. (TO VCR)
- To stop recording, press the **STOP** button.
- You can also copy from DivX to VCR when the desired DivX is played back. If the DivX disc has various files, only the selected file will be played back.



- Copy function is not allowed in progressive scan mode.

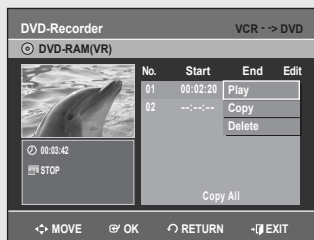

To copy from VCR to DVD



1. With the unit in Stop mode, press the **MENU** button in stop mode.
2. Press the **▲ ▼** buttons to select **Copy**, then press the **OK** or **▶** button.
3. Press the **▲ ▼** buttons to select **VCR --> DVD**, then press the **OK** or **▶** button.
4. You can use the **▶II**, **II◀** or **▶▶I**, **◀◀** or **▶▶** buttons to search for the Start position.
Press the **OK** button at the start point.
5. You can use the **▶II**, **II◀** or **▶▶I**, **◀◀** or **▶▶** buttons to search for the end position.
Press the **OK** button at the end point.
 - A copylist will be generated.
 - Repeat the above steps to create the copylist.
 - In VCR mode, the copylist cannot be saved.
6. Press the **▲ ▼** buttons to select desired copylist, then press the **OK** or **▶** button.
7. Press the **▲ ▼** buttons to select **Copy**, then press the **OK** or **▶** button.
 - The VCR will fast forward, searching for a start position and then automatically start a copy.
 - It may not be match up with Start and End point exactly.
 - If you want to copy all copylists, select **Copy All**.

Direct copy VCR to DVD

- Insert the VHS tape you want to copy.
- Insert Recordable DVD disc.
- Press DVD copy button on front panel or remote control. (TO DVD)
- To stop recording press the **STOP** button.



Editing

This section introduces basic functions of DVD editing and explains both edit functions for the recording on a disc and edit functions for the entire disc.



Playing the Title List



DVD-VR355 only

Follow these instructions to play back a title from the Title List.

1. Press the **TITLE LIST** button.
The Title List screen is displayed.
2. Press the **▲ ▼** buttons to select a title you want to play from Title List, and then press the **PLAY** button.
3. Press the **STOP** button to stop playing.
To return to the title list screen, press the **TITLE LIST** button.

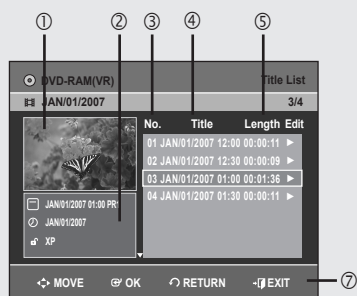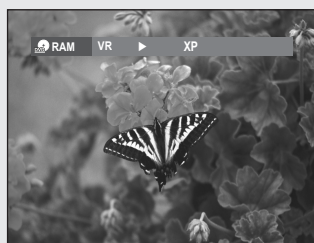


Title List Screen Elements

- ① Playback screen for recorded titles
- ② Information window for the selected title: Title name, recording date, lock status, recording mode
- ③ Recorded title No.
- ④ Recorded title name
- ⑤ Recording Length (i.e., the playing time)
- ⑥ Edit menu
Play: Plays the selected title.
Rename: Changes the name of a selected title.
Delete: Deletes the selected title from the list.
Edit: Deletes a section of title.
Protection: Locks or unlocks the selected title.
- ⑦ Button display



- By pressing the **ANYKEY** button, you can play desired title. (see page 39)
- This may depend on the type of disc.
- DVD-RW(V)/DVD+RW/±R has limited editing function.

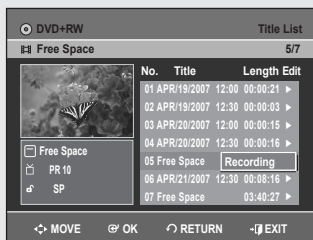

Recording on Free space


This function is only available with DVD+RW discs. If existing titles are deleted, new free space will be created. When you operate free space function, on-air TV images will appear on the left side of the title list.



DVD-VR355 only

1. Press the **TITLE LIST** button. The Title List screen is displayed.
2. Press the **▲ ▼** button to select **Free Space**, then press the **OK** or **▶** button. On-air TV images will appear on the left side of the title list.
3. Press the **OK** button.

Basic Editing (Title List)

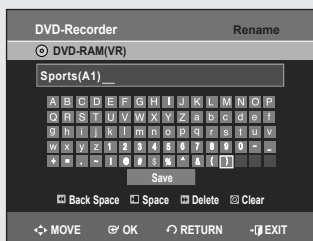


Renaming (Labeling) a Title



Follow these instructions to rename a title list, i.e., to edit the title of a recorded programme.



DVD-VR355 only

1. Press the **TITLE LIST** button.
The Title List screen is displayed.
2. Press the **▲ ▼** buttons to select a title you want to rename from the Title List, then press the **OK** or **▶** button.
3. Press the **▲ ▼** buttons to select **Rename**, then press the **OK** or **▶** button.
The Rename screen is displayed.
4. Select the desired characters using the **▲ ▼ ◀ ▶** buttons, press the **OK** button.
 - **Back Space**: Deletes the character before the cursor.
 - **Space**: Enters a blank and moves the cursor one forward (to the right).
 - **Delete**: Deletes the character at the cursor position.
 - **Clear**: Deletes all the character inputs.
 - **Save**: Registers the character inputs.
5. Press the **▲ ▼ ◀ ▶** buttons to select **Save**, and then press the **OK** button.
The changed title name is displayed in the title field of the selected title.

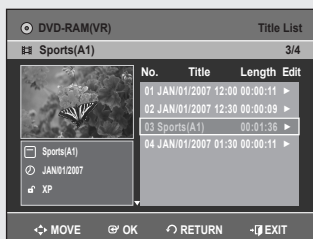

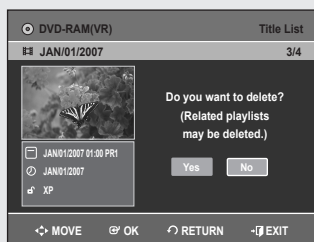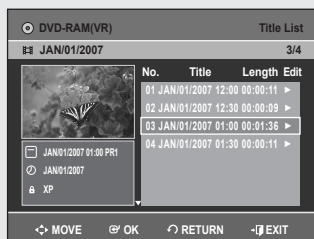

Locking (Protecting) a Title

Follow these instructions to lock a title to protect it from accidental deletion.



DVD-VR355 only

1. Press the **TITLE LIST** button.
The Title List screen is displayed.
2. Press the **▲ ▼** buttons to select a title you want to rename from the Title List, then press the **OK** or **►** button.
3. Press the **▲ ▼** buttons to select **Protection**, then press the **OK** or **►** button.
4. Press the **◀ ▶** buttons to select **On**, then press the **OK** button. The key icon on the information window for the selected title changes to the locked status. (→)

Deleting a Title

Follow these instructions to delete a title from the Title List.



DVD-VR355 only

1. Press the **TITLE LIST** button.
The Title List screen is displayed.
2. Press the **▲ ▼** buttons to select a title you want to rename from the Title List, then press the **OK** or **►** button.
3. Press the **▲ ▼** buttons to select **Delete**, then press the **OK** or **►** button.
You will be prompted with a confirmation message.
DVD-RAM(VR), DVD-RW(VR mode): Since Playlist is present, the message 'Do you want to delete? (Related playlists may be deleted.)' is displayed.
DVD-RW(Video mode), DVD+RW, DVD±R: Since Playlist is not present, the message 'Do you want to delete?' is displayed.
• The message depends on the type of disc.
4. Press the **◀ ▶** buttons to select **Yes**, then press the **OK** button.






- You cannot delete a protected title.
If you want to delete a protected title, select **Off** in the Title Protection menu.
- Once a title is deleted from the Title List, it cannot be recovered.
- Once DVD-RW/±R is finalised, it cannot be deleted.
- With DVD±R, titles are only deleted from the menu, however, the Title remains physically on the disc.

Deleting a Section of a Title

Follow these instructions to delete a section of a title from the Title List.



(VR mode)

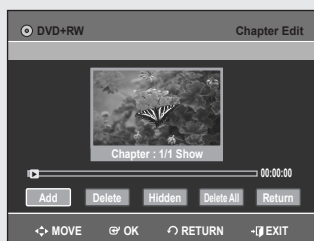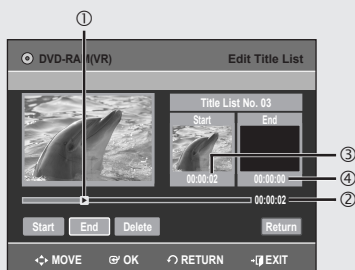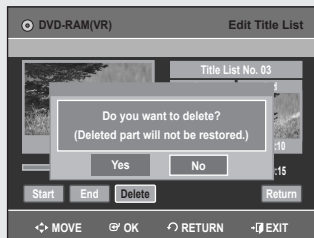

1. Press the **TITLE LIST** button.
The Title List screen is displayed.
2. Press the **▲ ▼** buttons to select a title you want to rename from the Title List, then press the **OK** or **►** button.
3. Press the **▲ ▼** buttons to select **Edit**, then press the **OK** or **►** button.
The Edit Title List screen is displayed.
4. Press the **OK** button at the starting point.
The image and starting point time are displayed in the section deletion starting point window.
5. Press the **OK** button at the end point.
The image and end point time is displayed in the Section deletion ending point window.
6. Press the **◀ ▶** buttons to select **Delete**, then press the **OK** button.
7. Press the **◀ ▶** buttons to select **Yes**, then press the **OK** button.
The selected section has been deleted.
To return to the Title List, press the **◀ ▶** buttons to select **Return**.

Edit Title List Screen Elements

- ① Playback bar
- ② Playtime
- ③ Section deletion starting point window and time
- ④ Section deletion end point window and time
 - Select the start and end points of the section you want to delete using the playback related buttons.
 - Playback related buttons: (◀, ▶, ⏮, ⏭, ⏭, ⏮)



- The length of the section to be deleted must be at least 5 seconds long.
- End point cannot be marked earlier than start point.
- The section cannot be deleted when it includes a still picture.

Editing a Chapter

You can make your own chapters on DVD+RWs and edit them using the Chapter Edit menu.




DVD-VR355 only

1. Press the **TITLE LIST** button.
The Title List screen is displayed.
2. Press the **▲ ▼** buttons to select a **title** containing a chapter you want to edit, then press the **OK** or **►** button.
3. Press the **▲ ▼** buttons to select **Chapter Edit**, then press the **OK** or **►** button. The Chapter Edit screen is displayed.



◆ Chapter Edit Screen Elements

1. Current chapter number and status
2. Playback bar
3. Playtime
4. Chapter Edit menu

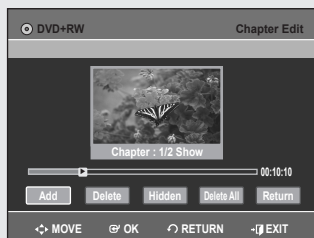


Adding a chapter

Follow steps 1 to 3 in page 67

4. Select the point where you want to add a chapter using the playback related buttons, then press the **OK** button at that point.
Each time you press the **OK** button, a new chapter will be added.
 - Playback related buttons: (⏮, ⏪, ⏩, ⏭, ⏭).
5. Press the ◀ ▶ buttons to select **Return**, and then press the **OK** button.
The edited title will now have the chapter you added.



- You can make up to 99 chapters in a title and 254 chapters in a disc.
- The edited chapters are shown on existing DVD players only after performing the Edit Compatible function. (See page 78)
- If you add a chapter, the title is divided at that point; If you add a chapter onto a title that has only one chapter, it creates another chapter.

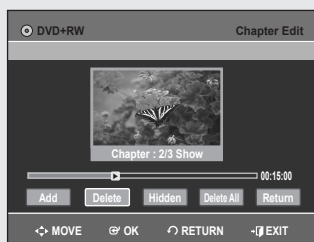


Deleting a chapter

Follow steps 1 to 3 in page 67

4. Select a chapter you want to delete using the playback related buttons.
 - Playback related buttons: (⏮, ⏪, ⏩, ⏭, ⏭).
5. Press the ◀ ▶ buttons to select **Delete**, and then press the **OK** button.
The edited title has chapters as you deleted.
 - To finish the operation, select **Return** using the ◀ ▶ buttons then press the **OK** button.



- First chapter can't be deleted.
- Delete menu is not available if there is one chapter in the selected title.
- When deleting a chapter, only the chapter marker is actually deleted, not the recorded video.
- Deleting a chapter can't be canceled.

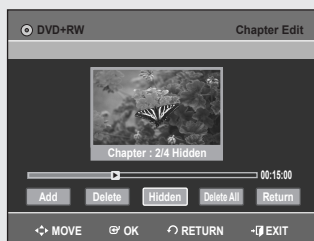


Hiding a chapter

Follow steps 1 to 3 in page 67

4. Select a chapter you want to hide using the playback related buttons.
 - Playback related buttons: (⏮, ⏪, ⏩, ⏭, ⏭).
5. Press the ◀ ▶ buttons to select **Hidden**, and then press the **OK** button.
The selected chapter is hidden.
 - To finish the operation, select **Return** using the ◀ ▶ buttons then press the **OK** button.



- If there is only one chapter, it can't be hidden.
- **Hidden/Show** menu is not available if there is no chapter in the selected title.
- The hidden chapters are not shown on the existing DVD players.
- Hidden chapters will be played when playing back the entire title. You can make the hidden chapter shown by pressing the **OK** button at **Show** menu.

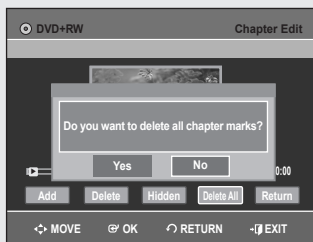


Deleting all chapters

Follow steps 1 to 3 in page 67

4. Press the ◀ ▶ buttons to select **Delete All**, and then press the **OK** button.
5. Press the ◀ ▶ buttons to select **Yes**, and then press the **OK** button.



- When deleting a chapter, only the chapter marker is actually deleted, not the recorded video.
- **Delete All** menu is not available if there is one chapter in the selected title.

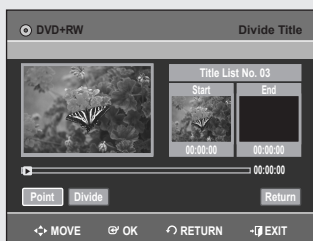


Dividing a Title

Follow these instructions to divide a long title into several titles.



DVD-VR355 only

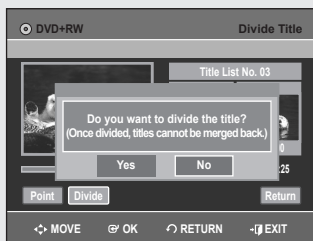

1. Press the **TITLE LIST** button.
The Title List screen is displayed.
2. Press the ▲ ▼ buttons to select a title you want to divide from the Title List, then press the **OK** or ▶ button.
3. Press the ▲ ▼ buttons to select **Divide Title**, then press the **OK** or ▶ button. The Divide Title screen is displayed.
4. Select the point you want to divide using the playback related buttons, then press the **OK** button.
 - Playback related buttons: (⏮, ⏪, ⏩, ⏭, ⏴).
5. Press the ◀ ▶ buttons to select **Divide**, then press the **OK** button.
6. Press the ◀ ▶ buttons to select **Yes**, then press the **OK** button.
The selected title has been divided into two titles.



- The length of the section to be deleted must be at least 5 seconds long.



Advanced Editing (Playlist)

Creating a Playlist

Follow these instructions to create a new playlist title from a recorded title.



(VR mode)

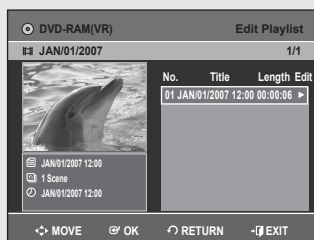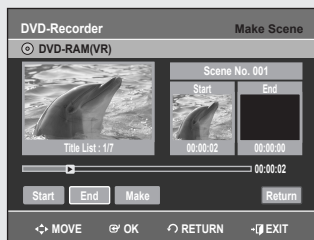

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲ ▼** buttons to select **Playlist**, then press the **OK** or **▶** button.
3. Press the **▲ ▼** buttons to select **New Playlist**, then press the **OK** or **▶** button.
The Make Scene screen is displayed.
4. Press the **OK** button at the start point.
 - The image and time at the start point are displayed on the Start window.
 - The yellow-coloured selection bar moves to the End item.
 - Select the starting point of the section from which you want to create a new scene using the playback related buttons.
 - Playback related buttons: (⏮, ⏪, ⏩, ⏭, ⏭)
5. Press the **OK** button at the end point.
 - The image and end point time are displayed in the End window.
 - The yellow-coloured selection bar moves to the Make icon.

- To make a new playlist -

6. Press the **◀ ▶** buttons to select **Make**, then press the **OK** button.
A new Make Scene screen is displayed.
A new Scene will be added to the current Playlist.




- You can check and see all the scenes on Edit Playlist screen. (See page 71)
- Repeat steps 1~6 if you want to make a new playlist.
- Repeat steps 4~6 if you want to make scenes of the playlist.

- To return to Edit Playlist menu -

7. Press the **◀ ▶** buttons to select **Return**, then press the **OK** button.
The Edit Playlist screen is displayed.



- You can create up to 99 playlist titles.
- Depending on the kind of disc, the displayed screen may be slightly different.
- A disc that is recorded on this unit cannot be displayed playlist menu if EZ REC MODE set to "On".

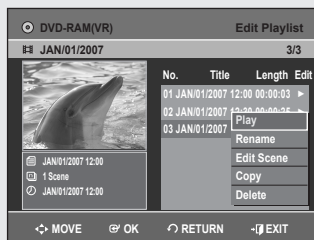


Playing Titles in the Playlist

Follow these instructions to play the playlist titles.



(VR mode)

1. Press the **PLAY LIST** button with the disc stopped.
The Edit Playlist screen is displayed.
2. Press the **▲ ▼** buttons to select the title you want to play from the Playlist, then press the **OK** or **▶** button.
3. Press the **▲ ▼** buttons to select **Play**, then press the **OK** or **▶** button.
The playlist titles will be played back.
4. Press the **STOP** button to stop playing.
The screen returns to the Edit Playlist screen.

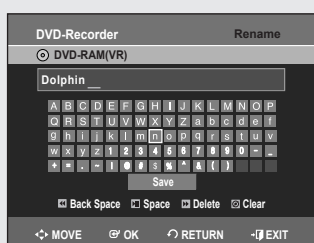


Renaming a Playlist Title

Follow these instructions to rename a playlist Title, i.e. to edit the title of a playlist title.



(VR mode)

1. Press the **PLAY LIST** button with the disc stopped.
The Edit Playlist screen is displayed.
2. Press the **▲ ▼** buttons to select the title you want to rename from the Playlist, then press the **OK** or **▶** button.
3. Press the **▲ ▼** buttons to select **Rename**, then press the **OK** button.
The Rename screen is displayed.
4. Enter the desired characters using the **▲ ▼ ◀ ▶** buttons.
 - **Back Space** : Deletes the character before the cursor.
 - **Space** : Enters a blank and moves the cursor one forward (to the right).
 - **Delete** : Deletes the character at the cursor position.
 - **Clear** : Deletes all the character inputs.
 - **Save** : Registers the character inputs.
5. Press the **▲ ▼ ◀ ▶** buttons to select **Save**, then press the **OK** button.
The changed title is displayed in the title field of the selected playlist title.

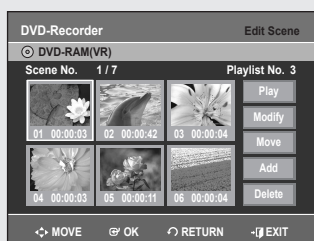


Editing a Scene for the Playlist

Follow these instructions to edit scenes for a playlist.



(VR mode)


1. Press the **PLAY LIST** button with the disc stopped.
The Edit Playlist screen is displayed.
2. Press the **▲ ▼** buttons to select the title you want to edit from the Playlist, and then press the **OK** or **▶** button.
3. Press the **▲ ▼** buttons to select **Edit Scene**, then press the **OK** or **▶** button.
The Edit Scene screen is displayed.

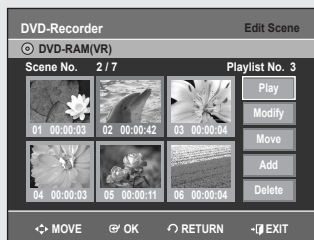

Playing a Selected Scene

Follow steps 1 to 3 on page 71.



4. Press the **▲▼◀▶** buttons to select the scene you want to play, then press the **OK** button.
The playlist title to be played is selected.
5. Press the **OK** button again.
The selected scene will be played back.
 - To stop scene play, press the **STOP** button.

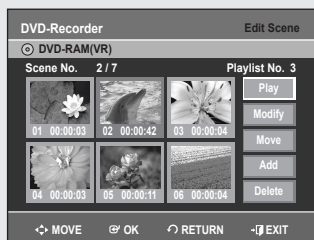


Modifying a Scene (Replacing a Scene)

Follow steps 1 to 3 on page 71.

4. Press the **▲▼◀▶** buttons to select the scene you want to modify, then press the **OK** button.
5. Press the **▲▼** buttons to select **Modify**, then press the **OK** button.
The Modify Scene screen is displayed.
6. Press the **OK** button at the start point of the scene.
 - The image and starting point time are displayed on the Start window.
 - Select the starting or ending point of the section you want to modify using the playback related buttons.
 - Playback related buttons: (◀, ▶, ⏮, ⏭, ⏪, ⏩)
7. Press the **OK** button at the end point of the scene.
 - The image and ending point time are displayed in the End window.
8. Press the **◀▶** buttons to select **Change**, then press the **OK** button.
 - The scene you want to modify is changed with the selected section.

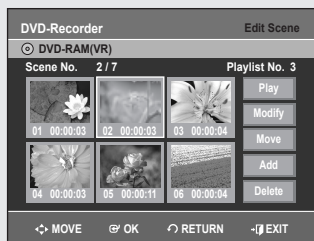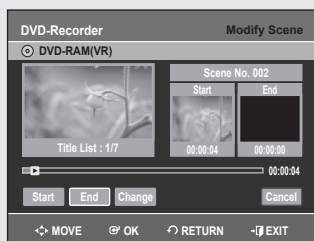

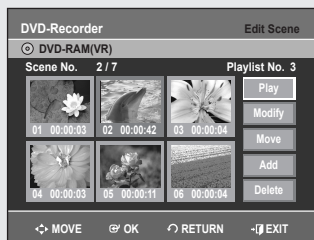


Moving a Scene (Changing the Position of a Scene)

Follow steps 1 to 3 on page 71.

- Press the **▲▼◀▶** buttons to select the scene you want to move (change the position), then press the **OK** button.
- Press the **▲▼** buttons to select **Move**, then press the **OK** button.
 - A yellow selection window is displayed on the scene to be moved.
- Press the **▲▼◀▶** buttons to select the position to which you want to move the selected scene, then select the **OK** button.
 - The selected scene is moved to the selected position.



- You cannot move the selected scene to the position of the next scene, because the selected scene should be inserted before that position, which requires no action.
- Depending on the kind of disc, the displayed screen may be slightly different.

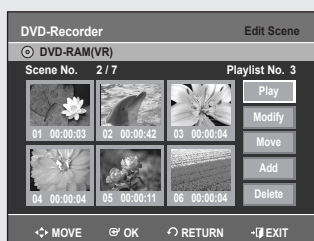


Adding a Scene



Follow steps 1 to 3 on page 71.

- Press the **▲▼◀▶** buttons to select the scene that will have a new scene inserted before it, then press the **OK** button.

A yellow selection window is displayed on the scene to be added as the new scene.
- Press the **▲▼** buttons to select **Add**, then press the **OK** button.

The Add Scene screen is displayed.
- Press the **OK** button at the starting point of the scene.
 - The image and starting point time are displayed in the Start window.
 - Select the end point of the section where you want to add the new scene using the playback related buttons.
 - Playback related buttons: (◀▶, ◀, ▶, ⏮, ⏭)
- Press the **OK** button at the end point of the scene.
 - The image and time of the end point are displayed in the End window
 - To cancel, press the **◀▶** buttons to select **Cancel** and then press the **OK** button.
- Press the **◀▶** buttons to select **Add**, then press the **OK** button.
 - The section you want to add is inserted prior to the scene selected in step 4.

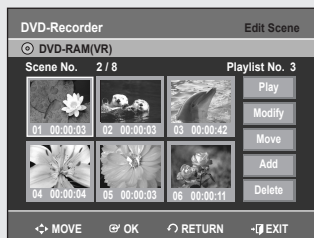

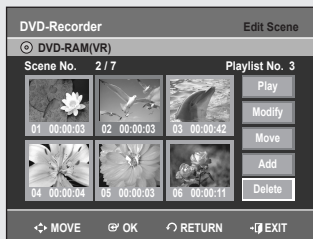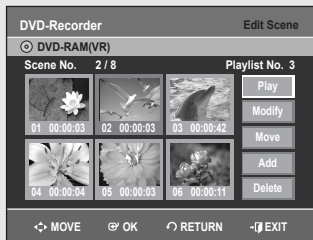

Deleting a Scene

Follow steps 1 to 3 on page 71.


4. Press the ▲▼◀▶ buttons to select the scene you want to delete, and then press the **OK** button.
5. Press the ▲▼ buttons to select **Delete**, then press the **OK** button.

Copying a Playlist to the VCR

1. Press the **PLAY LIST** button with the disc stopped. The Edit Playlist screen is displayed.
2. Press the ▲▼ buttons to select the title you want to edit from the Playlist, and then press the **OK** or ▶ button.
3. Press the ▲▼ buttons to select **Copy**, then press the **OK** button.
 - The title you choose is played and copied to VCR tape.
4. Press the **EXIT** button after the operation has finished. The menu screen will disappear.



■ Copy function is not allowed in progressive scan mode.

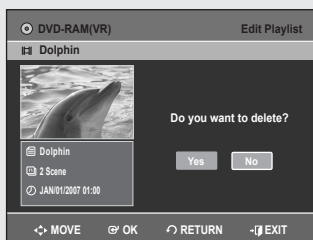

Deleting a Playlist from the Playlist

1. Press the **PLAY LIST** button with the disc stopped. The Edit Playlist screen is displayed.
2. Press the ▲▼ buttons to select the title you want to edit from the Playlist, then press the **OK** or ▶ button.
3. Press the ▲▼ buttons to select **Delete**, then press the **OK** button.
4. Press the ◀▶ buttons to select **Yes**, then press the **OK** button. You automatically return to the Edit Playlist screen after the delete operation has finished.


Disc Manager

Editing the Disc Name

Follow these instructions to give a name to a disc.



DVD-VR355 only

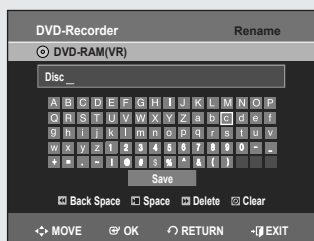

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲ ▼** buttons to select **Disc Manager**, then press the **OK** or **▶** button.
3. Press the **▲ ▼** buttons to select **Disc Name**, then press the **OK** or **▶** button.
The Edit Name screen is displayed.
4. Enter the desired characters using the **▲ ▼ ◀ ▶** buttons.
 - **Back Space** : Deletes the character before the cursor.
 - **Space** : Enters a blank and moves the cursor one forward (to the right).
 - **Delete** : Deletes the character at the cursor position.
 - **Clear** : Deletes all the character inputs.
 - **Save** : Registers the character inputs.
5. Press the **▲ ▼ ◀ ▶** buttons to select **Save**, then press the **OK** button.
A disc name is given to the disc.



- To edit the disc name, you need to clear disc protection in advance.
- Depending on the kind of disc, the displayed screen may be different.




Disc Protection

Disc Protect allows you to protect your discs from being formatted or deleted due to unintended operations.



1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲ ▼** buttons to select **Disc Manager**, then press the **OK** or **▶** button.
3. Press the **▲ ▼** buttons to select **Disc Protection**, then press the **OK** or **▶** button.
4. Press the **▲ ▼** button to select **Protected**, then press the **OK** or **▶** button.

• DVD-RAM/+RW

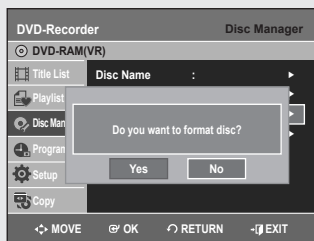

• DVD-RW



Formatting a Disc

*Use these instructions to format a disc.
The Disc Protection should be cleared.*



DVD-VR355 only

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲ ▼** buttons to select **Disc Manager**, then press the **OK** or **▶** button.
3. Press the **▲ ▼** buttons to select **Disc Format**, then press the **OK** or **▶** button.

DVD-RAM/+RW

- You will be prompted with the confirmation message 'Do you want to format disc?'
- You will be prompted with the confirmation message 'All data will be deleted. Do you want to continue.'

DVD-RW

- You will be prompted with the confirmation message 'Choose the recording format for DVD-RW.'
 - You will be prompted with the confirmation message 'All data will be deleted. Do you want to continue.'
4. Press the **◀ ▶** buttons to select **Yes**, then press the **OK** button.
The disc is formatted.

	DVD-VR mode	DVD-V mode
DISC	DVD-RAM DVD-RW	DVD-RW DVD-R

DVD-VR and DVD-V mode are defined according to their recording format.


Finalising a Disc

After you record titles onto a DVD-RW/±R disc with your DVD recorder, it needs to be finalised before it can be played back on external devices.



DVD-VR355 only

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲ ▼** buttons to select **Disc Manager**, then press the **OK** or **▶** button.
3. Press the **▲ ▼** button to select **Disc Finalise**, then press the **OK** or **▶** button.
You will be prompted with the message 'Do you want to finalise disc?'
4. Press the **◀ ▶** buttons to select **Yes**, then press the **OK** button. You will be prompted again with the message "Disc will be finalised. Do you want to continue?"
5. Press the **◀ ▶** buttons to select **Yes**, then press the **OK** button. The disc is finalised.

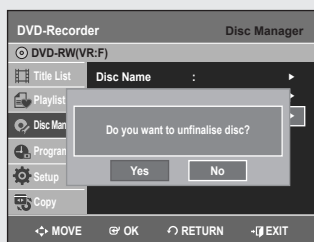

- Once a disc is finalised, you cannot delete titles from the record list.
- After being finalised, the DVD-RW(V mode)/±R operates in the same manner as a DVD-Video.
- Depending on the disc type, the displayed screen may be different.
- Finalising time may be different depending on the amount of data recorded on the disc.
- Data on the disc will be damaged if the recorder is powered off during finalise process.
- You can finalise the disc automatically using EZ REC MODE (see page 59).

Unfinalising a Disc (V/VR mode)



1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲ ▼** buttons to select **Disc Manager**, then press the **OK** or **▶** button.
3. Press the **▲ ▼** button to select **Disc Unfinalise**, then press the **OK** or **▶** button.
You will be prompted with the message 'Do you want to unfinalise disc?'.
4. Press the **◀ ▶** buttons to select **Yes**, then press the **OK** button. You will be prompted again with the message "Disc will be unfinalised. Do you want to continue?"
5. Press the **◀ ▶** buttons to select **Yes**, then press the **OK** button.
The disc is unfinalised.




- A DVD-RW can be finalised or unfinalised in V mode.

	Finalise	Unfinalise
Mark	DVD-Video(RW)	DVD-RW(V)
Operation	Same as DVD-Video	Additional recording, protection and deletion are possible.

- A DVD-RW can be finalised or unfinalised in VR mode.

	Finalise	Unfinalise
Mark	DVD-RW(VR:F)	DVD-RW(VR mode)
Operation	Additional recording, deletion, editing, and protection are impossible.	Additional recording, deletion, editing, and protection are possible.

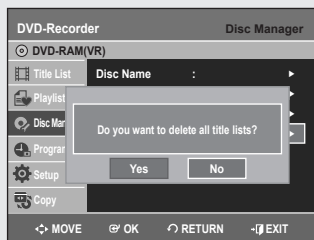


Delete All Title Lists



DVD-VR355 only

1. With the unit in Stop mode, press the **MENU** button.
2. Press the **▲ ▼** buttons to select **Disc Manager**, then press the **OK** or **▶** button.
3. Press the **▲ ▼** buttons to select **Delete All Title Lists**, then press the **OK** or **▶** button.
 - You will be prompted with the confirmation message 'Do you want to delete all title lists?'.
 - When Protected Title exists : The Delete All Title List function will not operate. If there is a title containing a still picture, however, that function will not operate. If you want to delete a protected title, disable Protect for it on the Lock item.
4. Press the **◀ ▶** buttons to select **Yes**, then press the **OK** button.
All title lists are deleted.

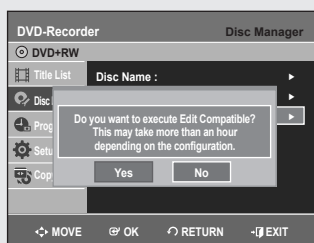

Edit Compatible

For DVD+RW discs, this function needs to be performed in order to view edited chapters or titles on a standard DVD player.



DVD-VR355 only

1. With the unit in Stop mode, press the **MENU** button on the remote control.
2. Press the **▲ ▼** buttons to select **Disc Manager**, and then press the **OK** or **▶** button.
3. Press the **▲ ▼** buttons to select **Edit Compatible**, and then press the **OK** or **▶** button.
4. Press the **◀ ▶** buttons to select **Yes**, and then press the **OK** button.
The Edit Compatible process will start.

After performing **Edit Compatible**, you can move to the title menu of the disc by pressing the **TITLE MENU** button.





 
- If you don't performing Chapter Edit, you will be prompted with the confirmation message "You do not need to execute Edit Compatible."



Reference

Troubleshooting (DVD)

If your product malfunctions, go through the check points below before contacting a Samsung authorized service centre.







Problem	Explanation/Solution
No power.	<ul style="list-style-type: none">• Check whether the power cord is securely plugged into the power outlet.• Did you press the  button of your DVD Recorder & VCR.
The input is displayed for a while when the power turns on.	The DVD Recorder & VCR requires some time to initialise after it is turned on. If 'Quick Recording' function is set to on, the DVD Recorder & VCR will power on quickly, which enables you to immediately record a desired channel. (see page 33)
Cannot record TV programmes.	<ul style="list-style-type: none">• Check whether the power cord is securely plugged into the power outlet.• Did you set the DVD Recorder & VCR programme settings correctly?• Check the free space on your disc.• Check the antenna cable is connected.
Timer recording does not work properly.	<ul style="list-style-type: none">• Check the recording time, end time and current time settings again.• Recording will be canceled if the power is interrupted due to a power failure or other reason during recording.
Cannot record.	<ul style="list-style-type: none">• Check whether the disc is formatted. This product can record on formatted discs only.• Check whether your disc has a sufficient free space.
I pressed the REC button but there is no response.	If a programme is copy protected, you cannot record it.
I forgot the password for parental lock.	Press the PROG ( / ) buttons of your DVD Recorder & VCR at the same time when the power is on, and then press the STANDBY/ON button. All settings including password will revert to factory settings. Do not use it if not absolutely required. (Note that this function is available only when there is no disc inserted.)
Cannot play the disc.	<ul style="list-style-type: none">• Check whether the disc is inserted correctly with the label facing up.• Check the regional code of your DVD disc.• This DVD Recorder & VCR cannot playback some types of disc.
No sound.	<ul style="list-style-type: none">• Are you watching a programme in slow or skip mode? If you are playing a programme at a speed other than normal speed, sound is not output. (except for forward search Playback (Fast 1) and you cannot also hear during scanning MPEG4 in all mode.)• Check the connections and initial settings.• Check whether the disc is damaged. Clean up the disc, if necessary.• Check whether the disc is inserted correctly with the label facing up.

Troubleshooting (DVD)

Problem	Explanation/Solution
⊙ icon appears on the screen.	You cannot use the operation or function due to one of the following reasons: (1) Your DVD disc does not support the feature (for example, angles) (2) You've requested a title, chapter, or scan time that is out of the correct range.
Play mode settings are different from the settings configured with the Setting menu.	The disc does not support all the selected functions. In this case, some settings you configure on the Setting menu may not work properly.
Cannot change the aspect ratio.	Aspect ratio is fixed for DVD disc.
No audio output.	Check whether you selected correct digital output options in the Audio Output Options menu.
No video or audio output. The disc tray is ejected after 2 to 5 seconds.	Did you move your DVD Recorder & VCR suddenly from a cold place to a warm place? In this case, do not connect the plug to the power outlet and wait for two hours. Then insert the disc and try to play again. It will work properly when condensation has evaporated.
Angle operation does not work during playback of a DVD disc.	Angle operation is available only when the disc contains images captured at different angles.
The disc revolves, but no image or bad quality images are output.	<ul style="list-style-type: none"> • Check whether there is damage or foreign materials on your disc. • Some discs with bad manufacturing quality may not be played back. • If the scene changes from dark to bright suddenly, the screen may jitter temporarily, but it is not a defect.
Desired audio language and subtitle language are not played.	Audio languages and subtitle languages are disc-specific. Only the sound and subtitle languages contained on a DVD disc are available and displayed on the disc menu.
No progressive output.	<ul style="list-style-type: none"> • Check whether PS⊙ is displayed on front panel. • Make sure to change the component video output using the Progressive button when the disc is stopped.
The remote control doesn't work.	<ul style="list-style-type: none"> • Point the remote control at the remote control sensor on your DVD Recorder & VCR. Operate within distance. (15ft) • Remove obstacles between your DVD Recorder & VCR and remote control. • Check whether the batteries are depleted.
Other problems	<ul style="list-style-type: none"> • Read the table of contents and then find and read the sections describing your problem, and follow the directions given. • Turn the unit off and on. • If your problem still persists, contact your nearest Samsung service centre.
No HDMI output. (DVD-VR355 only)	<ul style="list-style-type: none"> • Check the Video output is HDMI enabled. • Check the connection between the TV and the HDMI jack of the DVD Recorder & VCR. • See if your TV supports this 576p/720p/1080i DVD Recorder & VCR.
Abnormal HDMI output screen. (DVD-VR355 only)	<ul style="list-style-type: none"> • If snow noise appears on the screen, it means that TV does not support HDCP (High-bandwidth Digital Content Protection).
HDMI output Jitter (DVD-VR355 only)	<ul style="list-style-type: none"> • Check your TV system setup correctly. • Screen Jitter may occur when the frame rate is converted from 50Hz to 60Hz for 720p/1080i HDMI (High Definition Multimedia Interface) Output. • Please refer to the user's manual of your TV.

Troubleshooting (VCR)

Before contacting a Samsung authorized service centre, perform the following simple checks.

Problem	Explanation/Solution
No power	<ul style="list-style-type: none"> • Check that the power plug is connected to a wall outlet. • Have you pressed the /I button?
You cannot insert a video cassette	<ul style="list-style-type: none"> • A video cassette can only be inserted with the window side up and the safety tab facing you.
The television programme was not recorded	<ul style="list-style-type: none"> • Check the DVD Recorder & VCR antenna connections. • Is the DVD Recorder & VCR tuner properly set? • Check if the safety tab is intact on the cassette.
Timer recording was unsuccessful	<ul style="list-style-type: none"> • Re-check the recording start/stop time settings and the current time • Check whether you inserted a tape which has enough time to record
No playback picture or the picture is distorted	<ul style="list-style-type: none"> • Check to see if you are using a prerecorded tape.
You cannot see normal broadcasts	<ul style="list-style-type: none"> • Check the tuner/external setting. It should be on tuner. • Check the TV antenna connections.
Noise bars or streaks on playback	<ul style="list-style-type: none"> • Press the PROG/TRK ( / ) buttons to minimize this effect.
When the  button is pressed during playback, the still picture has severe "noise bar" streaks	<ul style="list-style-type: none"> • A still picture may have "noise bars", depending on the condition of the tape. Press the PROG/TRK ( / ) buttons during slow motion to minimize this effect.
Video Head Cleaning	<ul style="list-style-type: none"> • If poor pictures appear on a variety of cassettes, the video heads may need cleaning. This is not a common problem and unless it appears, the heads should not be cleaned. <p>When cleaning the video heads, read all instructions provided with the head cleaning cassette. Incorrect head cleaning can permanently damage the video heads.</p>

If you are unable to solve the problem after reading the above instructions, note:

- The model and serial number on the rear of your DVD Recorder & VCR
- The warranty information
- A clear description of the problem

Then contact your nearest SAMSUNG authorized service centre.

Specifications

General	Power requirements	AC 220 - 240V, 50Hz
	Power consumption	30 Watts
	Weight	4.8 Kg
	Dimensions	430(W) x 321(D) x 79(H)
	Operating temp.	+5°C to +35°C
	Other conditions	Keep level when operating. Less than 75% operating humidity
Input	Video input (Rear)	Euro Scart socket : 1.0Vp-p(unbalanced) 75Ω
	Audio input (Rear)	Euro Scart socket : -8dBm, 47Kohm unbalanced
	Front input	RCA jack, DV
Output	RF out	UHF 21-69 (Initial CH60)
	Audio (DVD, VCR)	RCA jack, Euro Scart socket, Audio L/R
	Audio (DVD only)	Digital audio out OPTICAL COAXIAL
	Video (DVD, VCR)	RCA jack, Euro Scart socket (Composite,RGB), S-Video Out, Component out, HDMI (576p, 720p, 1080i) (DVD-VR355 only)
VCR	Tape format	VHS type video tape
	Colour system	PAL
	Tuning system	I
	Video S/N	Above 43dB (standard recording)
	Resolution	Above 240 lines (standard recording)
	Audio S/N	Above 68dB (Hi-Fi), 39dB (Mono)
DVD	Audio frequency characteristics	20Hz-20KHz (Hi-Fi)
	Picture Compression format	MPEG-II
	Audio Compression format	Dolby AC-3 256kbps
	Recording Quality	XP (8 Mbps), SP (4 Mbps), LP (2 Mbps), EP (1.2/0.8 Mbps)
	Video S/N	Ratio Min. 50dB at standard recording
	Audio S/N	Ratio Min. 75dB
	Audio frequency characteristics	20 Hz ~ 20 KHz

Audio Output

For DVD discs, audio signals recorded at 96kHz sampling frequency are converted into and output at 48kHz.

Disc Type	DVD	AUDIO CD (CD-DA)
Analog Audio Output	48 / 96KHz	44.1KHz
Digital Audio Output	48KHz	44.1KHz



UNITED KINGDOM

This Samsung product is warranted for the period of twelve (12) months from the original date of purchase, against defective materials and workmanship. In the event that warranty service is required, you should return the product to the retailer from whom it was purchased.

However, Samsung Authorised Dealers and Authorised Service Centres in other EC Countries will comply with the warranty on the terms issued to purchasers in the country concerned.

In case of difficulty, details of our Authorised Service Centres are available from:

Samsung Electronics U.K. Ltd.

Customer Care Centre

PO Box 17243

Edinburgh, EH11 4YB

United Kingdom

Tel : 0870 SAMSUNG (7267864),

Fax : 0870 7221127 (United Kingdom)

Tel : 0818 717 100,

Fax : +44 (0)870 7221127 (Republic of Ireland)

Web : www.samsung.com/uk

■ WARRANTY CONDITIONS

1. The warranty is only valid if, when warranty service is required, the warranty card is fully and properly completed and is presented with the original invoice or sales slip or confirmation, and the serial number on the product has not been defaced.
2. Samsung's obligations are limited to the repair or, at its discretion, replacement of the product or the defective part.
3. Warranty repairs must be carried out by Authorised Samsung Dealers or Authorised Service Centres. No re-imbursment will be made for repairs carried out by non Samsung Dealers and, any such repair work and damage to the products caused by such repair work will not be covered by this warranty.



REPUBLIC OF IRELAND

4. This product is not considered to be defective in materials nor workmanship by reason that it requires adaptation in order to conform to national or local technical or safety standards in force in any Country other than the one for which the product was originally designed and manufactured. This warranty will not cover, and no re-imbursment will be made for such adaptation nor any damage which may result.
5. This warranty covers none of the following:
 - a) Periodic check ups, maintenance and repair or replacement of parts due to normal wear and tear.
 - b) Cost relating to transport, removal or installation of the product.
 - c) Misuse, including the failure to use this product for its normal purposes or incorrect installation.
 - d) Damage caused by Lightning, Water, Fire, Acts of God, War, Public Disturbances, incorrect mains voltage, improper ventilation or any other cause beyond the control of Samsung.
6. This warranty is valid for any person who legally acquired possession of the product during the warranty period.
7. The consumers statutory rights in any applicable national legislation whether against the retailer arising from the purchase contract or otherwise are not affected by this warranty. Unless there is national legislation to the contrary, the rights under this warranty are the consumers sole rights and Samsung, its subsidiaries and distributors shall not be liable for indirect or consequential loss or any damage to records, compact discs, videos or audio taper or any other related equipment or material.

SAMSUNG ELECTRONICS (U.K.) LTD.

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

Region	Country	Customer Care Center	Web Site
North America	CANADA	1-800-SAMSUNG (7267864)	www.samsung.com/ca
	MEXICO	01-800-SAMSUNG (7267864)	www.samsung.com/mx
	U.S.A	1-800-SAMSUNG (7267864)	www.samsung.com
Latin America	ARGENTINE	0800-333-3733	www.samsung.com/ar
	BRAZIL	0800-124-421 4004-0000	www.samsung.com/br
	CHILE	800-726-7864 (SAMSUNG)	www.samsung.com/cl
	COSTA RICA	0-800-507-7267	www.samsung.com/latin
	ECUADOR	1-800-10-7267	www.samsung.com/latin
	EL SALVADOR	800-6225	www.samsung.com/latin
	GUATEMALA	1-800-299-0013	www.samsung.com/latin
	JAMAICA	1-800-234-7267	www.samsung.com/latin
	PANAMA	800-7267	www.samsung.com/latin
	PUERTO RICO	1-800-682-3180	www.samsung.com/latin
	REP. DOMINICA	1-800-751-2676	www.samsung.com/latin
	TRINIDAD & TOBAGO	1-800-7267-864	www.samsung.com/latin
Europe	VENEZUELA	0-800-100-5303	www.samsung.com/latin
	COLOMBIA	01-8000112112	www.samsung.com.co
	BELGIUM	02 201 2418	www.samsung.com/be
	CZECH REPUBLIC	844 000 844 Distributor pro Českou republiku :Samsung Zrt., česká organizační složka Vyskočilova 4, 14000 Praha 4	www.samsung.com/cz
	DENMARK	70 70 19 70	www.samsung.com/dk
	FINLAND	030-6227 515	www.samsung.com/fi
	FRANCE	3260 SAMSUNG or 08 25 08 65 65 (€ 0,15/Min)	www.samsung.com/fr
	GERMANY	01805 - 121213 (€ 0,14/Min)	www.samsung.de
	HUNGARY	06-80-SAMSUNG (7267864)	www.samsung.com/hu
	ITALIA	800-SAMSUNG (7267864)	www.samsung.com/it
	LUXEMBURG	0032 (0)2 201 24 18	www.samsung.lu
	NETHERLANDS	0900 20 200 88 (€ 0,10/Min)	www.samsung.com/nl
	NORWAY	815-56 480	www.samsung.com/no
	POLAND	0 801 801 881	www.samsung.com/pl
	PORTUGAL	80 8 200 128	www.samsung.com/pt
	SLOVAKIA	0800-SAMSUNG (726786)	www.samsung.com/sk
	SPAIN	902 10 11 30	www.samsung.com/es
	SWEDEN	0771-400 200	www.samsung.com/se
	U.K	0870 SAMSUNG (7267864)	www.samsung.com/uk
	Republic of Ireland	0818 717 100	www.samsung.com/uk
	Switzerland	0800-7267864	www.samsung.com/ch
CIS	RUSSIA	8-800-200-0400	www.samsung.ru
	KAZAHSTAN	8-800-080-1188	www.samsung.kz
	UZBEKISTAN	8-800-120-0400	www.samsung.uz
	UKRAINE	8-800-502-0000	www.samsung.com/ur
	LITHUANIA	8-800-77777	www.samsung.lt
	LATVIA	800-7267	www.samsung.com/lv/index.htm
	ESTONIA	800-7267	www.samsung.ee
Asia Pacific	AUSTRALIA	1300 362 603	www.samsung.com/au
	CHINA	800-810-5858, 010-6475 1880	www.samsung.com.cn
	HONG KONG	3698 - 4698	www.samsung.com/hk
	INDIA	3030 8282 1800 110011	www.samsung.com/in
	INDONESIA	0800-112-8888	www.samsung.com/id
	JAPAN	0120-327-527	www.samsung.com/jp
	MALAYSIA	1800-88-9999	www.samsung.com/my
	PHILIPPINES	1800-10-SAMSUNG (7267864)	www.samsung.com/ph
	SINGAPORE	1800-SAMSUNG (7267864)	www.samsung.com/sg
	THAILAND	1800-29-3232 02-689-3232	www.samsung.com/th
	TAIWAN	0800-329-999	www.samsung.com/tw
Middle East & Africa	VIETNAM	1 800 588 889	www.samsung.com/vn
	SOUTH AFRICA	0860 7267864 (SAMSUNG)	www.samsung.com/za
	U.A.E	800SAMSUNG (7267864) 8000-4726	www.samsung.com/mea



**Correct Disposal of This Product
(Waste Electrical & Electronic Equipment)**



(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.