

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

**SAMSUNG ELECTRONICS**



World Wide Web  
<http://www.samsungmobile.com>

Printed in Korea  
Code No.:GH68-25093A  
English (EU). 10/2009. Rev. 1.0

# GT-S9110 user manual



# using this manual

This user manual has been specially designed to guide you through the functions and features of your mobile phone. To get started quickly, refer to “introducing your mobile phone,” “assembling and preparing your mobile phone,” and “using basic functions.”

## Instructional icons

---

Before you start, familiarise yourself with the icons you will see in this manual:



WARNING

**Warning**—situations that could cause injury to yourself or others



CAUTION

**Caution**—situations that could cause damage to your phone or other equipment



**Note**—notes, usage tips, or additional information



**Refer to**—pages with related information; for example: ► p. 12 (represents “see page 12”)



**Followed by**—the order of options or menus you must select to perform a step; for example: In Menu mode, select **Messages** → **Create new message** (represents **Messages**, followed by **Create new message**)

## Copyright information

---

Rights to all technologies and products that comprise this phone are the property of their respective owners:

- Bluetooth® is a registered trademark of the Bluetooth SIG, Inc. worldwide.  
Bluetooth QD ID: B015623

**CE 0168**

# contents

<b>safety and usage information .....</b>	<b>2</b>
Safety warnings .....	2
Safety precautions .....	5
Important usage information .....	7
<b>introducing your mobile phone .....</b>	<b>13</b>
Unpack .....	13
Phone layout .....	14
Keys .....	15
Icons .....	15
<b>assembling and preparing your mobile phone .....</b>	<b>17</b>
Release the buckle .....	17
Install the SIM card and battery .....	18
Charge the battery .....	20

<b>using basic functions</b> .....	<b>22</b>	<b>using tools and applications</b> .....	<b>38</b>
Turn your phone on and off .....	22	Use the voice command feature .....	38
Use the touch screen .....	23	Use the Bluetooth wireless feature .....	40
Access menus .....	24	Activate and send an SOS message .....	42
Customise your phone .....	24	Activate the mobile tracker .....	42
Use basic call functions .....	26	Record and play voice memos .....	43
Send and view messages .....	28	Create and view world clocks .....	44
Add and find contacts .....	29	Set and use alarms .....	44
Listen to music .....	30	Use the calculator .....	45
Browse the web .....	31	Convert currencies or measurements .....	45
<b>using advanced functions</b> .....	<b>32</b>	Set a countdown timer .....	46
Use advanced call functions .....	32	Use the stopwatch .....	46
Use advanced phonebook functions .....	35	Create text memos .....	46
Use advanced messaging functions .....	36	Manage your calendar .....	46
Use advanced music functions .....	37	<b>troubleshooting</b> .....	<b>a</b>
		<b>index</b> .....	<b>d</b>

# safety and usage information

Comply with the following precautions to avoid dangerous or illegal situations and ensure peak performance of your mobile phone.



## Safety warnings

---

### Keep your phone away from small children and pets

Keep your phone and all accessories out of the reach of small children or animals. Small parts may cause choking or serious injury if swallowed.

### Protect your hearing



Listening to a headset at high volumes can damage your hearing. Use only the minimum volume setting necessary to hear your conversation or music.

## Install mobile phones and equipment with caution

Ensure that any mobile phones or related equipment installed in your vehicle are securely mounted. Avoid placing your phone and accessories near or in an air bag deployment area. Improperly installed wireless equipment can cause serious injury when air bags inflate rapidly.

## Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers specifically designed for your phone. Incompatible batteries and chargers can cause serious injuries or damage to your phone.
- Never dispose of batteries or phones in a fire. Follow all local regulations when disposing of used batteries or phones.

- Never place batteries or phones on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.
- Never crush or puncture the battery. Avoid exposing the battery to high external pressure, which can lead to an internal short circuit and overheating.

## Avoid interference with pacemakers

Maintain a minimum of 15 cm (6 inches) between mobile phones and pacemakers to avoid potential interference, as recommended by manufacturers and the independent research group, Wireless Technology Research. If you have any reason to suspect that your phone is interfering with a pacemaker or other medical device, turn off the phone immediately and contact the manufacturer of the pacemaker or medical device for guidance.



## Turn off the phone in potentially explosive environments

Do not use your phone at refuelling points (service stations) or near fuels or chemicals. Turn off your phone whenever directed by warning signs or instructions. Your phone could cause explosions or fire in and around fuel or chemical storage and transfer areas or blasting areas. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.

## Reduce the risk of repetitive motion injuries

While using your phone, hold the phone with a relaxed grip, press the keys lightly, use special features that reduce the number of keys you have to press (such as templates and predictive text), and take frequent breaks.

## Do not use the phone if the screen is cracked or broken

Broken glass or acrylic could cause injury to your hand and face. Bring the phone to a Samsung service centre to replace the screen. Damage caused by careless handling will void your manufacturer's warranty.



## Safety precautions

### Drive safely at all times

Avoid using your phone while driving and obey all regulations that restrict the use of mobile phones while driving. Use hands-free accessories to increase your safety when possible.

### Follow all safety warnings and regulations

Comply with any regulations that restrict the use of a mobile phone in a certain area.

### Use only Samsung-approved accessories

Using incompatible accessories may damage your phone or cause injury.

### Turn off the phone near medical equipment

Your phone can interfere with medical equipment in hospitals or health care facilities. Follow all regulations, posted warnings, and directions from medical personnel.

### Turn off the phone or disable the wireless functions when in an aircraft

Your phone can cause interference with aircraft equipment. Follow all airline regulations and turn off your phone or switch to a mode that disables the wireless functions when directed by airline personnel.

## Protect batteries and chargers from damage

- Avoid exposing batteries to very cold or very hot temperatures (below 0° C/32° F or above 45° C/113° F). Extreme temperatures can reduce the charging capacity and life of your batteries.
- Prevent batteries from contacting metal objects, as this can create a connection between the + and - terminals of your batteries and lead to temporary or permanent battery damage.
- Never use a damaged charger or battery.

## Handle your phone carefully and sensibly

- Do not disassemble your phone due to a risk of electric shock.

- Do not allow your phone to get wet—liquids can cause serious damage and will change the colour of the label that indicates water damage inside the phone. Do not handle your phone with wet hands. Water damage to your phone can void your manufacturer's warranty.
- Avoid using or storing your phone in dusty, dirty areas to prevent damage to moving parts.
- Your phone is a complex electronic device—protect it from impacts and rough handling to avoid serious damage.
- Do not paint your phone, as paint can clog moving parts and prevent proper operation.
- If your phone has a camera flash or light, avoid using it close to the eyes of children or animals.

# CAUTION

- Your phone may be damaged by exposure to magnetic fields. Do not use carrying cases or accessories with magnetic closures or allow your phone to come in contact with magnetic fields for extended periods of time.

## Avoid interference with other electronic devices

Your phone emits radio frequency (RF) signals that may interfere with unshielded or improperly shielded electronic equipment, such as pacemakers, hearing aids, medical devices, and other electronic devices in homes or vehicles. Consult the manufacturers of your electronic devices to solve any interference problems you experience.



## Important usage information

---

### Use your phone in the normal position

Avoid contact with your phone's internal antenna.

### Allow only qualified personnel to service your phone

Allowing unqualified personnel to service your phone may result in damage to your phone and will void your warranty.

### Ensure maximum battery and charger life

- Avoid charging batteries for more than a week, as overcharging may shorten battery life.
- Over time, unused batteries will discharge and must be recharged before use.

- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

## Handle SIM cards and memory cards with care

- Do not remove a card while the phone is transferring or accessing information, as this could result in loss of data and/or damage to the card or phone.
- Protect cards from strong shocks, static electricity, and electrical noise from other devices.
- Frequent writing and erasing will shorten the life span of memory cards.
- Do not touch gold-coloured contacts or terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.

## Ensure access to emergency services

Emergency calls from your phone may not be possible in some areas or circumstances. Before travelling in remote or undeveloped areas, plan an alternate method of contacting emergency services personnel.

## Specific Absorption Rate (SAR) certification information

Your phone conforms to European Union (EU) standards that limit human exposure to radio frequency (RF) energy emitted by radio and telecommunications equipment. These standards prevent the sale of mobile phones that exceed a maximum exposure level (known as the Specific Absorption Rate, or SAR) of 4.0 watts per kilogram at Wrist.

During testing, the maximum SAR recorded for this model was 1.9 watts per kilogram. In normal use, the actual SAR is likely to be much lower, as the phone has been designed to emit only the RF energy necessary to transmit a signal to the nearest base station. By automatically emitting lower levels when possible, your phone reduces your overall exposure to RF energy.


The Declaration of Conformity at the back of this manual demonstrates your phones compliance with the European Radio & Terminal Telecommunications Equipment (R&TTE) directive. For more information about the SAR and related EU standards, visit the Samsung mobile phone website.

## Correct disposal of this product

(Waste Electrical & Electronic Equipment)



(Applicable in the European Union and other European countries with separate collection systems)

 This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

This EEE is compliant with RoHS.

## Correct disposal of batteries in this product



(Applicable in the European Union and other European countries with separate battery return systems)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life.

Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

## Disclaimer

Some content and services accessible through this device belong to third parties and are protected by copyright, patent, trademark and/or other intellectual property laws. Such content and services are provided solely for your personal noncommercial use. You may not use any content or services in a manner that has not been authorised by the content owner or service provider. Without limiting the foregoing, unless expressly authorised by the applicable content owner or service provider, you may not modify, copy, republish, upload, post, transmit, translate, sell, create derivative works, exploit, or distribute in any manner or medium any content or services displayed through this device.

"THIRD PARTY CONTENT AND SERVICES ARE PROVIDED "AS IS." SAMSUNG DOES NOT WARRANT CONTENT OR SERVICES SO PROVIDED, EITHER EXPRESSLY OR IMPLIEDLY,

FOR ANY PURPOSE. SAMSUNG EXPRESSLY DISCLAIMS ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. SAMSUNG DOES NOT GUARANTEE THE ACCURACY, VALIDITY, TIMELINESS, LEGALITY, OR COMPLETENESS OF ANY CONTENT OR SERVICE MADE AVAILABLE THROUGH THIS DEVICE AND UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL SAMSUNG BE LIABLE, WHETHER IN CONTRACT OR TORT, FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, ATTORNEY FEES, EXPENSES, OR ANY OTHER DAMAGES ARISING OUT OF, OR IN CONNECTION WITH, ANY INFORMATION CONTAINED IN, OR AS A RESULT OF THE USE OF ANY CONTENT OR SERVICE BY YOU OR ANY THIRD PARTY, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES."



Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time. Content and services are transmitted by third parties by means of networks and transmission facilities over which Samsung has no control. Without limiting the generality of this disclaimer, Samsung expressly disclaims any responsibility or liability for any interruption or suspension of any content or service made available through this device.

Samsung is neither responsible nor liable for customer service related to the content and services. Any question or request for service relating to the content or services should be made directly to the respective content and service providers.

# introducing your mobile phone

In this section, learn about your mobile phone's layout, keys, and icons.

## Unpack

 
 
---

Check your product box for the following items:




- Mobile phone
  - Battery
  - Travel adapter (charger)
  - User manual
-  • The items supplied with your phone may vary depending on the software and accessories available in your region or offered by your service provider. You can obtain additional accessories from your local Samsung dealer.
- The supplied accessories perform best for your phone.

## Phone layout

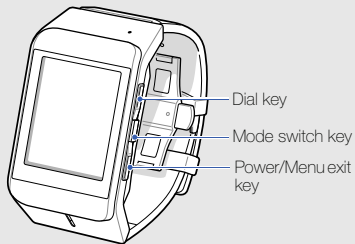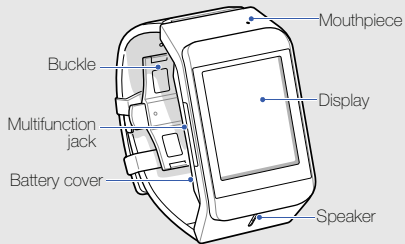Your phone includes the following keys and features:


















## Keys


Key	Function
 Dial	Make or answer a call; In Idle mode, retrieve recently dialed, missed, or received numbers
 Mode switch	Switch between Phone mode and Watch mode; Lock or unlock the keys and screen (press and hold)
 Power/ Menu exit	Turn the phone on and off (press and hold); End a call; In Menu mode, cancel input and return to Idle mode

## Icons

Learn about the icons that appear on your display.

 Icon	Definition
	Signal strength
	GPRS network connected
	Call in progress
	SOS message feature activated
	Bluetooth activated
	Alarm activated
	Call diverting active
	Roaming (outside of normal service area)
	New text message (SMS)

Icon	Definition
	New multimedia message (MMS)
	New voice mail message
	Normal profile activated
	Silent profile activated
	Battery power level
	Current time

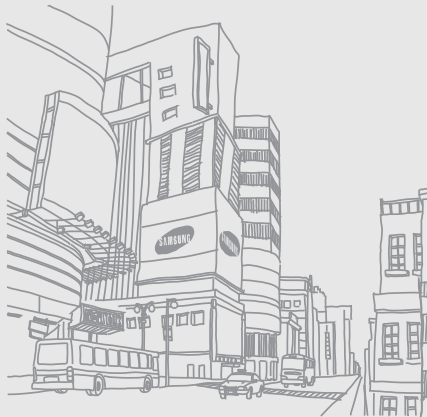 


# assembling and preparing your mobile phone

Get started by assembling and setting up your mobile phone for its first use.


## Release the buckle

---

 To wear your phone on your wrist, press the release buttons to release, as shown.

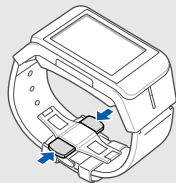

 To fit straps to your wrist, open the clasp and adjust the straps using the pin.

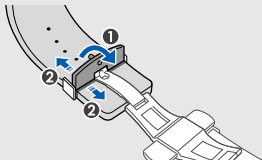

CAUTION


This phone is not water-resistant. Do not allow your phone to get wet—liquids can cause serious damage to the phone and leather straps.

## Install the SIM card and battery

 When you subscribe to a cellular service, you will receive a Subscriber Identity Module (SIM) with subscription details, such as your personal identification number (PIN) and optional services.


To install the SIM card and battery,

1. Remove the battery cover.

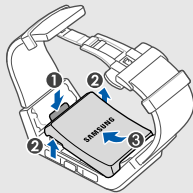


If the phone is on, press and hold the Power/Menu exit key to turn it off.

 2. Insert the SIM card.

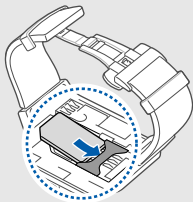


- Place the SIM card in the phone with the gold-coloured contacts facing down.
- Without inserting a SIM card, you can use your phone's non-network services and some menus.

 3. Insert the battery into the battery cover.

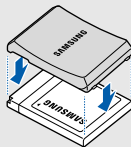

 4. Replace the battery cover with the battery.

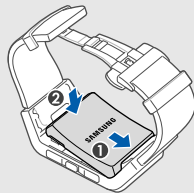





## Charge the battery

Before using the phone for the first time, you must charge the battery.

 1. Open the cover to the multifunction jack on the side of the phone.
2. Plug the small end of the travel adapter into the multifunction jack.

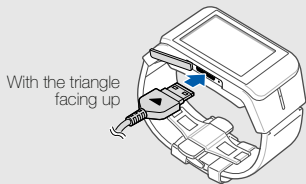


CAUTION

- Improperly connecting the travel adapter can cause serious damage to the phone. Any damages by misuse are not covered by the warranty.
  - Do not charge the battery while you are wearing the phone.
3. Plug the large end of the travel adapter into a power outlet.
  4. When the battery is fully charged (the  icon is no longer moving), unplug the travel adapter from the power outlet.
  5. Unplug the travel adapter from the phone.
  6. Close the cover to the multifunction jack.



## About the low battery indicator

 When your battery is low, the phone will emit a warning tone and a low battery message. The battery icon will also be empty and blinking. If the battery level becomes too low, the phone will automatically power off. Recharge your battery to continue using your phone.

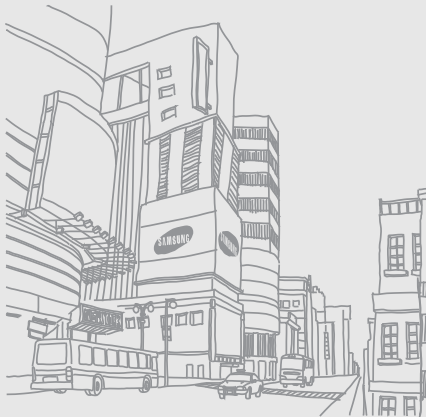

# using basic functions

Learn how to perform basic operations and use the main features of your mobile phone.

## Turn your phone on and off

---

To turn your phone on,

1. Press and hold the Power/Menu exit key.
2. Enter your PIN and select **OK** (if necessary).

To turn your phone off, repeat step 1 above.

## Switch between Phone mode and Watch mode

To switch back and forth between Phone mode and Watch mode, press the Mode switch key.

## Switch to the offline profile

By switching to the offline profile, you can use your phone's non-network services in areas where wireless devices are prohibited, such as aeroplanes and hospitals.

To switch to the offline profile, in Menu mode, select **Settings** → **Profiles** → **Offline** → **Options** → **Save**.



Follow all posted warnings and directions from official personnel when in areas where wireless devices are prohibited.

## Use the touch screen

 
---

Your phone's touch screen lets you easily select items or perform functions. Learn basic actions to use the touch screen.




For the optimal use of the touch screen, remove the screen protection film before using your phone.


- Touch an icon to open a menu or launch an application.

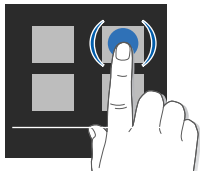

 - Drag your finger up or down to scroll through vertical lists.

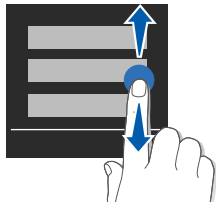

 - Drag your finger left or right to scroll through horizontal lists.

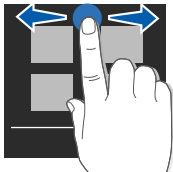

## Access menus

---

To access your phone's menus,

1. In Idle mode, select **Menu** to access Menu mode.
2. Scroll left or right to a menu screen.
3. Select a menu or option.

4. Select **Back** to move up one level; Press the Power/Menu exit key to return to Idle mode.

## Customise your phone

---

Get more from your phone by customising it to match your preferences.

### Set the current date and time

1. In Menu mode, select **Clock** → **Time and date setting**.
2. Select a time zone and set the current time and date.
3. Select **Save**.

### Select a watch type

1. In Menu mode, select **Settings** → **Display** → **Clock and calendar**.

2. Select a clock type (single or dual) or calendar.
3. Scroll left or right to a clock or calendar style.
4. Select **Save**.

In Watch mode, scroll left or right to view the dual clock or calendar.

## Switch to or from the silent profile

In Idle mode, select **Keypad** and touch and hold **#** to silence or unsilence your phone.

## Set a phone profile

To change the ringtone of the current profile,

1. In Menu mode, select **Settings** → **Profiles**.
2. Scroll to the profile you are using.



If you are using the silent or offline profile, you are not allowed to change the ringtone.

3. Select **Options** → **Edit** → **Call ringtone**.
4. Select a ringtone category → a ringtone.
5. Select **Save**.

To switch to another profile,

1. In Menu mode, select **Settings** → **Profiles**.
2. Select a profile you want.
3. Select **Options** → **Save**.

To create a phone profile,

1. In Menu mode, select **Settings** → **Profiles**.
2. Select **My profile 1** or **My profile 2**.
3. Select **Options** → **Edit**.
4. Customise the sound settings as desired.
5. Select **Back**.

## Select a wallpaper (Idle mode)

1. In Menu mode, select **Settings** → **Display** → **Wallpaper**.
2. Scroll left or right to an image.
3. Select **Set**.

## Lock your phone

1. In Menu mode, select **Settings** → **Security** → **Phone lock**.
2. Select **On** → **Save**.
3. Enter a new 4- to 8-digit password and select **OK**.

4. Enter the new password again and select **OK**.



- The first time you access a menu that requires a password, you will be prompted to create and confirm a password.
- Samsung is not responsible for any loss of passwords or private information or other damages caused by illegal software.

## Use basic call functions

---

Learn to make or answer calls and use basic call functions.



During a call, your phone automatically locks the touch screen to prevent accidental inputs. To unlock, press and hold the Mode switch key.

## Make a call

1. In Idle mode, select **Keypad** and enter an area code and a phone number.
2. Press the Dial key to dial the number.  
The speakerphone is automatically activated.



You will get the best sound quality when you hold the phone 15 - 20 cm away from your mouth.

3. To end the call, press the Power/Menu exit key.




You can dial a number by saying an appropriate contact's name. ► p. 34

## Answer a call

1. When a call comes in, press the Dial key.
2. To end the call, press the Power/Menu exit key.

## Adjust the volume

To adjust the volume during a call, select  and drag the slider left or right.

## Use the Bluetooth headset

You can make and answer calls by connecting the phone to a Bluetooth headset for using hands-free features.



See the Bluetooth headset manual for details about making and answering calls.



## Send and view messages

Learn to send and view text (SMS) and multimedia (MMS) messages.

### Send a text or multimedia message



1. In Menu mode, select **Messages** → **Create new message**.
2. Select **Tap to add recipient** → **Enter manually**.
3. Enter a destination number and select .
4. Select **Tap to add text**.
5. Enter your message text and select  → **Done**.
  - ▶ Enter text  
For sending as a text message, skip to step 7.  
For attaching multimedia, continue with step 6.
6. Select **Options** → **Add multimedia** → an item type and add an item.
7. Select **Options** → **Send** to send the message.

### Enter text

With your phone's touch screen, you can enter text and create messages or notes.


#### Change the text input method

When you open the text input field, the virtual keypad appears.

- To switch between T9 and ABC mode, select  → **Predictive text on** or **Predictive text off**.
- To switch to Symbol mode, select  → **Add symbol**.

You can use the following text input modes:

Mode	Function
ABC	Select an appropriate virtual key until the character you want appears on the display. Press and hold an appropriate virtual key to enter a number.

Mode	Function
T9	<ol style="list-style-type: none"> <li>1. Select appropriate virtual keys to enter an entire word.</li> <li>2. When the word displays correctly, select  to insert a space. If the correct word does not display, select <b>0</b> to enter an alternate word.</li> </ol> <p>Press and hold an appropriate virtual key to enter a number.</p>
Symbol	Select an appropriate virtual key to enter a symbol.


## View text or multimedia messages

1. In Menu mode, select **Messages** → **Inbox**.
2. Select a text or multimedia message.



## Add and find contacts

Learn the basics of using the phonebook feature.

### Add a new contact

1. In Menu mode, select **Phonebook** → **Create contact**.
2. Enter contact information.
  -  Names entered for contacts will be used for voice dialling.
3. Select **Options** → **Save** to add the contact to memory.

## Find a contact

1. In Menu mode, select **Phonebook** → **Contact list**.
2. Select **Options** → **Search**.  
You can also select  and drag the slider to select the first letter of the name.
3. Enter the letter of the name you want to find and select  → **Done**.
4. Select the contact's name from the search list.



Once you have found a contact, you can:

- call the contact by selecting **Call**
- send a message by selecting **Send message**

## Listen to music




Learn how to listen to music via the music player.



Start by transferring files to your phone:

- Download from the wireless web. ► p. 31
- Receive via Bluetooth. ► p. 41

After transferring music files to your phone,

1. In Menu mode, select **Music**.
2. Select a music category → a music file.
3. Control playback using the following icons:

Icon	Function
	Pause playback
	Play or resume playback
	Skip backward; Scan backward in a file (touch and hold)

Icon	Function
	Skip forward; Scan forward in a file (touch and hold)
	Adjust the volume

## Browse the web

Learn to access and bookmark your favourite web pages.



- You may incur additional charges for accessing the web and downloading media.
- The internet menu may be labelled differently depending on your service provider.

## Browse web pages

1. In Menu mode, select **Internet** → **Yes** to launch your service provider's homepage.
2. Navigate web pages as desired.  
To access a list of options while browsing web pages, select **Options**.

## Bookmark your favourite web pages

1. In Menu mode, select **Internet** → **Yes**.
2. Access the web page you want to bookmark.
3. Select **Options** → **Add to Bookmarks**.

# using advanced functions

Learn how to perform advanced operations and use additional features of your mobile phone.

## Use advanced call functions

---

Learn about your phone's additional calling capabilities.

### View and dial missed calls

Your phone will display calls you have missed on the display. To dial the number of a missed call,

1. Select **View**.
2. Select the number you want and select **Call** to dial.

### Call a recently dialed number

1. In Idle mode, press the Dial key to display a list of recent numbers.
2. Select the number you want and select **Call** to dial.

## Hold a call or retrieve a held call

Select **Hold** to place a call on hold or select **Retrieve** to retrieve a held call.

## Dial a second call

If your network supports this function, you can dial another number during a call:

1. Select **Hold** to place the first call on hold.
2. Select **New call**, enter the second number to dial, and press the Dial key.
3. Select **Swap** to switch between the two calls.
4. To end the call on hold, select **Options** → **End** → **Held call**.
5. To end the current call, press the Power/Menu exit key.

## Answer a second call

If your network supports this function, you can answer a second incoming call:

1. Select **Hold active call** to place the current call on hold.
2. Press the Dial key to answer the second call.
3. Select **Swap** to switch between the calls.

## Make a multiparty call (conference call)

1. Call the first party you want to add to the multiparty call.
2. While connected to the first party, call the second party.  
The first party is automatically placed on hold.
3. When connected to the second party, select **Join**.
4. Repeat steps 2 and 3 to add more parties (if necessary).

5. To end the multiparty call, press the Power/Menu exit key.

## Call an international number

1. In Idle mode, select **Keypad** and touch and hold **0** to insert the + character.
2. Enter the complete number you want to dial (country code, area code, and phone number), and then press the Dial key to dial.

## Call a contact from the phonebook

You can call numbers directly from the phonebook using stored contacts. ► p. 30

1. In Menu mode, select **Phonebook** → **Contact list**.
2. Select the contact you want.
3. Select **Call**.

## Call a contact from the phonebook by voice command

 
You can call numbers directly by saying the contact's name.

1. In Idle mode, select **Voice commander**.
2. When the phone says "Say a command", say "Call" and a contact's name.  
If there are similar names, the phone displays the 3 best candidates.
3. Say "Yes" to dial the number.

## Reject a call

To reject an incoming call, press the Power/Menu exit key. The caller will hear a busy tone.

To reject calls from certain numbers automatically, use the auto rejection. To activate the auto rejection and set up the reject list,

1. In Menu mode, select **Settings** → **Application** → **Calls** → **All calls** → **Auto reject**.
2. Select **Activation** → **On** → **Save**.
3. Select **Reject list**.
4. Select **Options** → **Create**.
5. Select the number input field.
6. Enter a number to reject and select .
7. Select **Match criteria** → a match option.
8. Select **Save**.
9. Select **Options** → **Save**.
10. Repeat steps 4-9 to add more numbers to reject.
11. Select **Options** → **Save** to save the reject list.

## Use advanced phonebook functions

---

Learn to create your namecard, set favourite numbers, and create groups of contacts.

### Create your namecard

1. In Menu mode, select **Phonebook** → **My namecard**.
2. Enter your personal details.
3. Select **Options** → **Save**.



You can send your namecard by attaching it to a message or transferring it via the Bluetooth wireless feature.



## Set favourite numbers

1. In Menu mode, select **Phonebook** → **Favourites**.
2. Select an empty location → **Add**.
3. Select a contact.

The contact is saved to the favourite number.




You can now call this number from the dialling screen by touching and holding the assigned favourite number.

## Create a group of contacts

By creating groups of contacts, you can assign group names and ringtones to each group or send messages to an entire group. Start by creating a group:


1. In Menu mode, select **Phonebook** → **Groups**.
2. Select **Options** → **Create group**.

3. Enter a name for the group and select  → **Done**.
4. Select the new group.
5. To set a group ringtone, select **Group ringtone** → a ringtone category → a ringtone.
6. Select **Save**.
7. Select **Options** → **Save**.

## Use advanced messaging functions

Learn to create and use templates to create new messages.

### Create a text template

1. In Menu mode, select **Messages** → **Templates**.
2. Select an empty location.
3. Enter your text and select  → **Done**.


## Insert text templates in new messages

1. In Menu mode, select **Messages** → **Create new message**.
2. Select the text input field.
3. Select **Options** → **Add text** → **Template** → a template.

## Use advanced music functions

Learn to create playlists and customise the music player settings.

### Create a playlist

1. In Menu mode, select **Music**.
2. Select **Options** → **Create playlist**.
3. Enter a title for your new playlist and select  → **Done**.

4. Select the new playlist.
5. Select **Add** → **Playlists** or **Phone**.
6. Select the files you want to include and select **Add**.

## Customise your music player settings

Learn to adjust the playback settings for your music player.

1. In Menu mode, select **Music**.
2. Select a music category → a music file.
3. Select **Options** to access the following options:

Option	Function
Repeat mode	Change the repeat mode
Shuffle on	Activate Shuffle mode

# using tools and applications

Learn how to work with your mobile phone's tools and additional applications.

## Use the voice command feature

---

Learn how to dial contacts or launch applications by speaking an associated command into the microphone.



You may be unable to access this feature with your specific language depending on your region.

To open Voice commander, in Idle mode, select **Voice commander**.

When the phone prompts you with displaying "Say a command," say one of the following commands:

- Call [contact's name] ► p. 34
- Send text [contact's name]
- Lookup [contact's name]
- Go to [application]

## Send messages

1. In Idle mode, select **Voice commander**.
2. When the phone says "Say a command", say "Send text" and a contact's name.  
If there are similar names, the phone displays the 3 best candidates.
3. Say "Yes" to open a new message window.

## Find contacts

1. In Idle mode, select **Voice commander**.
2. When the phone says "Say a command", say "Lookup" and a contact's name.  
If there are similar names, the phone displays the 3 best candidates.
3. Say "Yes" to open the contact details.

## Open applications

1. In Idle mode, select **Voice commander**.
2. When the phone says "Say a command", say "Go to" and an application name (Voice recorder, Memo, Calculator, or Converter).
3. Say "Yes" to open the application.

## Customise voice command settings

1. In Idle mode, select **Voice commander**.
2. Select **Options** → **Settings** to access the following options:

Option	Function
Confirmation	Set whether or not the phone will ask you to confirm recognised names or numbers that are similar

Option	Function
Adaptation	Adapt your phone to recognise your voice and pronunciation
Audio Modes	Set whether or not to play audible guide messages

## Use the Bluetooth wireless feature

Learn about your phone's ability to connect to other wireless devices for exchanging data and using hands-free features.

### Turn on the Bluetooth wireless feature

1. In Menu mode, select **Applications** → **Bluetooth**.
2. Select **Options** → **Settings**.
3. Select **Activation** → **On** → **Save** to turn on the Bluetooth wireless feature.

4. To allow other devices to locate your phone, select **My phone's visibility** → **Visible** → **Save**.
5. Select **Back**.

### Find and pair with other Bluetooth-enabled devices

1. In Menu mode, select **Applications** → **Bluetooth** → **Tap to search**.
2. Select a device.
3. Enter a PIN for the Bluetooth wireless feature or the other device's Bluetooth PIN, if it has one, and select **OK**.

When the owner of the other device enters the same PIN or accepts the connection, pairing is complete.



You may not need to enter a PIN depending on the device.

## Send data using the Bluetooth wireless feature

1. Select the file or item from one of your phone's applications that you want to send.
2. Select **Options** → **Send via** or **Send namecard via** → **Bluetooth**.

## Receive data using the Bluetooth wireless feature

1. Enter the PIN for the Bluetooth wireless feature and select **OK** (if necessary).
2. Select **Yes** to confirm that you are willing to receive data from the device (if necessary).

## Use Remote SIM mode

In Remote SIM mode, you can make or answer calls only with a connected Bluetooth hands-free car kit via the SIM card on your phone.

To activate Remote SIM mode,

1. In Menu mode, select **Applications** → **Bluetooth**.
2. Select **Options** → **Settings**.
3. Select **Remote SIM mode** → **On** → **Save**.
4. Select **Back**.

To use Remote SIM mode, start the Bluetooth connection from a Bluetooth hands-free car kit.



The Bluetooth hands-free car kit must be authorised. To authorise, select **Authorise device**.

## Activate and send an SOS message

In case of an emergency, you can send an SOS message asking for help.



This feature may be unavailable depending on your region or service provider.

1. In Menu mode, select **Messages** → **Settings** → **SOS messages** → **Sending options**.
2. Select **Sending SOS** → **On** → **Save** to turn on the SOS messaging feature.
3. Select the recipient field to open the recipient list.
4. Select **Options** → **Contact list** to open your contact list.
5. Select the contacts you want.
6. Select a phone number (if necessary).
7. Select **Options** → **Save** to save the recipients.

8. Select **Repeats** and select the number of times to repeat the SOS message.
9. Select **Save** to save the repeat option.
10. Select **Save** → **Yes**.


To send an SOS message, the touch screen and keys must be locked. Press the Dial key four times.



Once you send an SOS message, all phone functions will be suspended until you press and hold the Mode switch key.

## Activate the mobile tracker

When someone inserts a new SIM card in your phone, the mobile tracker feature will automatically send the contact number to two recipients to help you locate and recover your phone. To activate the mobile tracker,



1. In Menu mode, select **Settings** → **Security** → **Mobile tracker**.
2. Enter your password and select **OK**.
3. Select **Mobile tracker** → **On** → **Save** to turn on the mobile tracker.
4. Select the recipient field to open the recipient list.
5. Select **Options** → **Phonebook** to open your contact list.
6. Select the contacts you want.
7. Select **Options** → **Save** to save the recipients.
8. Select the sender input field.
9. Enter the sender's name and select  → **Done**.
10. Select **Save** → **Accept**.

## Record and play voice memos

---

Learn to operate your phone's voice recorder.

### Record a voice memo

1. In Menu mode, select **Applications** → **Voice recorder**.
2. Select  to start recording.
3. Speak your memo into the microphone.
4. When you are finished speaking, select . Your memo is saved automatically.

### Play a voice memo

1. In Menu mode, select **My files** → **Sounds** → **Voice clips**.
2. Select a file and select **Play**.
  - To pause playback, select the file and select **Pause**.



## Create and view world clocks

---

Learn to view the time in another region and set world clocks to appear on your display.

### Create a world clock

1. In Menu mode, select **Clock** → **World clock**.
2. Select **Add**.
3. Select a time zone and select **Add**.
4. To set daylight saving time, select the time zone and select **Daylight saving on**.
5. Select **Add** to add more world clocks (step 3).

## Add a world clock to your display

In Dual clock mode, you can view clocks with two different time zones on your display.

After you have created world clocks,

1. In Menu mode, select **Clock** → **World clock**.
2. Select the time zone and select **Set as 2nd clock**.

## Set and use alarms

---

Learn to set and control alarms for important events.

### Set a new alarm

1. In Menu mode, select **Alarms**.
2. Select an empty alarm location.
3. Select **Alarm activation** → **On** → **Save**.
4. Set alarm details.

5. Select **Save**.



The auto power-up feature sets the phone to automatically turn on and sound the alarm at the designated time if the phone is turned off.

## Stop an alarm

When the alarm sounds,

- Press any key to stop the alarm without snooze.
- Select **OK** to stop the alarm with snooze or select **Snooze** to silence the alarm for the snooze period.

## Deactivate an alarm

1. In Menu mode, select **Alarms**.
2. Select the alarm you want to deactivate.
3. Select **Alarm activation** → **Off** → **Save**.
4. Select **Save**.

## Use the calculator

---

1. In Menu mode, select **Applications** → **Calculator**.
2. Use the keys that correspond to the calculator display to perform basic mathematical operations.

## Convert currencies or measurements

---

1. In Menu mode, select **Applications** → **Convertor** → a conversion type.
2. Enter the currencies or measurements and units in the appropriate fields.

## Set a countdown timer

---

1. In Menu mode, select **Clock** → **Timer**.
2. Set the length of time to count down.
3. Select **Start** to begin the countdown.
4. When the timer expires, select **OK** to stop the alert.


## Use the stopwatch

---

1. In Menu mode, select **Clock** → **Stopwatch**.
2. Select **Start** to begin the stopwatch.
3. Select **Lap** to record lap times.
4. When you are finished, select **Stop**.
5. Select **Reset** to clear recorded times.

## Create text memos

---

1. In Menu mode, select **Applications** → **Memo**.
2. Select **Create**.
3. Enter your memo text and select  → **Done**.

## Manage your calendar

---

 
Learn to create and view events.

### Create events

1. In Menu mode, select **Calendar**.
2. Select a date on the calendar.
3. Select **Options** → **Create** → an event type.
4. Enter the details of the event as required.
5. Select **Save**.

## View events

1. In Menu mode, select **Calendar**.
2. Select a date on the calendar.
3. Select an event to view its details.

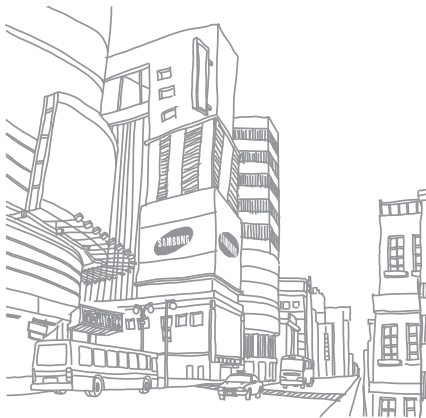

# troubleshooting

If you are having trouble with your mobile phone, try these troubleshooting procedures before contacting a service professional.

**When you turn on your phone or while you are using the phone, it prompts you to enter one of the following codes:**

Code	Try this to solve the problem:
Password	When the phone lock feature is enabled, you must enter the password you set for the phone.
PIN	When using the phone for the first time or when the PIN requirement is enabled, you must enter the PIN supplied with the SIM card. You can disable this feature by using the <b>PIN lock</b> menu.

Code	Try this to solve the problem:
PUK	Your SIM card is blocked, usually as a result of entering your PIN incorrectly several times. You must enter the PUK supplied by your service provider.
PIN2	When you access a menu requiring the PIN2, you must enter the PIN2 supplied with the SIM card. For details, contact your service provider.

### **The phone prompts you to insert the SIM card.**

Ensure that the SIM card is installed correctly.

### **Your phone displays “No network” or “Network error.”**

- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.
- You cannot access some options without a subscription. Contact your service provider for more details.

### **You enter a number, but the call is not dialed.**

- Ensure that you have pressed the Dial key.
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

### **Another caller cannot reach you.**

- Ensure that your phone is turned on.
- Ensure that you have accessed the right cellular network.
- Ensure that you have not set call barring for the phone number.

### **Another caller cannot hear you speaking.**

- Ensure that you are not covering the built-in microphone.
- Ensure that the microphone is close to your mouth.
- If using a headset, ensure that it is properly connected.

**The phone beeps and the battery icon flashes.**

Your battery is low. Recharge or replace the battery to continue using the phone.

**The audio quality of the call is poor.**

- Ensure that you are not blocking the phone's internal antenna.
- When you are in areas with weak signals or poor reception, you may lose reception. Move to another area and try again.

**You select a contact to call, but the call is not dialed.**

- Ensure that the correct number is stored in the contact list.
- Re-enter and save the number, if necessary.

**The battery does not charge properly or sometimes the phone turns itself off.**

- The battery terminals may be dirty. Wipe both gold-coloured contacts with a clean, soft cloth and try charging the battery again.
- If the battery will no longer charge completely, dispose of the old battery properly and replace it with a new battery.

**Your phone is hot to the touch.**

When you use applications that require more power, your phone may heat up.

This is normal and should not affect your phone's lifespan or performance.

# index

## alarms

- creating, 44
- deactivating, 45
- stopping, 45

## battery

- charging, 20
- installing, 18
- low battery indicator, 21

## Bluetooth

- activating, 40
- receiving data, 41
- sending data, 41

## browser

- see web or media browser

## calculator

- see tools, calculator

## calendar

- see tools, calendar

## calls

- advanced functions, 32
- answering additional calls, 33
- answering, 27
- basic functions, 26
- dialling additional calls, 33
- dialling missed calls, 32
- from the phonebook, 34
- international numbers, 34
- making, 27

- multiparty, 33
- placing on hold, 33
- recently dialled, 32
- rejecting, 34
- retrieving held calls, 33
- viewing missed, 32

## clock

- see world clock

## conference calls

- see calls, multiparty

## contacts

- adding, 29
- creating groups, 36
- finding, 30



convertor  
see tools, convertor

countdown timer  
see tools, countdown timer

headset 27

internet  
see web browser

lock  
see phone lock

memo  
text, 46  
voice, 43

messages  
sending multimedia, 28  
sending text, 28  
viewing multimedia, 29  
viewing text, 29

## e

mobile tracker 42

multimedia  
see messages

music player  
creating playlists, 37  
listening to music, 30

namecards 35

offline profile 22

phone lock 26

ringtone 25

silent profile 25

SIM card 18

SOS message 42

stopwatch  
see tools, stopwatch

templates  
inserting, 37  
text, 36

text  
creating memos, 46  
entering, 28  
messages, 28

timer  
see tools, countdown timer

tools  
alarm, 44  
calculator, 45  
calendar, 46  
convertor, 45  
countdown timer, 46  
stopwatch, 46

## voice memos

playing, 43

recording, 43

## volume

call volume, 27

wallpaper 26

watch mode 22

## web browser

adding bookmarks, 31

launching homepage, 31

## world clock

creating, 44

setting dual display, 44





## Declaration of Conformity (R&TTE)

We, **Samsung Electronics**

declare under our sole responsibility that the product

**GSM Mobile Phone : GT-S9110**

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

SAFETY	EN 60950-1 : 2001 +A11:2004
EMC	EN 301 489-01 V1.6.1 (09-2005)
	EN 301 489-07 V1.3.1 (11-2005)
	EN 301 489-17 V1.2.1 (08-2002)
SAR	EN 50360 : 2001
RADIO	EN 301 511 V9.0.2 (03-2003)
	EN 300 328 V1.7.1 (10-2006)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Balfour House, Churchfield Road,  
Walton-on-Thames, Surrey, KT12 2TD, UK\*  
Identification mark: 0168

**CE0168**

The technical documentation kept at :

Samsung Electronics QA Lab.

which will be made available upon request.  
(Representative in the EU)

Samsung Electronics Euro QA Lab.  
Blackbushe Business Park, Saxony Way,  
Yateley, Hampshire, GU46 6GG, UK\*  
2009. 07. 14

**Yong-Sang Park / S. Manager**

(place and date of issue)

(name and signature of authorised person)

\* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.