

SAMSUNG

MICROWAVE OVEN

CM1219(1200Watts)

Owner's Instructions



Code No. : DE68-00581A




*You have just purchased a
SAMSUNG microwave oven.*


*Your Owner's Instructions contain valuable
information on cooking with your
microwave oven. Take the time to read them
as they will help you take full advantage of
the microwave oven features.*

Contents

◆ Oven	3
◆ Using this Instruction Booklet	4
◆ Installing and Preparing Your Microwave Oven	
■ Installation & Wiring Instructions	5
■ Wiring Instructions	5
■ Safety Precautions	6
■ Installing Your Microwave Oven	8
■ Cleaning Your Microwave Oven	9
■ Storing and Repairing Your Microwave Oven	9
■ Cookware Guide	10
◆ Cooking with Your Microwave Oven	
■ Cooking/Reheating	11
■ Power Levels and Time Variations	12
■ Using +20sec Button	13
■ Using the Defrost Feature	13
■ Stopping the Cooking	14
■ Adjusting the Cooking Time	14
■ Error Codes	15
◆ Recommendations for Use	
■ Care of Your Microwave Oven	16
■ Installation Instructions for Stacking	17
■ Replacement of Lamp	18
■ Cooking Guide	19
■ Technical Specifications	23

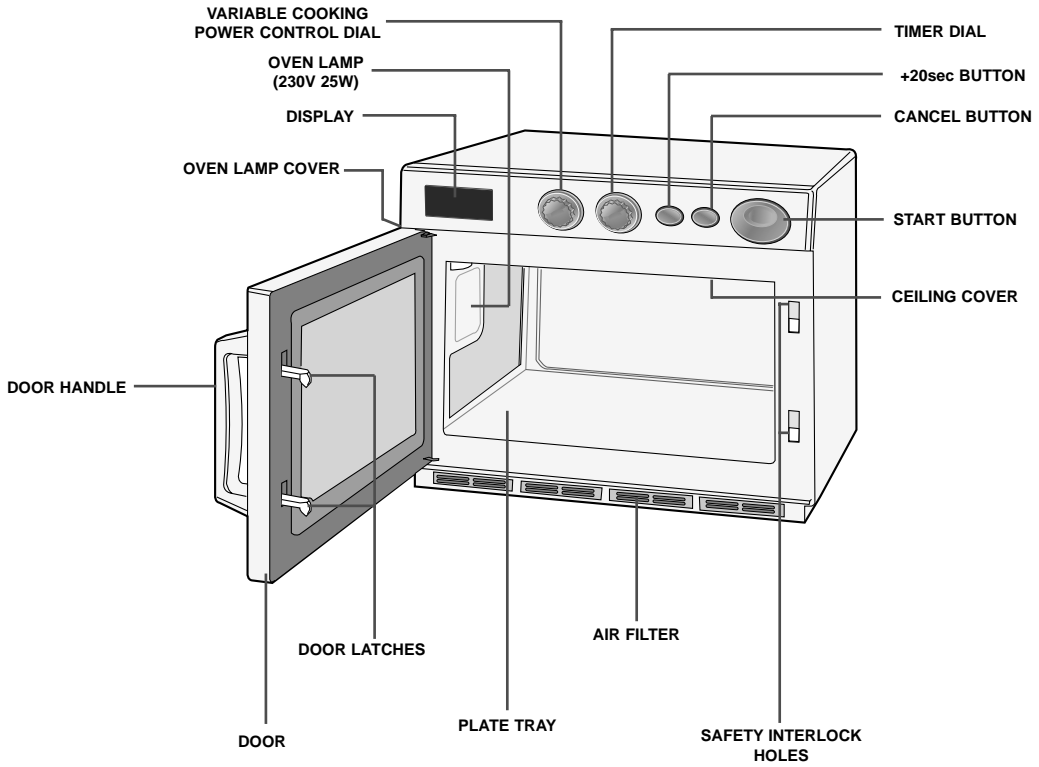

DISPLAY

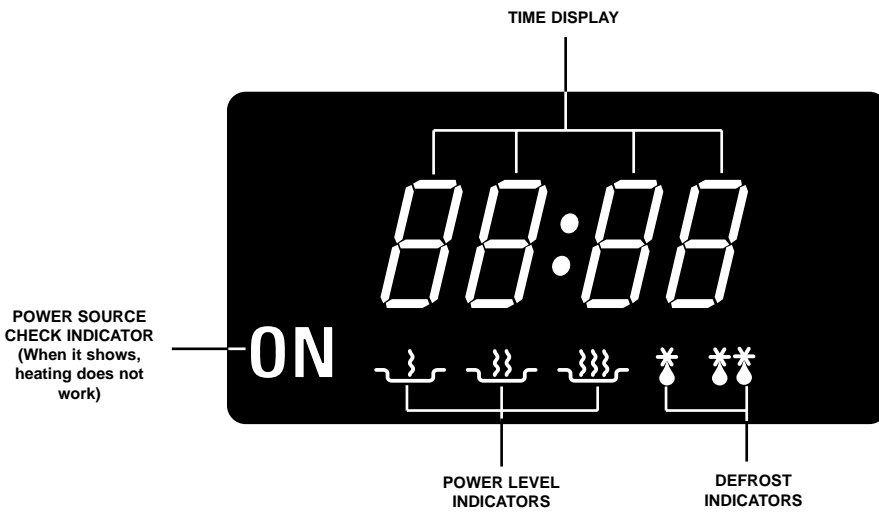

You have just purchased a SAMSUNG microwave oven. Your Owner's Instructions contain much valuable information on cooking with your microwave oven:

- ◆ *Safety precautions*
- ◆ *Suitable cookware*
- ◆ *Useful cooking tips*

At the start of the booklet you will find illustrations of the oven, and more importantly the control panel corresponding to your microwave model type, so that you can find the buttons more easily.

The step-by-step procedures use the symbols below.



Important



Note

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

◆ WARNING ◆

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

- (a) Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.
- (b) Do not place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use first with a damp cloth and then with a soft dry cloth.
- (c) Do not operate the oven if it is damaged until it has been repaired by a qualified microwave service technician trained by the manufacturer.

It is particularly important that the oven door closes properly and that there is no damage to the:

- (1) Door, door seals and sealing surfaces
 - (2) Door hinges (broken or loose)
 - (3) Power cable
- (d) The oven should not be adjusted or repaired by anyone other than a properly qualified microwave service technician trained by the manufacturer.

Installation & Wiring Instructions

IMPORTANT NOTE :

The mains lead on this equipment is supplied with a moulded plug incorporating a fuse. The value of the fuse is indicated on the pin face of the plug and, if it requires replacing, a fuse approved to BS1362 of the same rating must be used.

Never use the plug with the fuse cover omitted if the cover is detachable. If a replacement fuse cover is required, it must be of the same colour as the pin face of the plug. Replacement covers are available from your Dealer. If the fitted plug is not suitable for the power points in your kitchen or the cable is not long enough to reach a power point, you should obtain a suitable safety approved extension lead or consult your Dealer for assistance. However, if there is no alternative to cutting off the plug, remove the fuse and then safely dispose of the plug. Do not connect the plug to a mains socket, as there is a risk of shock hazard from the bared flexible cord.

Wiring Instructions

WARNING: THIS APPLIANCE MUST BE EARTHED.

This appliance must be earthed. In the event of an electrical short circuit, earthing reduces the risk of electric shock providing an escape wire for the electric current. The appliance is equipped with a mains lead which includes an earth wire for connecting to the earth terminal of your mains plug. The plug must be plugged into a socket that is properly installed and earthed.



The wires in this mains lead are coloured in accordance with the following code:

- ◆ Green-and yellow :Earth
- ◆ Blue :Neutral
- ◆ Brown :Live

- ◆ As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings indentifying the terminals in your plug, proceed as follows.
- ◆ Connect the green-and yellow wire to the terminal in the plug marked with the letter E or the earth symbol (\equiv) or coloured green or green-and-yellow.
- ◆ Connect the blue wire to the terminal marked with the letter N or coloured black.
- ◆ Connect the brown wire to the terminal marked with the letter L or coloured red.




Consult a qualified electrician or service technician if in doubt about any of these instructions.

The manufacturer of this oven will not accept any liability for damage to persons or material for non observance of these requirements.

There are no user – serviceable parts inside the oven and if the mains lead of this appliance is damaged, it must only be replaced by qualified service personnel approved by the manufacturer because special tools are required.

GREEN AND
YELLOW

13 AMP
FUSE

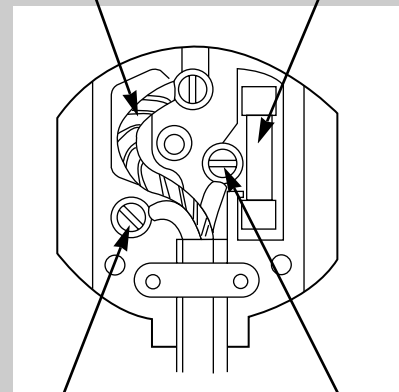

BLUE

BROWN

WARNING

Ensure that the plug and power cord are not damaged before use.

If you have any reason to remove the moulded plug from this appliance, immediately remove the fuse and dispose of the plug.

Do not connect the plug to a mains socket under any circumstances as there is a danger of electric shock.

CIRCUITS

Your microwave oven should be operated on a separate circuit from other appliances. Failure to do this may cause the circuit breaker to trip, the fuse to blow, or the food to cook more slowly.

Safety Precautions

Before cooking food or liquids in your microwave oven, please check that the following safety precautions are taken.

1 DO NOT use any metallic cookware in the microwave oven:

- ◆ Metallic containers
- ◆ Dinnerware with gold or silver trimmings
- ◆ Skewers, forks, etc.

Reason: Electric arcing or sparking may occur and may damage the oven.

2 DO NOT operate the microwave oven when it is empty.

Reason: The oven walls may be damaged.

Tip: Leave a glass of water inside the oven at all times. The water will absorb the microwaves if you accidentally set the oven going when it is empty.

3 DO NOT cover the rear ventilation ducts with cloths or paper.

Reason: The cloths or paper may catch fire as hot air is expelled from the oven.

4 ALWAYS use oven gloves when removing a dish from the oven.

Reason: Some dishes absorb microwaves and heat is always transferred from the food to the dish. The dishes are therefore hot.

5 To reduce the risk of fire in the oven cavity:

- ◆ Do not store flammable materials in the oven
 - ◆ Remove wire twist ties from paper or plastic bags
 - ◆ Do not use your microwave oven to dry newspapers
 - ◆ If smoke is observed, keep the oven door closed and switch off or disconnect the oven from the power supply
-

6 Be careful not to damage the power cable.

- ◆ Do not immerse the power cable or plug in water and keep the power cable away from heated surfaces.
 - ◆ Do not operate this appliance if it has a damaged power cable or plug.
-

7 Stand at arm's length from the oven when opening the door.

Reason: The hot air or steam released may cause scalding.

8 Keep the inside of the oven clean.

- ◆ Clean the inside of the oven after each use with a mild detergent solution, but let the microwave oven cool down before cleaning in order to avoid injury.

Reason: Food particles or spattered oils stuck to oven walls or top can cause damage to the ceiling cover and reduce the efficiency of the oven.

9 "Clicking" sound might be noticed while operating, especially at defrosting mode.

Reason: When the power output is changing electrically, you may hear this sound. This is normal.

10 When the microwave oven is operating without load, the thermistor probe sensor detects the abnormal high temperature and the power will be cut off automatically for safety. After standing over 30 min, you can operate the oven normally.

◆ WARNING ◆

DO NOT heat:

- ◆ Airtight or vacuum-sealed bottles, jars, containers
Example: Baby food jars
- ◆ Airtight food - Food with skins
Example: Eggs, nuts in shells, tomatoes

Reason: The increase in pressure may cause them to explode.

Tip: Remove lids and pierce skins, bags, etc.

Take particular care when heating liquids and baby foods.

- ◆ ALWAYS allow a standing time of at least 20 seconds after the oven has been switched off to allow the temperature to equalize.
- ◆ Stir during heating if necessary and ALWAYS stir after heating.
- ◆ To prevent eruptive boiling and possible scalding, you should stir before, during, and after heating.
- ◆ In the event of scalding, follow these FIRST AID instructions:
 - Immerse the scalded area in cold water for at least 10 minutes.
 - Cover with a clean, dry dressing.
 - Do not apply any creams, oils or lotions.
- ◆ NEVER fill the container to the top and choose a container that is wider at the top than at the bottom to prevent the liquid from boiling over. Bottles with narrow necks may also explode if overheated.
- ◆ ALWAYS check the temperature of baby food or milk before giving it to the baby.
- ◆ NEVER heat a baby's bottle with the teat on, as the bottle may explode if overheated.
- ◆ During microwave heating of beverages, there are results in delayed eruptive boiling, therefore care has to be taken when handling the container.

IMPORTANT SAFETY INSTRUCTIONS

During cooking, you should look into the oven from time to time when food is being heated or cooked in disposable containers of plastic, paper or other combustible materials.

IMPORTANT

Young children should NEVER be allowed to use or play with the microwave oven. Nor should they be left unattended near the microwave oven when it is in use. Items of interest to children should not be stored or hidden just above the oven.

Installing your Microwave Oven

GB

Recommendations

DO NOT install the microwave oven in hot or damp surroundings.

Example: Next to a traditional oven or radiator.

The power supply specifications of the oven must be respected and any extension cable used must be of the same standard as the power cable supplied with the oven.

Wipe the interior and the door seal with a damp cloth before using your microwave oven for the first time.

This microwave oven can be placed almost anywhere (kitchen work surface or shelf, movable trolley, table).



For your personal safety, this appliance must be:

- ◆ Properly earthed (3-pin plug)
- ◆ Plugged into a standard 230 Volt, 50 Hz, AC earthed socket

- 1** Install the oven on a flat, level, stable surface. Make sure there is adequate ventilation for your oven by leaving at least 10cm(four inches) of space behind and on the sides of the oven and 20cm(eight inches) above. (For stacking see page 17.)
- 2** Never block the air vents as the oven may overheat and automatically switch itself off. It will remain inoperable until it has cooled sufficiently.
- 3** Remove all packing materials inside the oven.
- 4** Plug the cable into a 3-pin, earthed socket. If the power cable of this appliance is damaged, it must be replaced by a special cable as supplied from service center.



Be sure to remove the protective film from outer case. The protective film is on the outer case to prevent scratches.

When installing or before using, be sure to remove it.

Outdoor use

This microwave oven is not designed for outdoor use.

You should use it indoors only.

During Air cooling

Do not turn power off while the fan is automatically air-cooling for 1min.

Cleaning Your Microwave Oven

The following parts of your microwave oven should be cleaned regularly to prevent grease and food particles from building up:

- ◆ *Inside and outside surfaces*
- ◆ *Door and door seals*
- ◆ *Plate tray*



ALWAYS ensure that the door seals are clean and the door closes properly.

- 1 Clean the outside surfaces with a soft cloth and warm, soapy water. Rinse and dry.
- 2 Remove any splashes or stains on the inside surfaces with a soapy cloth. Rinse and dry.
- 3 To loosen hardened food particles and remove smells, place a cup of diluted lemon juice on the plate tray and heat for three minutes at maximum power.

Recommendations

DO NOT spill water in the vents.

NEVER use any abrasive products or chemical solvents.

Take particular care when cleaning the door seals to ensure that no particles:

- ◆ Accumulate
- ◆ Prevent the door from closing correctly

Storing and Repairing Your Microwave Oven

A few simple precautions should be taken when storing or having your microwave oven serviced.

The oven must not be used if the door or door seals are damaged:

- ◆ *Broken hinge*
- ◆ *Deteriorated seals*
- ◆ *Distorted or bent oven casing*

Only a qualified microwave service technician should perform repairs.



NEVER remove the outer casing from the oven. If the oven is faulty and needs servicing or you are in doubt about its condition:

- ◆ Unplug it from the wall socket
- ◆ Contact the nearest after-sales service centre

Cookware Guide

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used.

Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry.

The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-Safe	Comments
Aluminium foil	✓ X	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Browning plate	✓	Do not preheat for more than three minutes.
China and earthenware	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
Disposable polyester cardboard dishes	✓	Some frozen foods are packaged in these dishes.
Fast-food packaging		
• Polystyrene cups and containers	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	X	May catch fire.
• Recycled paper or metal trims	X	May cause arcing.
Glassware		
• Oven-to-tableware	✓	Can be used, unless decorated with a metal trim.
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.
• Glass jars	✓	Must remove the lid. Suitable for warming only.
Metal		
• Dishes	X	May cause arcing or fire.
• Freezer bag twist ties	X	
Paper		
• Plates, cups, napkins and kitchen paper	✓	For short cooking times and warming. Also to absorb excess moisture.
• Recycled paper	X	May cause arcing.
Plastic		
• Containers	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
• Cling film	✓	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Freezer bags	✓ X	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
Wax or grease-proof paper	✓	Can be used to retain moisture and prevent spattering.

Cooking/Reheating

1 Make sure the oven is plugged into a properly earthed electrical outlet and "ON" appears in the display window.

2 Open the door.
The oven lamp will be turned on.



3 Put the food into a suitable container, place it in the center of the oven and then close the door securely.
Result: The oven lamp will go off.

 
4 Select the desired power level by rotating the COOKING POWER CONTROL DIAL.
Result: The selected power level will be displayed in the display window.



5 Set the desired heating time by rotating the TIMER DIAL.
Result: "ON" blinks and the selected time is displayed in the display window.



6 Press button.
Result: The oven lamp and cooling fan will be turned on.
Heating will start.
The time on digital display will count down.



7 When all time is elapsed, the end of cycle Beep Tone will sound 4 times and all heating will stop. The oven lamp will go off. For 1 min, the display shows " " and the cooling fan will keep working in order to cool down the interior parts. During the time, the fan will not stop even when you open the door. 1 min later it will stop and "ON" appears again. Food may be removed from oven whilst the fan is still running.



8 Open the door and take the food out.

9 Close the door. The oven lamp will go off.




➤ Whilst heating, one press on pad stops the oven. You can restart it by pressing the pad or a second press on pad will cancel the selected program. When it is NOT in a heating cycle, one tap on pad cancels the selected program.

You can set the power level first and then the cooking time next, or vice versa.

You can press +20sec button one or more times in order to add the cooking time by 20 seconds.

➤ When heating cycle is completed and you open the door, the oven lamp automatically turns on and goes off 1 min later.

➤ When you open the door whilst in a heating cycle, the oven stops operating and the oven lamp automatically turns on for 1 min and goes off 1 min later. If you leave the oven door open for more than 1 min, the oven beeps once every minute and after 5 min the power source check indicator 'ON' appears in the display window.

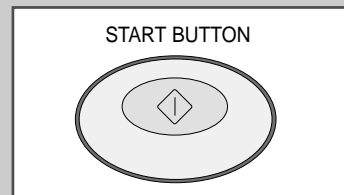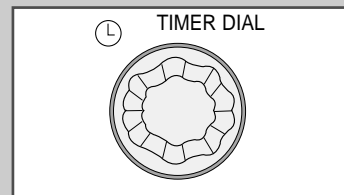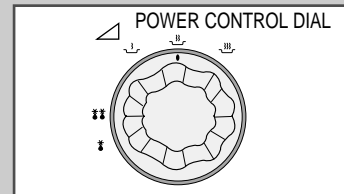

➤ When in a heating cycle, you can not change the power level or heating time. But you can add 20 sec increments using the +20sec pad. The dial may be rotated but this does not affect the current operation and the display remains the same. It becomes effective next time you set the oven manually after you finish the current heating. If you want to change the current setting, firstly stop the heating by using CANCEL pad and set desired power level and cooking time again.


 
 

 
But when you are NOT in a heating cycle, you can change the power level and heating time. Changed values are promptly shown in the display.

➤ The oven is designed not to work when power level is set to "0" mode between the heating mode and the defrosting mode.






➤ When you first plug in the power cord, the oven beeps once and all the indicators show for 5 sec in the display window.

Power Levels and Time Variations

The power level function enables you to adapt the amount of energy dissipated and thus the time required to cook or reheat your food, according to its type and quantity. You can choose between the power levels below.

Power Level	Output	
HIGH()	100%	1200W
MEDIUM()	70%	840W
LOW()	50%	600W
HIGH DEFROST()	30%	360W
LOW DEFROST()	15%	180W

   The cooking times given in recipes and in this booklet correspond to the specific power level indicated.

Power Level	Max. Time
HIGH()	25 min.
MEDIUM()	40 min.
LOW()	40 min.
HIGH DEFROST()	50 min.
LOW DEFROST()	50 min.

- The maximum time available per power level is shown in the table above.
A defrosting time can be set up to 50 min. But the time is reduced to 25 min (for HIGH) or 40 min (for MEDIUM or LOW) the moment you change the current power level (DEFROST) to other level such as HIGH, MEDIUM or LOW.

Example: If you set a defrosting time to 45min with the heating mode at DEFROST and if you change the power level to HIGH, the time will be automatically reduced to 25min.

- You can set the power level first and the cooking time next, and vice versa.

Using +20sec Button


This is a **ONE TOUCH COOK** button.

By touching the button once, you can start heating instantly.

You can increase the cooking time by pressing the +20sec button when in a heating cycle.

The cooking time increases by 20 seconds at each press on +20sec button. But it can not exceed the maximum time allowed for the power level selected.

Before operating the oven, times can be increased/decreased using either the timer dial or +20sec button. During the operating, time may only be added by using the +20sec button.

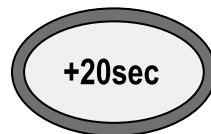


Using the Defrost Feature

The Defrost feature enables you to defrost meat, poultry, fish.



Only use containers that are microwave-safe.

 
- 1 Open the door.
- 2 Place the frozen food in the centre of the plate tray.
- 3 Close the door.
- 4 Rotate the Variable Cooking Power Control dial to the DEFROST HIGH (☼☼) or DEFROST LOW (☼) as you wish.
Result: The DEFROST indicator appears on the digital display.




- 5 Rotate the TIMER dial to set the defrosting time.
➤ The Maximum time that can be set under defrosting mode is 50min.



 
- 6 Press  button.
Result: Defrosting begins.




POWER CONTROL DIAL

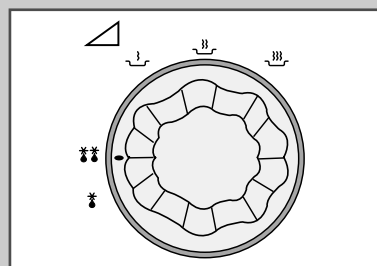

TIMER DIAL

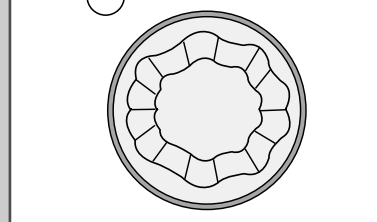


START BUTTON

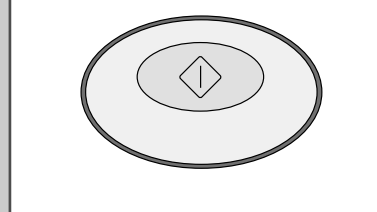

Stopping the Cooking

GB

CANCEL BUTTON

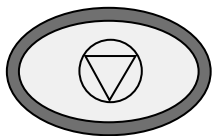


You can stop cooking at any time so that you can:

- ◆ *Check the food*
- ◆ *Turn the food over or stir it*
- ◆ *Leave it to stand*


To stop the cooking...

Then...

Temporarily

◆ Open the door or press  button once.

Result: Cooking stops.

To resume cooking, close the door and press  again.

Completely

Press the  button twice.


Result: The cooking settings are cancelled.

If you want to cancel any cooking settings before starting cooking, simply press CANCEL once.


Adjusting the Cooking Time

TIMER DIAL



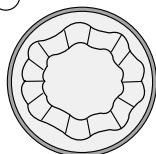

START BUTTON

 

Like traditional cooking, you may find that, depending on the food's characteristics or your tastes, you have to adjust the cooking times slightly. You can:

- ◆ *Check how cooking is progressing at any time simply by opening the door*
- ◆ *Close the door*
- ◆ *Increase the remaining cooking time*

Before operating the oven, times can be increased/decreased using either the Timer dial or +20sec button. During the operating, time may only be added by using the +20sec button.

+20sec

Error Codes

Error Items	Code	Error Beep	Cause/Remedy
Power frequency Error(50/60Hz)	E1	one beep for 2 sec	<p><u>Cause:</u> Power frequency is other than 50 Hz.</p> <p><u>Remedy:</u></p> <ul style="list-style-type: none"> • Unplug the power cord plug and check if the power frequency is 50 Hz. • Plug the power cord in 50 Hz power source and see if "E1" appears. If the error code is displayed again even after the correct power source is provided, contact the nearest service centre.
Thermistor Open Error	E21	one beep for 2 sec	<p><u>Cause:</u> Thermistor Sensor which is supposed to sense the temperature of the cavity inside does not work properly. (Thermistor Sensor open)</p> <p><u>Remedy:</u> Unplug the power cord and wait for more than 10 seconds. Plug the power cord again. If the symptom persists, contact the nearest service centre.</p>
Thermistor Short Error	E22	one beep for 2 sec	<p><u>Cause:</u> Thermistor Sensor which is supposed to sense the temperature of the cavity inside does not work properly. (Thermistor Sensor short)</p> <p><u>Remedy:</u> Unplug the power cord and wait for more than 10 seconds. Plug the power cord again. If the symptom persists, contact the nearest service centre.</p>
Temperature of exhaust air too High Error	E3	one beep for 2 sec	<p><u>Cause:</u> The oven cavity gets too hot due to excessive operation with no load or small load, or due to some blocking materials around the Air Filter or Air Exhaust at the back of the oven.</p> <p><u>Remedy:</u></p> <ul style="list-style-type: none"> • Open the oven door and check if 1) the oven has been operating with no load or too small load, 2) the air filter is placed in a wrong position, or 3) any blocking materials exist around the Air Exhaust. Cool down the oven (for approx. 30 min) under the normal temperature. The oven is back to normal when the error code "E3" disappears and "ON" appears again in the display window. • Unplug the power cord, remove the blocking materials around the ventilation openings, cool down the oven (for approx. 30 min) sufficiently, plug the power cord in again and check if the error code appears again. • If the symptom persists even when the oven is cooled down sufficiently, contact the nearest service centre.
HVT-I Power Error	E41	one beep for 2 sec	<p><u>Cause:</u> The circuitry inside the oven is not working correctly.</p> <p><u>Remedy:</u> Unplug the power cord and wait for 10 seconds. Plug the power cord in again and check if the error code "E41" appears again. If the symptom persists, contact the nearest service centre.</p>
HVT-II Power Error	E42	one beep for 2 sec	<p><u>Cause:</u> The circuitry inside the oven is not working correctly.</p> <p><u>Remedy:</u> Unplug the power cord and wait for 10 seconds. Plug the power cord in again and check if the error code "E42" appears again. If the symptom persists, contact the nearest service centre.</p>

Cleaning the Microwave Oven

- 1 Unplug the oven from the electrical socket before cleaning.
- 2 Clean the inside of the oven. Wipe up all spills with a damp cloth. Kitchen detergent solution may be used if the oven gets too dirty. Do not use harsh detergents or abrasives.
 - If food remnant or spilled liquids stick to the oven walls, or between door seal and door surface, they will absorb microwaves possibly resulting in arcing or sparks.
- 3 Clean the outside of the oven with soap and water, then dry with a soft cloth.
Caution: Make sure that water does not get into the back ventilation or control panel opening.
- 4 When you clean the window of the door, be sure to use a soft cloth after washing with very mild soap and water. Do not use window cleaner as the front door can be scratched by harsh soap or cleaners.

Cleaning the Ceiling Cover


- 1 Hold side stoppers of ceiling cover with both hands and pull them in and down. Then take the ceiling cover out of the oven cavity.
- 2 Rinse ceiling cover in soapy water or Food Sanitizer Solution.
- 3 Be sure to replace the ceiling cover before using the oven.

CAUTION Ceiling cover must be in place securely when you use the oven.
When you removed the Ceiling Cover for the purpose of cleaning, be sure to be extremely careful about the exposed inside components on the top of the oven cavity. If any of them are deformed, abnormal symptom can happen such as arcing or sparks during operation. In case of such problem, contact the nearest after-sales service centre.


Cleaning the Air Filter

Clean the Air Filter regularly according to the following instructions. The oven may have problems when the Air Filter becomes clogged with dust.

- 1 Remove the bolt at both ends of the Air Filter.
- 2 Lift the Air Filter off the post carefully.
- 3 Wash this filter in warm soapy water.
- 4 Be sure to replace the Air Filter before using the oven.
 - If the Air Filter becomes clogged with debris, this will cause an overheating problem on the oven.

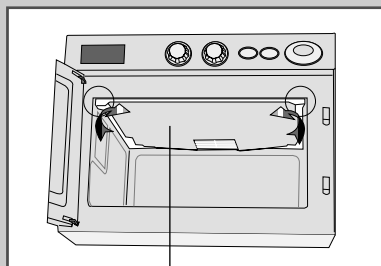

Ceiling Cover

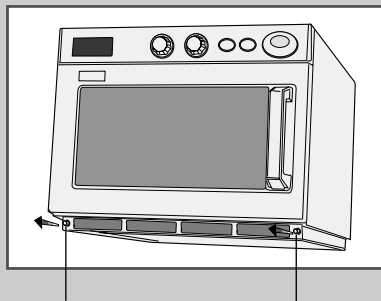

Bolt

Installation Instructions for Stacking


Important

- 1 Disconnect the power cord from the wall socket before attempting installation.
- 2 For stacking installation, you must use the "bracket plate" which is enclosed with this unit.
- 3 The maximum stacking height is two units.
 - Stacking the two units is limited to the following models.
CM1219/1229.

CAUTION: Be sure the oven cavity is empty.

Installation

- 1 Stack two units together.
- 2 Remove the 6 screws as shown in the figure.
- 3 Place the Bracket-plate to join the two units.
- 4 Attach and tighten the 6 screws again.
- 5 Ensure the top oven is at a safe and workable height.

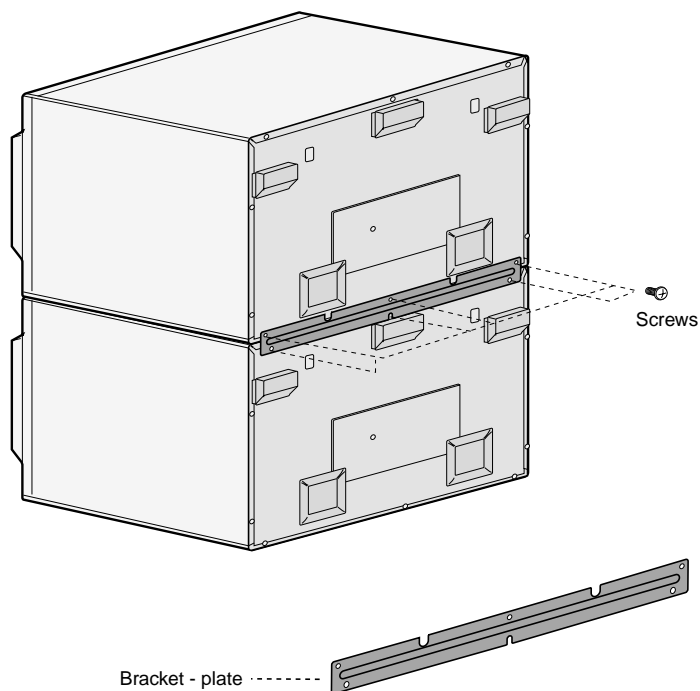


Replacement of Lamp

GB

Important

- 1 Remove a screw securing the lamp cover.
 - > You don't need to remove outer panel to replace lamp.
- 2 Remove the lamp by rotating it clockwise.
- 3 Replace with a new lamp by rotating it counter-clockwise.

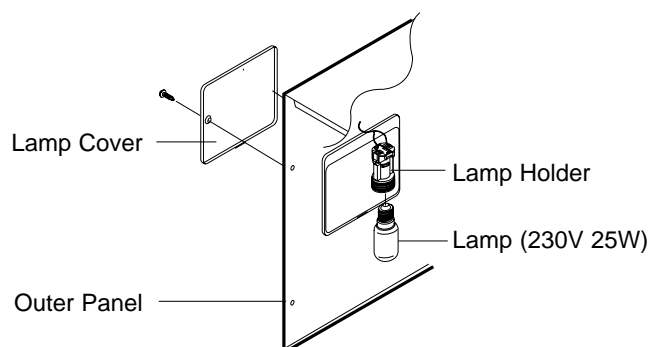

Cooking Guide

Recipe	Portion	Method	Power Level	Time (1200 W)	Stand Time
BREAD & PASTRIES					
To defrost					
Vienna Baton (***)	100 g	Place on kitchen paper.	HIGH DEFROST	1'30"	5 mins
Vienna Baton (***)	2 x 100 g	Place on kitchen paper.	HIGH DEFROST	0'50"	5 mins
Gateau slice (***)	100 g	Place on plate.	LOW DEFROST	2'00"	15 mins
To warm					
Quiche slice (***)	130 g	Place on plate.	MED	3'10"	1 min
Sausage rolls (*)	2 x 70 g	Place on plate.	MED	0'50"	1 min
Fruit pie (***)	120 g	Place on plate.	HIGH	0'50"	2 mins
Croissants (***)	2 x 50 g	Place on kitchen paper.	HIGH	0'20"	1 min
Chicken & mushroom pie (*)	2 x 170 g	Remove foil.	HIGH	2'20"	1 min
	1 x 170 g	Place on plate.	HIGH	1'20"	1 min
SNACKS & STARTERS					
To cook					
Bacon rashers (*)	2 x 25 g	Place on plate.	HIGH	1'50"	1 min
Eggs, scrambled (*) (with spices and 2 tbsps milk)	2 x 60 g	Beat eggs in bowl. Stir twice during cooking.	MED	1'00"	1 min
Sausages, thick (*)	2 x 50 g	Pierce	MED	2'10"	2 mins
To reheat					
Hamburger (***)	120 g	Place on plate.	HIGH	1'25"	1 min
Chickenburger (***)	125 g	Place on plate.	HIGH	1'15"	1 min
Cheeseburger (***)	130 g	Place on plate.	HIGH	1'20"	1 min
Hot dog (***)	120 g	Place on plate.	HIGH	1'30"	1 min
Pizza (***)	190 g	Place on plate.	LOW	3'20"	2 mins
Chargrilled ribs (***)	200 g	Place on plate.	MED	4'30"	1 min

(***) : Frozen (-20°C)

(*) : Chilled (+5°C)

Cooking Guide

GB

Recipe	Portion	Method	Power Level	Time (1200 W)	Stand Time
To reheat					
Chicken wings of fire (***)	6 x 40 g	Arrange on plate, thin parts to center.	HIGH	3'00"	1 min
Baked beans	250 g	Cover and stir half way.	HIGH	1'40"	2 mins
DESSERTS					
To warm					
Apple crumble (***)	2 x 130 g	Cover in dish.	HIGH	2'00"	2 mins
Jam roly poly (*)	80 g	Place on a plate.	LOW	1'20"	2 mins
Crêpes suzettes (***)	140 g	Pierce film.	HIGH	1'35"	1 min
Spotted dick (***)	170 g	Place on a plate.	MED	1'10"	2 mins
Chocolate sponge pudding with sauce (***)	170 g	Place on a plate.	HIGH	0'50"	2 mins
RECIPE DISH ENTREES					
To reheat					
Thai green chicken curry (***)	250 g	Cook covered. Stir once during cooking.	HIGH	3'50"	2 mins
Chili con carne (*)	330 g	Pierce film.	MED	3'40"	2 mins
Half chicken, cooked (*)	400 g	Pierce bag. Place in oven.	MED	5'50"	2 mins
Lasagne (*)	330 g	Place in microwave safe dish.	MED	6'00"	2 mins
Shepherd's pie (*)	300 g	Place in oven and cover.	MED	4'20"	2 mins
Tagliatelle carbonara (*)	350 g	Place on plate. Stir once during cooking.	MED	3'40"	2 mins
Vegetable cumberland pie (*)	330 g	Place in microwave safe dish.	HIGH	5'00"	1 min
Complete plated meal, 3 components (*)	350 g	Place on plate. Cook covered.	HIGH	3'20"	1 min

(***) : Frozen (-20°C)

(*) : Chilled (+5°C)

Cooking Guide



Recipe	Portion	Method	Power Level	Time (1200 W)	Stand Time
RECIPE DISH ENTREES					
To reheat					
Chicken in blackbean sauce with rice (*)	350 g	Place on plate. Cook covered.	HIGH	2'40"	2 mins
Indian chicken makhani with rice (*)	500 g	Place on plate. Cook covered.	HIGH	3'30"	2 mins
FRESH VEGETABLES					
To cook					
Green beans, sliced	500 g	Add 60ml/4 tbsps water and cover.	HIGH	4'10"	3 mins
Green beans, whole	500 g	Add 60ml/4 tbsps water and cover.	HIGH	4'40"	3 mins
Broccoli, florets	500 g	Add 60ml/4 tbsps water and cover.	HIGH	4'30"	3 mins
Carrots, sliced	500 g	Add 60ml/4 tbsps water and cover.	HIGH	4'50"	3 mins
Cauliflower, florets	500 g	Add 60ml/4 tbsps water and cover.	HIGH	5'10"	3 mins
FROZEN VEGETABLES					
To cook					
Green beans, sliced	500 g	Add 1-2 tbsps water. Cover, stir half-way.	HIGH	6'10"	3 mins
Broccoli, small florets	500 g	Add 1-2 tbsps water. Cover, stir half-way.	HIGH	6'40"	3 mins
Cauliflower, florets	500 g	Add 3-4 tbsps water. Cover, stir half-way.	HIGH	7'10"	3 mins
Corn on the cob	2 x 300 g	Add 1-2 tbsps water. Cover.	HIGH	6'30"	3 mins
Sweet corn	500 g	Add 1-2 tbsps water. Cover, stir half-way.	HIGH	5'50"	3 mins
Jacket potato	230-290 g	Place on plate.	HIGH	4'30"	3 mins
Ratatouille	500 g	Add 1-2 tbsps water. Cover, stir half-way.	HIGH	6'30"	3 mins

(***): Frozen (-20°C)

(*): Chilled (+5°C)

Cooking Guide

GB

Recipe	Portion	Method	Power Level	Time (1200 W)	Stand Time
RICE					
To reheat					
Rice, boiled (***)	500 g	Cover, stir half-way.	HIGH	3'50"	2 mins
Rice, Pilau (***)	500 g	Cover, stir half-way.	HIGH	3'50"	2 mins




(***) : Frozen (-20°C)

(*) : Chilled (+5°C)

Technical Specifications

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Model	CM1219
Power source	230 V ~ 50 Hz
Power consumption Microwave	2, 200 W
Output power	1, 200 W (IEC-705)
Operating frequency	2, 450 MHz
Dimensions (W x H x D) Outside	464 x 368 x 557 mm
Oven cavity	370 x 190 x 370 mm
Volume	26 litre
Net Weight	32 Kg approx.

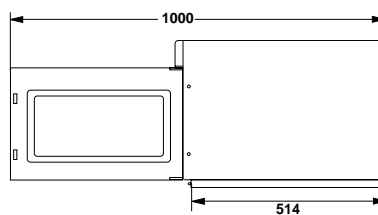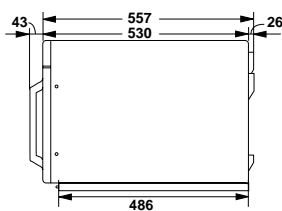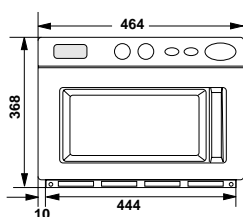

THIS APPLIANCE IS MANUFACTURED BY:

