




# Quick User Guide

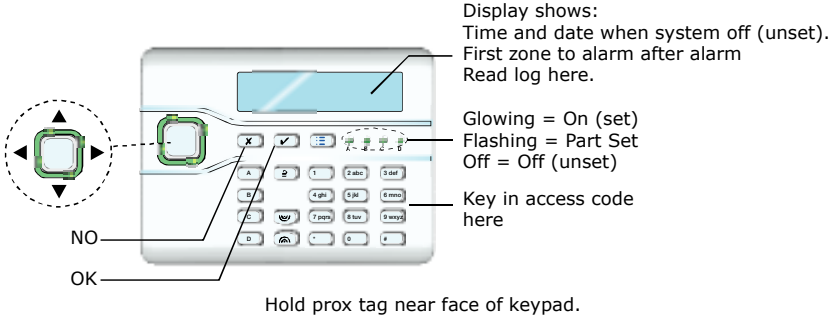

## Setting and Unsetting

| IN ORDER TO:                   | DO THIS:                                                                                                                                  | THE SYSTEM WILL:                                               |
|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|
| Turn the system on:            | <b>EITHER:</b><br>Key in ACCESS CODE<br>and press ✓<br><b>OR</b> present tag.<br><br><b>Then</b> leave the<br>premises and close<br>door. | Start the exit tone.<br><br><br>Stop exit tone and<br>turn on. |
| Turn the system off:           | Open entry door, go to<br>keypad.<br><br>At the keypad <b>EITHER:</b><br>key in ACCESS CODE<br><b>OR:</b> present tag.                    | Start entry tone.<br><br>Stop entry tone and<br>turn off.      |
| Turn on part of the<br>system: | <b>EITHER:</b><br>Key in ACCESS CODE<br><b>OR</b> present tag.<br><br><b>Then</b> press ▲ or ▼ .<br>followed by ✓.                        | System turns on part<br>of the system you<br>selected.         |

# After an Alarm

| IN ORDER TO:      | DO THIS:                                                       | THE SYSTEM WILL:                                                  |
|-------------------|----------------------------------------------------------------|-------------------------------------------------------------------|
| Switch off siren: | <b>EITHER:</b><br>Key in ACCESS CODE<br><b>OR</b> present tag. | Stop the siren. The keypad display shows the first zone to alarm. |
| Reset the system: | Press ✓.                                                       | Keypad display shows time and date.                               |
| Read the log:     | Press ⏏ + ACCESS CODE (or tag) + 3 + ✓.                        | Keypad display shows most recent event.                           |
|                   | Press ▼.                                                       | Keypad display shows older events.                                |
|                   | Press ▲.                                                       | Keypad display shows newer events.                                |

For more information see the *i-onEX Range Administrator's and User Guide* .

## To Start a Hold Up Alarm from the Keypad

(This feature must be enabled by your installer.)

Press both the HUA keys at the same time.

