

Alldro 3 Speed QUAD

User guide



Foreword

Thank you for purchasing our product.

These operational guidelines for the user, to ensure you a quick and convenient to use, read the instructions carefully before use.

This player is a specialized top quality portable player product with a series of remarkable functions. There will be no separate notice in the case of any change in content of this text.

This company will continue to provide new functions for the development of the product, and there will be no separate change in the case of any change in the product's performance and functions. While this unit is used as a mobile hard disk, this company will not be held liable for the security of files saved in the disk.

If the actual setup and the application methods are not identical to those as set forth in this manual, please access to the latest product information of this company's website.

Contents

Foreword	2
Contents	3
Basic functions	4
Basic Operation	5
Points for Attention	8
Product view	9
Main interface	10
Installed APK	13
Uninstall APK application	14
Video Player	
Audio Player	17
Music folder interface	17
Music playing interface	18
Pictures	19
Picture viewing interface	19
Settings	20
TV-out	22
OTG	22
Connect the computer	23
WiFi Settings	24
Bluetooth Settings	25
3G network Settings	26
Ethernet network Settings	26
Calendar	27
Calculator	28
Clock	28
Factory data reset	29
Upgrade Player Driver	29
Common troubleshooting	31
Specification	33
DECLARATION OF CONFORMITY	35

Basic functions

- 9,7inch capacitive touch screen, multitouch support, 2048*1536 resolution screen;
- Support WIFI and Bluetooth;
- Integrates main back camera and front camera;
- Adopt Android 4.1 operating system;
- Support auto rotation the screen horizontally or vertically;
- Support Web browsing, chat online, online video, online games and download etc:
- Support ten thousands games and programs download and install;
- Supporting multiple audio formats;
- Supporting lyric synchronous display;
- Supporting video playing in multiple formats;
- Supports maximum 1080P resolution video file output;
- Integrated HDMI output function;
- Supporting picture browsing, rotation, edit and slideshow playing in many formats:
- USB 2.0 high rate transmission;
- Built-in microphone and long time recording;
- Supporting firmware upgrade;
- Supporting MicroSD Card;
- Support OTG function, can expand storage space.

Basic Operations

Power on

In the shutdown state, long press "O" button boots.

Power off

In the power on state, long press the "O" key 3 seconds then pop-up device options, select "Power off" for shut down.

Sleep

Under normal operating conditions, short press the power button, into hibernation. Now, the screen will close. Short press the power button again to resume the normal mode. You can set the device to enter sleep mode automatically after a desired time of non-operation.

Power reset

If you experience a slow operation of the device in normal use, you cand shutdown and power on again to reset the operating system.

Screen time out

If you do not contact the player within the set time, and do no operate by the button, the screen will be automatically turned off.

In any state, short press "O" button and for activation; Then skid the lock upwards to the green of spotted which will accomplish to access to the upper interface.

If it is necessary to deactivate the screen time out function, you can set the [Screen time out] option under [Display] function into "Never".

Using the Micro SD card

After this unit is connected with the computer, you will find two moving disks. The first one is the built-in memory disk for this unit and the other is the disk for the MicroSD card. If no card is inserted, the second disk can not be opened. This unit supports the extension of the MicroSD card from 128MB to 32GB.

Inserting and Pulling out the Micro SD card

Inserting:

Put the Micro SD card face up (side with words), and slightly force the card into the socket of the card, i.e. connecting the unit. Under this state, you can play the content in the Micro SD card.

Pulling:

Slightly push the Micro SD, and it will bounce by a section, and then you can take it out

Caution:

Please perform inserting and pulling operation when power is off! Otherwise, it will lead to the loss or damage to the files within the unit! If no card is inserted, the computer will be unable to perform read and write operation for the disk notes of the later removable disk (Micro SD card).

Battery:

High capacity Polymer battery is used for this unit.

The duration available of the battery power depends on volume, types of playing files and operation of batteries. The player can be set up by the user as "user define power off time" or "display setup" to save batteries.

Charging:

This unit can be recharged by USB port, you can also use DC Charger:

- take out the DC charger, plug it into the wall outlet with AC 220V (output current 2000mA output voltage $5V\sim5.2V$), then plug in the DC jack into the device DC-in jack.

Warnings for charging:

A new battery may be empty and not charged before you get the device.

If the device is not used for long time, it is better to charge it to full capacity every 2 or 3 months during storage.

Power adapter is a key component of the portable player, which play a crucial

role in keeping the portable player's normal work and protecting your security when using the player, a long-term customer surveys and after-sales service Practice shows that the malfunction of the portable player, in many cases were caused by using inappropriate accessories, in particular the power adapter.

Using the substandard power adapter will shorten the life of the portable player by considerably, the voltage instability will seriously affected the normal work of the portable player and bring permanent damage on the player's performance and reliability. Using the substandard power adapter will also reduce the vocal quality of the players, shutdown the player when you use it. In addition, using the substandard power adapter will cause combustion and explosion which will disserve the safety of the consumers.

Return to main interface

In any interface, touch icon " \(\bigcap\)" to access to main interface.

Return to upper interface or menu

In any interface, touch icon " -", click the " ! " key to access to upper interface or menu. You can also click short press the " O" key to accomplish it.

Points for Attention

- 1. Do not use the player in exceptionally cold or hot, dusty, damp or dry environments.
 - 2. Do not allow the player to fall down while using it.
 - 3. Please charge your battery when
 - A.Battery power icon shows an empty icon;
- B. The system automatically shuts down and the power is soon off when you switch on the unit once again;
 - C. There is no response if you operate on any key
- 4. Please do not disconnect power abruptly when the player is being formatted or in the process of uploading or downloading. Otherwise it may lead to the error in the program.
- 5. When this unit is used as a mobile disk, the user shall store or export files in the proper file management operation method. Any improper operation method may lead to the loss of files, for which this Company will be held no liable.
- 6. Please do not dissasemble this unit by yourself. If there is any issue, please contact the dealer.
- 7. There will be no separate notice in the case of any change in the functions and performance of this product.

Product view



- 1. Back camera
- 4. Speaker
- 7. MicroUSB plug
- 10. Earphone jack

- 2. Home button
- 5. Speaker
- 8. MicroSD card
- 3. Power button
- 6. Microphone
- 9. HDMI plug

Main interface

The main interface is separated into 5 screen display. Slide screen left or right which will accomplish to flip file.



Change desktop wallpaper

Long press on a blank space on the main interface to pop-up desktop wallpaper menu.



• Display all functional icons

Short press the icon to display the installed functions icons, click on corresponding functional icon to be able to access the application. In the main menu, the system can be set to run existing applications, install a new application, start the touch calibration, music player, video player, web browsing, games and other operations.



• Add window small plugin

In the main interface, touch the screen on the right side of the "control icon, and then click above on the screen "WIDGETS" in order to select small plugin, wich you can add to desktop, by long pressing it.



• Display the background programs that are running

In any interface, click the " icon from the left of the screen to pop-up the background program list. Click on the program icon to switch over to the background of the open programming interface. Slide a program icon to the right to close this program in the operation.



• Shows notice information

In the main interface, click on the lower right corner of the screen the clock display area to open notifications. Notifications can show the current USB state, networking state, the battery power and other informations.

Delete a desktop icon


In the main interface, long press on the application of the program icon, and after a small recycle bin appears on the top of the screen, drag and drop the application into that symbol.

Move desktop icon


In the main interface, keep pressing on the application icon, then move the program on the screen interface.

Installed APK

- 1. Take the need to install the software of the APK format downloaded to the player or TF card;
 - 2. Click "File manager" icon and select the APK to install the application;

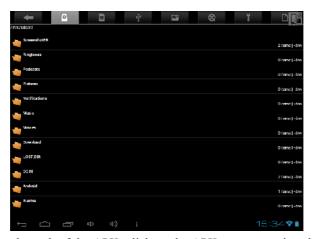


3. Choose the path of the APK, click on the APK program to install to start the installation.

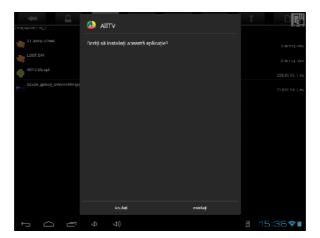


Uninstall APK application

1. Click on the desktop "Settings", into the "Settings" - "Application", select and click on the desired application to uninstall.

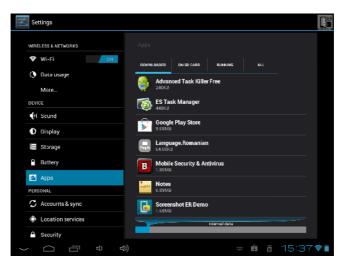


2. Click on the "Uninstall" icon to start program uninstalling

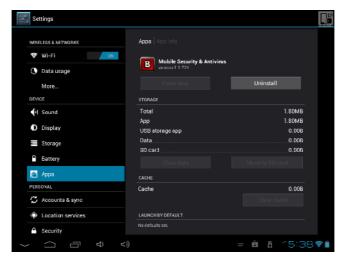

Video Player

In the main menu, click on "Gallery" to be able to access video folder.

File list interface

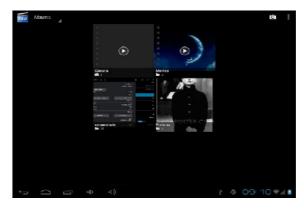

Function of keys

- "Shot press it to come back to the main interface
- "\(\to\)": Short press it to return to the upper interface
- Touch & slide screen upward and downward which will accomplish to flip video folder.

Video playing interface



Function of keys

- "•": press it to modify the volume up or down;
- " b" key: short press it to return to the upper interface.

Tips:

- 1. This player supports maximum 1080p resolution video files.
- 2. Subtitle display.

This player supports "*.SRT" subtitle files (the user can download it from the website) for the synchronous playing of subtitle and video.

When there is any subtitle file with the same name in the folder for playing video, the player will be able to achieve synchronous subtitle display

- 3. It supports video playing in multiple formats encoding high-definition video etc. As parameters such as formats, coding modes, definition and code flow rates of video files provided by the internet differ, the player is unable to be compatible with all video files (especially those video files with high definition or high code rates). If the downloaded video files are out of the range supported by the player, which renders it impossible to play normally in the player, it is recommended that a video conversion software from a third party to be used, and file formats to be converted via computers into the ones within the range supported by the player before the same are duplicated into the player for playing.
- 4. Player Progress: Drag the bottom progress bar to change the player progress.

Audio Player

In the main menu, select the option of "Music" to be able to access music folder


Music folder interface



Function of keys

- "C": Return to main interface
- "Exeturn to upper interface
- Up/down to touch screen, can realize the file list to scroll function
- Artist: according to the singer classification music files
- Album: according to album classification music files
- Song: display all music files
- Playlist: to display the play music files in the list
- Now playing: into the background music played interface

Music playing interface

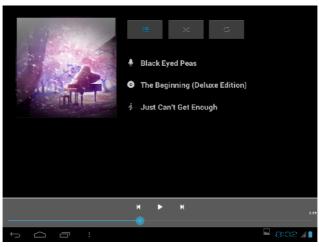

Function of keys

- "Exercise Return to main interface
- "Electrical Return to upper interface": Return to upper interface
- " | / | ": shot press to play the last /next music, long press for fast rewind / forward:
 - "►/": Click start/stop playing music
 - " **!!** " : Click into play lists
 - ": Click on open/close songs random play mode
 - " wey: short press it to return to the upper interface

Lyric Display


When there is any lyric file with the same name in the folder for playing music, the player will directly access the lyric display interface.

This player supports "*.Lrc" lyric files (The user can download it from the website of "http://www.51lrc.com", or search "LRC Lyric" to have the lyric file) for the synchronous playing of lyrics and music.

Pictures


In the main menu, select the option of "Gallery" to be able to access Photo folder.

Picture viewing interface

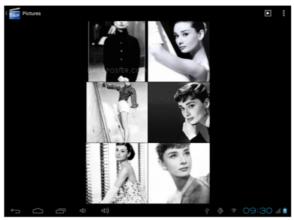

Function of keys

- "Pictures management. For example: delete, Rotate left, Rotate right, you can also according to the location, time, people and tags setting picture group.

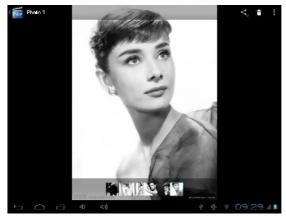

- "=": Dalata niatura
- "•": Through you can click on the icon to set and understand pictures information, including: Slideshow, Edit, Rotate left, Rotate right, Crop, Details, Set picture as.

Settings

In the main menu, select the "Settings" option to be able to access the System Settings folder. Directly click can assess picture set options interface.



Description of functions:

1. WiFi

Wi-Fi: Open/close the wireless connection

2. Bluetooth

Wi-Fi: Open/close the bluetooth connection

3. Data usage

Display data usage

4. Sound setting

Volumes: set the notification, the media and the alarm clock volume.

Default notification: click to open notifications settings menu.

Touch sounds: if checked, the touch screen pressing will make a sound

5. Display settings

Brightness: adjust brightness of the screen.

Wallpaper: you can choose wallpaper from Gallery and Wallpaper

Sleep: Setting screensaver standby time.

When the device is in stand-by the Wi-Fi function will be deactivated to save battery.

Font size: set the font size

6. Storage

Check the PMP memory and available storage.

7. Battery

Shows informations about battery status and usage

8. Apps

Here you can view and manage the installed applications

9. Accounts and sync

Informations and sync settings for your user accounts.

10. Location services

Contains settings for activation or dezactivation of the localization options.

11. Security

Screen lock: set screen lock metod: slide, pattern, PIN, password and so on many kinds of mechanisms.

Make passwords visible: if marked you may see the letters typed in the password box.

Unknown sources: allows you to install applications that do not come from Google Play Store.

12. Language & input

Set language and area, input method etc. FunctionStorage

13. Backup & reset

Can backup, restore the machine settings and data

14. Date & time

Set the date, time, time zone and time display format

15. Accessibility

Options for screen rotation, text magnifier, password spelling etc.

16. Developer options

Settings and options for Android developers developers.

17. About device

Check the machine software version and other informations.

TV-out

The device supports HDMI TV-output. The way of operation as follows:

- 1. Turn on the TV, and the TV signal input source set to HDMI input states;
- 2.Open players, will HDMI cable connects to the player HDMI TV output interface, and the other end connected to the television HDMI input interface, this time the player and television will be displayed;
- 3.HDMI TV output in the state, pull out the HDMI cable to exit TV output functions.

Note: If the TV-out button is activated the screen will not display the video content but a menu through which the user can operate the player.

OTG

OTG is the On-The-Go abbreviation. It is a technology that achives data transmission between portable devices without a host. Computers are not needed to act as a medium when share data with or transfer documents from other portable devices to your player such as flash disk, audio player and portable hard disk.

OTG Connection Steps:

- 1. Please check if devices connected to your machine have USB connection activated.
- 2. In order to access external storage devices from main screen click on File Manager application and then select "Mobile disk".

Remarks:

- 1. Due to large varieties of portable devices, the player might not recognize some of them
 - 2. Compatibility with new portable devices will be done by firmware update.
- 3. While using OTG connection, the other portable device relies on the player's power supply.

Thus if your player maintains less than 1/3 battery or the other device is a heavy electric consumer, OTG connection might not be proceeded successfully.

As an alternative, please provide power supply to the other device exclusively.

4. Currently the OTG only supports one-way operation.

That is, documents in other devices can be read or copied to your player. But files in your player can't be pasted to the other device.

Nor could you delete files in the other device.

Connect the computer

This machine can be connected to a PC through the USB cable, by which the data is copied or deleted. The specific procedure is as follows.

1.Connect the machine through the USB cable to the PC's USB port and you will get notification "USB already connected".



2. Click "USB already connected" notice options, and choose the "open USB storage devices", and you can manage the files from the memory of your machine.



WiFi Settings

Wi-Fi provides wireless network access.

Notices: The availability and coverage of Wi-Fi signal depend on the number, infrastructure and other objects penetrated by the signal.

Press Home>Menu>Settings>WLAN and slide the wi-fi switch to activate Wi-Fi. Tablet will automatically scan for available wireless networks, then a list of Wi-Fi networks will show

the found network name and security settings. (open network or WEP/WPA/WPA2 with password). If you enable the notification in Wi-Fi settings, the status box will show an icon when open available wireless network found.

Choose one of the Wi-Fi options to connect to the network. When you choose open network, tablet will connect to it automatically. If you choose WEP/WPA/WPA2 with password, you should type the password first, then touch to connect it.



Bluetooth Settings

Turn on Bluetooth or set the tablet to be detected. Press Home>Menu>Settings.

Slide the Bluetooth switch to activate, then touch Bluetooth box to open the Bluetooth function. After started, the status box will show this icon **3**. Device scanning starts automaticaly. All the devices found will be displayed in the list under the icon.

Touch Menu button to access settings for bluetooth connection.

Pairing and connection of Bluetooth headset

1) Press home>menu, then touch settings.

2) Touch Bluetooth>your tablet will scan for the Bluetooth devices within range and show the found devices in the list under the icon.

Tips

If in the list you cannot find your device, touch Search for devices to re-scan it.

Make sure that the devices wanted are under the detected mode and then touch headset in the equipment list to finish the connection.

Notices: generally Bluetooth devices need password to be paired, often use 0000 as the default password.



Ethernet network Settings

- $1. \ Into \ the \ menu \ "Settings" \ deactivate \ wifi \ connection.$
- 2. Will USB Ethernet card through the special OTG line connected to the machine to the USB interface, the system will automatically recognize and attached to the network.
 - 3. Into the machine "Settings" under the "Ethernet Settings" project and check

the "" Ethernet" option can.

4. If you need to specify the etheric network IP and gateway, can enter the "Ethernet configuration" setting.


Note

- 1. Due to the different communication systems Ethernet card more, this machine Ethernet function can't ensure that is compatible with all equipment.
- 2. Due to external Ethernet card equipment from the machine to the USB interface take electricity, so in Ethernet connection, please ensure that the battery power in one case above.

Calendar

In the main menu, touch "calendar" icon to be able to access the calendar interface.

Under this menu, Touch & slide screen left and right which will accomplish to flip increase or decrease month by month. If you need record new event, before you can add an event, you must add at least one Calendar account to the device and make a calendar visible.

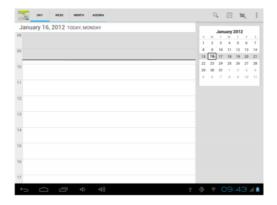

Calculator

In the main menu, touch "Calculator" icon to be able to activate the function of Calculator. The calculator can be used like normal one. It's a good assistant for your work and study.



In the main menu, touch "Clock" icon to be able to activate the function. It's a good assistant for your everyday life.

1.Click "clock" appear as follows interface



2." ":Click on it to set alarm



It will be automatically alarming when you set time. You can set Time, ring tone, repeat options for every alarm clock.

Factory data reset

If this machine is infected, or third party software installed to run this machine is unusual, but through the recovery factory Settings, remove the third party software, and restore the state out by default. Into this machine "Settings"-" privacy ", select " Factory data reset" item, confirmed, will remove all of the data



29

The firmware is a built-in program, by which you can run various hardware functions. By upgrading the firmware, you can improve or enhance the performance and functions of the player. No upgrading the firmware will not affect the normal operation of the player itself.

The upgrading of firmware may lead to the unit unable to work properly due to error operation. Please read carefully the instructions for upgrading before upgrading.

Note

- 1. Please make sure that players upgradE at more than 60% of the battery power. IOW battery power leads to upgrade failure to boot.
- 2. While upgrading do not reset or shutdown operation, avoid accident interrupt upgrade can't boot.
- 3. Our company provides formal or test versions of the firmware update, but without notice in the premise of the function of the products and the menu changes.
- 4. While firmware upgrading all the data stored in the machine will be deleted. It is recommended to back up the important data before upgrade.
- 5. The machine firmware does not apply to other types of products. our company does not undertake any related responsibility resulting from the negative consequences.

Common troubleshooting

1. What is the APK file? It and Android PMP have what relation?

A: APK is the abbreviation of Android Package. APK files can be installed and executed directly to Android system of the machine.

2. How to get the APK application

A: You can download via PC-side installation, you can also "Android market" online to download and install.

3. Why WIFI connection will interrupt

A: If set "screen time", when the player overtime in standby screen saver, WIFI function will be closed to save electricity purpose; When sensei player, WIFI function will be in about 5 seconds to resume automatic connection.

4. Why some download APK program not working properly

A: Download the APK software, mostly by the user to development, without the platform compatibility testing, and part of the hardware and software for Android system version has a special requirements, so there could be downloaded APK documents not compatible, not the normal operation of the phenomenon, the player itself quality problems.

5. Why does not the machine show charging state

A: When the battery is extremely low, need to use DC charger charging half an hour or more to show charging status

6. Why can't realize the gravity induction function

A: This machine support gravity feeling function, can be through the shaking to switch the screen machine did show, but some of the application does not support the gravity induction function, it can't realize the screen of switching function, this is the software support question, the functionality of the player.

7. Players can't boot

1) Check the battery no electricity

- 2) Connect the ac adapter after inspection again
- 3) If after charging still unable to boot, please contact our customer service

8. Can't Hear the voice in the headset

- 1) Please check the volume is set to 0
- 2) Please check whether the connection headphones

9. Player charging abnormalities

- 1) Please confirm that the use of the equipment complies with the charger of the player charger requirements
- 2) Such as connection USB charging, please do not connect to computers lead USB interface

10. Why some downloaded video cannot be played

This device is compatible with formats of video files from internet but due to the fact that video formats may vary there is a possibility not to be compatible with some of them. In these cases it is recommended to use the PC and some video conversion software to get to a compatible format.

Specifications

General	Languages	English, Romanian, German, Spanish
		etc.
	Dimensions	242,6*187,5*9,6 mm
_	Weight	572,7 g
Display	Туре	IPS-HD LCD
	Dimension	9,7"
	Touch screen	Capacitive, mutitouch
	Rezolution	2048*1536 px
	Format	4:3
Characterist	OS	Android 4.1 Jelly Bean
ics		
	CPU	Cortex A7 - 1,2GHz QUAD CORE
	GPU	PowerVR SGX544 MP2
	Flash memory	16GB
	RAM	2GB DDR3
	External	MicroSD, max 32GB
	memory	
	Color	Silver
	Widget	Yes
	Multitasking	Yes
	G-sensor	Yes
	Design	Slim, aluminium back housing
Connectivit	GPS	No
У		
	3G	Yes (optional with 3G modem)
	Bluetooth	Yes
	WLAN	WiFi 802.11 b/g/n

	PC	Yes, USB 2.0	
	Connectivity		
Multimedia	Camera	Front 2.0 Mpx / back 2.0 Mpx	
	Sound	Built-in speaker	
		Stereo with headphones	
		Built-in microphone	
	Video	Render FullHD 1920X1080p (HDMI)	
		Render from internet FullHD 1080p	
	E-Book	Multiple formats	
	Pictures	Multiple formats	
Internet	Social	Yes	
	networking		
	E-Mail	Yes	
	Applications	Yes	
	Call by wifi	Yes. Videocall support with Skype,	
		Yahoo etc.	
	Flash/html5	Yes	
Ports	Audio Out	Jack, 3,5 mm	
	Video out	HDMI	
	Card reader	MicroSD	
	Usb	MicroUSB	
Battery	Charger type	DC 5V, 2,5A	
	Battery type	3,7V Lithium-polymer	
	Capacity	8000 mA	
	Operating time	hours	
	Stand-by	hours	
Package	Tablet, charger, data cable, user manual, warranty		
content	card		

DECLARATION OF CONFORMITY

Nr.1247

We, SC VISUAL FAN SRL, importer located in Brasov, 16 Liliacului STR., registered at the Commerce Chamber Brasov no. J08/818/2002, CUI 14724950, assures, guarantee and declare on our own responsibility, in accordance with art.5 from HG nr. 1.022/2002 regarding the statute of the products and services that can jeopardize life, health, work security and environmental protection, that:

The product ALLDRO 3 SPEED QUAD tablet PC, ALLVIEW brand and the accessories that came with the product: 220V charger, headphones and battery don't jeopardize life, health, work security and environmental protection and they are according to:

- The Stipulations of HG nr.982/2007 witch transpose the essential requirements specified in Direction 2004/108/CE, regarding electromagnetically compatibility;
- The Direction regarding the low voltage equipment users assurance 73/32/CEE, modified by Direction 93/68/CEE (HG 457/2003) and tests EN 55013:2001+A1:2003+A2:2006, EN 55020:2007, EN 610000-3-2:2006, EN 61000-3-3:1995+A1:2001+A2:2005;
- The Direction regarding the radio and telecommunication equipments R&TTE 1999/5/CE (HG 88/303).
- The safety requirements of the European Directive 2001/95/EC and of EN standards 60065:2002/A12:2011 and EN 60950-1:2006/A12:2011, of the decibels level emitted by the sold devices.

The Product described upstairs in this Declaration and all the accessories are according to the next standards:

- Health EN 50360, EN 50361;
- Safety EN 6095-1;

- EMC EN 301 489-1-7/17;
- Radio spectrum EN 301511 EN 300328;

After the performed tests emerge that the samples comply with the upstairs specification, as the test results show. Documentation is stored on VISUAL FAN LTD - Brasov, 61 Brazilor STR.

Also available on web: http://allview.ro

Director Cotuna Gheorghe