

User manual
Evolio Axis 7 HD

(1). Introduction

Congratulations on the purchase of the Tablet !

 
This device is built-in high performance Wifi receiver module, G-sensor, also can bring you into the portable media Tablet world and fulfilled your entertainment needs. It can support picture, video, music, E-book, games, online chat and other functions, moreover, various settings will fully show your individuality.

This manual contains important safety and operating information in order to prevent accidents, please read this manual thoroughly and keep it for future reference.

(2). Safety precautions

- To use this Tablet safely, please read and follow the instructions in this manual carefully before use.
- Never use the Tablet while driving or when operating any vehicle, as this could cause an accident. It is also against the law in many areas. Take care when using the Tablet outdoors, especially when crossing the street.
- Do not listen to music at very high volumes using the earphones as this can permanently damage your hearing.
- Keep the Tablet clean and never store it next to a heat source or in dirty, humid or wet places. Keep it out of direct sunlight.
- Do not put the Tablet in high temperature places (over 40°C), especially not in a car with the windows closed in summer.
- Keep the Tablet away from strong magnetic fields.
- Please don't turn on the device in where the wireless equipment is forbidden or when the usage of the device will cause interference and danger.
- Press the Tablet's buttons gently. Pressing them or the screen too hard can damage the Tablet.
- Do not use the Tablet in an electronics-prohibited area, such as in an airplane.
- Do not use the Tablet in an extremely dry environment, as this can lead to static discharge, which can damage the Tablet.
- Do not subject the product to harsh impacts.
- Do not drop the appliance. This may result in damage to the product.
- Do not attempt to dismantle or repair this unit yourself, Repairs should only be performed by qualified personnel only.
- We will not be responsible for any memory loss caused by product damage, repairs or other reasons.
- Disconnect the appliance from the power source when cleaning.
- In order to prevent program failure, never disconnect the Tablet suddenly from a PC during downloading, uploading or formatting to prevent program failure.
- Use a slightly damp, lint-free cloth to clean this appliance. Do not dismantle the Tablet or use alcohol, thinner or benzene to clean the surface of the Tablet .

(3). Buttons and ports

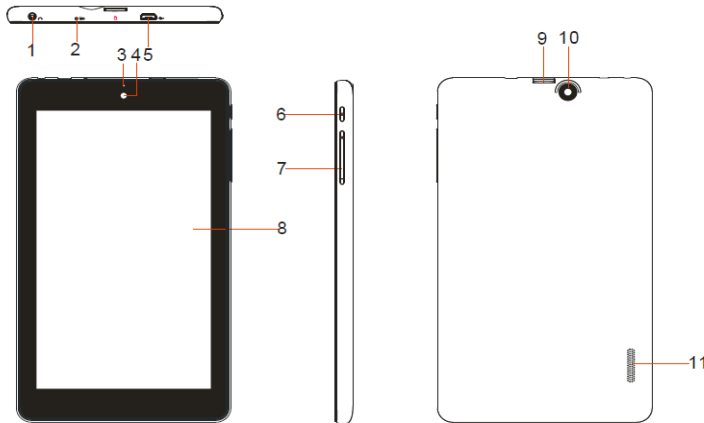

1. **Earphone socket** – connects to stereo earphones.
2. **Microphone**
3. **Charging Indicator LED**
4. **Front webcam**
5. **Micro USB Port** – Connects to PC or power adaptor.
6. **Power** –Briefly press to lock or unlock the screen; press and hold to turn on or off the unit or reset it.
7. **VOL+/-button** – Increase/ decrease the volume.
8. **Touch screen**
9. **Micro SD Card Slot**
10. **Rear webcam (optional)**
11. **Built-in speakers**

(3). Charging the battery

The device has a built-in rechargeable battery. Charge the device when the battery level is low.

To charge the battery, connect the device to the dedicated power adaptor via the USB port. It takes about 4 hours to fully charge the battery. While charging, you can watch the progress with the battery icon on the home screen. **Note:**

a. You are prompted to charge the battery when the device warns that the battery is lower than 15%!

b. In the event that the device shuts down automatically because of battery exhaustion, charge the battery for at least 5 minutes before you can turn on the device.

(4). Switching on/off

To switch on the Tablet PC, press and hold the Power button. When startup window appears, release the button. The system initialization may take several minutes. Please wait patiently.

To switch off the tablet PC, press and hold the power button, when "power off " message appears, release the button. Touch the message, then press OK.

3

(5)Installing the Memory Card (TF card) This device can read files directly from a memory card (TF card/Micro SD card). To install a memory card, find the card slot on the top edge of device and then insert the card into the slot in the correct orientation. To access the files stored in the memory card, enter the file explorer mode by tapping the File Manager icon and select the "External_SD" directory.

 
Note: SD Card in this mode refers to the internal memory of the device, instead the SD card itself.

(6)Connecting to PC for transferring files When using the tablet, you may need to transfer various files between a PC and it.

(1) Connect the device to a PC with the supplied USB cable.

(2) Once the connection is done, two removable disks will appear on your PC.

(3) Turn on 'USB connection', and then tap one removable disk to open the drive. Now you can copy files from the

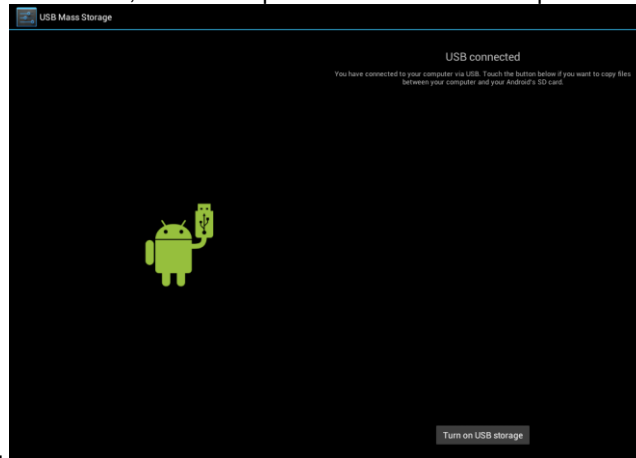


PC to the device.

(7)Home Screen

The Extended Home Screen

 The Home Screen consists five separate screens for positioning the shortcuts, widgets etc.. Slide your finger left or right on the screen to go to the extended screens.

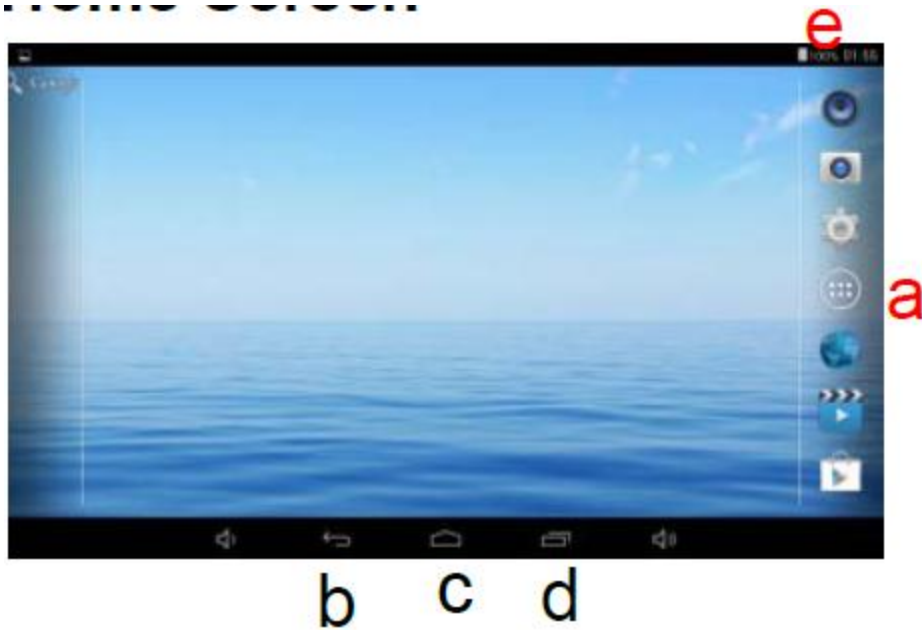

- a.App tab- Open the apps menu.
- b.Return button
- c.Home button- Go to Home screen.
- d.Recent opened apps
- e.Battery level

Unlock the Screen

The screen will be locked after the device is idle for a few seconds. You need to unlock the screen by dragging the lock icon rightwards.

Customizing Home Screen Items

- To add a Home Screen item (shortcut, widget etc.), you can tap the application icon to display all applications and widgets, then hold your tap on an item to place it on the home page.
Note: If current page of Home Screen has no enough room for a shortcut or widget, you will be prompted that there is no more room.
- To move a Home Screen item, hold your finger onto it to highlight it, then drag it to the desired location, and release it.
- To remove a Home Screen item, hold your finger onto it to highlight it, drag it to the recycle bin symbol "X" and then release your finger.

5

(8)Install Applications

You can install applications manually by the following methods:

- (1) Download and install the installation file directly from the built-in application library. Make sure the file is in format of .apk which is supported by your Internet Tablet system.
- (2) Copy the installation file to your Internet Tablet by USB connection. Turn on the Internet Tablet, locate the installation file with the FileManager and then tap it to install.
- (3) Once the application is installed successfully, you can find it in the application page.


(9)Uninstall Applications

- (1) Tap the Settings shortcut in the apps screen to display system settings.
- (2) Select "Apps".

- (3) Tap on the application that you want to uninstall.
- (4) Tap on "Uninstall" to uninstall the application.

(10) Managing Tasks and application

Your device can handle multiple tasks at the same time. For example, you can view photos while listening to music. Multitasking is helpful but inefficient if too many tasks are running. In order to save system memory and enhance system performance, you can end some tasks that you don't use at the moment.

- (1) Tap  to display applications that you used recently.
- (2) Hold your tap on the application that you want to stop, and then select "Remove from list".



(11) . Functions Operation

Click the related program icons to enter corresponding functions.

11.1 Music

Click 'Music' icon to open the music application. This application is used to play and store MP3 audio files.

11.2Video

Click 'Vide', you will see all video files in this application. Click the video files and play it.

11.3Photo

Click 'Photo', you will see all photos in this application. Click the photo files and review it.

11.4Browser

Click 'Browser' icon to open 'web browser' application and freely browse the internet. (Before you enter into website, please check you connect the wifi)

11.5Camera

Click 'Camera' icon to open camera application. You can take a photo or make the video recording.

11.6Calculator

Click 'Calculator' icon to open the calculator application. This calculator is used to perform advanced mathematical operations. Use the number pad to enter the numbers.

11.7Calendar

Click 'Calendar' icon to open the calendar application. You can personalize and add your memorandum.

11.8Clock

Click 'Clock' icon to open the Clock application. You can personalize and program several types of alarms.

11.9Downloads

Click 'Download' icon to open the download, you will see all the files under downloading.

11.10 Email

Click 'Email' icon to open the email application and go directly to your personal e-mail software. This application is compatible with most e-mail software and is used to easily read, send and receive e-mails.

 
11.11 Explorer

Click 'Explorer' icon to open your tablet's navigator and have access to the contents of your Micro SD or device's internal memory.

11.12 Search

Click 'Search' icon to open the search application. From here, you can search Web/Apps/Music.

(12).Settings

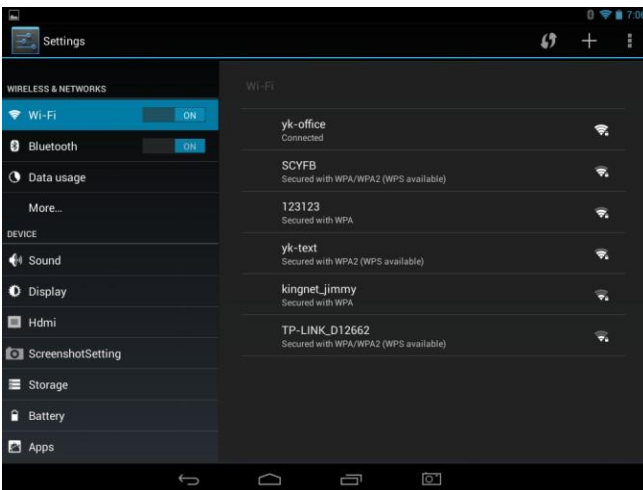

12.1 Turn on the wifi and connect it.

12.2 Data usage
Set data usage cycle.

12.3 Sound
Set the volumes, system sounds

12.4 Display
Set the brightness, wallpaper, screensaver etc.

12.5 Storage
Show all storage and space of apps in internal memory/ SD card/USB disk.

12.6 Battery
Show battery usage data.

12.7 Apps

Show all apps you installed.

12.8 Accounts & Sync

Sync your accounts you setup.

12.9 Location services Determine your location .

12.10 Security

Set the screen security/Encryption/Passwords etc.

12.11 Language & Input

Set the language of device and input language you want.

12.12 Backup & reset

Backup data or recover factory data reset.

12.13 Date & Time

Set the date & time of device.

12.14 Accessibility

Set the font, auto-rotate etc.

12.15 Developer options

Show pointer location, screen updates, CPU usage etc.

12.16 About tablet

Show the model number, version etc.

(13) Wireless networks

Prior to starting an Internet-application, activate Wi-Fi connection and set up Wi-Fi network. 1.Touch the icon "Settings" > "Wi-Fi". Select Wi-Fi item and set the switch to on position.

2. The device will automatically start searching for available networks and will display them on the right panel.

3. Select any network from the list and press "Connect". If the network you selected is protected by WEP-protocol, type the security key, then press "Connect" button.

When the connection is successfully created, "Connected to" (Network name) message will appear on the screen.