

User Manual

Mondo 3G

1. Brief introduction

Respect users:

Thank you for your purchase and use of our products. For your security and interest, read the product instructions and all attached data before using it. If you don't operate the product in accordance with product instructions, resulting in any personal injury, property or other losses, the company will not responsible for that.

2. Attention

1. LCD maintenance:

Don't put any heavy goods on the tablet

Please make sure that you haven't put too many things in the bag or besides the device when using suitcase or backpack

Don't grasp, twist or impact the surface of the LCD

Don't put LCD in environment beyond 40 degree or humidity over 90%

Don't expose LCD in the direct sunlight or strong fluorescent

Please don't use corrosive cleaning agent to clean LCD to avoid any damage.


3. Please don't take the case apart when the system is working or datas would be damaged, even lost. Please copy those important files by yourself timely, especially, before you decide to format the disks.

4. Please only use the power adapter we enclosed in the device package.

5. Only the authorized people of our agency can assemble or disassemble the device, please prevent the seal from any damage for after-sales service.

3. Ready to use

3.1. Product

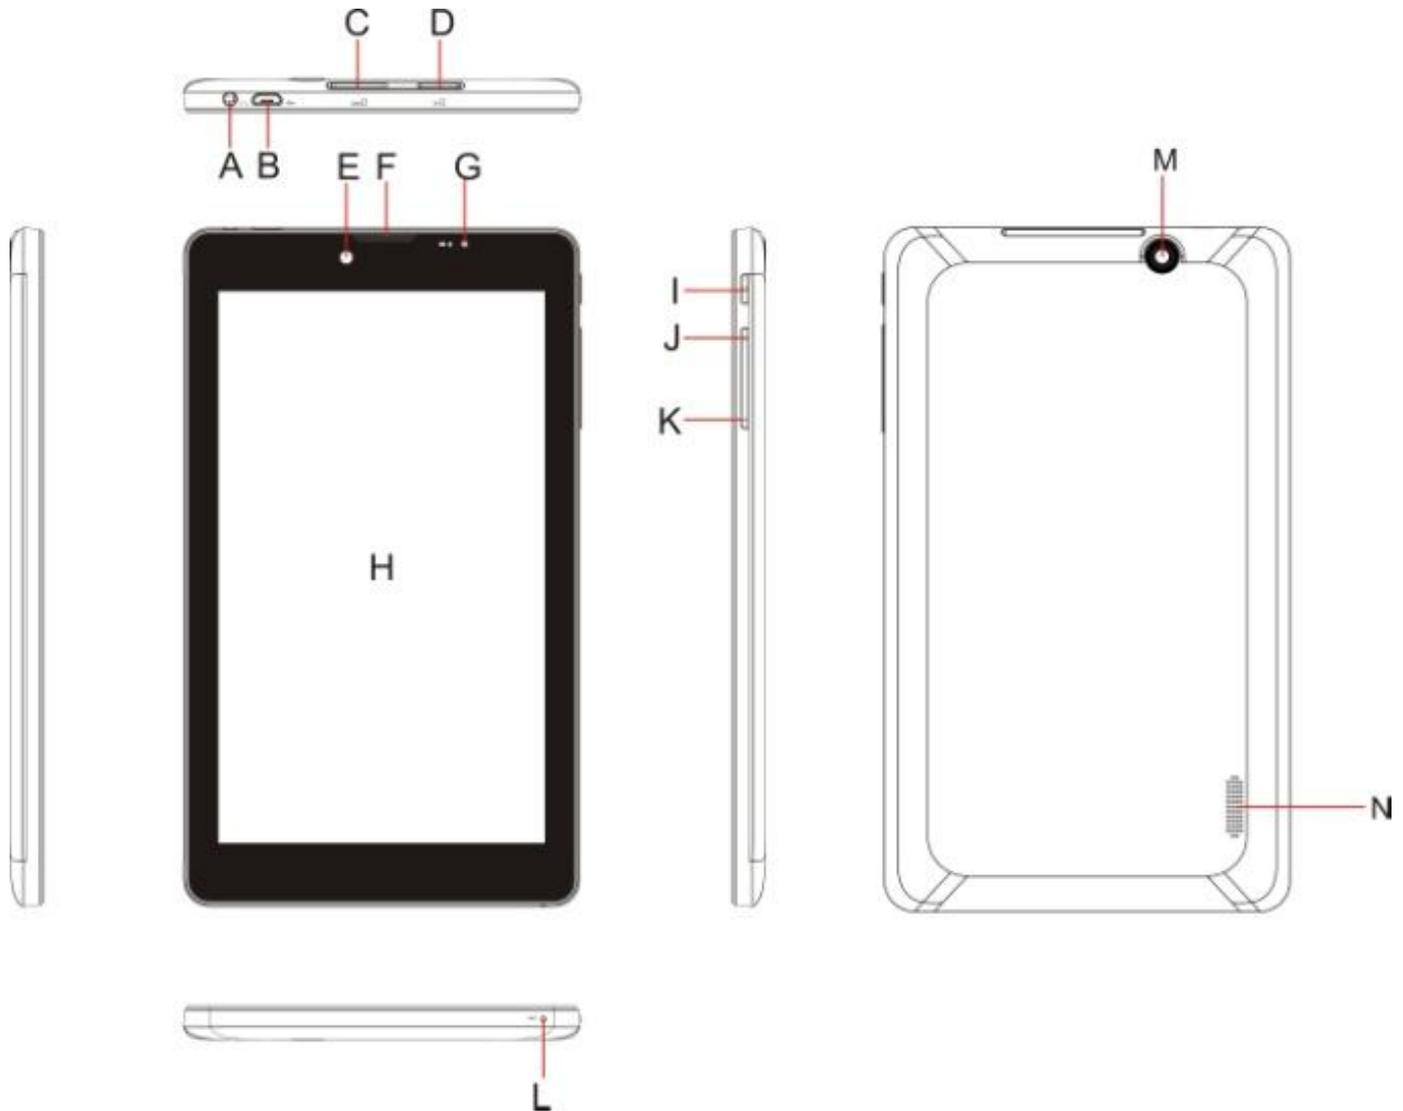

3.2 Buttons

A. Earphone socket

B. Micro USB/ DC-IN Port

C. Sim Card Slot

D. TF Card Slot

E. Front Webcam

F. Handset

G. Charge indicator

H. Display

I. Power Button

J. Volume plus

K. Volume Minus

L. Built In Microphone

M. Rear Webcam

N. Built In Speakers

- ✧ MTK8312 Chipset, Support 1GB DDR3
- ✧ 8 Internal Flash, up to 32GB through SD CARD
- ✧ 7inch (1024*600) TFT Screen
- ✧ Support AVI, MPEG4, FIV, AVI, MKV, 3GP, TS, H.264, MPEG4, H.263, DivX, Xvid, VC-1 format video play.
- ✧ Support JPG, JPEG, BMP, GIF, PNG, JFIF etc format image
- ✧ Support MP1, MP2, MP3, WMA, WAV, OGG, OGA, APE, FLAC, AAC, M4A, 3GPP format,
- ✧ Support e-reader TXT, LRC, PDF, Html, Htm, EPUB format


- ✧ Support recorder
- ✧ Support 3G internet
- ✧ Support G-sensor for rotation
- ✧ Support FM receiver
- ✧ Support GPS function
- ✧ Support stereo earphone and speaker
- ✧ Support multi language
- ✧ Support USB disk

Specification:

4 Quick Guide

4.1 Power on/off

Power on and unlock: Press “Power” for 3 sec to power on, press  and slide to , the device will be unlocked:

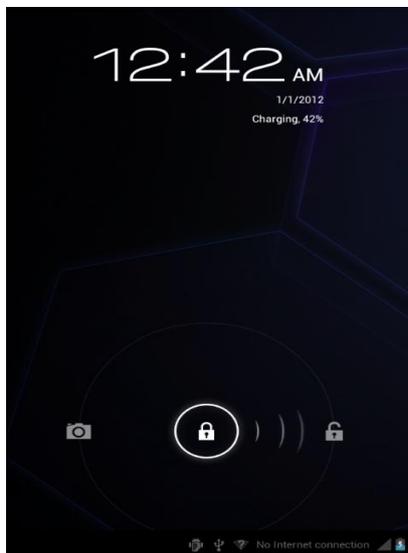

Save mode and unlock: choose “Display” in setting, choose closed after 15sec and device will be sleep after 15 sec and be locked.

Power off: press Power button for 3 sec, choose ok to power off device.

Attention: Please reset device or press Power button for 6sec to cut off when no reaction.

4.2 Battery and charging

- a. Please charge for 4-8hrs at first-time used.
- b. Connect AC adapter with device and will be charged as , stand for full battery.
- c. Please charge for 1min at least and start device when no power

4.3 Icon used

- a . Definition

Icon	Function	Icon	Function
------	----------	------	----------


	Back to Menu		USB debug
	System info		USB Connected
	Back		WIFI Connected
	Menu		Bluetooth Connected
	Related programme		Battery
	Time		Signal strength

5 Operation

5.1.1 Audio Player

Press  to enter music player.

Choose your favorite music to play music

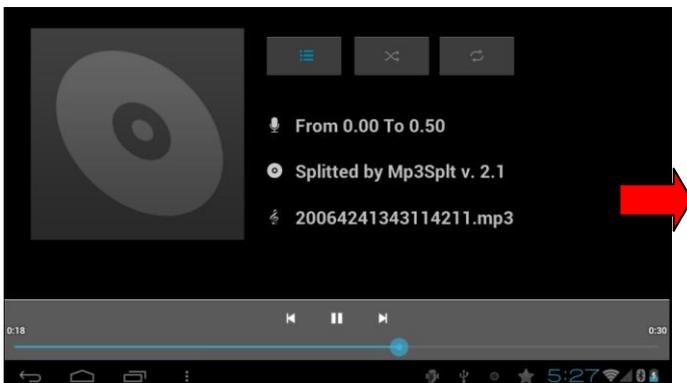


- Press  to enter music list
- Hold  to fast play
- Button instruction:

Button	Instruction	Button	Instruction
	Artist		Personal music
	Song Name		Play list
	Current play		Random play
	Repeat all music		Repeat single music

	Previous		Next
	Play		Pause

5.1.2 Video Player

Press  to enter photo/video player:

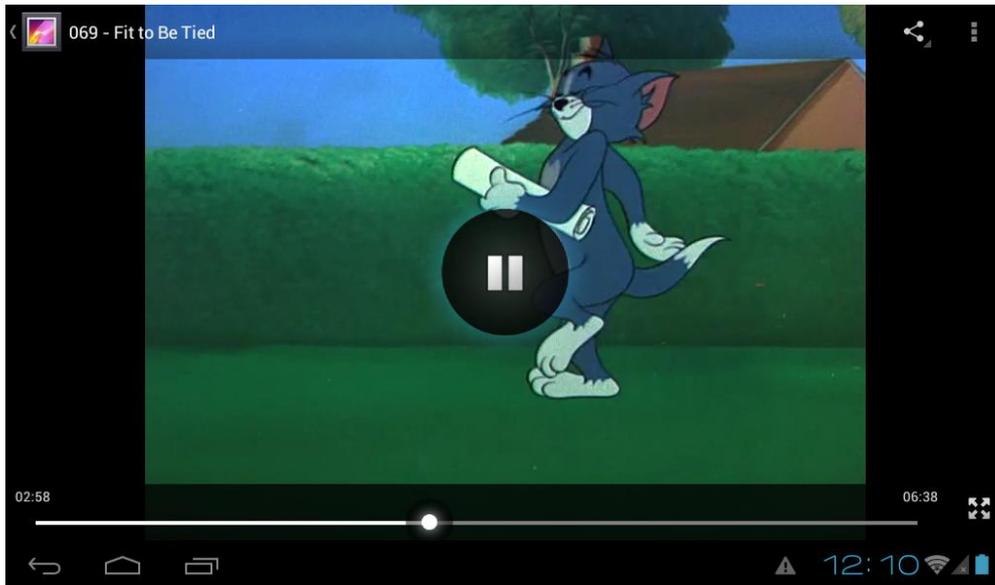

Press  to back main menu.

Hold  to choose chapter, press  to exit. Press  to pause

Video format support: AVI,MPEG4,FIV,AVI,MKV,3GP,TS etc.

- Photo format support: JPG,PNG,BMP etc.

5.1.3 Recorder

Press  to enter recorder menu, press  to start record. Press  to pause. Press  to play record content.

Play: press  to open record file

5.1.4 FM Receiver


Press  to enter FM Receiver



Button	Instruction	Button	Instruction
	Channel list		Search channel
	Menu setting	 	Increase/decrease frequency for 0.1MHz
	Play/pause FM	 	Channel switch.

5.1.5 File management

Press  to enter file management

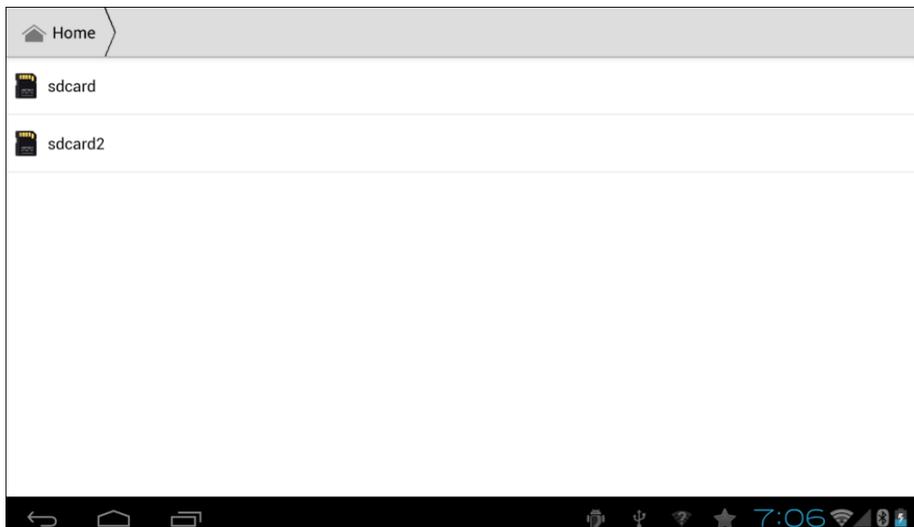




 New file folder
  File rank
  Edit

5.1.7 Dial

- Press  to enter dial menu:

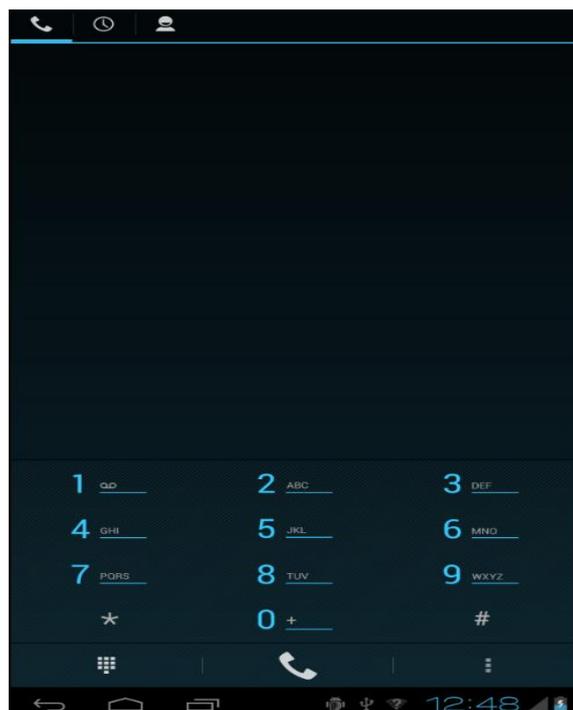


Dial number while insert SIM card.  to start keyboard
  Dial button,
  Setting button,

 Dial record
  Phonebook

★Attention: 3G phone call function will be used when SIM card insert. Please power off and insert SIM card, then power on to open 3G function.


5.1.8 Contact

Press  to open contact list:

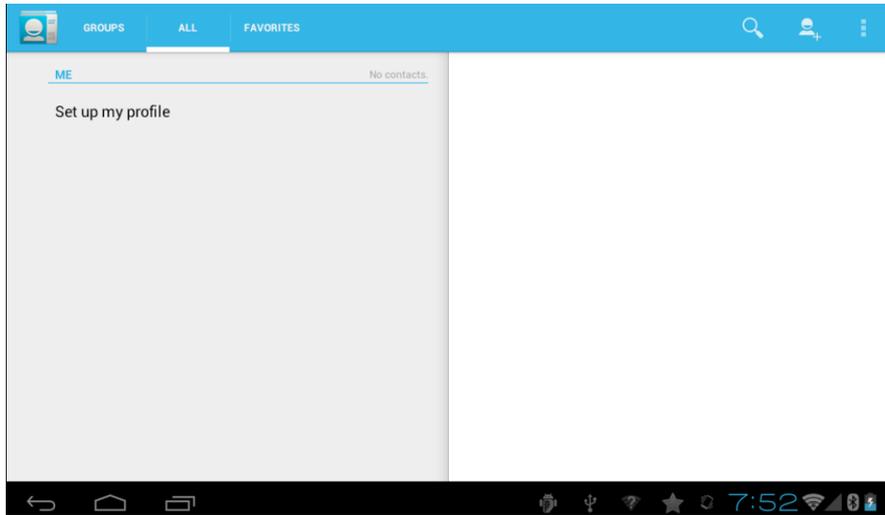

5.1.9 Info:

Press  to enter info menu.

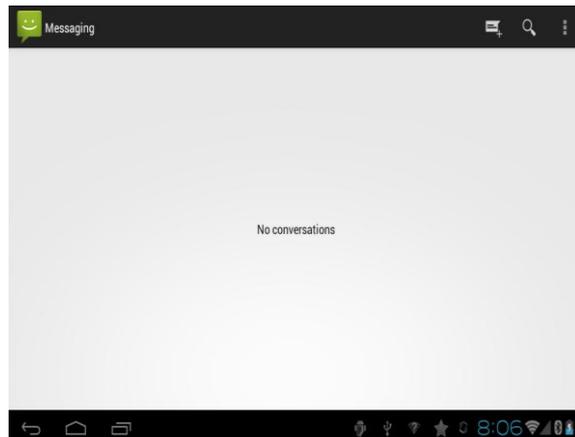

 New message  Research message  setting menu

5.2.0 Use TF Card

b. Please insert TF card into slot and device will read it.


5.2.1 APK Installment and uninstallment

Download apk file from internet and copy into flash, choose ok for installment.

Uninstallment: press management, press apk which you will uninstall for a while, move apk icon and wait for change to red

5.2.2 Camera


Press  to enter camera interface:

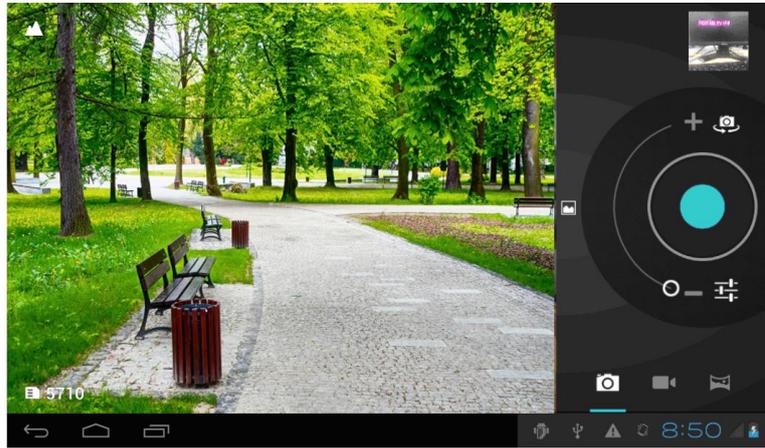




-  Camera switch
-  setting
-  shutter
-  shoot
-  video
-  focal length

5.2.3 Time setting

 press  to enter time setting:

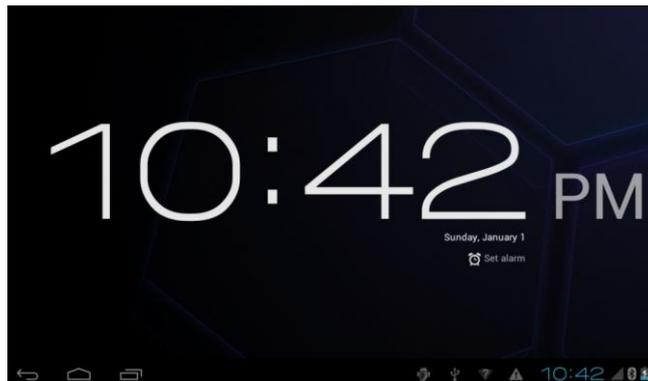

press  to set alarm

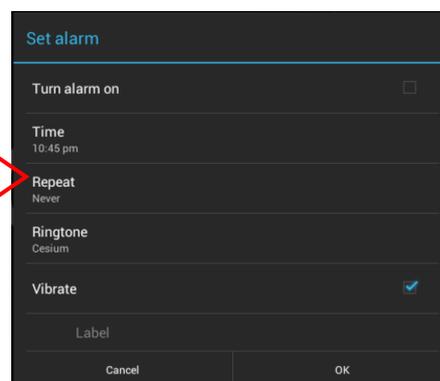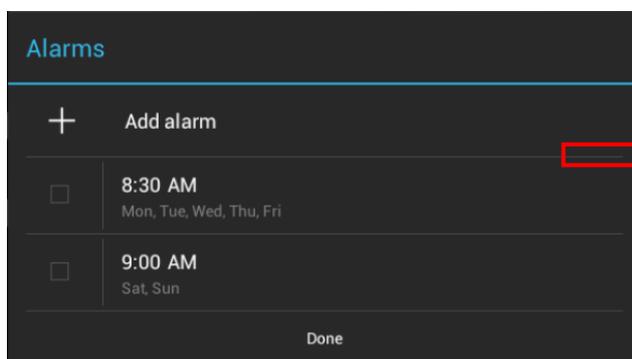


6 System setting

6.1.1 WiFi setting:



press  to enter setting menu and open WiFi function:

a. internet:

choose one link and enter your password, then press connect:

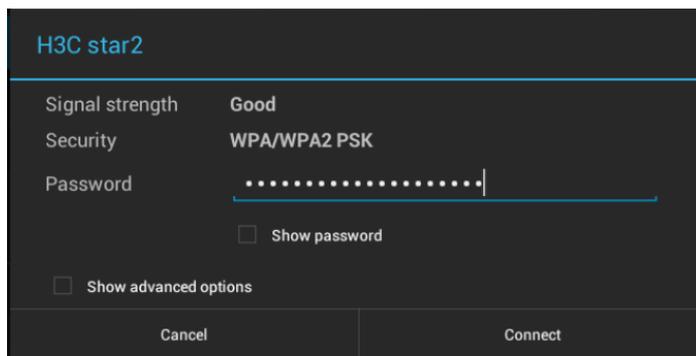


Such as

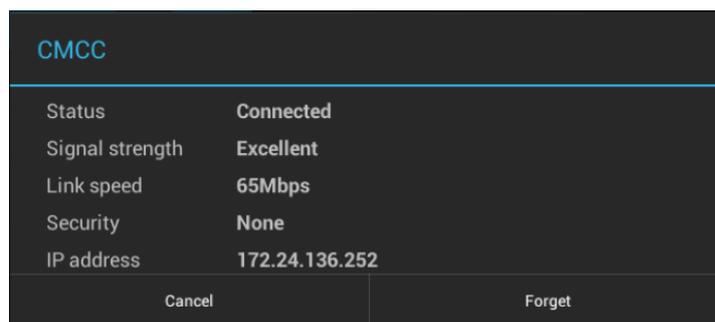 


 will be show in main menu after WiFi connected.

6.1.2 3G internet:

Close WiFi and press more, choose Mobile networks:

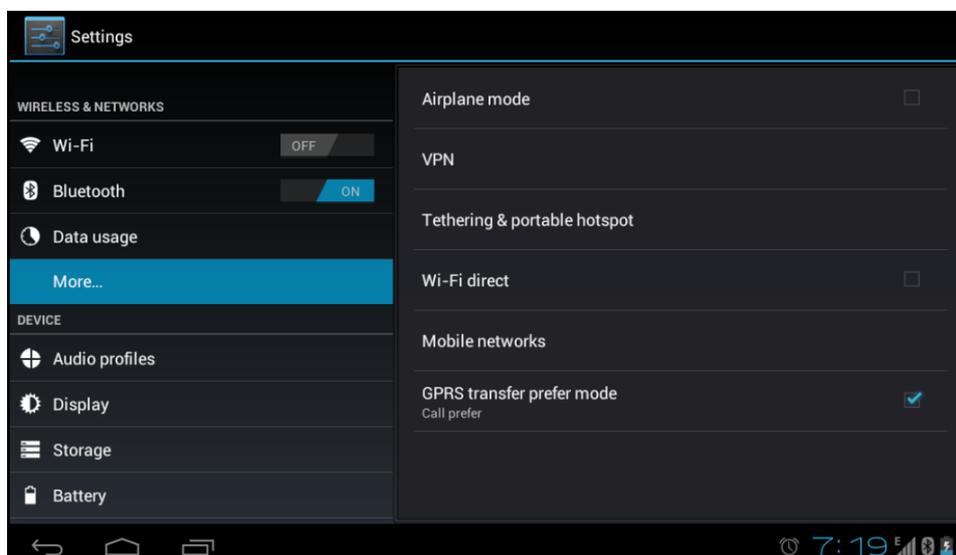


Press networks and enter into settings:

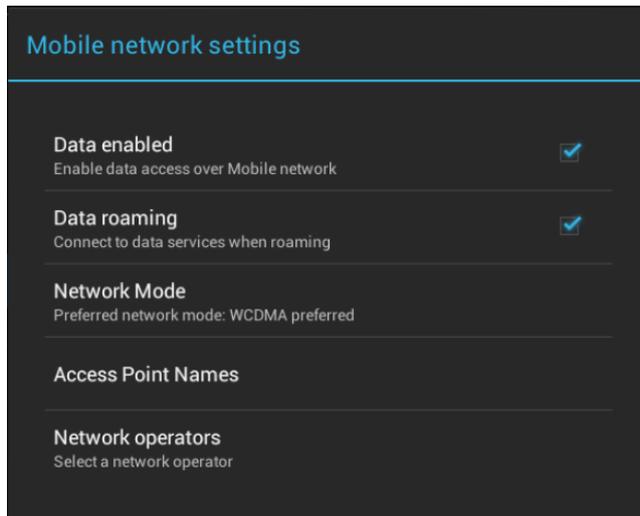

★Attention, 3G function will be available after insert SIM card


6.1.3 Bluetooth:

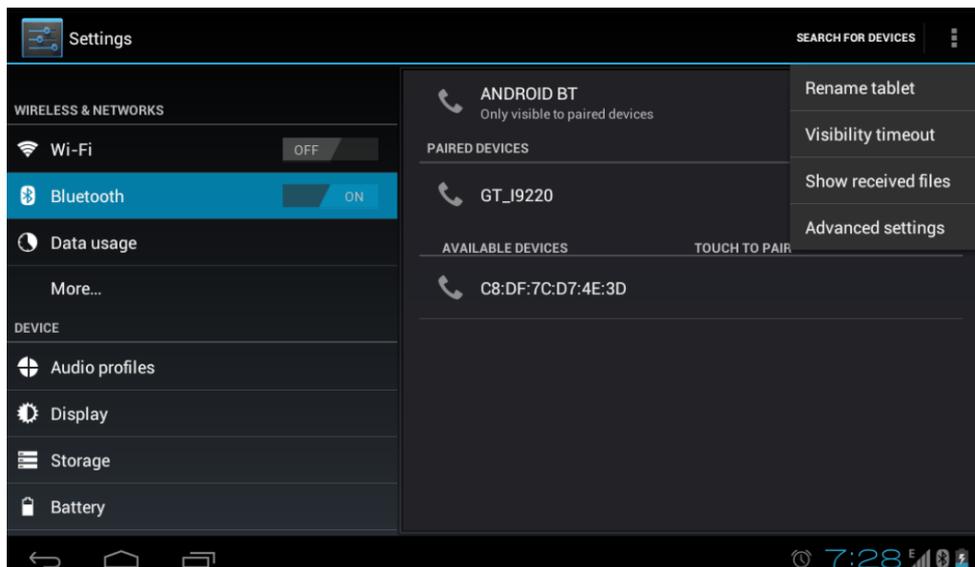

Open Bluetooth and choose your favorite link, enter password to connect with mobile

Or choose **SEARCH FOR DEVICES** to search manually. press **⋮** to enter Bluetooth advanced setting.


6.1.4 Display setting:

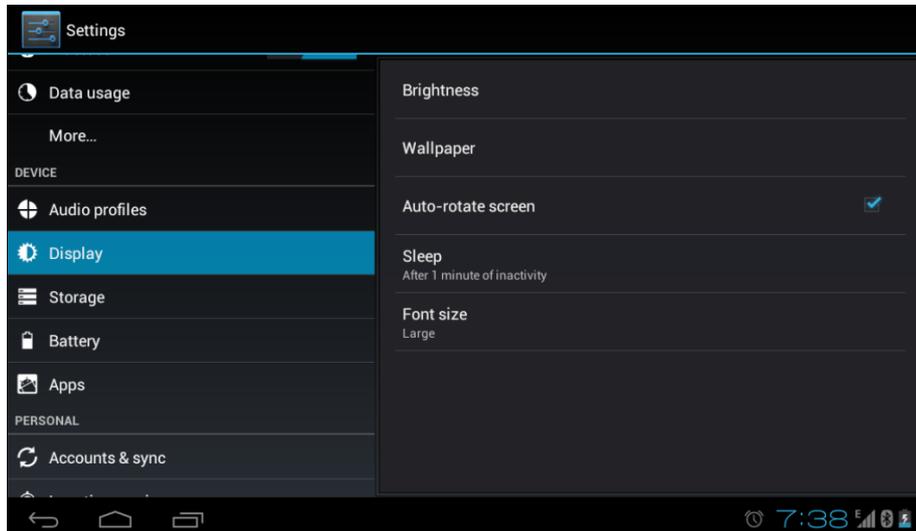


Brightness, wallpaper and auto-rotate screen can be set in display setting. choose  to open auto-rotate screen.

6.1.5 Location services


press  to enter location services:

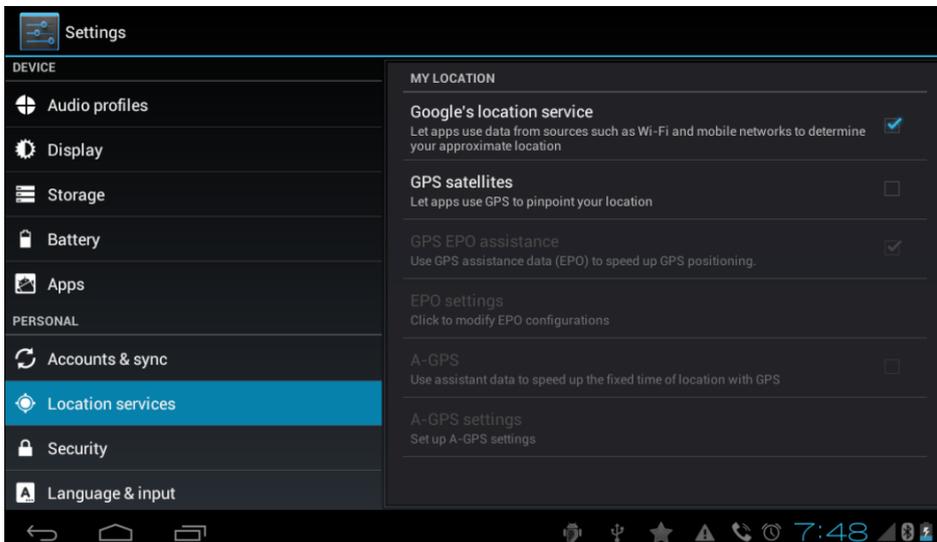

press  Security to enter security interface:

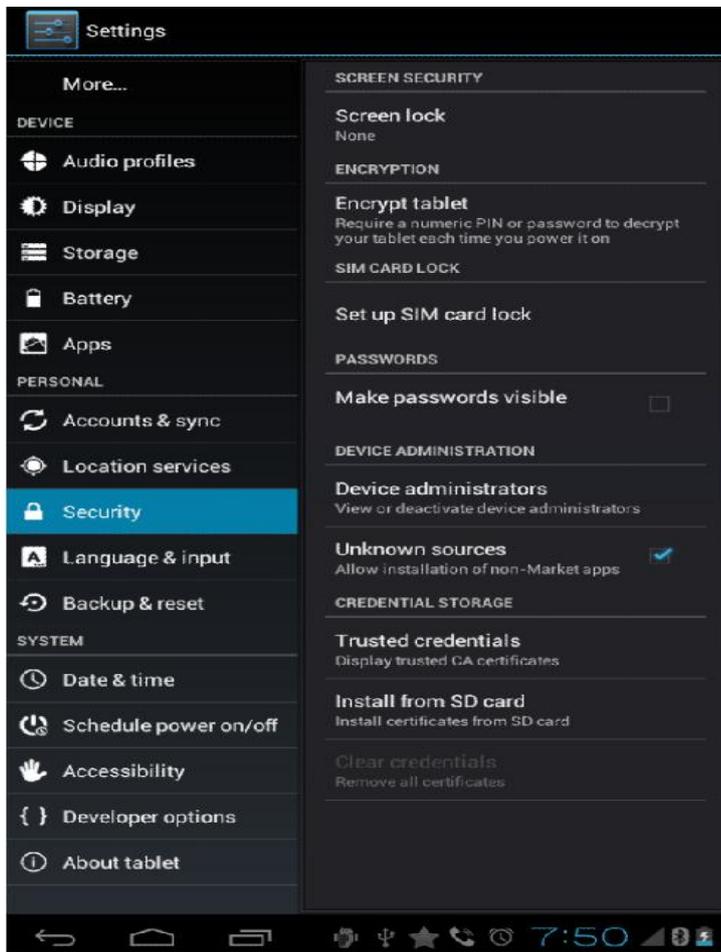


6.1.7 Backup and reset

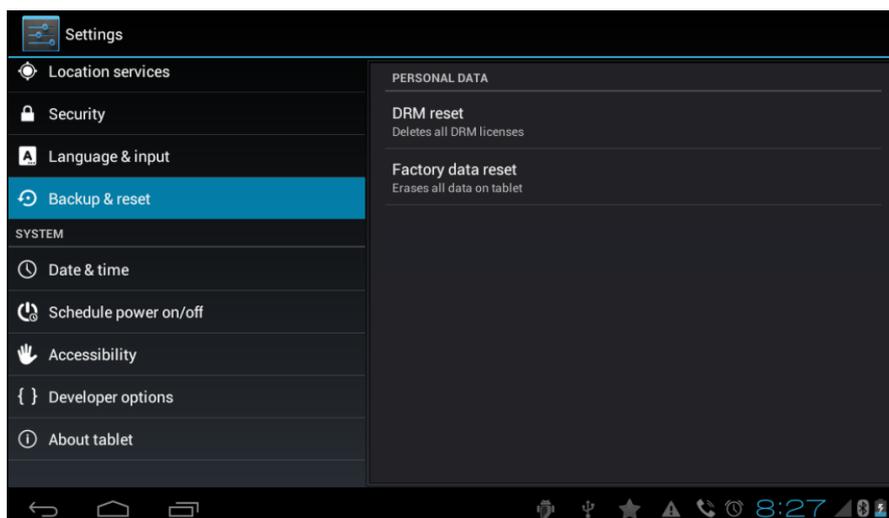

6.1.8 Storage


Press storage to enter setting interface, USB storage、total space etc will be show on screen

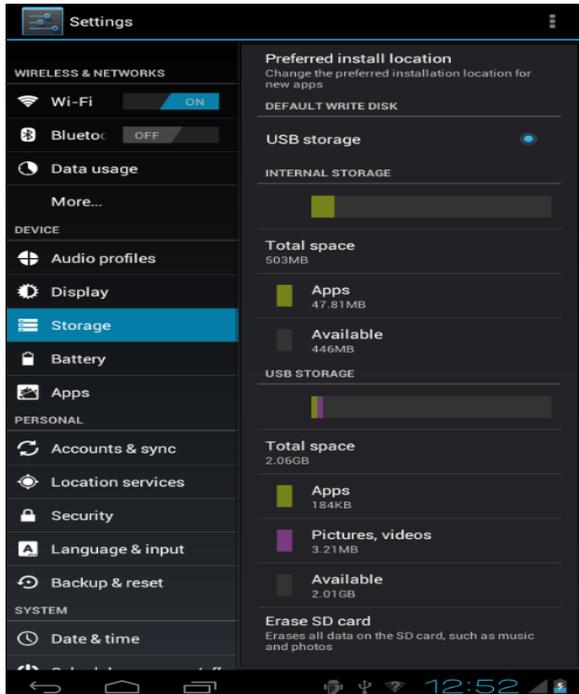


6.1.9 Language & input

Enter language & input to choose language:

- **Android keyboard settings:**

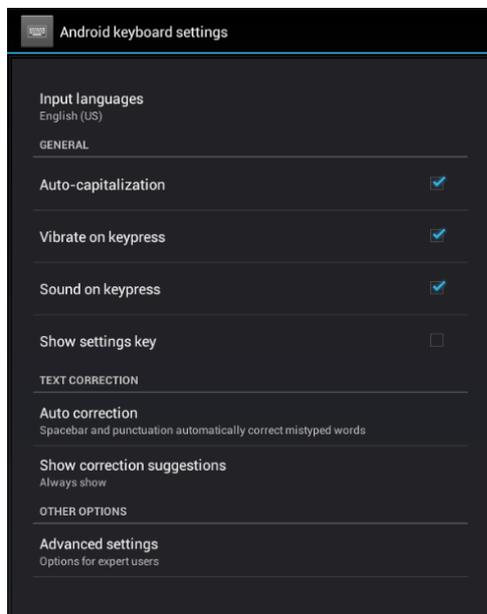


6.2.0 Date and time setting

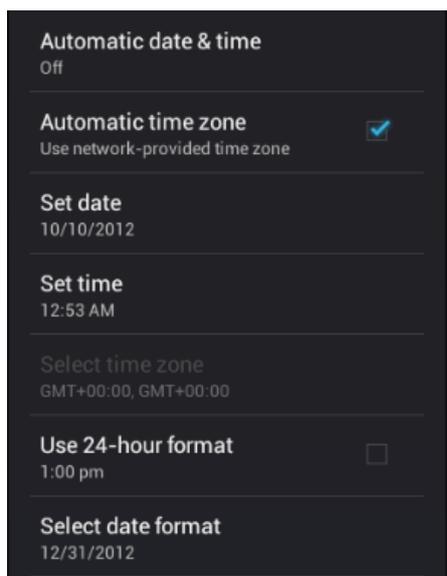

- **Date setting:**


press   to set and press  for ok

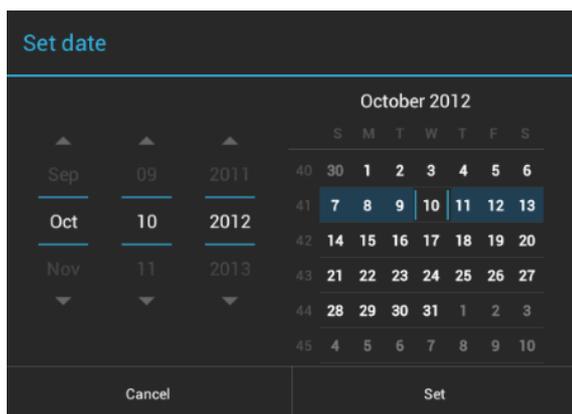


- **Time zone setting:**

Choose your favorite time zone:


- **Time setting:**

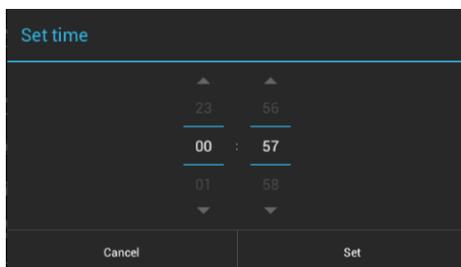

- **Select date format:**

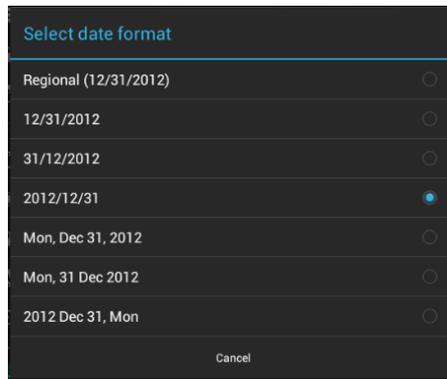

6.3.3 Small icons

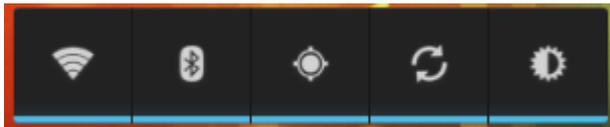

WiFi.



Bluetooth



GPS



updated



Brightness

 is open,  is closed

When brightness change to , auto brightness is open.