

TABBY Tablet PC

User Manual

Safety Precautions

On Battery

- Charge the battery only in temperature that ranges from 0°C to 35 °C.
- Do not charge Tablet PC if the battery is found damaged or leaking.

On Operation

- Never subject Tablet PC to extremes of light, temperature, moisture or vibration.
- Do not use or store Tablet PC in a location subject:
 - A. Extreme high temperature, such as in a sun-heated car.
 - B. Direct sunlight.
 - C. High humidity or places with corrosive substances.
 - D. Sub-zero condition, especially during winter.

On SD card

- After inserted a SD card, if the device has no response, please take out and insert again.
- Do not remove SD card or turn off Tablet PC during data writing or reading to prevent damage to data and to the device.
- Make sure the SD card is unlocked before writing or deleting data in the card.
- Backup your files and data before formatting the SD card. Please format the SD card in FAT.

Contents

SAFETY PRECAUTIONS	I
CONTENTS.....	II
CHAPTER 1 BASICS.....	1
PARTS AND CONTROL.....	1
PACKET CONTENTS	2
POWER ON AND OFF THE DEVICE.....	2
CHARGING THE DEVICE	2
TRANSFERRING CONTENTS.....	3
STAND BY /WAKE UP MODE.....	5
HOME SCREEN	5
MAIN MENU	7
TOUCH SCREEN OR BUTTONS	8
ONSCREEN KEYBOARD	9
CONNECTING TO THE INTERNET.....	9
SWITCHING SCREEN ORIENTATION	10
CHAPTER 2 GETTING STARTED	11
WEB BROWSER	11
WATCHING VIDEOS.....	14
PLAYING MUSIC.....	16
VIEWING PHOTOS	19
USING CAMERA.....	21
SOUND RECORDING.....	22
EMAIL.....	24
FILE MANAGER.....	26
MANAGING THIRD PARTY APPLICATIONS	30
ALARMS.....	31

 
Tabby

CHAPTER 3 SETTINGS	33
WIRELESS & NETWORKS	33
SOUND	34
DISPLAY	34
STORAGE	34
BATTERY	34
APPS	34
ACCOUNTS & SYNC	34
LOCATION SERVICE	34
SECURITY	35
LANGUAGE & INPUT	35
BACKUP & RESET	35
DATE & TIME	35
ACCESSIBILITY	35
CHAPTER 4 TROUBLESHOOTING	36
CHAPTER 5 APPENDIX	37
MAINTENANCE	37
PRODUCT SPECIFICATIONS	37
CERTIFICATION INFORMATION	39
COPYRIGHTS AND TRADEMARK NOTICE	40
DISPOSAL AND RECYCLING INFORMATION	41
DISCLAIMER	41

Chapter 1 Basics

TABBY is a Tablet PC with touch screen. It supports Wi-Fi function and third party software.

Parts and Control

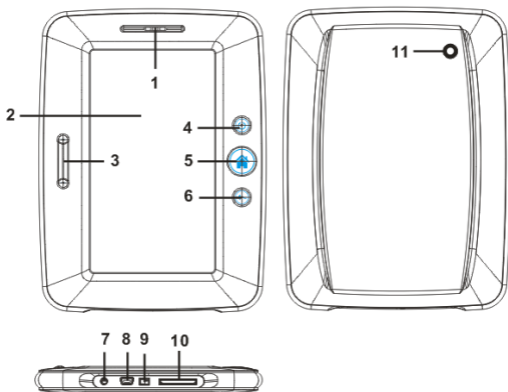

1. **Speaker**
2. **Display**
3. **Volume +/- button** – Press to adjust volume level.
4. **Power button** – Press and hold for 3 seconds to turn on.
5. **Home button** - Press to return to home screen.
6. **Return button** - Press once to return to previous screen, long press to return to home screen.
7. **Earphone jack**
8. **USB jack**- for charging or data transfer.
9. **Clip button**

Chapter 1 Basics

10. SD card slot

11. Camera

Packet Contents

- 1x Tablet PC
- 1x USB cable
- 1x User Manual

Power On and Off the device

- Press and hold the Power button for 3 seconds to turn the device on.
- It may take a moment for the device to turn on and load.
- Press and hold the Power button for 3 seconds to select **Power off**, then it will appear a confirmation window, tap **OK** to turn off the device.

Charging the device

- You need to charge the device prior to use it for the first time or when battery power is low.
- Charge the device using AC adapter with output 5V, 1.5A.
- Charging through PC may not be able to fully charge the device due to the low output charging current from PC USB port.
- Please turn the device to standby mode to shorten the charging process.

Chapter 1 Basics

- It will take about 4 hours to fully charge the device in standby mode (LCD off).
- When the power cable is connected to the device for charging, the device will enter into standby mode after remains idle for 60s. Press the [Power] button to wake up the device.
- The battery status is displayed at the top of the screen.



Battery full

Low battery



Charging

Transferring Contents

From Computer

- The device supports USB Mass Storage Device function.
- To import contents (ebooks, video, audio, photo etc) into the device, connect the device to PC via the supplied USB cable.
- Upon successful connection to PC, turn to the TABBY, on the status bar, flick upwards to display an ongoing list.
- Select “**USB connected**”, then tap on “**Turn on USB storage**” to enter USB mode and all operation will be halted.
- Go to [**My Computer**], double click on the device’s disk to open.
- Perform normal file management operation like other USB device.

 
From memory card

This unit supports SD card up to 32 GB

To insert a Memory card

First open the door of the jacks/slots at the bottom of the unit.

Insert the card correctly with the contact pin facing downwards as illustrated below. Pushing the card into the SD card slot, then you should hear a click when the card is seated correctly. You may damage the

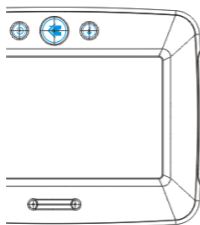

card and the device if SD card is not inserted

correctly.

To remove SD card, push the card once again until it clicks.

When a SD card is inserted in or ejected from the device, it may take few seconds for the device to update the content. Please avoid inserting or ejecting SD card when other operation is running as this may cause the system hang.

- Do not remove the card if the content inside the card is being played. This will halt the operation of the device and cause the device to restart.
- If the system is not responding, press **Power** button for 6 seconds to reset.

Chapter 1 Basics

Stand by /Wake up mode

Press **Power** button to enter Stand by mode, then the device locks automatically.

Locking the device turns off the display to save your battery and to prevent unintended operation of the device.

To wake up the device, press **Power** button again, then press the Lock button and drag the slider.

Home screen

When the device is turned on, it will enter into the Home screen.



Menu bar


1. Search bar for web browser
2. Main menu button
3. Widget & Shortcut button

Chapter 1 Basics

4. Return button
5. Home button
6. Running application
7. Volume - button
8. Volume + button
9. Option Menu button

Status bar


10. USB connection
11. USB debugging
12. Memory card indication
13. Time Display
14. Wi-Fi connection
15. Battery indicator

Flick upwards at the status bar to display an ongoing list, tap  to display more status information.

Customizing Home screen

Adding icons on homescreen

You can add shortcuts, widgets or folders to home screen.

To add icons on screen, tap  to enter Main menu, press and hold on the desired options to go to homescreen, then drag the icon to the desired place.

Chapter 1 Basics


Moving icons on the home screen

1. Touch and hold the icon to be moved until you see a shadow of the icon.
2. Drag the icon to the desired place.

Removing icons on home screen.

Touch and hold the desired icon to be removed until it appear a “X” at the top screen, then drag the icon on “X”, when the icon turns red, release it to remove.

Setting wallpaper for homescreen

Tap  → **Wallpaper**, select the desired picture as wallpaper.

About the additional home screen

You can use up to five screens. Flick left or right to go to other home screen.

 
Go to the first Home screen: press the **Home** button.

Main menu





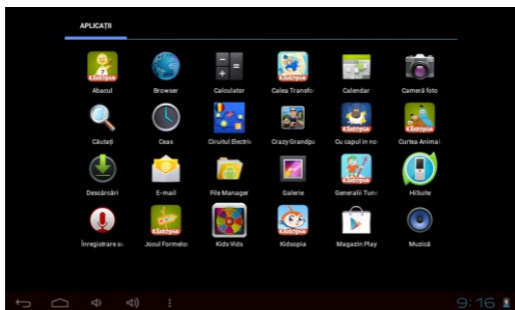

All application icons are on the Main menu.

- On homescreen, tap  to show the Main menu.
- Tap an icon on the Main menu to open the desired application.

Chapter 1 Basics



Touch screen or buttons

- Tap an icon to open an application.
- Tap at the bottom of the screen to display the menu bar.
- At the Menu bar, tap  anytime to return to previous screen, press and hold to return to Home screen.
- Tap  anytime to return to Home screen.
- Tap  on the screen anytime to display the option menu.
- Tap  to show the running application.
- Tap  /  to adjust volume level.

Chapter 1 Basics

Scrolling

- Drag your finger up and down to scroll file list.
- Flick to scroll quickly.
- On webpage, drag up and down to scroll around the page (be care for so as not to click the link) .
- Tap or touch anywhere on the screen to stop it immediately.

Onscreen keyboard

Use the onscreen keyboard to enter text, such as text messages, or web addresses.

- Tap a text field to bring up the keyboard.
- Touch and hold on the text field to select an input method.



Uppercase key



Backspace key



Enter key



Input options



 
Numeric/punctuation/symbol key

Connecting to the internet

Turn on Wi-Fi: From Main menu choose **Settings**→**Wireless&networks**→**Wi-Fi**, and tap the other end next to “**OFF**”. Then “**ON**” will appear when you have turn on the Wi-Fi.

Chapter 1 Basics

Join a Wi-Fi network: From the detected network list, select a network, if necessary, enter a password and tap "**Connect**" to save the settings for the encrypted connection and connect to Wi-Fi. (Networks that require a password appear with a lock icon).

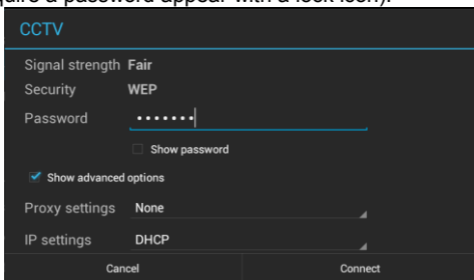

Select "**show advanced option**" to show more options.

Once you've joined a Wi-Fi network manually, it automatically connects to it whenever the network is in range.

Switching Screen orientation


Screen orientation can be set to vertical or horizontal via the built-in G sensor.

- From Main menu, tap **Settings** → **Display**, select **Auto-rotate screen**.
- Rotate the unit and the screen rotates too, automatically adjusting to fit the screen.

Web browser



View a webpage


- From **Main menu**, tap **Browser** to open web browser.
- Tap the address bar at the top of the screen.
- On address bar, type the web address and tap **Enter**.
- Tap the link on the webpage to open a new webpage.
- Drag up and down to scroll around the webpage.
- Double tap or pinch on the webpage to zoom in or zoom out.
- In zoom mode, drag left, right, up,down to move the webpage.
- The multiple webpage windows opened at a time are shown on the top screen. Tap on the desired window to enlarge to full screen mode.
- To return to the previous page, tap the  button.

Chapter 2 Getting Started


Notice:

- To switch screen orientation, rotate the unit.
- Browser start page always defaults to Google home page.


Add bookmark

Tap  to add the current visited webpage as bookmark.



Bookmarks List

Tap  to show bookmarks list, tap a bookmark to open the webpage. Touch and hold the bookmark to display the option menu for bookmark.


- History

Access to view history lists. To remove these lists, tap , then select **Clear history**.

- Settings

Tap  →  to use more available function, including Privacy & security, Accessibility and so on.

Refresh/Stop


Tap  to refresh on the current page, tap **X** to stop loading the current page.

 
Forward

Tap  /  **go to previous/next webpage screen.**

Chapter 2 Getting Started

Using the option menu

Tap  to display the browser option menu. Tap on the desired item to use webpage viewing control.

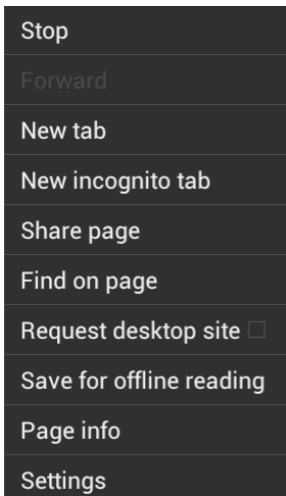

Watching Videos

 







Playing videos

 



- On the **Home screen** or **Main menu**, tap **Gallery**→**Video folder** to open video player.
- Drag up and down to scroll through the file list.
- Tap to select a video file for playback.
- Touch and hold on the selected video file to delete it.

Controlling Video Playback

When playing video, tap on the screen to pop up control toolbar.

Play or Pause a video	Tap  /  .
Play previous/next video	Tap  /  .
Fast rewind or fast forward	Touch  and hold  .
Skip to any point in a video	Tap anywhere or drag the playhead on the progress bar.


Chapter 2 Getting Started

Adjust the volume level.	Tap  /  or use the buttons on the side of TABBY.
Display video menu	Tap  .
Return to the video browser screen	Tap  .

Notices:

- If a bookmark is added, it allows you to continue playing from the bookmark when you open the video file next time.
- Video player supports subtitle file, please load the subtitle file to be displayed on the current video, unless the subtitle is integrated into the video itself.
- The Tablet PC supports subtitle of sub, ssa, srt, lrc format, encoded in UTF8 format.
- The file name of the subtitle must be identical to that of the video file. The subtitle will be loaded automatically during video playback.

Using video playback menu

During the video playback, tap  to display the Playback menu.



Tap on the option icon to use more video playback control, such as set full screen ratio, Subtitle, 3D mode and so on.

Chapter 2 Getting Started

Playing Music



About music library

From **Main menu**, tap **Music** to enter into music library.



Sorting by artist



Sorting by album



All songs



Sorting by Playlist






Return to Now playing screen

 
Chapter 2 Getting Started





Playing songs

1. From Home screen or **Main menu**, tap **Music** to enter music library.
2. Tap on a desired tab to enter song list.
3. Drag up and down to scroll the song list.
4. Tap the desired songs to start playing.

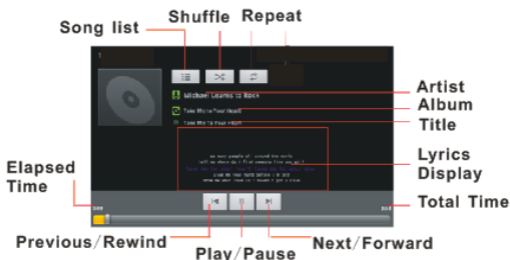


 







Note: If you want to exit music mode, tap  to pause, then tap  or .

Controlling Song Playback



Pause or play songs.	Tap  /  .
Play previous or next song.	Tap  /  .

Chapter 2 Getting Started

Fast rewind or fast forward	Touch  and hold  .
Skip to any point in a song	Tap anywhere or Drag the playhead on the progress bar.
Adjust the volume level.	Tap  /  button or use the volume buttons on the unit.
Display the current song list	Tap  .
Set shuffle mode	Tap  .
Set Repeat mode	Tap  .
Display the music playback menu	Tap  .
add the current playing song to playlist	Tap  → Add to playlist.
Delete the current song	Tap  → Delete.
To return to the Media Library	Tap  .

Chapter 2 Getting Started

Using the playlist

Use the playlist to manage the songs in the library

Creating a new playlist

In the music playback screen, tap →



→ **New**, and enter the name for the new playlist, then tap **Save**.

Adding the current song into playlist

In the music playback screen, tap



Tap on a desired playlist, then the current song has been added into the selected playlist.

Viewing photos

 



On the **Home screen** or **Main menu**, tap **Gallery** → **Photo folder** to view photo.

Thumbnail View

Thumbnail view displays the catalog as a table of thumbnail images in adjustable sizes.

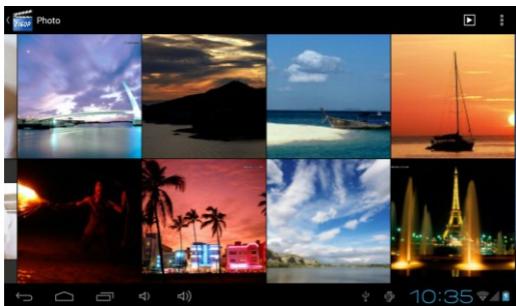


Chapter 2 Getting Started









- Tap on the desired photo to full screen view.
- In full screen mode, tap  to return to thumbnail view mode.

Start to view photo

Tap on the screen to show / hide the control bar.

View the previous / next photo.	Flick Left/Right on the screen.
Zoom in or zoom out	Use two fingers to pinch on the viewing screen.
Set slide show effect	Tap  → Slideshow
Edit the picture	Tap  → Edit
Rotate the photo by 90 degrees clockwise, counterclockwise	Tap  → Rotate left/Rotate right.

Chapter 2 Getting Started

Crop the picture	Tap  → Crop.
Set the photo as wallpaper	Tap  → Set as picture wallpaper.
Display photo information	Tap  → Details
Share the photo with others.	Tap  .
Delete or save photo	Tap  .
Return to thumbnail mode.	Tap  .



Notes:

- In zoom in /out mode, drag your finger up, down, left or right to move photo.
- Rotate the unit to switch screen orientation.

Using Camera



 


From **Main menu**, tap **Camera** to enter camera mode.




- Tap  to select Camera mode, tap  to

Chapter 2 Getting Started




switch to Camcorder mode

- Tap  to preview on taking photo or recording video.
- Press  to take photo or record video, and photo/video file will be saved automatically.
- Tap  to display setting menu.
- Tap the thumbnail icon at top right to view the photo or play back the video.
- Press the **Return** button to exit from the camera mode.

Camera settings

- Tap  to set White balance.
- Tap  to set Exposure.
- Tap  to set Store location/ Picture size.

 
Camcorder settings

- Tap  to set White balance.
- Tap  to set Time lapse interval.
- Tap  to set Store location.




Sound Recording

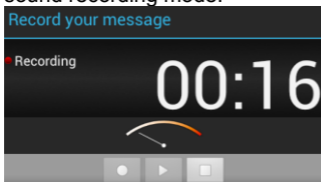

From **Main** menu, tap **Sound Recorder** to enter sound recording mode.



Recording a voice file

- Press  to start recording a voice file.
- Press  to stop recording.
- Press  to play back the current recorded voice file.
- It will display a message window to choose **“Done”** or **“Discard”**, choose **“Done”** to save the voice file; choose **“Discard”** to discard the voice file.

Chapter 2 Getting Started

- A recording time indicator will appear during the recording.
- Repeat the above steps to record more voice files.

Play back the voice file

- The record is saved in Record folder, open “Explore”, then open Record folder, tap on the desired recorded file to be played .

Gmail



Setting up Gmail Accounts

Prior to the use of e-mail, you need to set up the mailbox account.

1. From **Main menu**, tap **Gmail→Sign In**.
2. Enter your user name and password, tap **Sign In** to continue.

Chapter 2 Getting Started

3. Set P03/IMAP server (If necessary, obtain the required information from your network administrator, then tap **Next** to check server setting.

Using the mailbox



- In the mailbox, drag up and down to scroll the mail list.
- Tap to open the mail you want to read.
- On the mail list, touch and hold on the mail to display option menu.
- Use the option menu, the available options are: Read, Archive, Mute, Mark read, Delete, Add bar, Change labels.

- **About the Mail menu**

In the mail list, tap  to display a mail menu.

- Refresh: Refresh Mail
- Compose: Write a new mail
- Account: View all e-mail accounts
- Go to labels: go to home screen of the Gmail
- Search: Search for the desired mail
- Setting: Set email account

Delete mail account

1. In the mail list, tap  to display a mail menu.
2. Tap **Accounts** to display email account.
3. Tap  to display a option menu, select **Account settings**.

Chapter 2 Getting Started

4. Tap on the mail to be deleted to go to next screen, then tap on **Remove account**.

Notice:

- You can set multiple mail accounts, tap Add account.
- Each time you use mail, the system will automatically jump to the default account.

File Manager



- From **Main menu**, tap **File Manager**.
- Tap to select **Internal / SD card memory/USB** at the top bar to enter.
- Drag up and down to scroll through the file list to select the desired folder or file.
- Touch and hold the selected file or folder show the edit menu.
- To open a file or folder, tap on the file or folder.

Chapter 2 Getting Started

About the tool bar and the Edit menu

Tool bar



back



SD card memory



Sort by picture



Tool box



Internal memory



USB storage



Sort by video



Multiple selection

Edit menu

Touch and hold on the selected file or folder to show the Edit menu.

File Edit menu

File Operations

Delete File

Rename File

Copy File

Move(Cut) File

Email File

Folder Edit menu

Folder operations

Delete Folder

Rename Folder

Copy Folder

Move(Cut) Folder

Zip Folder


Paste into folder

Extract here


Chapter 2 Getting Started

Select multiple files or folders

You can select multiple files or folders at the same time.

1. On the Tool bar, tap  .
2. Tap the desired files/folders to be selected, then they will be marked with a “√” . To cancel the selected items, tap on them again.

Copy / move files or folders

1. From the file list, tap  to select the desired files/folders to be copied or moved, then select **Move** or **Copy**.
2. Go to the target folder that you want to put the selected file or folder, touch and hold to show the folder Edit menu .
3. Select **“Paste into folder”**.


Note: it may take longer time to paste files/folder with big file size.

Rename the file or folder

1. From the file list, touch and hold the desired file or folder to show the edit menu, select **Rename Folder/file**
2. In file name field, use Onscreen keyboard to enter a new file name.
3. Tap **Rename** to confirm.


Chapter 2 Getting Started

Delete files or folders


1. From the file list, tap  to select the desired files/folders to be copied or moved, then they will be marked with a “√”.
2. Select **Delete** to display a message window..
3. Select **Delete** to confirm the deletion.

Note: if only copy/move/delete one file/folder, you can touch and hold the desired file or folder to show the Edit Menu, then follow the above steps to do.

Attach file/folder via email


1. From the file list, tap  to select the desired files/folders to be copied or moved, then they will be marked with a “√”.
2. Select **Attach**.

Using the option menu

In file manager screen, tap  to show the option menu.




Creating a new folder

1. Go to the desired mother directory.
2. Tap  → **New Directory**.


Chapter 2 Getting Started

3. In file name field, use Onscreen keyboard to enter a new directory name.
4. Tap **Create** to confirm.

Searching for a file

1. On file manager screen, tap  to show the option menu.
2. In file name field, use Onscreen keyboard to enter the desired file name.
3. Tap **Search** to start searching for the desired file.

Configuring the settings for file manager.

1. On file manager screen, tap  → **Settings**.
2. Choose the desired item on Display and Sorting to start setting.

Managing third party applications

This unit support third party applications (such as MSN, etc.), you can install or uninstall applications for the system.

Download and install the application

1. Download the desired applications into your computer.
2. Copy the downloaded applications to the unit (you can also download the desired applications from the browser in your TABBY Tablet.).
3. Disconnect this unit from the computer.

Chapter 2 Getting Started

Note: The system only supports XXX.apk format applications to be installed.

4. From **Main menu**, tap

Settings→**Security**→**unknown source**.

5. In Explorer, find the directory where the application is placed to tap to start the installation.

6. After finishing the installation, you will see the Applications on the Main menu.


Uninstall application

1. From the **Main menu**, then tap **Settings**→**manage applications**. if

2. Select the application you desire to uninstall, then tap **Uninstall**.

Note: The default applications can't be uninstalled from the unit.



From Main menu, tap **Clock** →  **Set alarm** to start clock alarm setting.

Set an alarm:

On clock setting screen, tap "**Add alarm**" to start to alarm setting.


Note: You can set multiple alarms.

Adjust any of the following settings:

Chapter 2 Getting Started

- Tap **Time** to set the alarm time, tap + or - button to adjust the desired hours and minutes. then tap **Set** to confirm.
- Tap **Ringtone** to choose the ringtone that sounds when the alarm goes off.
- Tap **Repeat** and choose the days to set the alarm to repeat on certain days.
- Tap **Label** to give the alarm a description. It displays the label when the alarm sounds.

If at least one alarm is set and turned on, it will appear “**Alarm set:Time**” on home clock screen.

Turn an alarm on or off: tap the  next to the desired alarm to turn the alarm on or off. If an alarm is set to sound only once, it turns off automatically after it sounds. You can turn it on again to reenale it.

Change settings for an alarm: tap the time of the desired alarm to be changed.

Delete an alarm: tap the time of the desired alarm to be deleted, select **Delete** to delete the alarm.

Chapter 3 Settings



From Home screen or Main menu, choose **Settings**, then tap the desired items to be configured to start the Setting.

Wireless & networks

The Wi-Fi settings allow you manage networks, such as turn Wi-Fi on and join Wi-Fi networks.

Turn on Wi-Fi: From Main menu choose **Settings**→**Wireless & networks**→**Wi-Fi**, and tap the other end next to “**OFF**”. Then “**ON**” will appear when you have turned on the Wi-Fi.

Join a Wi-Fi network: From the detected network list, select a network, if necessary, enter a password and tap “**Connect**” to save the settings for the encrypted connection and connect to Wi-Fi. (Networks that require a password appear with a lock icon).

Select “**show advanced option**” to show more network control options.

If more than one previously used network is in range, MDTabby joins the one last used.

When MDTabby is connected to a Wi-Fi network, the Wi-Fi icon at the top of the screen shows connection strength.

Tap **More** to use more wireless network control

Chapter 3 Settings

including setting Airplane mode, Ethernet network setting, VPN settings, Portable hotspot.

Sound

Customize the sound settings, including the settings for Volumes, Default notification, Vibrate and ring, Touch sounds, Screen lock sound and Vibrate on touch.

Display

Customize the display settings, including the settings for Brightness, Wallpaper, Auto-rotate screen, Sleep, Font size, Accelerometer coordinate system and screen adaption, G Sensor Auto Zero.

Storage

View the memory status of SD card and internal storage, format SD card memory.

Battery

View the battery status of Tabby.

Apps

Allows you to manage the applications sorted by Download, On SD card, Running and All.

Accounts & sync

Allows you to add new account and sync all the accounts.

Location service

Let apps use data from sources such as Wi-Fi and mobile networks to determine you approximate location. Moreover, let Google use your location to improve search results.

Chapter 3 Settings

Security

Allows you to set Screen security, Encryption, Passwords, Device administration and Credential storage.

Language & Input

Set region and language, keyboard, text input methods, speech, Mouse/Track pad.

Backup & reset

Allows you to backup account, app data, Wi-Fi passwords, and other settings to Google servers. Additionally, you can erase all data on MDTabby and reboot into the system in Recovery mode.

Date & Time

Set date, time, time zone and display format.

Accessibility

Allows you to install web scripts, set large text, auto-rotate screen feature, speak passwords, touch and hold delay.

Chapter 4 Troubleshooting

If the device does not function as it is expected, please try the following steps.

The device is not responding or can't be turned on.

- Reset the device by pressing the **Power** button for 6 seconds. The device will be forced shutdown if it is on and you are required to restart the device again.
- Battery has been fully depleted. Please charge the device via USB or USB AC Adapter.

Battery Life seems short

- The operating temperature is below 5°C, this is due to the characteristics of battery and not a malfunction.
- The battery is not used for prolonged period. Please recharge the battery of the device again
- The battery is not fully charged. Please charge the device for 4 hours.
- The battery needs to be replaced. Please consult the authorized dealer for service.

The device can not be operated during USB connection

- The device cannot be operated while it is connected to PC.
- At status bar, flick upwards to display a Ongoing list, then select "**Turn off USB storage**" to resume operation.

Maintenance

- If Tablet PC does get wet, turn off Tablet PC immediately. Wait for Tablet PC to dry completely before turning on again.
- Clean the screen with a soft cloth; be careful not to wipe it with anything abrasive. When carrying your Tablet PC in bag, keep Tablet PC in the protecting case supplied to avoid scratches.
- If Tablet PC needs service, please consult the authorized dealer through the contact information provided in the warranty card. Faulty service may void the warranty.

Product Specifications

Display

7 inch TFT-LCD Display, 1024x600 pixels
High resolution capacitive multi-touch screen

Wifi

802.11 b/g

System Properties

Processor :A10

Architecture :Cortex A8 (1GHz)

RAM Memory :DDR3 1GB

Operating System:Android 4.04

Storage memory

Built in memory: Up to 32GB
Supports SD card up to 32GB.

Media File Format supported

Ebook: PDF, TXT, CHM, DOC, DOC, Exel, Epub, RTF, FB2

Audio: MP3, WMA, APE, FLAC, AAC, AC3, WAV, OGG

Photo: JPG, PNG, BMP, GIF, TIF

Video: HD2160P: AVI, MPG, MKV, RM, RMVB, MP4, MOV, VOB, DAT, FLV, TS, 3GP, WEBM (VP8) etc.
1080P decoder

Connectivity

Data transfer: Mini USB 2.0 High Speed

Audio: 3.5mm audio jack

Record : Microphone

Storage: SD Card

Miscellaneous

Built in speaker

G sensor

Web Camera

Voice recording

Clock / Date

Real time battery indication

Battery life

Reading – more than 6 hours

Music – up to 10 hours(with backlight off)

Video- more than 4.5 hours

Web browsing : more than 4.5 hours

Standby time : 7 days

Charging

Power: DC 5.0V, 1.5A

Duration: 4 hours (approx)

Physical properties

Dimension: 211.9 x 157.7 x 16.7(17.9)mm

Weight: 465g (approx)

※ Design and specifications are subject to change without prior notice

Certification information

On FCC

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment

and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THE DEVICE. ANY SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

On CE



The symbol means that the unit complies with European safety and electrical interference directives.

Copyrights and Trademark Notice

Copyright laws prohibit copying the data of this product or the contents of this manual (illustrations, related documents, etc.) in whole or in part without the permission of the copyright holder. Additionally, use of the data of this product or the contents of this manual is not allowed without vendor's permission except for personal use.

All the brand and product names are trademarks of their respective companies.

Disposal and Recycling Information

Your Tablet PC must be disposed of properly according to local laws and regulations.

Because this product contains a battery, the product must be disposed of separately from household waste. When your Tablet PC reaches its end of life, contact your local authorities to learn about recycling options.

Battery Replacement:

The rechargeable battery in it should be replaced only by an authorized service provider.



This symbol on the product or in the instruction means that your electrical or electric equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU, For more information, please contact the local authority or your retailer where you purchased the product.

Disclaimer

All the information, design and specifications contained in this manual were correct at the time of publication. However, as the product is under continuously upgrading, the final device may have a slightly difference in appearance or modified functionality than presented in this manual.