

Evobook3

USER MANUAL



Safety Precautions

On Battery

- Charge the battery only in temperature that ranges from 0 to 35 degree Celsius.
- Do not charge reader if the battery is found damaged or leaking.

On Operation

- Never subject reader to extremes of light, temperature, moisture or vibration.
- Do not use or store reader in a location subject:
 - A. Extreme high temperature, such as in a sun-heated car
 - B. Direct sunlight
 - C. High humidity or places with corrosive substances
 - D. Sub-zero condition, especially during winter.

. On micro SD card


- After inserting a micro SD card, if the reader has no response, please take out and insert again.
- Do not remove micro SD card or turn off reader during data writing or reading to prevent damage to data and to the reader.
- Make sure the micro SD card is unlocked before writing or deleting data in the micro SD card.
- Backup your files and data before formatting the micro SD card. Please format the micro SD card in FAT.

Contents

SAFETY PRECAUTIONS	I
CONTENTS.....	II
CHPATER 1 BASICS.....	1
PARTS AND CONTROL	1
POWER ON AND OFF THE READER.....	2
CHARGING THE READER	3
IMPORTING CONTENTS	4
IMPORTING DRM CONTENTS	5
HOME SCREEN	10
MAIN MENU	11
ONSCREEN KEYBOARD.....	14
CHPATER 2 GETTING STARTED.....	15
READING BOOKS.....	16
VIEWING PHOTOS.....	22
FILE EXPLORER	24
CHPATER 3 SETTINGS	24
POWER SETTINGS	25
DATE & TIME.....	25
SYSTEM LANGUAGE	25

FORMAT DEVICE	25
RESTORE DEFAULT SETTINGS	25
DEVICE INFORMATION	25
DRM AUTHORIZATION INFORMATION	25
CHPATER 4 TROUBLESHOOTING	25
CHPATER 5 APPENDIX	26
MAINTENANCE	27
PRODUCT SPECIFICATIONS	27
CERTIFICATION INFORMATION.....	ERROR!
BOOKMARK NOT DEFINED.	
COPYRIGHTS AND TRADEMARK NOTICE ...	ERROR!
BOOKMARK NOT DEFINED.	
DISPOSAL AND RECYCLING INFORMATION	ERROR!
BOOKMARK NOT DEFINED.	
DISCLAIMER.	ERROR! BOOKMARK NOT DEFINED.


Parts and Control

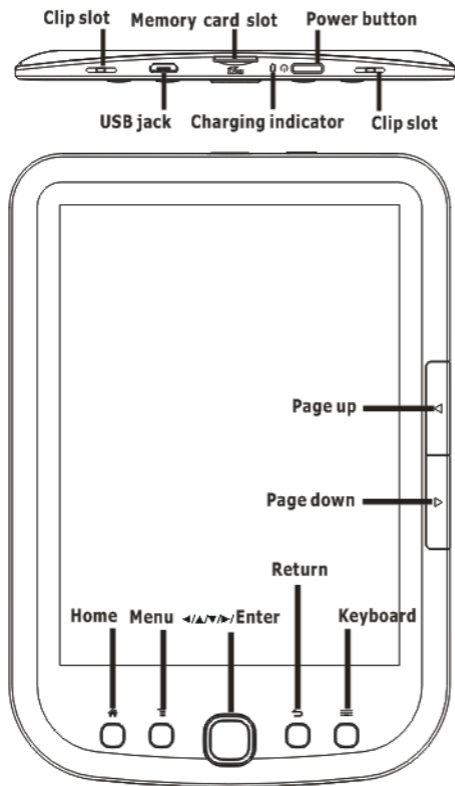

Clip slot – to insert the clip button for protective cover.

Power button – press and hold for 3 seconds to turn on/off.
Press and hold for 3 seconds to restart.

 **Enter button**

-  : the directional buttons, press up/ down/ left/ right to move cursor.
- **Enter button**: Press to confirm or cancel.

Home button – press to return to home screen.

Menu button – press to display option menu.

Return button – press once to return to previous menu,
press and hold to return to Main menu.

Keyboard button – press to display/hide the keyboard.

Micro USB jack – for data transfer and emergency charging.

Power On and Off the Reader

- Press and hold the **Power** button for 3 seconds to turn on reader.
- It may take a few moments for reader to turn on and load the content.
- If Reader does not turn on, charging is required.
- To turn off reader, press and hold the **Power** button for 3

Seconds again.

Charging the Reader

- You need to charge the reader prior to using it for the first time or when battery power is low.
- Charge the reader using AC adapter with output 5V, 1.5A.
- Charging through PC may not be able to fully charge the reader due to the low output charging current from PC USB port.
- Please turn the reader to standby mode to shorten the charging process.
- It will take about 4 hours to fully charge the reader in standby mode .
- When the reader enters into standby mode, press the **Power** button to wake up the reader.
- The battery status is displayed at the bottom left corner. The status is shown as below:



Low battery



Charging



Battery full

Importing contents

From Computer

- The Reader supports USB Mass Storage Device function.
- To import contents (ebooks, photo etc) into the reader, connect the reader to PC via the supplied USB cable.
- Upon successful connection to PC, the reader will enter USB mode and all operation will be halted.
- Go to [My Computer], double click on the reader's disk to open.
- Perform the file management operation like USB device.

From memory card

This unit supports micro SD card up to 32GB.

To insert a memory card

Insert the card correctly with the contact pin facing downwards as illustrated below. Pushing the card in, then you should hear a click when the reader is seated correctly. You may damage the card and the reader if micro SD card is not inserted correctly.



To remove micro SD card, push the card once again until it contact the back of the slot.

When the card is inserted or removed, it will take several seconds to load.

Please avoid inserting or ejecting the card when other operation is running as this may cause the system hang.

Do not remove the card if the content inside the card is being played. This will halt the operation of the reader and cause the reader to restart.

Importing DRM Contents

The Reader supports Adobe DRM contents. Adobe Digital Editions (ADE) is required.

Installing Adobe Digital Editions (ADE)

- The ADE installer is preloaded into the computer.
- Make sure your computer is connected to internet.
- Double click on the ADE installer file to start the installation.


Alternatively, you can download the installer from <http://www.adobe.com/products/digital-editions/download.edu.html>.

 
Authorizing PC and Reader

Authorizing your PC and reader with an authorization ID enables you to easily transfer Adobe DRM protected items between your ADE library and this device.

- Launch the **Adobe Digital Editions (ADE)**.

Chapter 1 Basics


- Connect the reader to computer, make sure it is in USB mode(Data transfer mode), ADE will automatically detect the presence of your device.
- The reader will be recognized in “**Devices**” at the top left of ADE window.
- To authorize PC and reader, click on **Devices** “**EVOBOOK 3**” →  → **Authorize Device**, as the below figure shown:

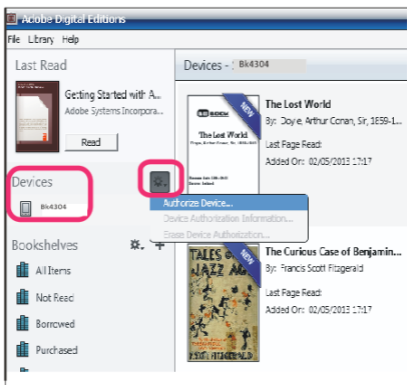

- After authorization, you will be able to find the Reader content recognized in ADE. Click on **Devices** “**EVOBOOK 3**” , contents inside the Reader will be displayed on the right of windows.

Chapter 1 Basics

- For first time user, you will need to get a free adobe ID from adobe website, click on the **“Create an Adobe ID”** link.
- Enter your email address and complete the online form as per instructed.

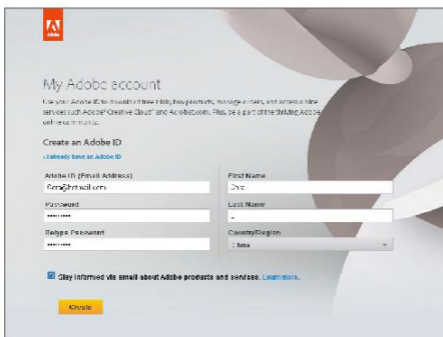



The screenshot shows the Adobe website's 'My Adobe account' page. At the top left is the Adobe logo. Below it, the heading 'My Adobe account' is followed by a brief description of the account's purpose. The main section is titled 'Create an Adobe ID' with a link for users who already have an account. The form contains several input fields: 'Adobe ID (Email Address)' with the value 'Cnn@fhtmail.com', 'Password' (masked with dots), 'Repeat Password' (masked with dots), 'First Name' with the value 'Dip', 'Last Name' (empty), and 'Country/Region' with a dropdown menu showing 'India'. A checkbox for 'Stay informed via email about Adobe products and services' is checked, with a 'Learn more' link. A yellow 'Create' button is at the bottom.

- Upon registration, return to the ADE window. Enter the user name and password, click on **“Authorize device”**.
- You can now start downloading or buying ebooks from online Ebook stores supporting Adobe DRM.
- Choose a file folder to store the Purchased or downloaded ebooks link, open the desired books using ADE to import the ebooks into ADE library. You can find your ebooks in the **“My Digital Editions”** folder in your computer's documents folder.

Chapter 1 Basics

Transferring DRM ebooks to Reader


- From ADE menu, click on [All Items] on the left column.
- Items in ADE library will be listed down in right window.
- Select the desired item(s) to be transferred, <Ctrl> + <Left click> to select multiple ebooks.
- Drag and drop the selected item(s) into the **Devices** “**EVOBOOK 3**” located on the left side column, until the mark “” near the mouse pointer is changed into “”, release the mouse button, as illustrated below.



You can also right click on the selected items, and from the Edit menu, choose “**Copy to Computer/Device**”→ “**EVOBOOK 3**”.

Chapter 1 Basics

The transfer is in process, as illustrated below.

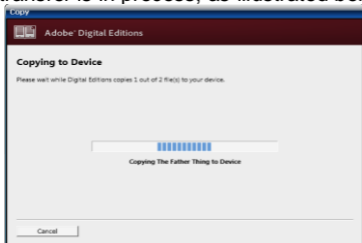

When the books are transferred successfully, they all will be stored in [Digital Editions] folder of EVOBOOK 3 reader's disk.

Notes For using ADE

Each ADE ID supports only 6 devices, this includes the master device (the reader) and the slave device (Micro SD card).

When the reader is restored to default settings, ALL DRM activation record and data (including DRM books purchased) will be erased from the reader. You are required to authorize the device with your ADE ID again.

When the number of authorized device has exceeded the allowable amount, you will come across the following error message:

Chapter 1 Basics

To request for extension and reset of your ADE ID, go to <http://helpx.adobe.com/digital-editions.html> for more information.

Home screen

When the reader is turned on, it will enter the Home screen.

- Select the desired book to open. Selected item will be underlined.
- Press the **Home** button anytime to return to the Home screen.



1. Now Reading

-display last read book. Press the **Enter** button to open the last read page.

2. Reading history

-The recently read ebooks will be saved into Reading history, you can also read books from Reading history.

3. Battery Indicator

-Indicate battery status during operation.

4. Time & Date

-display current time and date, you can set this from the [Settings].

5. Newly added

 
-display the just added books.

Main menu

On the home screen, press the **Menu** button to display the Main menu.

Press the Directional buttons to select the desired item, then press the **Enter** button to enter.

To exit from Main menu, press the **Return** button to exit.

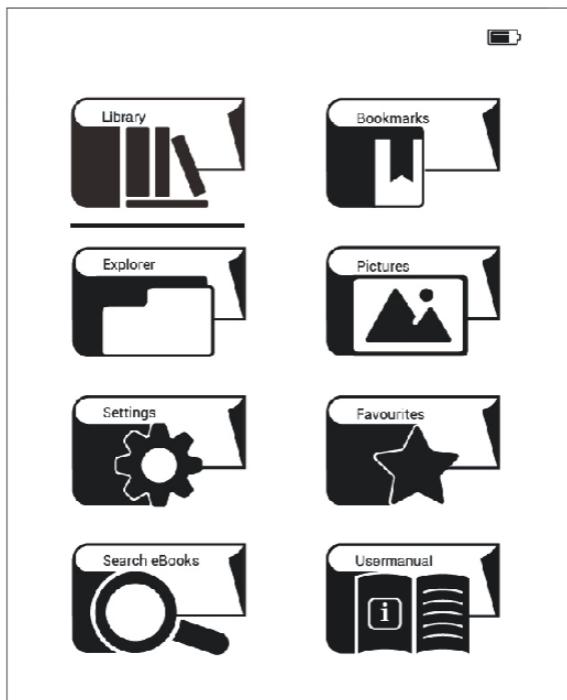


Chapter 1 Basics




Enter into book library



 Enter into Bookmarks list.



 Enter into File Explorer for advanced file Management



Enter into system setting



Enter into photo viewer.



Enter into Favourite book list.



Search for the desired books in library.

 


View the user manual.

Onscreen keyboard

Use the onscreen keyboard as shown below to enter text.

To enter text, use the directional buttons to select the text on screen keyboard, then press the **Enter** button at the panel.

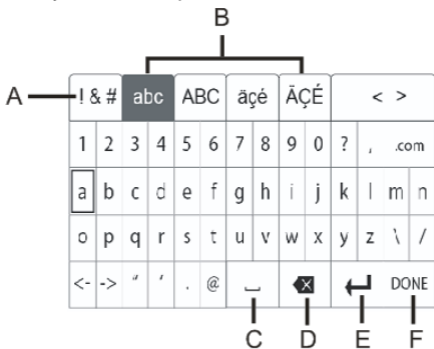

- A. Numeric/punctuation/ symbol key
- B. Input method key
- C. Space key

Chapter 1 Basics

- D. Backspace key
- E. Enter key
- F. Done key

Reading books

Book library

From Main menu, select **Library** to enter book library.

- In the book library, select a book to start reading.
- Use the Directional-up/down button to scroll the e-book list.
- Press the **Page up/down** button to turn page.
- From option menu, select **View by** to change view mode(List/Thumbnail mode).
- Supports EPUB, PDF, TXT, FB2, PDB formats.

Viewing Favorite books

Press the **Menu** button, then select **Favorites** to display the favorite books.

Sorting the book list

- On the book library, books are sorted by author, title, recently read, newly added.
- Press the **Menu** button, then select **Sort by** to choose a sorting method.
- Select the desired book to start reading.

 
Search for books in the library

Use search feature to search for your desired books in the library.

- From Main menu, select **Search** to display a search bar and the keyboard.
- Type the book name by using the **directional buttons** and **Enter button** at the panel, then the press the **Keyboard button** to confirm and press **OK** to start searching.

Reading books

- Books transferred to Reader will be saved in the device.
- Reader supports eBooks in txt, pdf, epub,pdb, fb2, html, rtf, mobi format.
- From home screen or book library, use the Directional buttons to move the cursor to select book and press the **Enter** button to open.

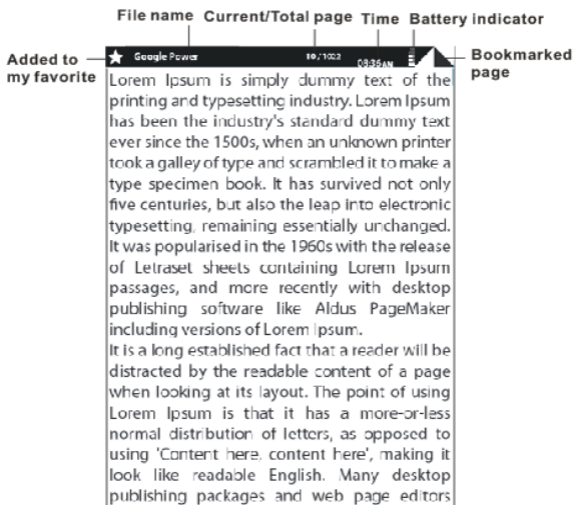

Page turning

On reading page, press the **Page down/Directional-Right** button to turn to next page. To turn to previous page, press **Page up/Directional-Left** button.

Using Option Menu in Reading

In reading page, press the **Menu** button to display the option menu screen. The option menu will be divided into two pages, press **Directional- Left/Right button** to turn page, Options available:


1. Decode settings
2. Add Bookmark
3. Bookmarks
4. Table of contents
5. Go to page
6. Search
7. Font size
8. Font type
9. Margin
10. Rotate Screen
11. Auto flip
12. Refresh Mode
13. Add to favourite
14. About book



Decode settings

From option menu, select **Decode settings** to convert into normal display when there is error code, choose book code available according to preference and region.

Add Bookmark

From option menu, select **Add Bookmark** to add bookmark for the current bookpage. And the  icon will appear on the top right corner.q

Bookmarks

From option menu, select **Bookmarks** to enter Bookmark List of the current book.

Table of contents

From Option menu, select **Table of contents** to show the ebook's table of contents.

Go to page

- You can jump to pages using the **Go to Page** option. In the Option Menu, select **Go to Page**.
- In Go to Page menu, type page number by the onscreen keyboard, then press the **Enter** button.

Search

From option menu, select **Search** to search for the desired words through the current ebook.

- Enter the the desired words by using the **directional buttons** and **Enter button** at the panel, then the press the **Keyboard button** to confirm and press **OK** to start searching.

Font Size

- From option menu, select **Font size** to adjust font size.

Chapter 2 Getting Started

- There are 6 font sizes available: Small, Medium, Large, X-Large, XX-Large, XXX-Large.
- Select the desired font size, then press **Enter** button to adjust the font size.
- It will take several seconds for the fonts to be resized.

Font type

- From option menu, select **Font type** to set the font type of the reading ebook. Options available: **Default font, Serif.**
- Select the desired option, then press the **Enter** button to confirm.

Margin

- From option menu, select **Margin** to set page margin. Options available: Small, Media, Large.

Select the desired option, then press the **Enter** button to confirm.

Rotating Screen

- From option menu, select **Rotate screen** to rotate the display orientation
- To return to original orientation, press **Return** once again.

Auto Flip

- From option menu, select **Auto Flip** to set Auto Flip mode. The auto flip duration available are: Disabled, 5 Seconds, 15 Seconds, 30 Seconds, 1 Minute.
- Select the desired option, then press the **Enter** button to confirm.


Refresh mode

- From option menu, select **Refresh mode** to set refresh mode, options available are: Full refresh, Refresh every 3 pages, Refresh every 5 pages, Exit.

Select the desired option, then press the **Enter** button to confirm.

Chapter 2 Getting Started

Add to Favourites


- You can add books to your Favorite List. In Option menu, move the cursor to **Add to Favorites** to add current book into Favorite List. The  icon will appear on the top left corner.
- To view books in Favourite List, from Main menu, select **Favourites**.
- To sort books in Favourite list, press the **Menu** button to select sorting method.
- To remove book from Favorite:
From reading page, press the **Menu** button and select **Delete Favorite** from the Option Menu.

About the book

From option menu, select **About the book** to display the book information, such as book title, name, author, publisher etc.

About the bookmark

Adding Bookmark

When reading, turn to the desired page, from option menu, select **Add bookmark** to add bookmark for the current bookpage. And the  icon will appear on the top right corner.

Reading from Bookmark

- From Main menu, select **Bookmarks** to enter Bookmark List.
- In the Bookmark List screen, select the desired book bookmarked, then select the page bookmarked.

Deleting Bookmark

You can choose any of the following methods to delete bookmark.

On Bookmark list screen, move the cursor to select the desired items to be deleted, then press the **Menu** button to show a option menu, select **Delete**.

Viewing photos

- From **Main menu**, select **Pictures**, and enter into the Photo viewer.
- In photo Library, press the **Menu** button to sort photo list, search for photo files and set viewing mode.
- Use the **Directional-up/down** button to navigate through the files/folders.
- Press the **Page up/down** button to turn page.

Start to view photo

- In photo library, move the cursor to the desired photo, then press the Enter button on the selected photo to view a full screen display.
- In full screen mode, press the **Directional buttons** / **Page up/down** button to view previous and next picture.

Using the option menu

In full screen mode, press the **Menu** button to display the option menu.

Zoom in/out Picture

- To zoom in picture, in full screen mode, press **Menu** → **Zoom** to change different zoom level.
- To return to original size, press the **Return** button and resume normal operation.

Rotate the picture

You can rotate the picture according to your view.

- In full screen mode, press **Menu** → **Rotate**.
- Each time you press the **Rotate** button, the picture will be rotated by 90 degrees.

Information

- In full screen mode, press **Menu** → **Information** to display the information about photo name, dimension, file type.

Slideshow

- In full screen mode, press **Menu** → **Slideshow** to start.
- From the drop down menu, select slide time to adjust slideshow duration.
- To stop slideshow, press **Menu** → **Slideshow** → **Off**.
- Press **Return** button to return to photo list.

File Explorer

- From **Main menu**, select **Explorer**, then press **Internal** or **External** memory to enter file explorer.
- Press the Directional-up/down button to scroll through the file list.
- Press the **Page up/down** button to turn page.

Using the option menu

On file list screen, press the **Menu** button to use the option menu.

Searching for the files in file explorer

In file list, press **Menu** → **Search** to bring up the onscreen keyboard.

- Type the book name by using the **directional buttons** and **Enter button** at the panel, then the press the **Keyboard button** to confirm and press **OK** to start searching.

Deleting the file

- From **File Explorer**, select the desired files to be deleted
- Press **Menu** → **Delete** to display a deletion screen, select **Yes** to delete.

Note: it may take longer time to delete files with big file size and quantity.

Power Settings

To enable/disable auto power off/ sleep mode, also set the time for the auto power off/sleep mode.

Date & Time

To set the clock and date, time

Press the **Directional-left/right** button to move the cursor.

Press the **Directional-up/down** button to adjust the desired value.

Select **YES** to confirm, select **NO** to cancel the setting.

System Language

To set system language for the reader.

Format Device

Formats the device to delete the data in the reader.

Restore default settings

To restore the Reader's settings to defaults.

All settings will be restored. Meanwhile, all DRM contents and activation will be deleted.

Device Information

Displays product information about the reader, such as Firmware version, Internal/SD card memory status and so on.

DRM Authorization information

Displays DRM authorization information on the reader.

Chapter 4 Troubleshooting

The Reader is not responding or can't be turned on.

- Reset the reader by pressing and holding the power button for 6 seconds. The reader will be forced shutdown if it is on and you are required to restart the reader again.
- Battery has been fully depleted. Please charge the reader via USB or USB AC Adapter.

Battery Life seems short

- The operating temperature is below 5°C. this is due to the characteristics of battery and not a malfunction
- The battery is not used for prolonged period. Please recharge the battery of the reader again
- The battery is not fully charged. Please charge the reader for 4 hours.
- The battery needs to be replaced. Please consult the authorized dealer for service.

A Book cannot be read

- Copyright protected books cannot be read on any device other than the authorized one.
- Check if the book has expired.
- Check if the book format is supported by the reader.

The reader cannot be operated during USB connection

- The reader cannot be operated while it is connected to PC.
- Eject the reader from computer to resume operation.
- To use the reader while charging, click on the [Safely Remove Hardware] icon located on the left lower corner to disconnect data connection with computer. After the reader is safely removed, computer will only charge the reader and you can now resume normal operation.

Maintenance

- If reader does get wet, turn off reader immediately. Wait for reader to dry completely before turning on again.
- Clean the screen with a soft cloth; be careful not to wipe it with anything abrasive. When carrying your reader in bag, keep reader in the protecting case supplied to avoid scratches.
- If reader needs service, please consult the authorized dealer through the contact information provided in the warranty card. Faulty service may void the warranty.

Product Specifications

Display

800x600 pixels

Brightness: 200cd/m²

Storage memory

Built in memory: 4 GB (FAT format)

Supports Micro SD card up to 16GB (FAT32 format)

Media File Format supported

Ebook: EPUB, PDF, TXT, FB2, PDB

Photo: JPEG, BMP, GIF, PNG

Connectivity

Data transfer: USB 2.0 High Speed

Audio: 3.5mm audio jack

Power: USB jack

Miscellaneous

Clock / Date

Real time battery indication

Battery life

Reading – up to 40 hours

Standby time- 30 days

Charging

Power supply: 5.0V, 1.5A

Duration: 4 hours (approx)

Minimum system requirement (USB Mass Storage)

Windows: XP, Vista, Win 7, Mac: 10.0 and above Linux

Physical properties

Dimension: 168.4X 117.5X 7.9(mm)(approx.)

Weight: 206.8g

※ Design and specifications are subject to change without prior notice