

DIGITAL VIDEO CAMERA


User manual

Dome Camera



DR45

Interface

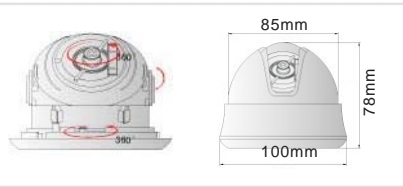

Warning & Attention

WARNING

Please don't open camera, it's with danger of electronic shock.

Attention:
To reduce the danger of electronic shock, please don't open the case (or back cover) of camera; everything is on the surface of camera for user operation, please seek help from qualified professionals for repair.

! Attention items:

- Don't touch CCD or lens;
- Make camera away from violent attack;
- Don't use any unidentified power supply;
- Make camera lens away from strong light;
- Avoid installation in unstable places (shake, wet, high temperature, cold, etc);
- Avoid operation out of the following conditions, temperature: 0°C~+50°C, humidity: less than 85%;

Installation



1. Fix the base on the wall, then fix the camera on the base;

2. Turn the camera to a suitable position;

3. Fasten the camera on the base;

4. Connect the camera to the monitor.

Attention:

Be sure to connect power supply after all installation is completed!

Specification

Model	DR45
Image Device	1/3" Sony Exview HAD CCD II (ICX672/3A KA)
DSP Device	Sony Efiio-E (CXD4127GG, CXD4816GG)
Resolution	650TVL
Picture Elements	PAL: 976(H)x582(V) NTSC: 976(H)x494(V)
Lens (varifocal)	4-9mm Manual Zoom Lens
TV System	PAL
Electronic Shutter	NTSC: 1/60~1/100,000, PAL: 1/50~1/110,000
White Balance	ATW / PUSH / User1 / User2
Backlight	OFF / ON / BLC / HLC
Privacy Masking	OFF / ON (4 Zone)
2D-NR	OFF / ON (Y/C level)
Video Output	1 Vp-p / 75 Ohms
Power Supply	DC12V/250mA

Specifications are subject to change without notice