

**Professional Monitors 9"
BM5309A12 (V.3-4)/A13**

**User Manual
BM5309D13**

Edition 01

2002



KROMA TELECOM

Pol. Ind. Alcobendas - C/ La Granja, 80
28108 Madrid - ESPAÑA
Tel. (34-91) 661 45 14
Fax. (34-91) 484 03 49
www.kromatelecom.com

SAFETY INFORMATION

WARNING: This product includes critical mechanical and electrical parts which are essential for X-Radiation safety.

For continued safety replace critical components indicated in the service schematic only with exact replacement parts given in the parts list of service Manual.

Operating high voltage for this product is 16 Kv. At minimum brightness. Refer to service manual for measurement procedures and proper service adjustments.

WARNING: Electric shock or fire hazard can be caused if critical components are replaced by non conform components. Refer to parts list of service manual.

CAUTION: High vacuum tube is dangerous to handle refer replacement to qualified personnel. Replace with a tube of the same type for continued safety

1. INTRODUCTION

1.1. APPLICATIONS

The KROMA BM5309 monitors have been designed to use in Broadcast studios for signal evaluation requiring accurate picture reproduction. Also it can be used in post-production..

They incorporate microprocessor based control in all its operations, providing automatic color set-up, thus eliminating the operator's subjective factor.

1.1.1. FEATURES

BM5309A12 9"

Basic Video version: CCVS (PAL/NTSC). Three composite video inputs, one of them is configurable as external sync.

Options:

BM5009X01

This module consist of 2 Digital video inputs in passive loop-through, according to (ITU-R BT601) 10 Bits and analog components (RGB/YPrPb).

BM5009X02

This module consist of 2 Digital video inputs in passive loop-through, according to (ITU-R BT601) 10 Bits and analog components (RGB/YPrPb). This SDI module allows the user to extract the embedded audio and then output it in Analog or AES EBU Digital form.

BM5309A13 9"

It can be configured with the following options:

BM5309X01

This module consist of 2 Digital video inputs in passive loop-through, according to (ITU-R BT601)10 Bits

BM5309X02

This module consist of 2 Digital video inputs in passive loop-through, according to (ITU-R BT601) 10 Bits. This SDI module allows the user to extract the embedded audio and then output it in Analog or AES EBU Digital form.

BM5309X03

This module consist of 1 PAL,NTSC,SECAM video input and 2 Digital video inputs in passive loop-through, according to (ITU-R BT601) 10 Bits

BM5309X04

It is the more complete version (module), it has all the options previously mentioned.

1.1.2. PICTURE TUBE

High resolution, in line guns and shadow mask tube, with 0.28 dot pitch and P22 phosphor.

1.1.3. COLOUR STABILITY

Beam current feedback, which allows to correct colour temperature drift caused by CRT variation and environmental conditions.

1.1.4. FLEXIBILITY

Modular configuration. It is provided with an analog and digital bus, allowing the exchange of signals between the options installed, making it a system of open architecture for future options.

1.1.5. AUTO SETUP SYSTEM

By use of the KROMA set AK5400X50, composed by a DG5400 test signal generator and an optical probe model SR5400. The generator is able to provide up to 34 patterns designed for monitors alignment.

With this combination, automatic grey scale adjustment can be carried out.

This set also allows transferring automatically the parameter setting of this setup to other monitors.

1.1.6. REMOTE CONTROL

The RS-485 bus included in the BM5309 KROMA monitors. Is able to control up to 128 monitors. These can be in group controlled, individually controlled or all of them can be controlled at the same time by remote control RK5000.

1.1.7. MENU

This helps the operation, displaying the operating parameters and the commands to access at several functions.

The adjustment operations to be done by the specialized personnel are protected by numerical password.

1.1.8. NORMAL SIZE, UNDERSCAN AND 16:9

The BM5309 range provides facilities for normal picture size or underscan (95% reduced size) and aspect ratio 4:3 and 16:9 selectable from the front panel by SIZE key.

1.1.9. MEMORIES

The monitor has 5 available memories

- All memories accessible via password (only for data store)
- Four memories for general use.
- One memory for the system or factory

1.2. TECHNICAL SPECIFICATIONS

1.2.1. SCAN & SYNC

Systems 625/50/2:1 Horizontal frequency 15.625 Hz

525/60/2:1 Horizontal frequency 15734 Hz

Horizontal oscillator lock-in range: ± 750 Hz

Horizontal sync. constant time: Fast: 0.5 mS

Slow: 2.5 mS

1.2.2. PICTURE DISPLAY

Aspect ratio: 4:3 and 16:9

Errors: - Linearity error: ≤ 4 % of picture height

- Geometry error: ≤ 1 % ídem.

- Convergene error:

TUBE	ZONE 1	REST
9"	0.4 mm	0.5 mm

ZONE 1 IS WITHIN A CIRCLE CENTRED ON THE SCREEN WHOSE DIAMETER IS EQUAL TO PICTURE HEIGHT.

1.2.3. CTR

- 9" HR 0.28 dot pitch Phosphor: P22
- Resolución : > 450 TV líneas a centre
- Colour temperature: 6500° K \pm 200° K (IN ALL MEMORIES)
- Black level: Set to 0.5 Nit (10 % APL WINDOW SIGNAL)
- White level: Set to 90 Nit (100% APL WINDOW SIGNAL)
- Beam current limiting: 180 Nit (FLAT FIELD SIGNAL)

1.3. BM5309A12 MODEL

1.3.1. DECODER PAL / NTSC PERFORMANCE

- Inputs A, B and C
 - ◆ Level : 1 V_{pp} +3/-6 dB
 - ◆ Impedance : 75 Ω \pm 1% or loop-through (selectable)
 - ◆ Return losses: 35 dB @ 5 Mhz.
 - ◆ Isolation between A, B and C inputs: > 60 dB @ 10 Mhz.
 - ◆ Mismatch between A and B inputs: < 1% and < 1° @ 4.43 Mhz
- External sync input
 - ◆ Level : 4 V_{pp} +6 dB / -28 dB
 - ◆ Impedance : 75 Ω \pm 1% or loop-through (selectable)
 - ◆ Return losses: > 35 dB @ 5 Mhz

- Auxiliary signal (Front panel)¹
 - ◆ Format : CCVS similar to A and B
 - ◆ Impedance : $75 \Omega \pm 1\%$
 - ◆ Return losses: $> 25 \text{ dB @ } 5 \text{ Mhz.}$

1.3.2. LUMINANCE

- Frequency response:
 - Without *notch* filter: $100 \text{ Khz} - 6 \text{ Mhz} \pm 1 \text{ dB}$
 - Notch filter suppression $< - 30 \text{ dB @ } 4.43 \text{ Mhz}$
- K factor

(APERTURE 0 dB)	WITHOUT FILTER	WITH FILTER
K_{pb}	$< 0.5 \%$	$< 1\%$
K_{2T}	$< 0.3 \%$	$< 1.2\%$

- Non linearity: $< 1\%$
- Noise: $(100 \text{ Khz} - 5 \text{ Mhz}) < 60 \text{ dB}$

1.3.3. CHROMINANCE

- Saturation control: $\pm 6 \text{ dB}$
- Subcarrier oscillator lock.in range: 300 Hz
- Luminance-crominance delay : $< 50 \text{ nS}$

1.4. BM5309A13 MODEL

1.4.1. SDI FEATURES

Compatible with signal source according to norm ITU-R BT.601 and BT.656 SMPTE/EBU of 270 Mbits per second.

- ◆ Demultiplexed of components and synchynchronization according to Rec.601 and Rec.656 of CCIR.
- ◆ S1 and S2 video inputs in loop-through. Impedance 75Ω
- ◆ Return losses: $> 21 \text{ dB @ } 270 \text{ Mhz.}$ or loop-through (selectable)
- ◆ Frequency response: $0 - 5,5 \text{ Mhz.} < 0.5 \text{ dB}$
- ◆ Tilt (V): $< 0,5 \%$
- ◆ K factor: $K_p < 0,3 \%$
 $K_{pb} < 0,2 \%$
- ◆ Non lineality: $< 1\%$

¹ During the auto set-up it control the channels R G B in parallel.

- ◆ Mismatch between components:

Gain: < 0.1%
Delay: < 3 ns

- ◆ Analog audio levels: (Only in BM5309X02 and BM5309X04)

4Vpp @ 0dBfs

Nota: The audio outputs are not designed to work with 4 or 8 Ohm loads, it must be connected to inputs with loads >1K Ohm.

1.4.2. DECODER PAL / NTSC / SECAM PERFORMANCE

- ◆ **Input A**

- ◆ Level : 1 V_{pp} +3/-6 dB
- ◆ Impedance : 75 Ω ± 1% or loop-through (selectable)
- ◆ Return losses: 35 dB @ 5 Mhz.
- ◆ Isolation between A, B and C inputs: > 60 dB @ 10 Mhz.
- ◆ Mismatch between A and B: < 1% and < 1° @ 4.43 Mhz

- ◆ **External sync input**

- ◆ Level : 0.3 V_{pp} (Black burst) +6 dB / -28 dB
- ◆ Impedance : 75 Ω ± 1% or loop-through (selectable)
- ◆ Return losses: > 35 dB @ 5 Mhz

- ◆ **Auxiliary Input (Front panel)²**

- ◆ Format : CCVS similar to A and B
- ◆ Impedance : 75 Ω ± 1%
- ◆ Return losses: > 25 dB @ 5 Mhz

1.4.3. LUMINANCE

- ◆ Filter: By "Comb filter" adaptive PAL/NTSC of three lines.
- ◆ Frequency response: 100 Khz – 5.5 Mhz ± 1 dB
- ◆ K factor: K_{pb} < 2%
K_{2T} < 3.5%
- ◆ Differential Gain: 2°
- ◆ Differential Phase: 2%

² During the auto set-up it control the channel R G B in parallel.

1.4.4. CHROMINANCE

- Saturation control: ± 6 dB
- Subcarrier oscillator lock in range: 300 Hz
- Luminance-chrominance delay: < 50 Ns

1.4.5. GENERAL

Environmental Characteristics:

- ◆ Warm-up : 20 minutes to meet specifications.
- ◆ Temperature range:
From 15 to 40 °C (TO MEET SPECIFICATIONS)
From 0 to 45 °C (OPERATING ONLY)
- ◆ Relative humidity: 0 to 90 % non condensing @ 40 °C
- ◆ Altitude : ≤ 3000 m.
- ◆ X-ray emission: < 0.1 mR/Hr @ 5 cm monitor outside surface.
- Power
 - ◆ Voltage : 110 / 220 V_{AC} $\pm 20\%$
 - ◆ Power consumption: 45 W
- Dimensions:

	Height	Width	Depth
Model 9"	218 mm. (5 UR.)	222 mm.	420 mm.

- Weight : 8 Kg.

1.5. INSTALLATION

1.5.1. Previous Inspection

After having removed the equipment from its original packing material, check for visible signs of damage which may have occurred during shipment. Report any shortage or damage to the freight carrier and **KROMA** or its representative immediately.

Check that you have received the following accessories with the monitor:

- AC power cord, and
- User's Manual.

If the equipment has to be reshipped to a long distance, it is recommended to use the original packing material in order to avoid damages during transport.

1.5.2. Safety Information

For electric shock protection, it is necessary to connect the chassis to a protective ground; to this purpose, the earth ground terminal of the plug is directly connected to the metal part of the monitor (green-yellow wire). Insert the power plug in a mating outlet with an earth ground contact.

Due to the presence of high voltages inside the equipment, the same can only be open, adjusted or repaired by QUALIFIED PERSONNEL.

1.5.3. Connection to the Main

Before connecting the monitor to the mains, check that the mains voltage corresponds to that indicated in the voltage selector located in the rear panel, next to the mains connector.

If the mains voltage presetting is not the appropriate, carry out the change by removing the fuseholder and turning it until the desired value is shown in the window.

Fuses should be changed in accordance with the mains voltage presetting used, as per the following table:

POWER	FUSE
220 V	2.5 A Slow
110 V	3.15 A Slow

1.5.4. Location

Due to the CRT's sensitivity to magnetic fields, avoid installing the monitor near this type of disturbance sources such as: Loudspeakers, electric motors, transformers, etc.


The monitor has a dagaussing device incorporated which operates automatically when the equipment is switched on. It can also be activated manually from the front panel controls.

If the monitor is changed of location, some colour impurities may occur due to the variation of the earth magnetic field. This problem disappears by activating the degaussing circuit with the DEG key.

During the time this operation last, avoid placing near the monitor items which have magnetic information such as: tapes, cassettes, cards, etc.


1.5.5. Tally Lamp

This lamp, located on the monitor's front panel, can be activated with voltages within the range + 24V and + 48 V, or by closing of the contacts 2 and 3 of the connector located in rear panel. (SEE FIGURE).

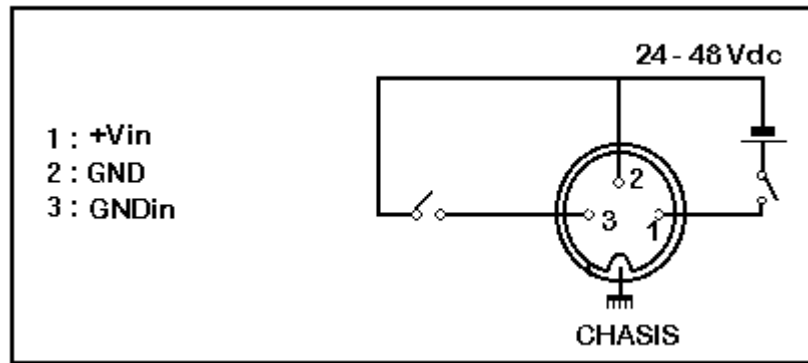

1.5.6. Ground Terminals

There are two ground terminals: protective ground and electrical earth or ground from the power supply. They are normally connected by means of a metal jumper, but they can be isolated one another by eliminating said jumper, in case it is necessary to avoid hum pickups due to the installation.

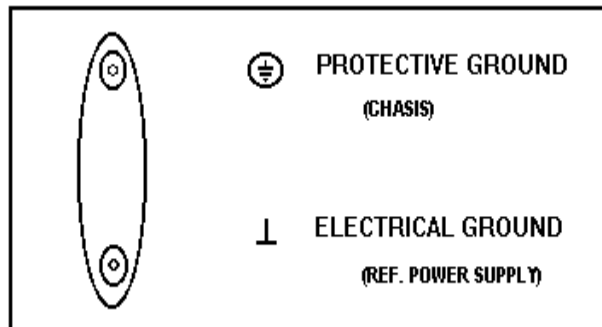

1.5.7. Remote Control Connectors (RS-485 Interface)

They are located at the rear of the video unit. The connectors, in loop through configuration, are prepared for connection of the KROMA RK-5400 remote control. This connector, are also useful for to update the futures software versions Configuration


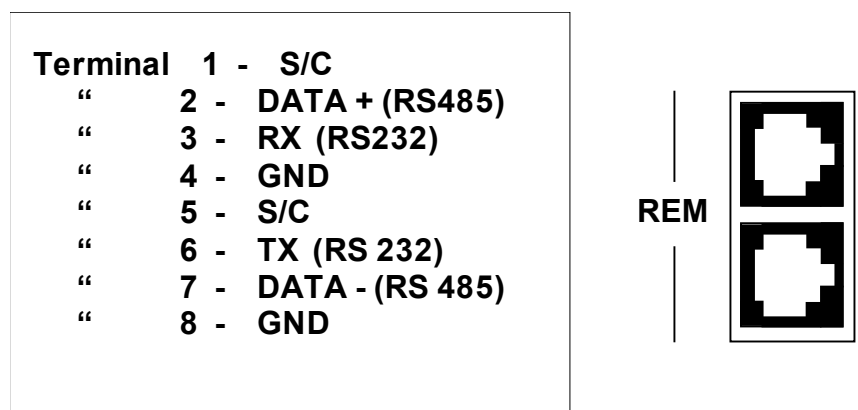


Figure 1

2. INPUTS SELECTION

2.1. INPUT key

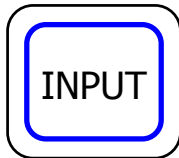

This key allows the selection of different inputs, by consecutive key presses. The number of states, or possible inputs, it relies on the assignment that it has made. This could change between one and six inputs.

2.2. C CVS Key



Key for the selection of one of the available composite inputs A, B and C. (C input is only possible if the SYNC key is in the OFF mode).

The first time that it is pressed appears the current and in the second time will switch the input at following. The number of states will be 1 or 2, relying on the state of the SYNC key.

This will be only possible if the Decoder CCVS option is installed.


In BM5309A13 monitor there is only one input A.

When this key has been pressed will appear the message:

INPUT: CCVS X

it will disappear lapsed a few seconds, or pressing ESC key.

2.3. CDV key

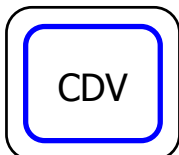

The operation of this key is similar to CCVS key, but in this case it will allow the selection between digital video input S1 and S2.

To press this key it will appear the message: S1 or S2 that will disappear lapsed a few seconds, or pressing ESC key.


2.4. CAV Key



This key allows the selection between analog component input RGB and YPrPb.

It is not available in the BM5309A13 model.

2.5. AUX Key

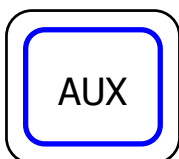


Similar operation to the CCVS key, but in this case it will allow to select between AUX RGB and AUX DEC video (only with installed option Decoder CCVS). When we select AUX RGB the signal to the BNC in the front panel of monitor drives the signal to the three guns (R G B) at the same time and therefore we will see a black and white image.

After pressing this key, it will appear the message AUX RGB or AUX DEC, that will disappear lapsed a few seconds, or pressing the ESC key.

3. AUXILIARY FUNCTIONS

3.1. SYNC Key

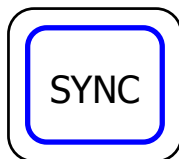

Key for the selection of internal or external sync. However this function can be enabled by programming of the this option in sub-menu, in this case the input CCVS C in BM5309A12.

After pressing this key, will appear the following messages:


SYNC: INT or SYNC: EXT

Or:

SYNC-KEY OFF

The messages disappear lapsed 4 seconds or pressing ESC key.

3.2. SIZE Key

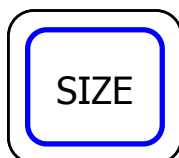

Key to select between overscan, normal size and underscan reduced size at 95%:

This selection is possible, as much being programed the monitor with an aspect ratio 4:3 or 16:9 (See menu options).

After to press this key, will appear the following messages:

SIZE: NORM 4:3 or SIZE: U/S 4:3

Or:

SIZE: NORM 16:9 or SIZE: U/S 16:9

The message disappears lapsed 4 seconds, or pressing ESC key.

3.3. DEG Key



Key to manually degauss the monitor CTR.

Indirect action by means of relay microprocessor controlled.

- Time of activation: 4 seg.


- Minimal time for the next activation after the degaussing > 5 min.

After to press this key, will appear the following message: DEGAUSSING

3.4. STS (STATUS) Key


This key allows the programming of the internal parameters of the monitor through menus. In the Status menu, this key operates in recurrent mode. When pressed, are displayed the configuration parameters or return to the main menu (STS).

3.5. ESC Key

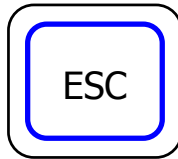

This key will allow us to return to previous menu and interrupt procedures. When you return from the previous menu or shown some of the controls (BLK, CNT,...), if any parameter has been modified, it will save in static mode in the working memory.

3.6. 16:9 Key

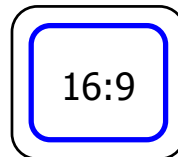


This key allows to select the aspect ratio 4:3 and panoramic format 16:9

When this key has been pressed, will appear the message:

SIZE: 16:9 SIZE: 4:3

3.7. MONO Key

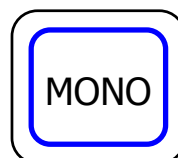

This key has 2 different states, that could switch in cyclic mode:


MONO : AUTO

In this case, the monitor present color images, if the signal has "BURST"

MONO : FILTERED

The monitor will present an image in black and white, but with the luminance filter activated.

3.8. AFC Key

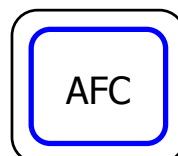


This key allow switches in cyclic mode between fast or slow time constant in the capture H sync.

When this key has been pressed, will appear the message:

AFC : FAST AFC : SLOW

3.9. DEL Key

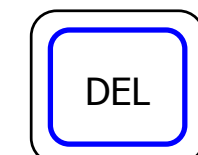

key for selection of the horizontal delay as vertical delay ("PULSE CROSS")

It allows to control the presentation of sync pulses in the screen, switching between:

NORMAL → H DEL → V DEL → H + V DEL


In model A12

NORMAL → H+V DEL

In model A13

4. COMMAND KEYS FUNCTION

4.1. BLK KEY (BLACK LEVEL/BRIGHT)

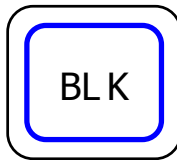

By pressing of this key from the normal mode, a message appears in the screen, indicating the current value of the black level, (Brightness) and if the value has been calibrated or not.

BLACK LEVEL 00 CAL or BLACK LEVEL +10 UNCAL


Starting from this instant are entered in the modification mode of this value by means of the ORE³, increasing in the clockwise and decrease in counterclockwise.

The maximum BLK valor is +20 and the minimum is -20.

If being in this mode of work, the CAL key is pressed, the value of the black level is updated regarding the calibration value (see Appendix A), also is possible to reach the calibration value by means of the ORE⁽³⁾.

The exit from this mode of control of Level of Black (Brightness), to normal mode (without messages in screen) it is performed: automatically, after 4 seconds without pressing any key or manually by pressing ESC key.

4.2. CNT (CONTRAST)

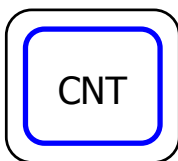

Similar behavior to the described above, for BLCK but concerning to the gain of the final video amplifier (Contrast).

The messages that could appear are:

CONTRAST 00 CAL

or

CONTRAST -12 UNCAL

4.3. SATURATION/COLOUR



Similar behavior to the described above, for CNT but concerning to the gain of the decoder's chrominance amplifier.


This key acts on two parameters. If the active input signal is NTSC, the system internally will select the saturation of NTSC, modifying this value. For any other system will adjust the same parameter automatically, the system of the active signal is detected and adjusts the control of saturation.

The messages that could appear are:

SATURATION 00 CAL or SATURATION +8 UNCAL

³ ORE: Optical Rotary Encoder

4.4. HUE/TINT (NTSC only)

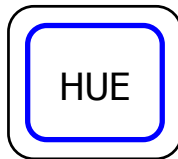

Similar behavior to the described for BLCK concerning to the chrominance phase regarding to the *burst* in the decoder. Because is a parameter of the NTSC system will only be permitted their modification when the active signal corresponds to this system.


The messages that could appear are:

HUE 00 CAL or HUE -3 UNCAL

Or:

NO AVAILABLE If the connecting signal is not NTSC

4.5. APT/VOL (APT/VOLUME)

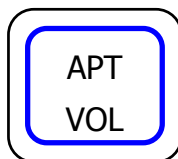


This key is programmable in BM5309A13 model with the function "PROG. FUNCTION". See menu STS, when is selected S1, S2 digital input.

If this key in a monitor not equipped with this option is pulsed will appear the message: NO AVAILABLE.

When a CCVS video input is selected in BM5309A12 model, this key allows to control the signal aperture.

4.6. CAL Key

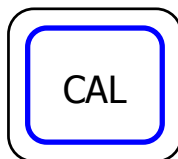

Two operating modes:

1. When CAL is pressed, being in one of the modes: BLCK, CNTR, APT, HUE or SAT, the behavior is the described already.
2. The monitor utilizes different menus on those that there is diverse active options. With the ORE select the option and with the CAL key executes the selected option.
3. In Calibration of values in SETUP MANUAL.

5. INDICATORS

5.1. UNCAL LED

This LED is kept activated (Red LED lit) if any of the variables:BLK, CNTR, APT, HUE or SAT, has a different value of the calibration.

In order to proceed to the calibration of this variable, see previous paragraph, and the behavior of the CAL key with the modes BLCK , CNTR, APT, HUE or SAT.

6. MENUS OPERATION

The STS key shows the STATUS menu through the which gives up pass to all the sub-menus, which they allow to configure all the parameters and functions from the monitor.

6.1. STATUS MENU

When the STS key is pressed from the normal operation mode, the following menu will appear:

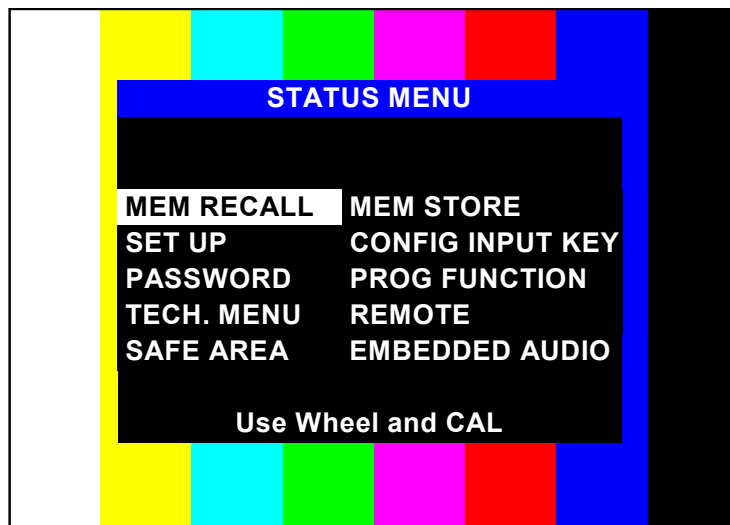


Figure 2

The different options selection is carried out by means of the O.R.E. (Optical Rotary Encoder), and in order to activate the function we will press CAL key.

6.2. MEMORY RECALL MENU

It allows to load in the working memory the content of whatever of the existent memories in the monitor (USER 0, USER 1, USER 2 or USER 3 or SYSTEM).

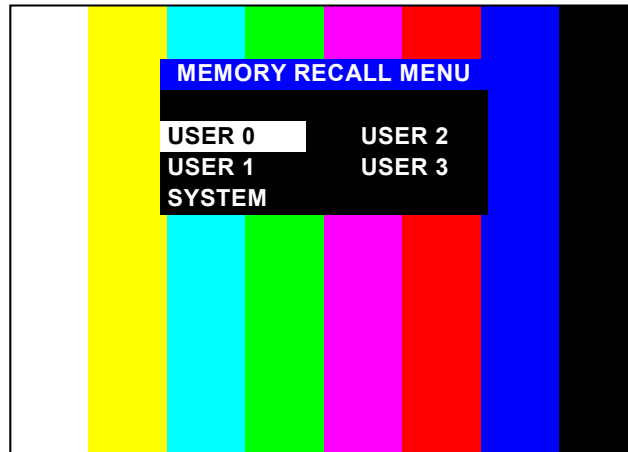


Figure 3

In order to select the memory wanted to recover, we must press CAL in order to transfer the content as active value.

6.3. SET UP MENU

From this menu it could be modified and adjust the parameters of the GRAY SCALE (LL/ HL and intermediate values) and the SET UP values of BLCK, CNTR, SAT, HUE, VOL and APT.

When selecting this menu will appear the following sub-menu:

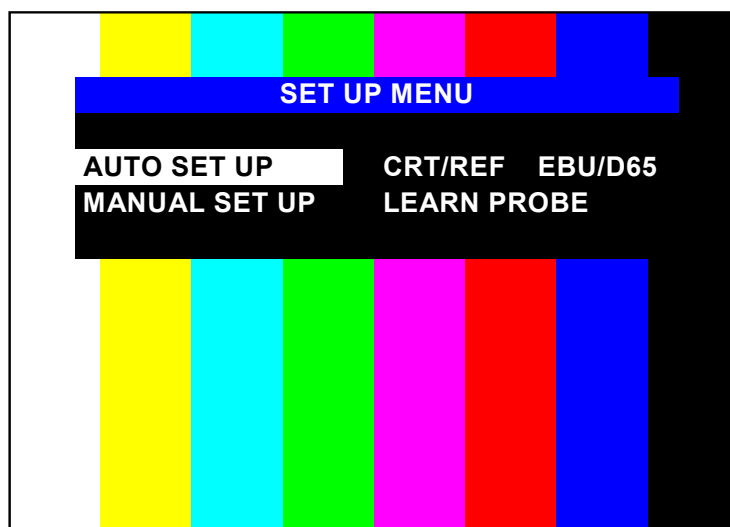


Figure 4

6.3.1. AUTO SET UP option

It can be carried out, by means of the set Generator/ Analyzer KROMA DG5400 and probe AK4400X50 especially designed for this use.

When CAL key is pressed, will appear a flashing message in the lower line, requesting the technical password. If the password is correct, the system will permit pass to one of the auxiliary inputs, (AUX RGB or AUX CCVS). In the same menu, will appear the message "SELECT INPUT: AUX CCVS" however; you could select any of the available inputs by pressing the keys associated to the inputs (AUX, CCVS, CDV).

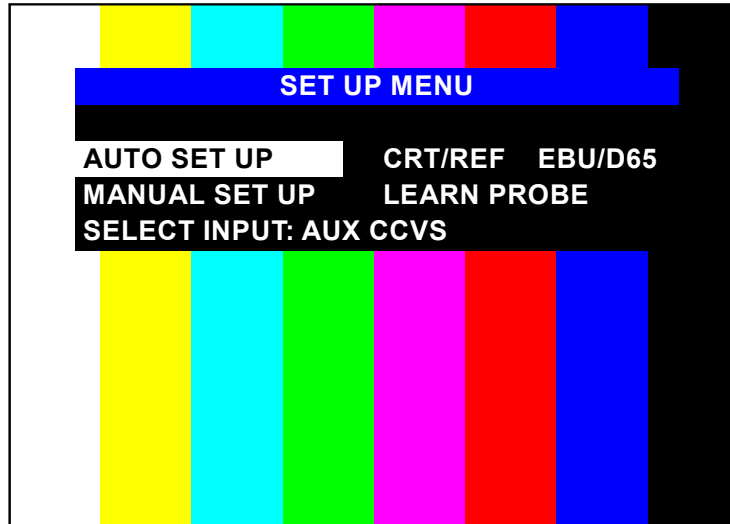


Figure 5

In order to obtain an accurate adjustment, the monitor carries out a different adjustment for the digital inputs. For this purpose select one of the digital inputs (S1 or S2) and the system will carry out an independent adjustment of any another input. In this mode, when you change a digital input, the system will program the values of HLs and the LLs, corresponding to the digital adjustment. Consequently, will note a better response of the monitor.

Independently of the type of input selected, this should coincide with the DG5400.

Once selected the input signal and the phosphor reference, press the key CAL in order to start the adjustment. If during any step you doubt of any parameter, you could stop the process by pressing ESC.

Next, it appears the message: "PUT PROBE & PRESS CAL.", put on the optical probe on the center of the screen and fix it to the center of the window that it will appear after a short time. Starting from this moment and during the adjustment time, don't move the probe and not disconnect the A.S.U connector. because it will block the system owing initiate again the monitor. However, their parameters won't be affected.

The adjustment is finished when appears the message: "Ok. AUTO SET UP SUCCESSFULLY"

Once completed with success the adjustment, also there will be exist auto-calibrated in the working memory. If you desire to keep the adjustment you could use one of the four memories (See MEMORY STORE MENU).

The adjustment procedure informs about several events that don't allow carry out it correctly. The messages are the following:

- "CANNOT CONNECT":
- "UNCOHERENT DATA":
- "Not CONVERGED": it could be originated by different causes, the most common is the input level of the signal. Check the termination switch (HP/75Ω)

The conclusion reached are:

- White D 6500 ± 200 °K or another optional (see SEL CRT/REF)
- 0.5 NIT for window signal with 10% APL
- 90 NITS for window signal with 100% APL

6.3.2. CRT/REF option

With this option you will select a group of parameters as reference for an Auto Set Up, or to specify the group that will be modified when you select the option LEARN PROBE.

With the CAL key, you will select in cyclical mode, one of the 4 groups of parameters. Three of these are identified with the model of a C.R.T. and one of them has been reserved for the user.

6.3.3. LEARN PROBE option

With this option you will store some characteristics of colorimetry in the meter in order to adjust other monitors in the same conditions. For example, if the conditions of brightness of your study modify the subjective perception of the colour of the monitor, or you prefer a tendency toward a determined colour; then, you modify manually the characteristics of a monitor in order to take it as reference. Next, you utilize one of the four groups of parameters with the option CRT/ REF, with preference, the group of user (USER) and select the option LEARN PROBE with the key CAL.

The operation of this option is similar to AUTO SET UP. You will have connected a DG5400 generator with specific⁴ "patterns", in order to make the learning. Likewise, it will request you a technical password and will also to put the measuring probe on the screen and press the CAL key in order to start the process or ESC in order to stop it. Due to the risk of data loss the operation, this should only be carried out for technical personnel.

This operation is longer than the AUTO SET UP and it is essential don't move the probe during the process.

⁴Three windows 100% red, green and blue.

6.4. Option: MANUAL SET UP

When you select this option MANUAL SET UP from the SET UP menu, you would be able to adjust all the monitor parameters values, as much the current values as the calibration values. ie: CNT, BLK, SAT, VOL, APT and HUE; as well as the parameters LL'S and HL'S or grey scale, and the geometry.

Once selected this option will request the technical password with four digits code.

If correct, we will enter in the following menu:

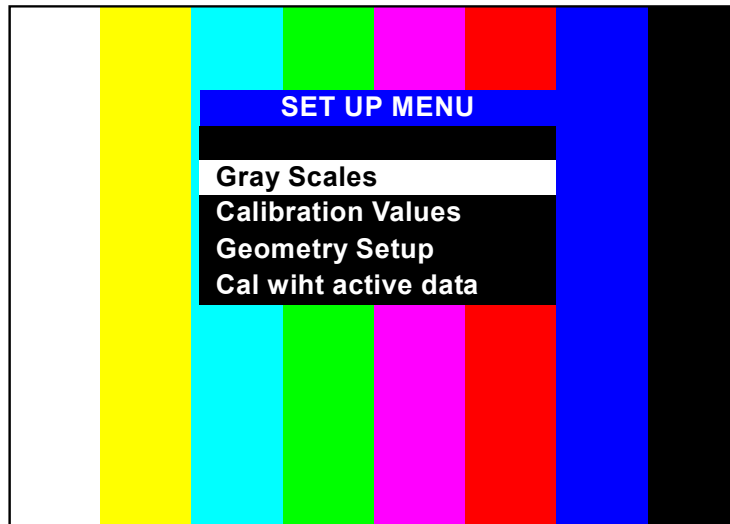


Figure 6

6.4.1. Opción: MENU GRAY SCALES

By selecting this option, you may carry out a manually adjustment, of the current biasing levels, of the cathode of the CRT (LLs) and the gain of the RGB video amplifier, (HLs).

The new menu will be the following one:

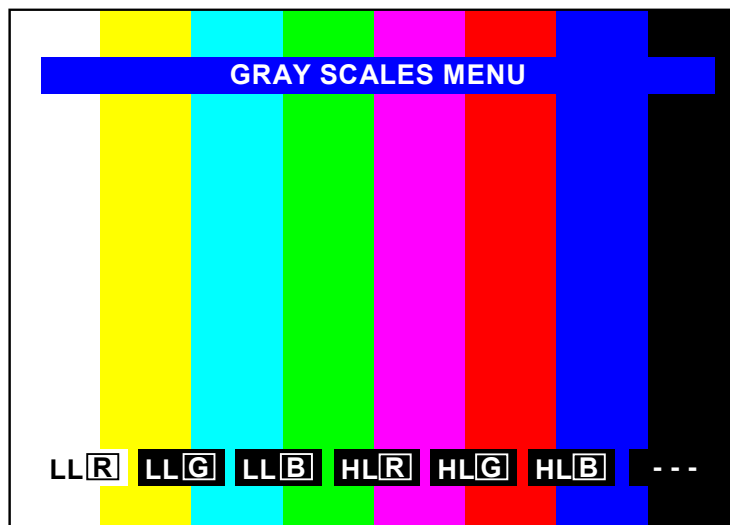


Figure 7

Once selected one of the options the symbols (_ _ _) located in the right hand of the lower part of the screen going to indicate the value of the state of the variable. If the CAL key is pressed again then will be stored the last current value, the dashed lines appear again and one may select another variable.

On the other hand, if ESC key is also pressed, will store the modified value of the variable but it will return to the previous menu.

6.4.2. Option: MENU CALIBRATION VALUES

In this menu we could modify the associate parameters to the primary controls of the monitor.

The menu from which one we could modify the parameters is the following one:

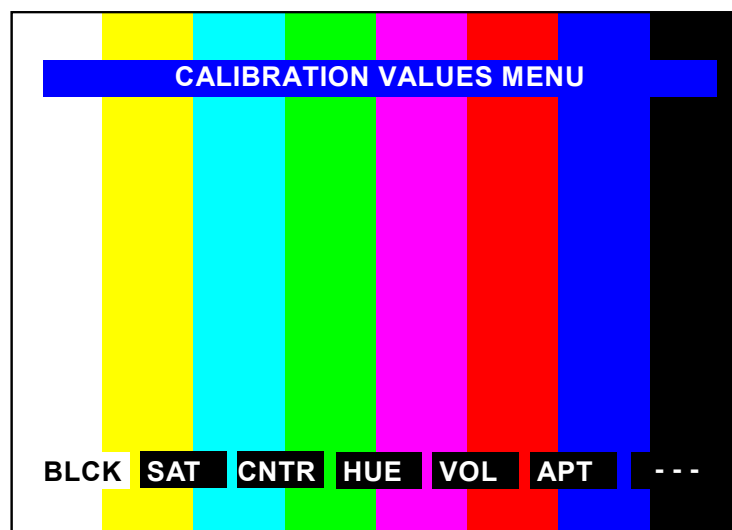


Figure 8

The operation is the same as in the previous case, the dashed lines, of the right hand in lower part of screen, when pressing CAL, they will give the values of the variable. However, there are parameters with some particularities that are kept in mind:

1. **The Saturation (SAT):** The monitor detects if you are viewing a (PAL, NTSC or SECAM) system signal, in whose case will modify the associate parameter to this system. In any other case always the parameters represent the saturation.
2. **The Volume (VOL):** Although functions exist associated to the VOL key, the system of control won't give you access to this variable, except for the monitor carries incorporate the audio digital input option.
3. **The Hue Option:** It will only has access, if the active input signal is NTSC.
4. **The Aperture (APT):** it will only give access to modify their value if the monitor incorporates the option.
5. **Option: GEOMETRY SET UP**

By means of this menu could be modified the parameters in relation to the format of the picture, and another with more technical content.

The menu through the one will be able to carry out the change is the following:

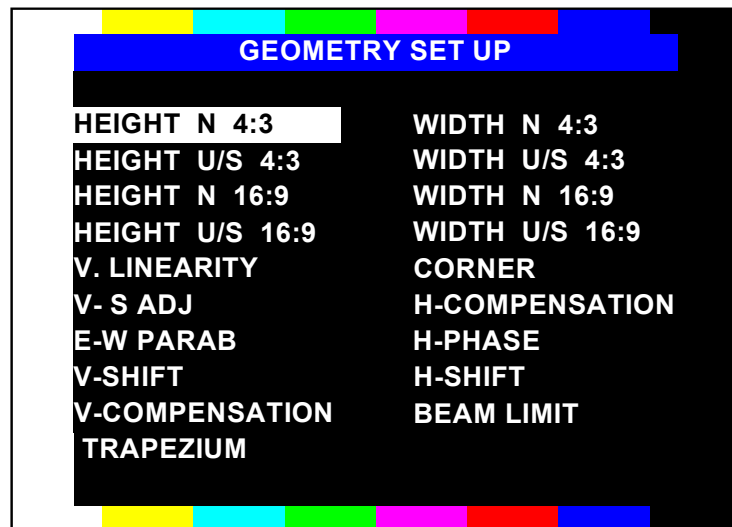


Figure 9

In order to modify a parameter, this will be selected, with the ORE help, and we press CAL key, then will appear in the lower line of the menu: the name and the value of the parameter, at the moment it is updated in the monitor. In the same way that in the previous menu, the operation of both keys CAL and ESC are the same.

This option provides access to the adjustment of all the variables involved with the monitor geometry alignment.

6. Option: CAL WITH ACTIVE DATA

With this option you will convert all the active parameters values in calibration values, this option is very suitable after carrying out an adjustment and before of saving the data in one of the user memories.

During the calibration process will appear in the 2nd line of the menu, MANUAL SET UP MENU the message: "UPDATING."

6.5. Option: CHANGE PASSWORD MENU

This new option allows us to change the access password for the several menus. When we selected this option, it will request the old access password, by default all the monitors start from the factory with the number: 1 1 1 1

Next step, it will request us the new access password and its confirmation of this one. The password could be selected for each user.

The menu that allow us to change the technical key is:

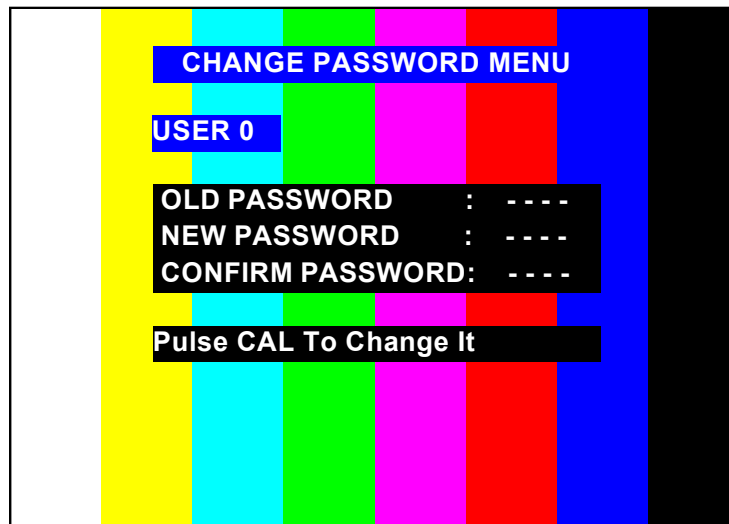


Figure 10

In order to indicate in that phase of the process is, the four dashed lines (- - -) of the password will be flashing. Also, in proportion as we introduce the characters the scripts they are substituted for asterisks (* * * *).

They are considered forbidden all those password that contain the "0".

If it has been made correctly, the monitor will show the text "OK," in the last line, if not, it will show "ERROR" and it will return to the main menu.

6.6. Option: TECH. MENU

This menu consist of options reserved to KROMA's technicians, updating and specific operations.

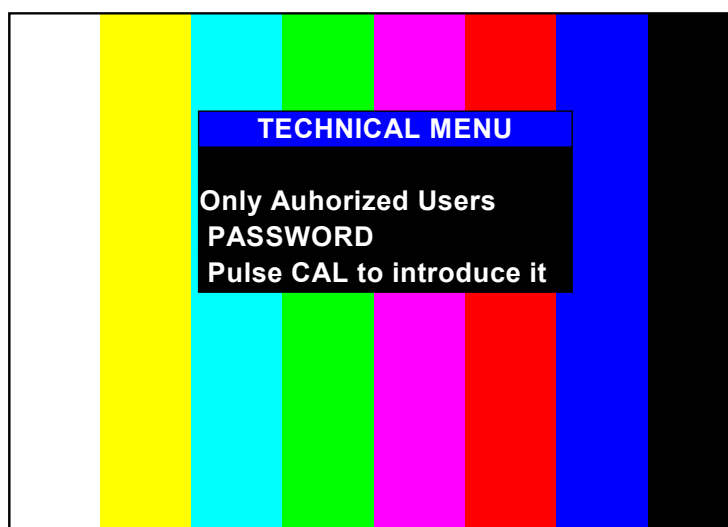


Figure 11

6.7. Option: SAFE AREA MENU

The menu where you will find options in order to configure the "safe area" it is the following:

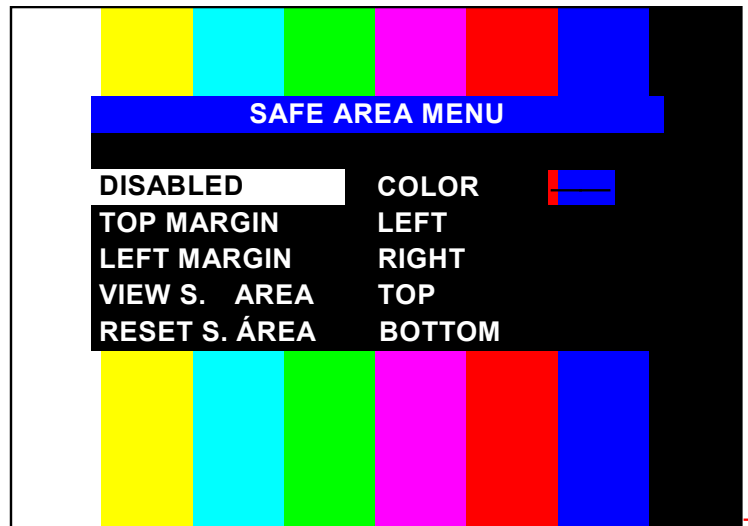


Figure 12

Next they are detailed each one of the menu options.

6.7.1. Option: DISABLED

In alternated mode, you could activate or disable the "Safe Area" by pressing the CAL key.

There are several conditions so that don't appear the "Safe Area":

1. Message "NO SYNC" active.
2. Identification number of monitor activated
3. Any message on the screen.
4. Be modifying menus.
5. Incorrect programming. Use the RESET S.A. option in order to begin the "Safe Area".

When they are activated so much "Grid" as the "Safe Area" it will have priority the "Safe Area".

6.7.2. Option: TOP MARGIN

We understand for "Safe Area" a closed frame that defines an area. The option TOP MARGIN determines the distance between the superior margin of the image and the superior border of the frame (option: TOP). This parameter permits a more precise adjustment of the frame.

With aid of the ORE select TOP MARGIN and after press CAL key, it will appear the "Safe Area" with the last established conditions. Move the ORE clockwise and counterclockwise in order to adjust the frame in the desired position. Once determined their position pulses ESC in order to validate and store returning to the SAFE AREA MENU.

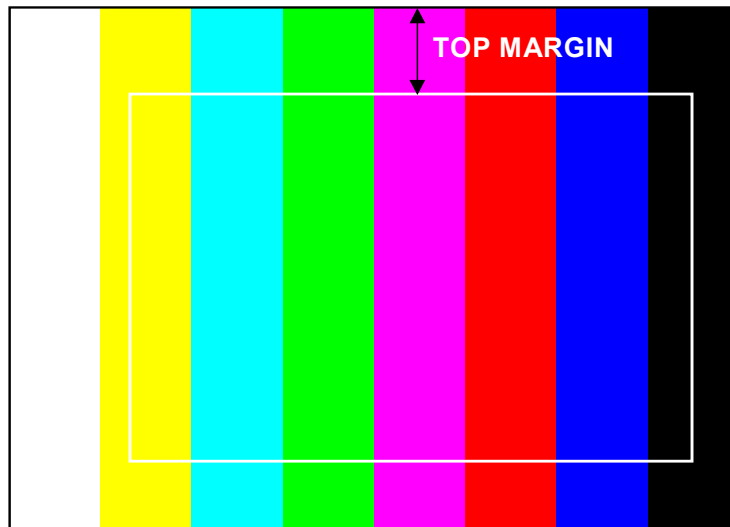


Figure 13

6.7.3. Option: LEFT MARGIN

In the same way as the previous option, it allows to modify a parameter of fine adjustment of the "Safe Area." In this case is the distance between the left limit of the image and the frame.

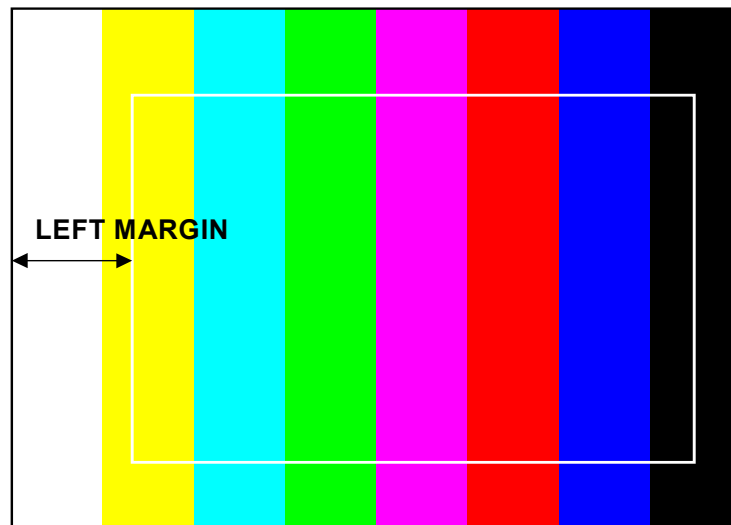


Figure 14

The procedure of adjustment is identical to the one before.

6.7.4. Option: COLOUR

It is possible to modify the "Safe Area" colour for matching the image to the background. Pressing the CAL key, we could choose one of the 8 colours. Associate to the option COLOUR, on the right hand there is a window in order to see the chosen colour.

6.7.5. Option: VIEW

It allows to make a preliminary viewing of the "Safe Area" during some seconds. After returning to the menu: SAFE AREA MENU.

6.7.6. Option: RESET S.A.

If there is any problem with the form of the "Safe Area" or you want to start of some well-known conditions, then you select the option and press CAL so, you will see the "Safe Area" during some seconds and you will memorize the initial conditions. You starting from this instant could modify the parameters in order to adapt the "Safe Area" to your convenience.

6.7.7. Option: LEFT

By selecting this option and pressing the CAL key appears the "Safe Area," with aid of the ORE you could move to left and right, the left side of the frame. When you had selected its position, press the ESC key in order to store ,and return to the menu: SAFE AREA MENU.

6.7.8. Option: RIGHT

With this option you could move the right side of the frame, toward left and right side.

The adjustment procedure is identical to the LEFT option.

6.7.9. Option: TOP

With this option you could move the upper side of the frame towards up or down side.

The procedure of adjustment is identical to the LEFT option.

6.7.10. Option: BOTTOM

With this option you could move the lower side of the frame towards up or down.

The adjustment procedure is identical to the LEFT option.

The adjustment for these last four options is showed in the following figure:

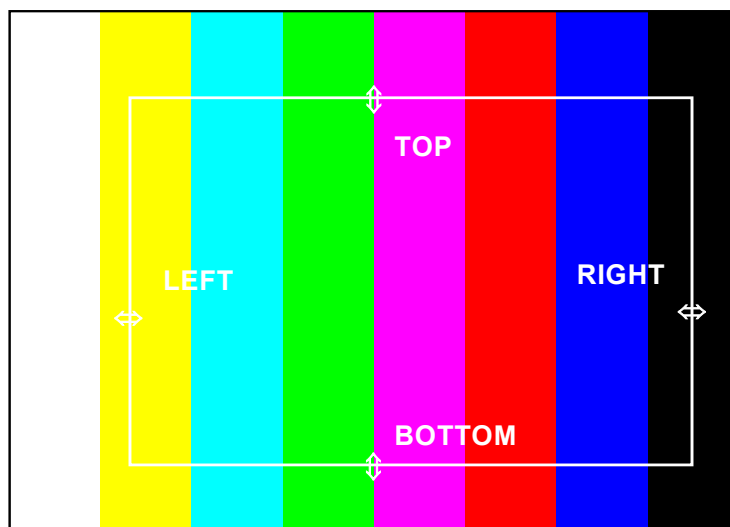


Figure 15

6.8. MEMORY STORE MENU

It allows to store in the working memory, the content of any of of the existent memories in the monitor (USER 0, USER 1, USER 2 , USER 3 and SYSTEM).

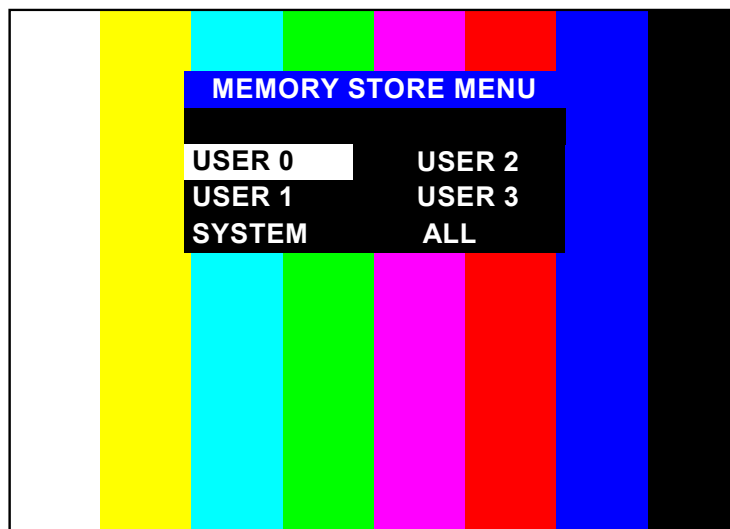


Figure 16

We select the memory the one we want to store and we press CAL. In all memories it will request us the technical password and while it stores the value will appear the message STORING in mode "Flashing".

The ALL mode will allow to store all the dates in all user memories, in one time.

6.9. Option: MENU CONFIG INPUT KEY

This option allows us to associate to the key "INPUT" a sequence of input change, that later on we could activate on cyclic mode by pressing to this key.

The menu has the following appearance ⁽¹⁾:

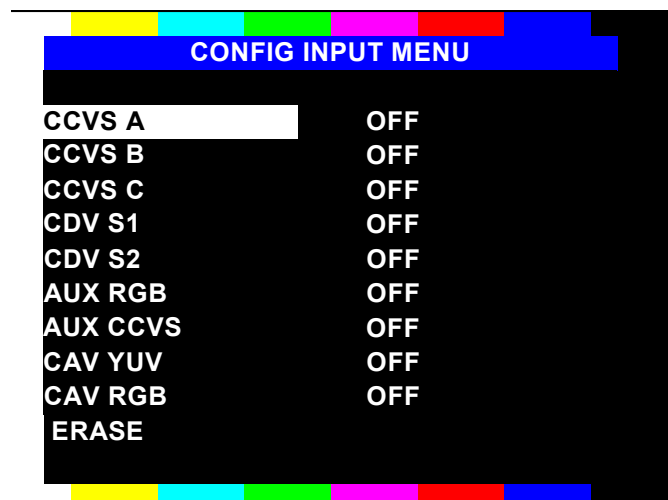


Figure 17

⁽¹⁾ In BM5314A13 the CCVSB, CCVSC, CAV YUV and CAV RGB options are omitted.

With the CAL key aid and the ORE, we selected the input, that we desire to include in the cyclic sequence. If we press in alternative mode the CAL key on one of the inputs, the ON/OFF message will appear, in order to indicate us if this is included or not.

Example:

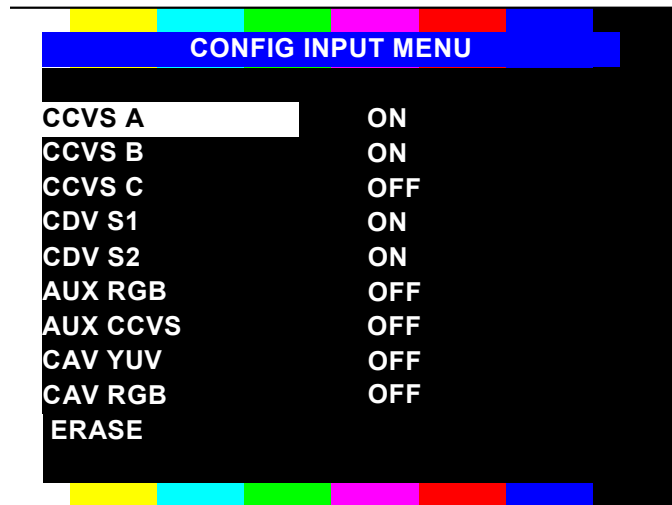


Figure 18

The cyclic sequence of inputs change associated to the INPUT key would be:

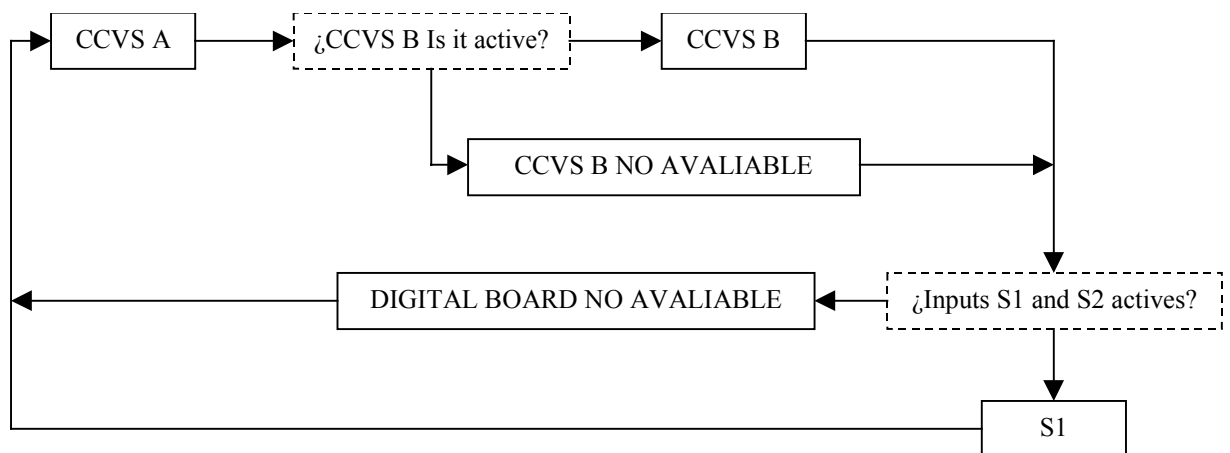


Figure 19

When the ERASE option is pressed, all the inputs are erased from the sequence. Therefore the second time and successive that we pulse the INPUT key will appear the message: "NO CONFIG."

6.10. Option: CONFIGURATION MENU

In this menu some of the monitor actions can be configured. The menu will have the following appearance:

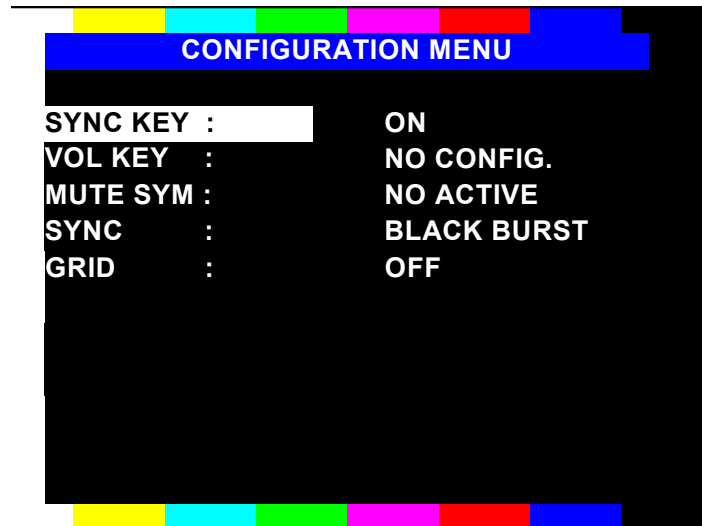


Figure 20

6.10.1. Option: SYNC KEY

It allows to program the SYNC key in order to switch between internal and external sync or disable it. Thereby, the INPUT and CCVS keys, the BM5309A12 could switch to the CCVSC input, making possible that the external sync input becomes an composite video input.

6.10.2. Option: VOL KEY: VOLUME CONTROL

Pressing CAL we select this option and we are into a new audio parameters menu. This menu shows the different programmings function from the key "VOL".

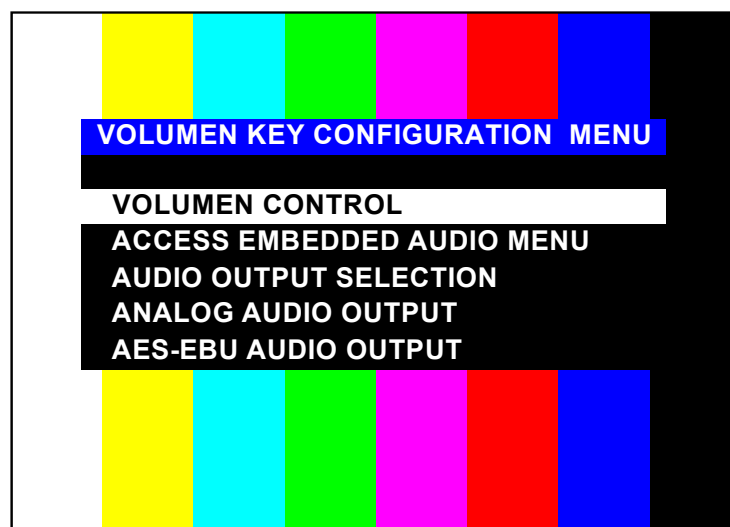


Figure 21

With the first option "VOLUME CONTROL", the "VOL" key and with the "ORE" will become a volume control of the output audio.

When we select the second option "AUDIO ACCESS EMBEDDED MENU", the "VOL" key will allow us to see the group or groups and channels in each group where there are audio. If the symbol that appears is red color it indicates that the signal of audio present is stereo and if the signal is green is monoaural.

"AUDIO OUTPUT SELECTION" allows to switch a pair of channels, previously selected in "EMBEDDED AUDIO" menu. It affects to the analog and to the digital (AES-EBU) output.

The other two options allow to switch independently the analog and to the digital output.

6.10.3. Option: MUTE SYM

By means of this option, the "Mute Symbol" can be activated, it must appear in the screen while in the embedded audio option any output is in MUTE position or the volume level is 0.

The possible positions are: NO ACTIVE and ON - OFF

6.10.4. Option: SYNC (Option not available in BM5314A13 monitor)

This option allows you to select the sync level. You could choose "BLACK BURST" or with a "4 Vpp" standard sync signal.

6.10.5. Option GRID

This option allows to generate a chess of white squares on the picture. Its functionality is an approach in order to hide partially pictures with a reserved content.

You will be allowed that the CAL key can activate this option at the time that it chooses with ORE one of the three sizes of the square (2, 4, 8 or OFF mode), finally this function will be activated pressing CAL key.

This function is conditioned to the "Safe Area," operation, since it is activated under the same conditions. However, the "Safe Area" has more priority and it will block the representation of the "chess" if it is activated.

As difference from other options this can not be configured as static, for this reason it has to be activated every time when you switch on the monitor.

6.11. Option: EMBEDDED AUDIO

In this menu we obtain data/information relative to the audio that is inserted in the signal, in this graph we can see the number of channels occupied by group and if these are stereo or mono according to the color (Red - stereo & Green - mono).

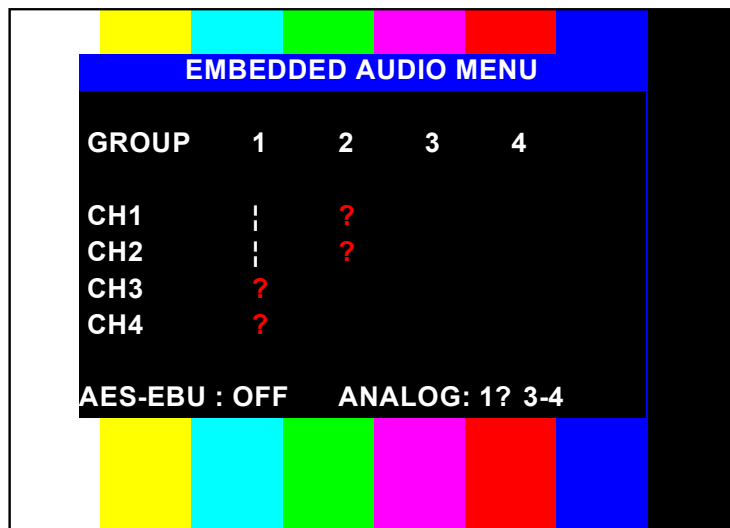


Figure 22

The AES-EBU & ANALOG output in the lower part, it can be selected with the slider moving the ORE. Pressing "CAL" Key we will be able to select the group and the wished channel.

6.12. Option: REMOTE MENU

In this menu appear two options, one of them is common to all the versions later to 1.9 and the other is associated to particular software versions. When the monitor is selected, it converts in a remote control. If the monitor is not prepared in order to behave as remote, when you press CAL key on this option, it won't have effect.

Because of the explanation of this option it is associated to a version of "software", it will be included in a separated appendix.

The menu that takes step to the control related to the remote control is the following one:

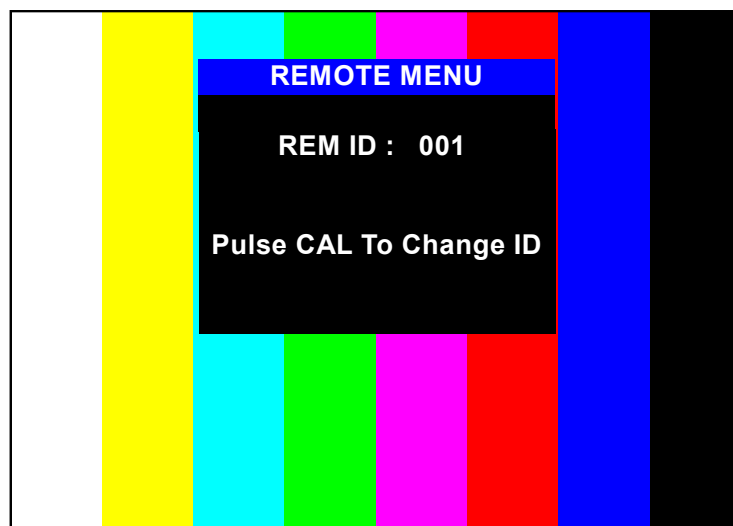


Figure 23

6.12.1. Option: REM ID

It allows to assign to each monitor an identification number that it will be recognized for the remote control, when it is activated.

By pressing the CAL key in this option, it will appear three dashed lines and the identification number of the monitor, the system wait until you introduce the three last numbers of the new identification⁵. If you want to stop the operation, you will press the ESC key.

Once carried out this operation the monitor is identified with this number, for all the remote control functions. When the remote control is activated, the monitor keeps the keyboard functions, but it has preference the remote control. (See remote control RK5400 information/manual).

6.13. Option: CONFIG VALUES

This option presents/displays on the screen the calibration parameters values. The appearance of this menu is the following one:

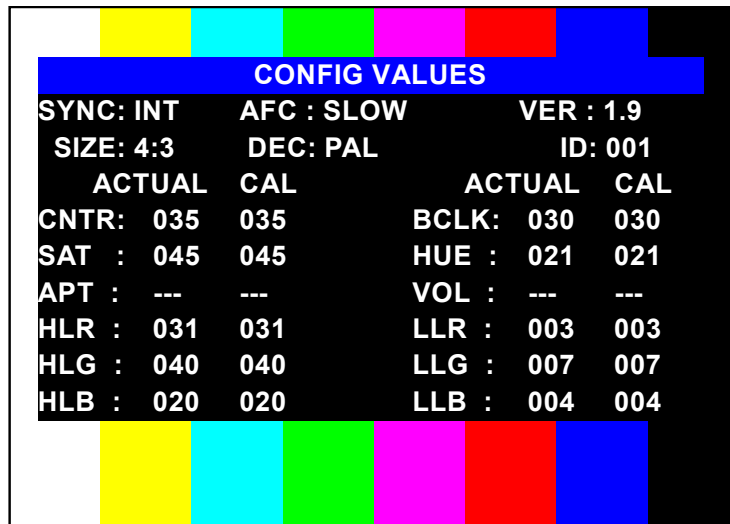


Figure 24

This graphic informs to the user about the monitor parameters values, along with other informative datas.

In order to have access to this menu the STS Key must be pressed twice consecutively.

⁵ The possible values go from number 1 to number 128, both inclusively. The INPUT key has associated the value 0.

7. APENDIX

7.1. Apendix A – Memories Structure

In the monitor we have 4 memories of reference:

The USER 0 Memory can be recorded entering a technical code. And the other three are to the user disposal.

In addition, there is a work memory whose data directly control the HW of the monitor and it is modified by the user by means of the front panel, in normal operation.

All the memories have two zones:

1. Technical: It contains LL/HL values of each gun and the BLK LVL, CNTR, SAT, HUE and APT calibration values.
2. Operational: It contains the present value of BLK LVL, CNTR, SAT, HUE and APT, as well as the rest of the front panel control.

The SETUP option from the STATUS menu allows to modify the values for the technical zone in the working memory. By means of MEM STORE option all the content of the working memory is transferred to the choosen memory (0⁶, 1, 2 and 3).

When the user modifies any value from the operational zone, this information remains only in the working memory, it does not happen to memories 0, 1, 2 and 3, unless the MEM STORE option is selected.

In case of POWER OFF the monitor always recovers the state in which it was before the energy loss.

There is a series of recorded data of permanent form and they are not affected by the functions "MEM STORE" and "MEM RECALL" and they are the following ones:

1. Monitor identification number ("REM ID" from the REMOTE MENU)
2. Auto Setup CRT ref.
3. "Software Version" number.

⁶ Only previous introduction of technical code

INDEX

1. INTRODUCTION.....	0
1.1. APPLICATIONS.....	0
1.1.1. FEATURES.....	0
1.1.2. PICTURE TUBE.....	1
1.1.4. FLEXIBILITY.....	1
1.1.5. AUTO SETUP SYSTEM.....	1
1.1.6. REMOTE CONTROL.....	1
1.1.7. MENU.....	1
1.1.8. NORMAL SIZE, UNDERSCAN AND 16:9.....	1
1.1.9. MEMORIES.....	1
1.2. TECHNICAL SPECIFICATIONS.....	2
1.2.1. SCAN & SYNC.....	2
1.2.2. PICTURE DISPLAY.....	2
1.2.3. CTR.....	2
1.3. BM5309A12 MODEL.....	2
1.3.1. DECODER PAL / NTSC PERFORMANCE.....	2
1.3.2. LUMINANCE.....	3
1.3.3. CHROMINANCE.....	3
1.4. BM5309A13 MODEL.....	3
1.4.1. SDI FEATURES.....	3
1.4.2. DECODER PAL / NTSC / SECAM PERFORMANCE.....	4
1.4.3. LUMINANCE.....	4
1.4.4. CHROMINANCE.....	5
1.4.5. GENERAL.....	5
1.5. INSTALLATION.....	5
1.5.1. Previous Inspection.....	5
1.5.2. Safety Information.....	6
1.5.3. Connection to the Main.....	6
1.5.4. Location.....	6
1.5.5. Tally Lamp.....	6
1.5.6. Ground Terminals.....	7
1.5.7. Remote Control Connectors (RS-485 Interface).....	7
2. INPUTS SELECTION.....	8
2.1. INPUT KEY.....	8
2.2. CCVS KEY.....	8
2.3. CDV KEY.....	8
2.4. CAV KEY.....	8
2.5. AUX KEY.....	8
3. AUXILIARY FUNCTIONS.....	9
3.1. SYNC KEY.....	9
3.2. SIZE KEY.....	9
3.3. DEG KEY.....	9
3.4. STS (STATUS) KEY.....	9
3.5. ESC KEY.....	10
3.6. 16:9 KEY.....	10
3.7. MONO KEY.....	10
3.8. AFC KEY.....	10
4. COMMAND KEYS FUNCTION.....	11
4.1. BLK KEY (BLACK LEVEL/BRIGHT).....	11
4.2. CNT (CONTRAST).....	11
4.3. SATURATION/COLOUR.....	11
4.4. HUE/TINT (NTSC ONLY).....	12

4.5.	APT/VOL (APT/VOLUME).....	12
4.6.	CAL KEY.....	12
5.	INDICATORS	13
5.1.	UNCAL LED	13
6.	MENUS OPERATION	13
6.1.	STATUS MENU.....	13
6.2.	MEMORY RECALL MENU.....	14
6.3.	SET UP MENU.....	14
6.3.1.	<i>AUTO SET UP option</i>	15
6.3.2.	<i>CRT/REF option</i>	16
6.3.3.	<i>LEARN PROBE option</i>	16
6.4.	OPTION: MANUAL SET UP.....	17
6.4.1.	<i>Opción: MENU GRAY SCALES</i>	17
6.4.2.	<i>Option: MENU CALIBRATION VALUES</i>	18
6.5.	OPTION: CHANGE PASSWORD MENU	19
6.6.	OPTION: TECH. MENU	20
6.7.	OPTION: SAFE AREA MENU	21
6.7.1.	<i>Option: DISABLED</i>	21
6.7.2.	<i>Option: TOP MARGIN</i>	21
6.7.3.	<i>Option: LEFT MARGIN</i>	22
6.7.4.	<i>Option: COLOUR</i>	22
6.7.5.	<i>Option: VIEW</i>	23
6.7.6.	<i>Option: RESET S.A.</i>	23
6.7.7.	<i>Option: LEFT</i>	23
6.7.8.	<i>Option: RIGHT</i>	23
6.7.9.	<i>Option: TOP</i>	23
6.7.10.	<i>Option: BOTTOM</i>	23
6.8.	MEMORY STORE MENU	24
6.9.	OPTION: MENU CONFIG INPUT KEY	24
6.10.	OPTION: CONFIGURATION MENU	26
6.10.1.	<i>Option: SYNC KEY</i>	26
6.10.3.	<i>Option: MUTE SYM</i>	27
6.10.4.	<i>Option: SYNC (Option not available in BM5314A13 monitor)</i>	27
6.10.5.	<i>Option GRID</i>	27
6.11.	OPTION: EMBEDDED AUDIO	27
6.12.	OPTION: REMOTE MENU	28
6.12.1.	<i>Option: REM ID</i>	29
6.13.	OPTION: CONFIG VALUES.....	29
7.	APENDIX	30
7.1.	APENDIX A – MEMORIES STRUCTURE	30