


SO100

Position Indicator

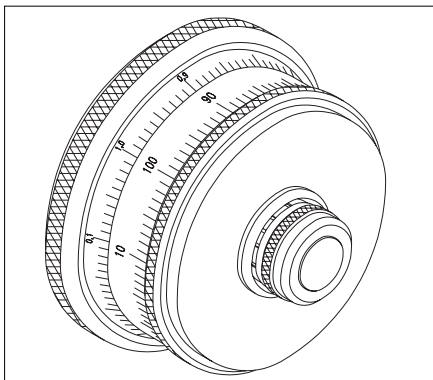

ENGLISH

1. Safety information

In order to carry out installation correctly, we strongly recommend this document is read very carefully. This will ensure your own safety and the operating reliability of the device.

- Your device has been quality controlled, tested and is ready for use. Please respect all warnings and information which are marked either directly on the device or in this document.
- Warranty can only be claimed for components supplied by SIKO GmbH. If the system is used together with other products, the warranty for the complete system is invalid.
- Repairs should be carried out only at our works. If any information is missing or unclear, please contact the SIKO sales staff.

2. Identification

Please check particular type of unit and type number from the identification plate. Type number and the corresponding execution are indicated in the delivery documentation.


e.g. SO100-0023
 ————— type number
 ————— type of unit

3. Setup

After installation the drum scale must be aligned with the pointer. The scale has to be set to zero position or to a defined initial value.

Please proceed as follows:

1. Remove protective cap from the position indicator.
2. Push zero-setting button + keep it pressed.
3. Turn zero-setting button to the right / left to bring the desired value on the drum scale in line with the pointer.
4. Release zero-setting button.
5. Thanks to the integral pendulum mechanism the drum scale aligns with the pointer. If the display value does not exactly correspond to the desired value, step 3+4 must be repeated until a satisfactory reading is achieved.
6. Fix protective cap again.

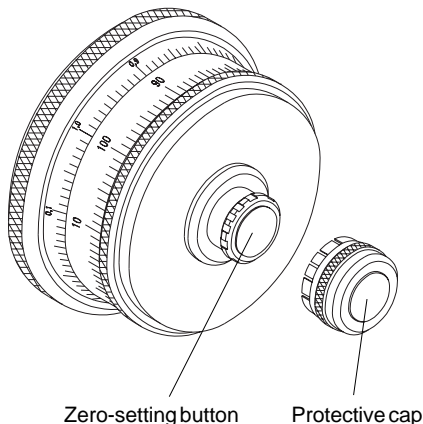

SIKO GmbH
DR.-ING. G. WANDRES

Postanschrift / Postal address:
Postfach 1106
D-79195 Kirchzarten

Werk / Factory:
Weihermattenweg 2
D-79256 Buchenbach

Telefon / Phone 0 76 61 / 3 94 - 0
Telefax / Fax 0 76 61 / 3 94 - 388
Internet www.siko.de

