

# USER MANUAL

## Hazer 1200

Introduction: Congratulations, you have just purchased one of the most reliable fog machines on the market today! Please read and understand the instructions in this manual carefully and thoroughly before attempting to operate this unit. These instructions contain important information regarding safety during use and maintenance.

Warning! To prevent or reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.

Caution! There are no user serviceable parts inside this unit. Do not attempt any repairs yourself, doing so will void your manufacturer's warranty.

Do not discard the shipping carton in the trash. Please recycle when ever possible.

Safety Issues:

NEVER POINT OR AIM A FOG MACHINE TOWARDS PEOPLE OR THEIR CLOTHING. THIS UNIT EMITS HOT VAPOR AND SHOULD

BE USED WITH THE SAME CARE THAT YOU WOULD OBSERVE WHEN USING AN ELECTRIC KETTLE OR IRON.

- . Be sure to save the packing carton in the unlikely event the unit may have to be returned for service
- . Do not spill water or other liquids into or on to your fogger. Be sure that all the fog fluid is kept inside the fluid reservoir
- . Be sure that the local power outlet match that or the required voltage for your fog machine
- . Do not remove the top cover under any conditions. There are no user serviceable parts inside
- . Disconnect the unit's main power when left unused for long periods of time
- . Never connect this unit to a dimmer pack
- . Do not attempt to operate this unit, if it becomes damaged in anyway

- . Never operate this unit when it's cover is removed
- . To reduce the risk of electrical shock or fire, do not expose this unit rain or moisture
- . Do not attempt to operate this unit if the power cord has been frayed or broken. Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in case of an internal short
- . Disconnect from main power before making any type of connection
- . Never block the ventilation holes. Always be sure to mount this unit in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall
- . This unit is intended for indoor use only, use of this product outdoors voids all warranties
- . Always mount this unit in a safe and stable matter

- . Please route your power cord out of the way of foot traffic. Power cords should be routed so they are not likely to be walked on, pinched by items placed upon or against them
- . The unit should only be serviced by qualified service personnel when:
  - A. The power-supply cord or the plug has been damaged.
  - B. Objects have fallen, or liquid has been spilled into the unit.
  - C. The unit has been exposed to rain or water.
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance.
- 1. Open the shipping carton and carefully remove the unit from the shipping carton.
- 2. Be sure to remove all the packing material especially around the nozzle.

3. Set the fog machine on a flat dry surface. Locate the included bracket from the package and install it using the supplied hardware to the side casing. Note: The bracket is an optional accessory and may not be used if desired, however if you intend to suspend the unit from a truss the bracket must be used.

4. Remove the fluid reservoir

5. Place the feeder tube with the filter deep inside the reservoir and tighten the cap.

6. Firmly attach the remote control unit to the rear remote control socket on the unit.

7. Plug the unit in to a matching power supply. Wait approximately five minutes for the fogger to reach normal operating temperature.

8. Follow the operating instructions on the next page for proper operation.

**Remote Operation:** The remote control comes connected to the fog machine. Once the machine is plugged in and turned on, a red power L.E.D. on the remote will glow indicating the unit is receiving power. The unit has a warm up time of five (5) minutes. After the unit

has warmed up, a GREEN L.E.D. on the remote will light indicating the unit is ready to emit fog. To emit fog, simply press the green button on the remote for desired length of time. If the green L.E.D. is on and fog does not come out after holding the button down for 30 seconds, check the fluid tank and hose to make sure there is fluid going through the hose.

**Optional Timer:** You can also operate the fog output automatically by purchasing the optional timer remote. The timer function allows haze to be emitted at designated intervals. The remote has three (3) L.E.D.s that indicate different functions; The yellow L.E.D. will indicate the timer is off and not activated. The red L.E.D. indicates power is on. The green L.E.D. indicates fog output is available. The remote also contains two rotary knobs. The Duration knob serves two functions 1) Turns the timer on and off. 2) Sets the timer's duration (Length of fog output). The interval knob sets the amount of time in between fog output from 30 seconds to 10 minutes. Turning these knobs in a clockwise direction will increase their values, turning them in a counter-clockwise direction will decrease their values.

**Caution:** Before removing or replacing the remote control unit disconnect the power supply.

If you experience low fog output, pump noise, or no fog output at all, disconnect and discontinue use immediately. Do not attempt to continue

pushing the remote control's activation button as this may damage the fog machine. Check fluid level, the external fuse or breaker, remote connection, and be sure the wall outlet is sending power. If all of the above appear to be okay, and the unit fails to operate correctly,

the unit will require service.

MODEL – effect fog machine 1200w

VOLTAGE\*: 120v~60Hz or 230v~50Hz

WEIGHT: 6.1 Kgs

DIMENSIONS: 56\*27.5\*27cm

FUSE: 120v=10A/30mm or 230v=5A/30mm

WARM UP TIME: 5 Minutes

TANK CAPACITY: 1.5 Liter Removable

DUTY CYCLE: Not to exceed 6 hours turned on.

HEATER: 1200 watt

\*Voltage is preset at the factory and may not be change



**User Manual**

**for the**

**Haze Machine**