


The Cellphone client of user manual

 
Thank you for choosing our network ip camera. The Manual can help you to use the camera correctly.

Chapter 1 Preparation

1.1 Please, connect the camera with the network cable, then connect the power adapter.

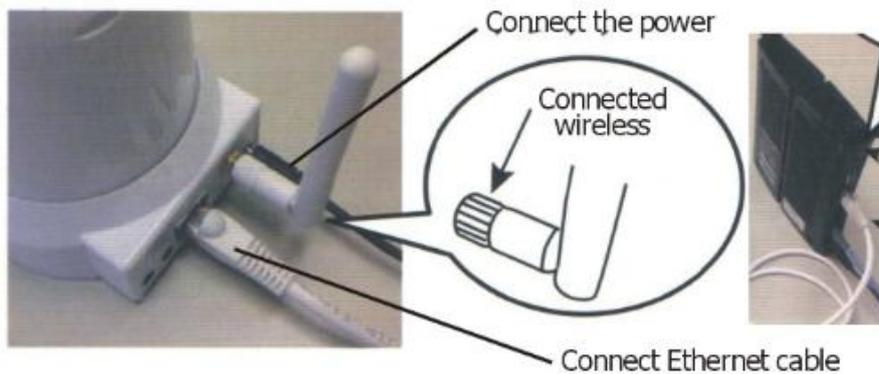

1.2 Please make sure that the router's power indicator is on (green) and the network light is flashing (yellow).



Chapter 2 The Cellphone Client




2.1 Download.

Install the software to the phone, you can search the software in the google play and apple store with the key "P2PWIFICAM".




2.2 Install the software.

Click on the software icon and then click on install.

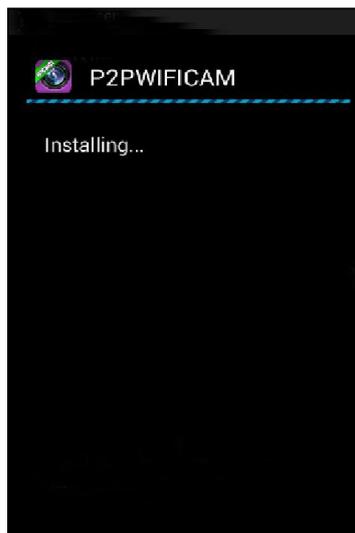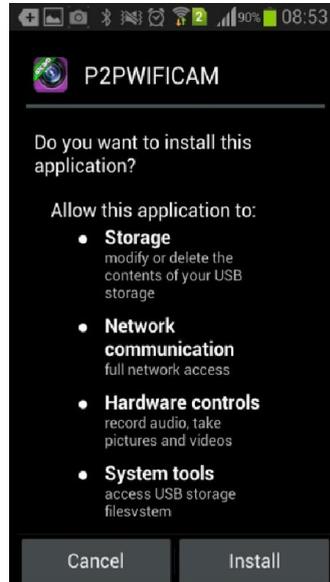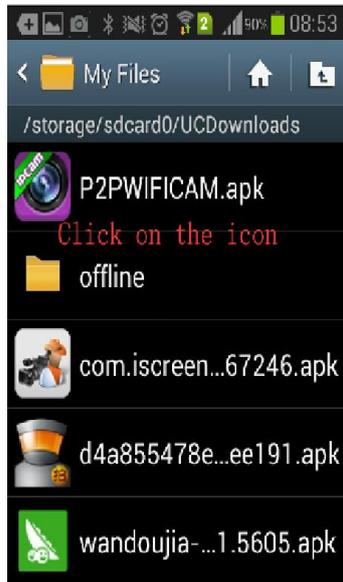

Press “Done” , the installation to be completed.

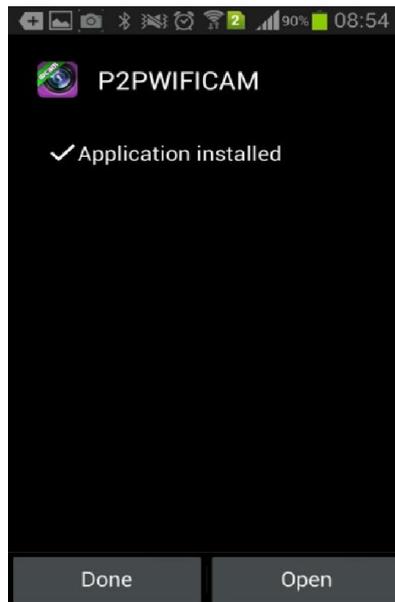

2.3 Uninstall the software.



Chapter 3 Software System


3.1 App.

When the installation is complete, you can see the app icon like this.



3.2 Add camera


Run the app, then press add new camera

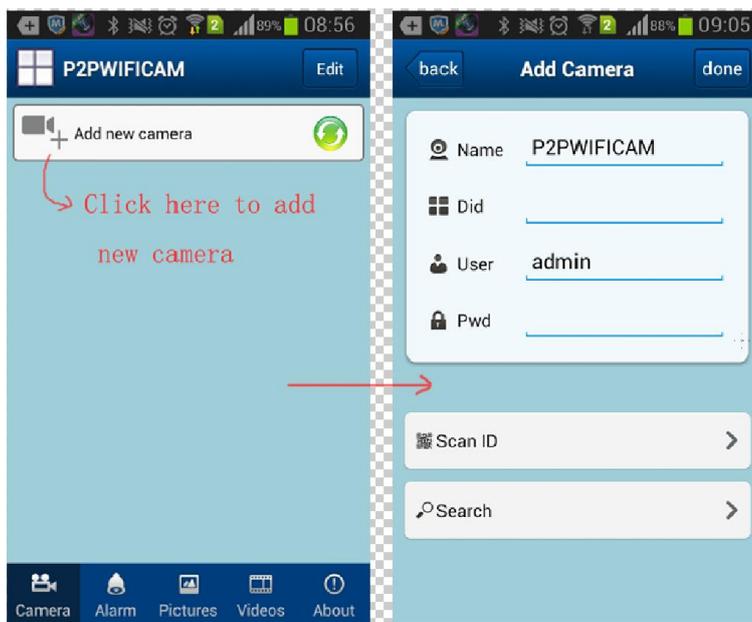


Press “Scan ID” to open QR Cord Scanning. When then scan is complete, press “done” to add the camera to the list.



Press “Search” to search of device in the LAN and choose the one.

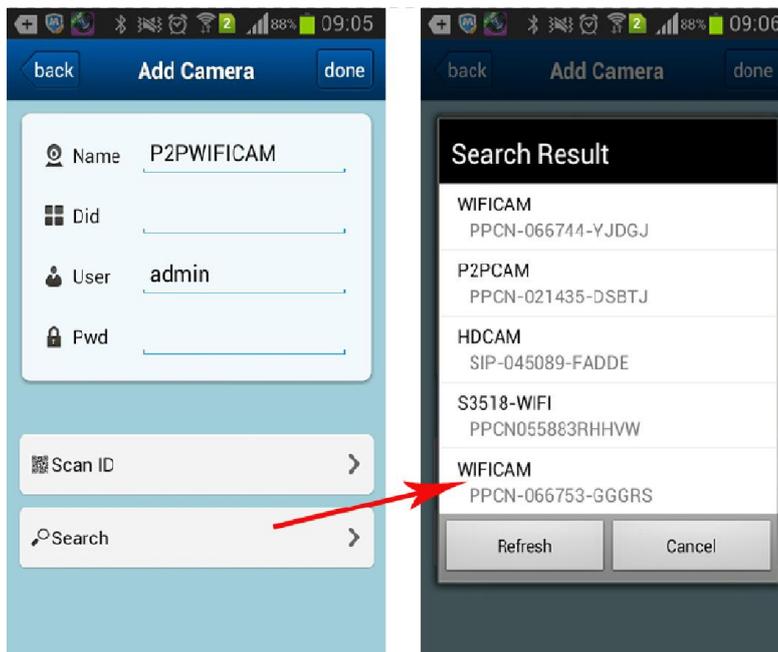


Press “done” to add the camera to the list.

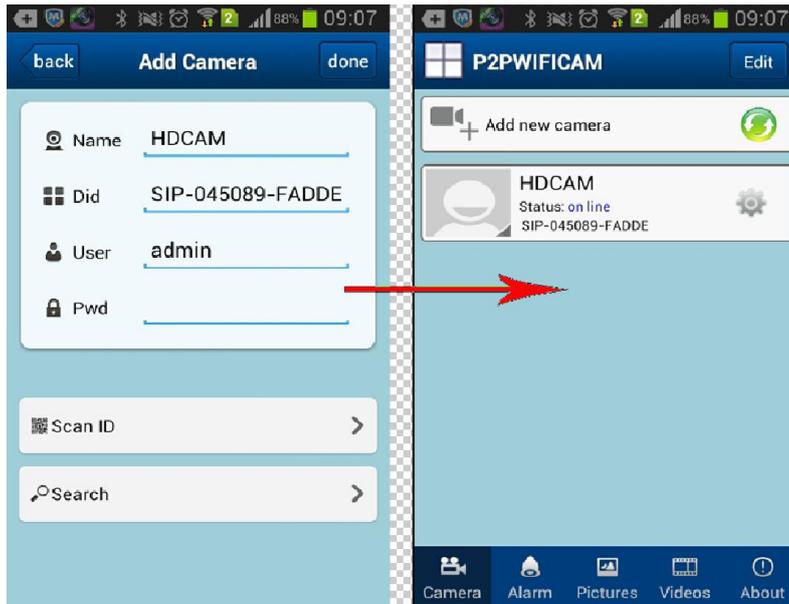


3.3 Real time monitoring

Choosing and press the device in the list, enter Real time monitoring. like this graphic below.

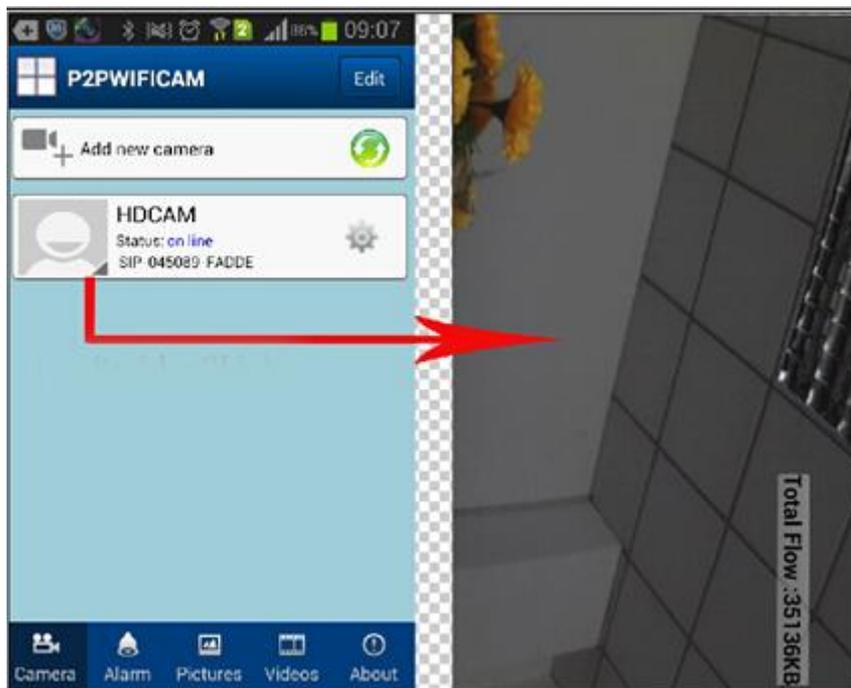

At the middle of the screen, please click. The IP Camera of toolbar will be pop up. You will see the picture in below.

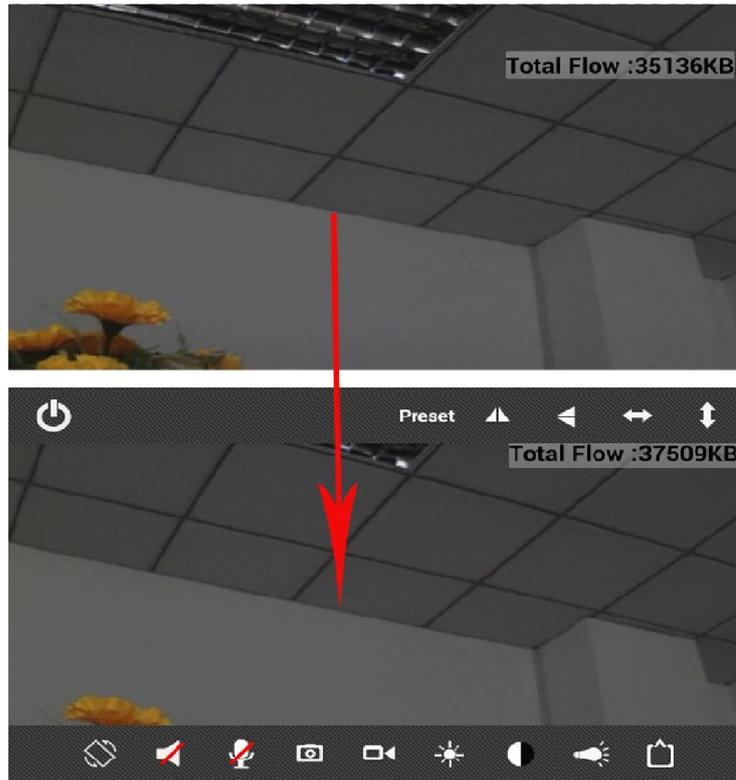

: Exit.



: Preset a set and Preset a call.



: Mirror.



: Reversal.



: Left and Right



: Up and Down



: Horizontal and Vertical



: Audio.



: Talk.



: Photograph.



: Record.



: Brightness.



: Contrast.




: Red Lamp.



: Review mode.


3.4 To view the video for phone or remote.

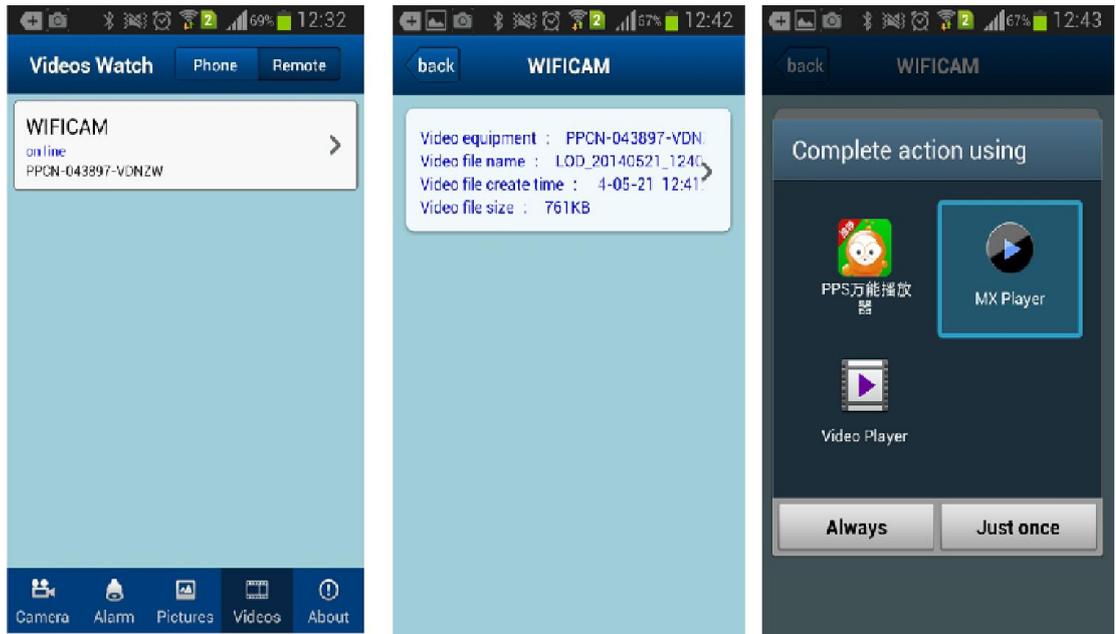

3.5 To view the Picture for phone or remote.




3.6 Delete camera

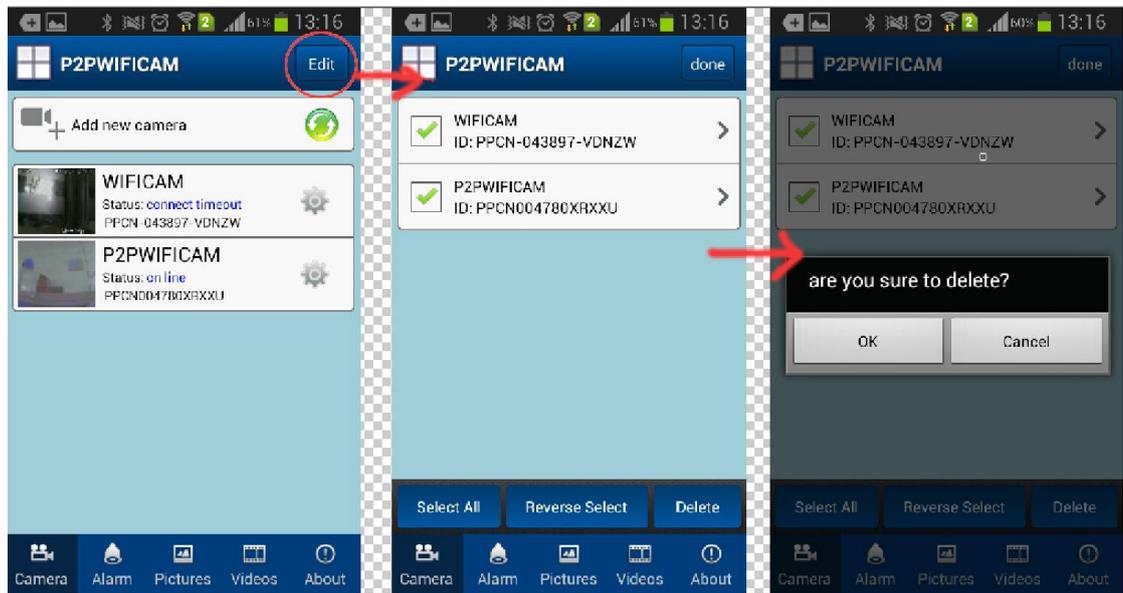

Chapter 4 Paramater Setting

It' s a parameter configuration interface.

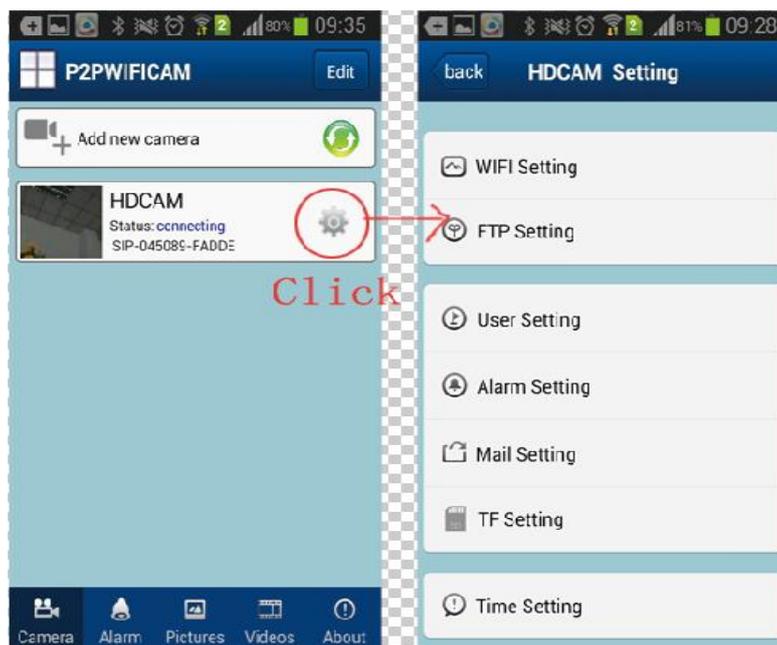

4.1 WIFI Setting

It's to set the WIFI connection for the ip camera.



4.2 FTP Setting

It's to set a FTP connection for the IP Camera.



4.3 User Setting

It's to set the Administrator or the Operator of user name and password for the IP Camera.

The screenshot shows a mobile application interface for 'User Setting'. At the top, there is a status bar with icons for home, back, and various system functions, along with the time '09:43' and battery level '79%'. Below the status bar is a blue header with 'back' and 'done' buttons. The main content area is a light blue box with a white background. It is divided into two sections: 'Administrator' and 'Operator'. The 'Administrator' section has a 'User:' field with the text 'admin' and a 'Pwd:' field. Below the 'Pwd:' field is a checkbox labeled 'Show Password'. The 'Operator' section has empty 'User:' and 'Pwd:' fields, and a 'Show Password' checkbox below them.


4.4 Alarm Setting


It's to set to upload picture and to send Email when the device be triggered alarm.



4.5 Mail Setting


It's set up to send account email and receive mail account

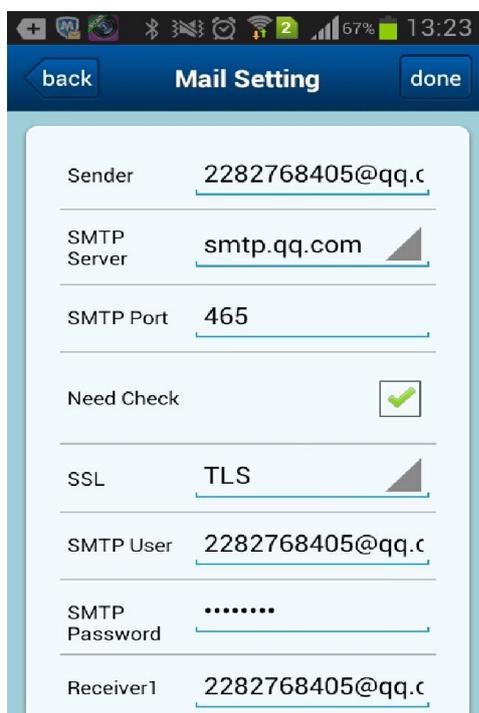

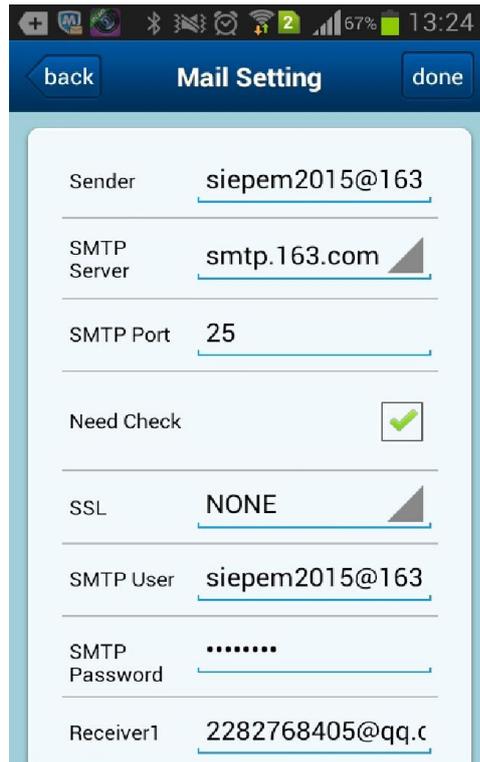

4.6 TF Setting

It's to set save the video recording in the TF Card.

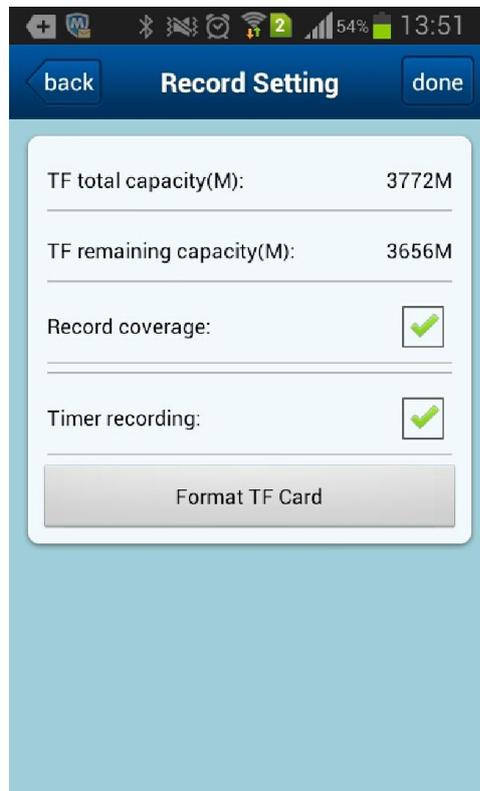

4.7 Time Setting

Now , you will be able to select your time zone and correct your time from a mobile and the server.

