

User Guide

A note concerning the battery inside the transmitter:

Depending on your usage of the transmitter, the battery can last anywhere between 3 to 6 months. When the battery is low, the transmitter will produce two beeps in a repetitive cycle. ***At that point you should replace your battery with a new one.*** That is why we recommend that you keep a spare battery somewhere handy such as the glove compartment.

WARNING!

Manual transmission vehicles equipped with a remote starter unit must always be parked with the gear lever in the **NEUTRAL** position and the emergency brakes must always be applied.

Table of Contents

Table of Contents	2	Ignition-controlled Door Locks.....	9
Introduction.....	2	Ignition Re-lock	9
Remote-Starting Your Vehicle	3	Secure Lock	9
Setting Your Vehicle into Ready		Turbo Mode.....	9
Mode	3	Remote Trunk Release	9
Remaining In Ready Mode	3	Engine Run Time	9
Remote-starting	3	Multi-car Operation	9
Vehicle Presets	3	Missing a Start or a Stop	
Driving Off	4	Confirmation.....	10
Using the System	4	Multi-Level Features (<i>default state</i>).....	10
Arming and Disarming the System	4	Accessing the Multi-Level Features	
Idle Mode.....	4	and Other Transmitter Functions	11
Turbo Mode	5	L.E.D. Intrusion Codes	12
Valet Mode with the Valet Switch	5	Troubleshooting Poor Transmitting	
Ignition Valet.....	5	Range	12
Start Attempts Indicator (Valet		Using the Remote Control.....	12
Mode)	6	LCD Transmitter Operation (First	
"Home Valet™" Mode.....	6	Car Control)	13
Remote Valet Mode.....	6	Basic Vehicle Operation.....	13
Panic Mode	6	Transmitter Mode Selection	13
Quick Lockout™	7	Time or Alarm Clock Adjustments...	13
Cold Weather Mode	7	Cold Weather Mode	14
Temporary chirp delete	7	Home Valet™	14
Advanced Features: Installation-		Countdown Timer.....	14
programmable Options	7	Safe Start Mode	14
Remote Door Locks.....	7	Parking Countdown.....	15
Priority Door Access	8	*Runtime Options (once the car has	
Active or Passive Arming.....	8	been remote started).....	15
The Starter Kill and the Anti-grind		LCD Transmitter Operation	
Feature	8	(Second Car Control)	15
Shock Sense, Warn-away Sense	8	Basic Vehicle Operation.....	15
Disarmed Notification	8	Start and Stop While in Safe Start	
Siren Chirps or Horn Honks.....	8	Mode	15
Car Finder	9	Diagnostics – Chirps Table.....	16
Siren or Horn Chirp Timing.....	9	Diagnostics – Parking Light Flash	
Safe Start	9	Table.....	17
Home Valet™	9		

Introduction

This system is a state-of-the-art remote car starter and alarm combo system. The system is packed with advanced features such as priority access to the driver's door and car finder (commodity features), last armed state memory in case of power failure (which ensures that the vehicle remains protected after a power failure recovery) and the safe start children safety feature. With many an advanced function, this product will satisfy any one of your expectations from high-end commodity and security systems, without neglecting any standard feature commonly offered by entry-level starters.

Remote-Starting Your Vehicle

Setting Your Vehicle into Ready Mode

This product is designed for vehicles with a **manual** transmission only. In order to start the vehicle by remote, the unit must first be set to ready mode. If the unit is not set to ready mode, it cannot remote-start the vehicle. Once the system is set to ready mode, the vehicle can be remote-started and stopped at wish. The system will exit ready mode if a door or the hood is opened, if the brake pedal is pressed, if the parking brake is disengaged or if the ignition key is turned to the **IGNITION ON (RUN)** position.

To set the system to ready mode:

1. Ensure that all the doors are closed and that the shifter is in the neutral position.
2. With the engine already running, apply the parking brake and release the brake pedal.

Make sure to release the brake pedal.

3. Within 20 sec. press **LOCK**, or **UNLOCK**.

The parking lights will flash 3 times quickly and remain lit.

4. Remove the key: the engine will go on running.
5. Exit the vehicle and close the door.
6. Press and hold either:
 - a. **LOCK** to lock the doors and shut down the engine;
 - b. **UNLOCK** to unlock the doors and shut down the engine;
 - c. **START/STOP** to shut down the engine without affecting the doors.

Remaining In Ready Mode

Once the vehicle is in ready mode you can start and stop the vehicle at wish. However, should any of the following occur, the vehicle will exit ready mode – thus eliminating the remote start option until ready mode is restored:

- Door opened;
- Hood opened;
- Brake pedal pressed;
- Parking brake disengaged;
- Ignition key turned to the **IGNITION ON (RUN)** position.

Should any of the above occur, ready mode will be cancelled.

Note: The unit will notify the user that it has exited ready mode by giving 3 slow flashes (parking lights).

Remote-starting

Press the **START/STOP** button for approx. 1 second. The parking lights will come **ON** and the remote control will play a melody to inform you that the system has received your signal. Approximately 5 seconds later, the engine will start —*the parking lights will remain on during the pre-programmed run time of the engine*. The remote control will play a second melody to confirm that the engine has started. If the vehicle does not start at the first attempt, the system will shut down.

W A R N I N G I

It may require as much as 10 seconds before receiving the second confirmation signal; therefore, pressing any buttons before receiving that confirmation **will abort the confirmation process**.

Vehicle Presets

Heater & Heated Seat

When leaving the vehicle it is recommended to preset the accessory controls in preparation for the next remote start. Settings for the blower motor (fan), front and rear, as well as heated seats (if

equipped) should not be left on **HIGH**. It is recommended to leave the settings on **LOW** or **MEDIUM** instead.

Windshield Wipers & Radio & Headlights

Certain vehicles require the radio and / or windshield wiper and / or headlight circuits to become energized while running under remote start. When leaving the vehicle you must ensure that the windshield wiper and headlight switches are **OFF**. Leaving the headlight switch **ON** on certain types of vehicles could cause them to remain **ON** even after remote starter shut down, resulting in a dead battery.

Driving Off

With the vehicle running under remote control, press the **UNLOCK** button to disarm and unlock the doors. Enter the vehicle and do the following:

- Turn the ignition key to the **IGNITION ON (RUN)** position. (**Do not turn the key to the CRANK position while the engine is running.** This would cause the starter motor to re-engage.)
- Press the brake pedal to disengage the remote starter unit.

You are now ready to drive off.


Using the System

Arming and Disarming the System

To disarm the alarm and starter kill (if installed) and unlock the doors (if installed):

1. Press and hold the **UNLOCK** button for approximately 1 second.

There will be two chirps if the siren or horn is so configured.


2. The  icon will appear, the parking lights will **flash twice** and the L.E.D. will go out to confirm that the doors have been unlocked and that the starter kill (if installed) and the alarm are disarmed.

In passive mode, the system will rearm automatically 30 seconds after unlocking unless the key is meanwhile inserted in the ignition switch (see description of passive mode later in this guide).

To arm the alarm and starter kill (if installed) and lock the doors (if installed):

1. Press and hold the **LOCK** button for approximately 1 second.

You will hear **one chirp** if the siren or horn is so configured.

2. The  icon will appear, the parking lights will flash once and the L.E.D. will flash slowly to confirm that the doors have been locked and that the starter kill feature (*if installed*) and the alarm are armed.

Idle Mode

Convenience feature: Idle mode allows you to keep the engine running and the doors locked while you stop, for example, at a convenience store or for a short delivery.

This feature allows you to let the remote starter take over control of the vehicle (i.e. no key in the ignition switch) while the engine is running. For example, if you stop for a delivery or at a convenience store, lock your vehicle and leave it running for the length of a run cycle while you are away. Idle mode can be activated through the same routine as that used for ready mode; at the last step, the **TRUNK** button is pressed instead of the other buttons:

1. Ensure that all the doors are closed and that the shifter is in the neutral position.
2. With the engine already running, apply the parking brake and release the brake pedal.

Make sure to release the brake pedal.

3. Within 20 sec. push **LOCK**, **UNLOCK** or **START/STOP** on the transmitter.

The parking lights will flash 3 times quickly and remain lit.

4. Remove the key: the engine will go on running.
5. Exit the vehicle and close the door.
6. Press the **TRUNK** button until the system is armed (the doors will be locked if remote door lock is installed).

If the pre-programmed run-time expires or if the user shuts down the engine by remote control, the vehicle will get in ready mode.

Caution!!! Do not leave children or pets unattended in a vehicle standing in idle mode.

Turbo Mode

If turbo mode is configured at installation, it will allow a turbocharger to idle down after the user leaves the vehicle: the unit will take over the vehicle and keep it running for 60 seconds (or until it is shut down by remote control), then shut down the engine and set the system to ready mode.

To activate turbo mode, follow all steps of the ready mode routine:

1. Ensure that all the doors are closed and that the shifter is in the neutral position.
2. With the engine already running, apply the parking brake and release the brake pedal.

Make sure to release the brake pedal.

3. Within 20 sec. press **LOCK**, **UNLOCK** or **START/STOP** on the transmitter.

The parking lights will flash 3 times quickly and remain lit.

4. Remove the key: the engine will go on running.
5. Exit the vehicle and close the door.
6. Press and hold either:
 - a. **LOCK** to lock the doors and shut down the engine after 60 sec.;
 - b. **UNLOCK** to unlock the doors and shut down the engine after 60 sec.;
 - c. **START/STOP** to shut down the engine immediately, without affecting the doors (This will by-pass turbo mode).

Valet Mode with the Valet Switch

When your vehicle is in valet mode, the remote starter functionalities are disabled. If the vehicle needs to be serviced, or if you park it indoors, the valet mode will prevent the engine from being remote-started accidentally.

To put the system i n t o valet mode:

1. Turn the ignition key to the **IGNITION ON (RUN)** position.
2. Within 3 seconds, press the valet button. The parking lights will flash three times and the L.E.D. will turn itself on.

To take the system o u t o f valet mode:

1. Turn the ignition key to the **IGNITION ON (RUN)** position.
2. Within 3 seconds, press and release the valet button. The parking lights will flash twice and the L.E.D. will turn itself off.

Note: Once valet mode is activated, the remote starter and alarm functions will be disabled.

Ignition Valet

This feature will allow you to remotely put your system into valet mode by using the ignition key instead of the valet button as above. Ignition valet can be used without a valet button installed.

To put the system i n t o valet mode:

- Insert the ignition key into the ignition switch; within 10 seconds, turn the key 5 times successively into the **IGNITION ON / RUN** and **OFF** positions.
- The parking lights will flash three times to indicate that the vehicle is now in valet mode and the L.E.D. will turn itself on.

To take the system o u t o f Valet Mode:

- Insert the ignition key into the ignition switch; within 10 seconds, turn the key 5 times successively into the **IGNITION ON / RUN** and **OFF** positions.
- The parking lights will flash twice to indicate that the vehicle is now in valet mode and the L.E.D. will turn itself off.

Note: With the remote valet activated, the remote starter and alarm functions will be disabled.

Start Attempts Indicator (Valet Mode)

This reveals start attempts made while the vehicle was in valet mode. The parking lights will:

- Come **ON**, go **OUT**; then
- Flash **twice**.

“Home Valet™” Mode

If configured at installation, this feature will remotely set the vehicle to a no-remote-start mode: if the vehicle is parked indoors there is no danger of it starting accidentally by remote control.

Note: Once the Home Valet Mode is activated, the vehicle will not start by remote.

To take the system i n t o home valet mode:

- Press the **LOCK** or **UNLOCK** button.
- Within 5 seconds, press the **LOCK** and **START/STOP** button simultaneously.

The transmitter will beep once and the home valet icon will start flashing. The icon will flash until the vehicle exits home valet mode.

To take the system o u t o f home valet mode:

- Turn the ignition key to the **IGNITION ON (RUN)** position.

The system will warn you if someone attempts to start your vehicle while it stands in Home Valet Mode. The parking lights will:

- Go **ON** then **OFF**; then
- Flash **twice**, pause; then
- Flash **twice** again.

Remote Valet Mode

This feature will allow you to remotely put your system into valet mode by using the transmitter instead of the valet button as above.


Getting i n t o valet mode

- Hold the **UNLOCK** and **START/STOP** buttons simultaneously for 3 seconds.
- **The parking lights will flash 3 times.**

The transmitter will beep once and will display the  icon; the LED will remain on solid.

Getting o u t o f valet mode

- Hold the **UNLOCK** and **START/STOP** buttons simultaneously for 3 seconds.
- The parking lights will flash 2 times.

The transmitter will beep once and the  icon will disappear after pressing the **LOCK** or **UNLOCK** button and the LED will turn off.

Note: With the remote valet activated, the remote starter function will be disabled.

Panic Mode

In an emergency situation, you can activate panic mode using the **LOCK** or **UNLOCK** button. This will:

- shut down the engine,
- disarm the starter kill and
- unlock the doors (with the **UNLOCK** button)
- activate the activate the siren for 1 minute.
- or lock the doors (with the **LOCK** button),

Note: See the description of the **starter kill** option later in this guide.

To activate panic mode:

- Press and hold the **UNLOCK** button for approximately 3 seconds until the sound signal starts and the parking lights flash: this will unlock the doors before the sound signal starts.
- **Or** press and hold the **LOCK** button for approximately 3 seconds until the sound signal starts and the parking lights flash: this will lock the doors before the sound signal starts.

Panic mode will automatically shut down after 1 minute.

Note: To stop panic mode before the end of its delay, press the **LOCK** or **UNLOCK** button until the sound signal stops.

Quick Lockout™

(Also called **secure panic**.) For fast protection in emergency situations, the system will lock all doors when you press the brake pedal while you hear the sound signal. (*Quick Lockout* is only available when panic mode has been set off.)

Cold Weather Mode

When cold weather mode is active, the engine starts every 2 hours and runs for 4 minutes (or for 9 or 20 minutes with diesel engines). The system must be in ready mode in order to enter cold weather mode. Cold weather mode automatically ends after 24 hours.

To enter cold weather mode:

- Press and release the **FUNCTION** button and then press the **START/STOP** button for 3 seconds until the parking lights flash three times.

The remote control will play a melody and the  icon will appear on the display.

To exit cold weather mode, do any one of the following actions:

- Open the hood.
- Start the engine by remote.
- Turn the ignition key to the **IGNITION ON (RUN)** position.
- Press the brake pedal.
- Press and release the **FUNCTION** button and then press the **START/STOP** button for 3 seconds (the parking lights will flash once).

*When the system exits cold weather mode, the  icon will disappear after pressing the **LOCK** or **UNLOCK** buttons.*

Temporary chirp delete

To temporarily disable the chirp confirmations of the siren upon arming and disarming (e.g. in a quiet neighbourhood):

1. Press the **TRUNK** button.
2. Within 3 seconds, press the **LOCK** or **UNLOCK** button to arm or disarm without any chirps.

Advanced Features: Installation-programmable Options

The system was designed with flexibility and OEM integration in mind. With its programmable options, this unit can single-handedly control nearly any electrical system in your vehicle.

Caution: The programming of your system should be left to a professional. Changing any one of the settings may affect the operation of your system.

The installation-programmable options are as follows:

- | | |
|-------------------------------------|----------------------------------|
| • Remote Door Locks | • Safe Start |
| • Priority Door Access | • Ignition-controlled Door Locks |
| • Passive or Active Arming | • Ignition Re-lock |
| • Starter Kill / Anti-grind feature | • Secure Lock |
| • Shock Sense and Warn-away | • Turbo Mode |
| • Disarmed Notification | • Remote Trunk Release |
| • Siren / Horn Chirps | • Engine Run Time |
| • Car Finder | • Multi-car Operation |
| • Siren / Horn Chirp Timing | |

Remote Door Locks

If your system was installed with the remote door locks option, you will have the convenience of remote keyless entry. See section arming and disarming the system, earlier in this guide, for further instructions on remote door locking and unlocking.

Priority Door Access

If the Remote Door Locks option is installed on your vehicle, this safety feature allows you unlock solely the driver's door with a single press of the **UNLOCK** button on the transmitter; upon a second press of the **UNLOCK** button, all the other doors will unlock.

Active or Passive Arming

The alarm and starter kill can be configured either to passive mode (so as to arm automatically) or active mode (so as to require user intervention for arming). By default, your system is configured to passive mode. In passive mode, the alarm and starter kill will automatically arm **30 seconds** after the last door is closed. The system will not arm if a door is left open, or if you re-open a door within the 30-second delay.

Important: When the system re-arms automatically or if there is an alarm condition, you can disarm the system by simply pressing the **UNLOCK** button.

The Starter Kill and the Anti-grind Feature

With this added security feature, the system will prevent your vehicle from starting with the ignition key when the starter kill is armed. If your system was installed with the starter kill option, one will not be able to start your vehicle with the key unless the system has been unlocked and disarmed first, or put into valet mode.

Note: If the starter kill is installed, your vehicle will benefit from a protection against starter motor damage that could occur after remote-starting the engine should the user, by force of habit, turn the ignition key to the **CRANK** position.

Shock Sense, Warn-away Sense

Your system will react to a full shock by triggering the alarm; it can also respond to a lighter shock (30 % of the strength of a full shock) by giving a warn-away (without triggering an alarm condition). When the engine is running after a remote start, however, the system will prevent any alarm condition to be triggered; it will still give a warn-away if this feature has not been disabled at installation.

Note: After a remote start, although the shock sensor is disabled, all the other alarm-triggering zones, such as the doors or the hood, may still trigger an alarm.

Disarmed Notification

This feature will notify the user when the vehicle was left disarmed: after the engine is shut down (with the key removed) and all doors are closed, the siren will chirp once after a 10-seconds notification delay to warn the user that the vehicle was left unprotected. The notification can be avoided by pressing the **LOCK** or **UNLOCK** button on the transmitter.

The user will likewise be notified after the system is disarmed using the transmitter.

Siren Chirps or Horn Honks

The siren will chirp to confirm basic operations on the System:

- By default, upon locking the doors the siren will give one chirp if no protection zone is active.
- If a zone is active as the doors are being locked, the siren will give three chirps.
- When the doors are being unlocked, the siren will give two chirps if no intrusion was detected.
- If an intrusion was detected, as the doors are being unlocked the siren will give four chirps.

The system can alternatively be set to:

Warning Mode: no chirp during lock/unlock...

- unless a zone is active when locking, in which case there will be 3 chirp upon locking
- or unless the alarm was triggered, in which case there will be 4 chirps when unlocking);

Open Zone Notification Mode: 3 warning chirps if a door is left open 10 sec. after arming.

No Chirp: the siren will not chirp under any circumstance.

Car Finder

When enabled, the Car Finder option will help you locate your vehicle by generating a pulsating signal through the horn or the siren. To hear the signal, press the **LOCK** and **UNLOCK** buttons simultaneously. This will cause a pulsating signal lasting for the time you keep the buttons pressed.

Siren or Horn Chirp Timing

The duration of the chirps can be adjusted at installation (from 5 to 200 ms).

Safe Start

If this feature is enabled, the user must press the **START/STOP** button 2 times within 3 seconds to remote-start the vehicle. This will eliminate accidental remote starts, e.g. when children are playing with the transmitter. If swap start mode is selected, to remote-start your vehicle press **LOCK** and **UNLOCK** simultaneously. The **AUX 2** output can be activated by pressing the **START/STOP** button.

Home Valet TM

If this feature is installed, the user will have the possibility to remotely set the vehicle to a no-remote-start mode. See *home valet section, earlier in this guide, for full instructions.*

Ignition-controlled Door Locks

This is an added security feature. If your system was installed with the ignition-controlled door locks option, the doors will automatically be locked as soon as the ignition key is turned to the **IGNITION ON (RUN)** position while the brakes are pressed. When the key is turned to the **OFF** position, the doors will automatically be unlocked.

Ignition Re-lock

On systems of this series, when ignition-controlled door locks are enabled and the ignition key is in the **IGNITION ON (RUN)** position, should any door be unlocked and opened, all doors will be relocked next time the brake pedal is pressed.

Secure Lock

Before it can remote-start your vehicle, the system must first disarm the factory security system. The secure lock feature may be required on certain vehicle models with factory security systems that automatically unlock the doors when the security system is disarmed. To keep your vehicle protected when the factory security system is disarmed for a remote start, secure lock will relock your doors as soon as the vehicle has started. Once the engine run cycle ends, secure lock will rearm your factory security system.

Turbo Mode

When left in turbo mode, the system will keep the engine running for 60 seconds before shutting it down. This is to allow a turbocharger to idle down after the user leaves the vehicle. See *turbo mode section earlier in this guide.*

Remote Trunk Release

If your system was installed with the remote trunk release option, you can open your trunk by pressing the **TRUNK** button for 3 seconds on the remote transmitter or by pressing the **TRUNK** button twice within 3 seconds.

Engine Run Time

(15/20 minutes by default.) If you have a gas engine, your System can be programmed to run the engine for 4, 15, or 25 minutes (15 minutes by default). If you have a diesel engine, the System can be programmed to run the engine for 9, 20, or 30 minutes (20 minutes default).

Multi-car Operation

This option allows the owner of two vehicles, both equipped with System systems, to control both systems with a single remote control. To control the second vehicle, simultaneously press the **TRUNK** button and the button of the function you wish to use. See the transmitter operation table earlier in this Guide. for full instructions on second car operation.

Note: Your remote control must be configured for second car operation by the installer.

Missing a Start or a Stop Confirmation

If you have not received a Start or the Stop confirmation after pressing the **START/STOP** button, simply press the **LOCK** button. Pressing the **LOCK** button will refresh the display and will confirm if the vehicle was started or stopped.

The Start Confirmation Was Not Received

If after remote starting the vehicle no confirmation was received, simply press the **LOCK** button, this will refresh the display. If the vehicle was started successfully, the smoke icon and the hourglass icon will appear as well as the run time countdown. Pressing the **LOCK** button will also lock all doors (the lock icon will appear). If the doors were already locked prior to pressing the **LOCK** button, there will be no change in the status of the doors —i.e. the doors will remain locked.

- On models where starter kills were installed, pressing the **LOCK** button will also activate the starter kill.
- On alarm models, pressing the **LOCK** button will also activate the monitoring.

The Stop Confirmation Was Not Received

If after remote stopping the vehicle no confirmation was received —i.e. the display did not return to its basic state— simply press the **LOCK** button, this will refresh the display. If the engine was stopped, the smoke icon and the hourglass icon will disappear and the time will be displayed. Pressing the **LOCK** button will also lock all doors (the lock icon will appear). If the doors were already locked prior to pressing the **LOCK** button, there will be no change in the status of the doors —i.e. the doors will remain locked.

- On models where starter kills were installed, pressing the **LOCK** button will also activate the starter kill.
- On alarm models, pressing the **LOCK** button will also activate the monitoring.

Multi-Level Features (default state)

Basic Features (press the **FUNCTION** button 1X)

FUNCTION ➤ **LOCK:** aux 2
FUNCTION ➤ **START/STOP** cold weather

Multi-Car Operation (press the **FUNCTION** button 2X)

FUNCTION ➤ **FUNCTION** ➤ **LOCK:** 2nd car lock
FUNCTION ➤ **FUNCTION** ➤ **UNLOCK:** 2nd car unlock
FUNCTION ➤ **FUNCTION** ➤ **START/STOP:** 2nd car start/stop

Customized Features (press the **FUNCTION** button 3X)

(May not be compatible with some vehicles)

Your installer can add customized features such as turning on the radio, opening sliding doors, etc.

➤ **FUNCTION** ➤ **FUNCTION** ➤ **FUNCTION** ➤ **LOCK:** customized feature 1
FUNCTION ➤ **FUNCTION** ➤ **FUNCTION** ➤ **UNLOCK:** customized feature 2
FUNCTION ➤ **FUNCTION** ➤ **FUNCTION** ➤ **START/STOP:** customized feature 3

By default, the multi-level features are programmed as follows:

- Level 1 (Basic Features)
- Level 2 (Multi car operation)
- Level 3 (Customized Features)

Accessing the Multi-Level Features and Other Transmitter Functions

- To access a Level 1 feature, press and hold the **FUNCTION** button until you hear a “beep”; within three seconds of hearing the “beep”, release the **FUNCTION** button. **501** will be displayed. This display means that you are now in Level 1. Simply press the corresponding button to access the desired feature.
- To access a Level 2 feature, press and hold the **FUNCTION** button until you hear a “beep” within three seconds of hearing the “beep”, release the **FUNCTION** button and press and release the **FUNCTION** button once more. **502** will be displayed. This display means that you are now in Level 2. Simply press the corresponding button to access the desired feature.
- To access a Level 3 feature, press and hold the **FUNCTION** button until you hear a “beep”; within three seconds of hearing the “beep”, release the **FUNCTION** button and press and release the **FUNCTION** button two more times. **503** will be displayed. This display means that you are now in Level 3. Simply press the corresponding button to access the desired feature.
- To access the transmitter functions (clock and alarm adjustments), press and hold the **FUNCTION** button until you hear a “beep”; within three seconds of hearing the “beep”, release the **FUNCTION** button and press and release the **FUNCTION** button three more times. There will be two quick “beeps” indicating that you are now in the transmitter functions adjustment menu. The Hour position will be flashing. Simply press and release the **FUNCTION** button until you reach the desired location and proceed with the adjustment by pressing the **START/STOP** or **TRUNK** buttons.

Your installer can customize the system as to personalize these multi-level features in an order that best suits you. Your options are:

Option 1:

Level 1 (requires pressing the FUNCTION button 1X)	→	Multi car operation
Level 2 (requires pressing the FUNCTION button 2X)	→	Basic features
Level 3 (requires pressing the FUNCTION button 3X)	→	Customized features

Option 2:

Level 1 (requires pressing the FUNCTION button 1X)	→	Basic features
Level 2 (requires pressing the FUNCTION button 2X)	→	Multi car operation
Level 3 (requires pressing the FUNCTION button 3X)	→	Customized features

Option 3:

Level 1 (requires pressing the FUNCTION button 1X)	→	Customized features
Level 2 (requires pressing the FUNCTION button 2X)	→	Multi car operation
Level 3 (requires pressing the FUNCTION button 3X)	→	Basic features

Option 4:

Level 1 (requires pressing the FUNCTION button 1X)	→	Basic features
Level 2 (requires pressing the FUNCTION button 2X)	→	Customized features
Level 3 (requires pressing the FUNCTION button 3X)	→	Multi car operation

Example: If the multi-level features were set to option 3, the setup would be as follows:

- Level 1 → Customized feature
- Level 2 → Multi car operation
- Level 3 → Basic features

The “Basic features” are now programmed as level 3 and therefore:

- To access the aux. 2 feature, the user needs to press on the **FUNCTION** button three (3) times followed by the **LOCK** button.
- To access cold weather mode, the user needs to press on the **FUNCTION** button three (3) times followed by the **START/STOP** button.

L.E.D. Intrusion Codes

If an intrusion took place while your vehicle was locked and the system was armed, the L.E.D. will provide feedback on the intrusion. The L.E.D. intrusion codes are flashed by the L.E.D. in continuous loops and are as follows:

1 flash = power-up reset: battery disconnected and reconnected, or dead battery.

2 flash = doors intrusion

3 flash = shock sense

4 flash = hood intrusion

5 flash = panic


6 flash = ignition

Troubleshooting Poor Transmitting Range

Many factors may affect the operating range of the transmitter. Some of these are:

- The condition of the battery in the transmitter.
- The operating environment (for example: downtown radio-frequency noise, airports, cellular phone towers...)
- Metal: any type of metal will affect operating range. This includes the metal in the car.
- The shape of the vehicle can affect range as well; vans in general have an especially poor range.
- The shape of the roof and A-pillars brings about considerable radio-frequency deflection (in this case the signal from the remote control). As a result, the direction in which the vehicle is facing in relation to the remote control can affect the range. Straight on – standing in front of the vehicle – generally gives you the greatest range; the second best performance is from the back. Using the remote control from either side of the vehicle will usually give the lowest range.
- The range will be significantly lower in a crowded parking lot than in open space.
- Always hold the transmitter high, approximately at shoulder height. Holding the transmitter against your chin will also increase your range: your head acts as an antenna.
- The operating range will be somewhat lower on vehicles equipped with an aftermarket or factory alarm.

Using the Remote Control

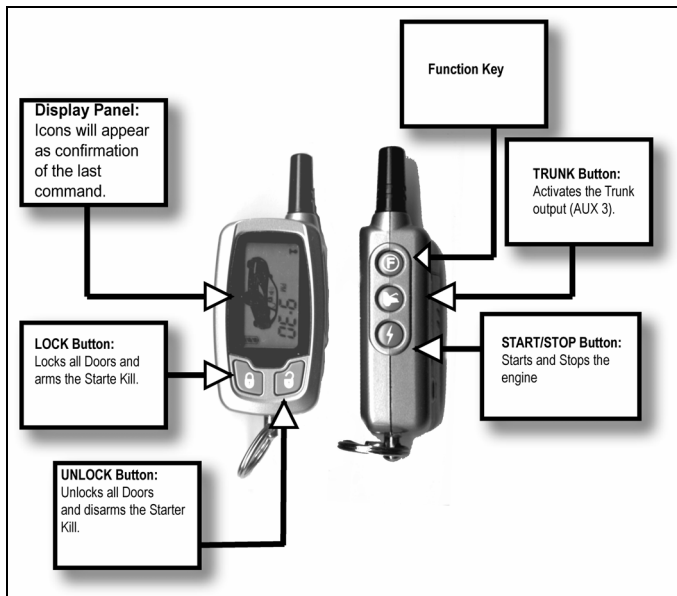






 





The transmitter offers several command-confirmation and timer features. This section explains some of the key functions available on the remote control. Next section gives a summary of the button combinations used to access the functions.

 








Note: If you wish to exit a function, while still in the process of accessing it, simply stop and wait for at least 10 seconds: the transmitter will return to its normal state.

LCD Transmitter Operation (First Car Control)

Basic Vehicle Operation

FUNCTION	BUTTON PRESSED	ICON	BUZZER	INSTRUCTIONS /DESCRIPTION
LOCK			1 Beep	Locks the doors and arms the Starter Kill (if installed) and the alarm.
UNLOCK			2 Beep	Unlocks the doors and disarms the Starter Kill (if installed) and the alarm.
TRUNK or AUX 3			1 Beep	Trunk output
START * (see Runtime Options below)			Melody	Starts the engine
STOP		None	Melody	Stops the engine
Light ON		ON for 10 seconds		Press the  button once.

Transmitter Mode Selection


FUNCTION	BUTTON PRESSED	ICON	BUZZER	INSTRUCTIONS /DESCRIPTION
POWER-SAVING MODE	 		Melody	
VIBRATION MODE	 		Vibrates twice	
ALARM CLOCK MODE ON/OFF	 		Melody	Press once to switch the Alarm Clock ON Press twice to switch the Alarm Clock OFF


Time or Alarm Clock Adjustments

User	Transmitter
1. Press and hold the FUNCTION button until a beep is heard	The backlight will turn on the moment the FUNCTION button is pressed.
2. Upon hearing the beep, release the FUNCTION button, 5 0 1 is displayed
3. Press and hold the FUNCTION button once more	
4. Release the FUNCTION button when a beep is heard, 5 0 2 is displayed
5. Press and hold the FUNCTION button once more until a beep is heard,	
6. Release the FUNCTION button 5 0 3 is displayed
7. At that point, press and hold the FUNCTION button until 2 beeps are heard. The hour setting will start to flash.

Pressing the **FUNCTION** button

 


 

- 1XAdjust hour (current time)
- 2X Adjust minutes (current time)
- 3X Adjust hour (Alarm)
- 4XAdjust minutes (Alarm)
- 5X ... Melody selection for the ringing of the alarm
- 6XActivate (ON) / Deactivate (OFF) Alarm
- 7X Adjust hour (countdown)
- 8XAdjust minutes (countdown)
- 9XMelody selection for the countdown
- 10X .Activate (ON) / Deactivate (OFF) countdown

a. Press the  button to **increase** the value or to activate or deactivate a function or to toggle through the melodies.











b. Press the  to **decrease** the value or to activate or deactivate a function or to toggle through the melodies.

c. To save modifications, **do not touch any buttons for approx 5 to 10 seconds**. There will be a beep and the display will return to the time.











Cold Weather Mode

FUNCTION	BUTTON PRESSED	ICON	BUZZER	INSTRUCTIONS /DESCRIPTION
TO ENTER COLD WEATHER MODE			BEEP	Press and hold  for 3 seconds.
TO EXIT COLD WEATHER MODE		None	BEEP	Press and hold  for 3 seconds


Home Valet™

FUNCTION	BY PRESSING	ICON	BUZZER	INSTRUCTIONS / DESCRIPTION
TO ENTER HOME VALET™ MODE	Step 1 :  or  Step 2:  +  simultaneously within 5 seconds		1 BEEP	Press  or  within 5 seconds, press  +  . The  icon will be displayed and there will be 1 beep.
TO EXIT HOME VALET™ MODE	NONE	NONE	NONE	Insert the key in the ignition switch and turn it to the IGNITION ON / RUN position. The icon will disappear after pressing the LOCK or UNLOCK button.

Countdown Timer

FUNCTION	BY PRESSING	ICON	BUZZER	INSTRUCTIONS / DESCRIPTION
COUNTDOWN TIMER ADJUST MODE (HOUR)	 6 times	 18:88		 button: press for upward adjustment or for switching the function ON.  button: press for downward adjustment or for switching the function OFF.
COUNTDOWN TIMER ADJUST MODE (MIN)	 7 times	 18:88		
COUNTDOWN TIMER ENDING MELODY SELECTION 1	 8 times	 8	5 Selections 1,2,3,4,5	
COUNTDOWN TIMER MODE (ON / OFF)	 9 times	 ON / OFF		

Safe Start Mode

FUNCTION	BY PRESSING	ICON	BUZZER	INSTRUCTIONS / DESCRIPTION
START ON SAFE START MODE	 X 2	 + 	Melody	Press the  button twice within 3 seconds. Or:

				Press for 1 second (melody) then press again for 1 second.
STOP ON SAFE START MODE		None	Melody	

Parking Countdown

FUNCTION	BY PRESSING	ICON	BUZZER	INSTRUCTIONS / DESCRIPTION
FOR PARKING COUNTDOWN: PRESS AND HOLD THEN PRESS:	1 time	0:10	Melody	10 MIN COUNT DOWN
	2 times	0:20	Melody	20 MIN COUNT DOWN
	3 times	0:30	Melody	30 MIN COUNT DOWN
	4 times	1:00	Melody	60 MIN COUNT DOWN
	5 times	1:30	Melody	90 MIN COUNT DOWN
	6 times	2:00	Melody	120 MIN COUNT DOWN
	7 times	0:00	Melody	PARKING COUNT DOWN OFF

*Runtime Options (once the car has been remote started)

FUNCTION	BY PRESSING	ICON	GAS	DIESEL
ENGINE RUNTIME			4 minutes	9 minutes
			15 minutes	20 minutes
			25 minutes	30 minutes

LCD Transmitter Operation (Second Car Control)

Basic Vehicle Operation

FUNCTION	BUTTON PRESS	ICON	BUZZER	DESCRIPTION
LOCK	+		1 Beep	Locks the doors and arms the Starter Kill (if installed) and the alarm.
UNLOCK	+		2 Beep	Unlocks the doors and disarms the Starter Kill (if installed) and the alarm.
START	+	+	Melody	Starts the engine
STOP	+	None	Melody	Stops the engine

Start and Stop While in Safe Start Mode

FUNCTION	BUTTON PRESS	ICON	BUZZER	DESCRIPTION
START ON SAFE START MODE	+ X 2	+	Melody	Press the and buttons simultaneously twice within 3 seconds. Press for 1 second (a melody will be heard) then press 1sec and a melody will be heard again.
STOP ON SAFE START MODE	+	None	Melody	

Diagnostics – Chirps Table

Chirps	Description
1	<ul style="list-style-type: none"> Doors locked, alarm and starter kill armed. Lock confirmation. Entering mode 1 in the programming centre. Disarmed notification
2	<ul style="list-style-type: none"> Doors unlocked, alarm and starter kill disarmed. Transmitter programmed. Entering mode 2 in the programming centre.
3	<ul style="list-style-type: none"> LOCK and arm while a zone is left unprotected. Entering mode 3 in the programming centre. Door zone left unprotected.
4	<ul style="list-style-type: none"> Unlock and disarm: an intrusion was detected (in warning chirps mode or full chirps mode). Entering tach-programming mode.
5	<ul style="list-style-type: none"> Siren or horn chirp timing adjustment
Constant up to 30 seconds	<ul style="list-style-type: none"> In horn mode: alarm condition generated by an intrusion, by panic mode or when the system is powered up. the horn will sound for 30 sec.
Constant up to 60 seconds	<ul style="list-style-type: none"> In siren mode: alarm condition generated by an intrusion, by panic mode or when the system is powered up. the siren will sound for 60 sec.

Diagnostics – Parking Light Flash Table

Flashes	Description
1	<ul style="list-style-type: none"> Doors locked, alarm and starter kill armed. End of run time. TRUNK button pressed Start signal received by the system. Cold weather mode cancelled. Cannot start after maximum number of attempts is reached.
2	<ul style="list-style-type: none"> Doors unlocked, alarm and starter kill disarmed. Run time cancelled. Exit remote valet. Exit ignition valet Remote start attempt cancelled by remote.
3	<ul style="list-style-type: none"> Entering cold weather mode. Entering remote valet. Entering ignition valet
4	<ul style="list-style-type: none"> +12 V where detected on the brake line and cranking was cancelled. Entering tach-programming mode
5	<ul style="list-style-type: none"> New transmitter programmed. Tach programmed.
6	<ul style="list-style-type: none"> A remote start was attempted while a tach or a vacuum signal was detected before cranking.
8	<ul style="list-style-type: none"> Unit reset: occurs when the unit is reset to the factory defaults.
10	<ul style="list-style-type: none"> The hood switch line went to ground during cranking or run time.
1 – pause – 2	<ul style="list-style-type: none"> There was an attempt to start the vehicle while the system was in valet mode.
2 – pause – 2	<ul style="list-style-type: none"> There was an attempt to start the vehicle while the system was in home valet mode.
ON solid	<ul style="list-style-type: none"> Cold weather mode: the brake pedal is being held down.
ON 2 sec.	<ul style="list-style-type: none"> The hood is up and the hood switch line went to ground. this is step one of the programming centre procedure.
ON 3 sec.	<ul style="list-style-type: none"> First press of the START/STOP button under safe start.
ON 4 sec.	<ul style="list-style-type: none"> Locking or unlocking a door (with door pulses configured to 4 sec.)
ON 25 sec.	<ul style="list-style-type: none"> The hood pin-switch has been pressed twice: the unit went into step 1 of the programming centre procedure, and no transmitter activity was detected for 20 seconds. Or the unit went into step 1 of the transmitter programming procedure and no activity was detected for a few seconds. The unit has exited the transmitter programming procedure.
Irregular	<ul style="list-style-type: none"> If the unit gives irregular signals (1 to 10 flashes followed by a pause, followed by further flashes), the system is playing back start failure codes. This occurs when the hood pin-switch is pressed three times.
Constant flashes up to 30 sec.	<ul style="list-style-type: none"> In horn mode: alarm condition generated by an intrusion, by panic mode or when the system is powered up.
Constant flashes up to 60 sec.	<ul style="list-style-type: none"> In siren mode: alarm condition generated by an intrusion, by panic mode or when the system is powered up.