


## Operating instructions

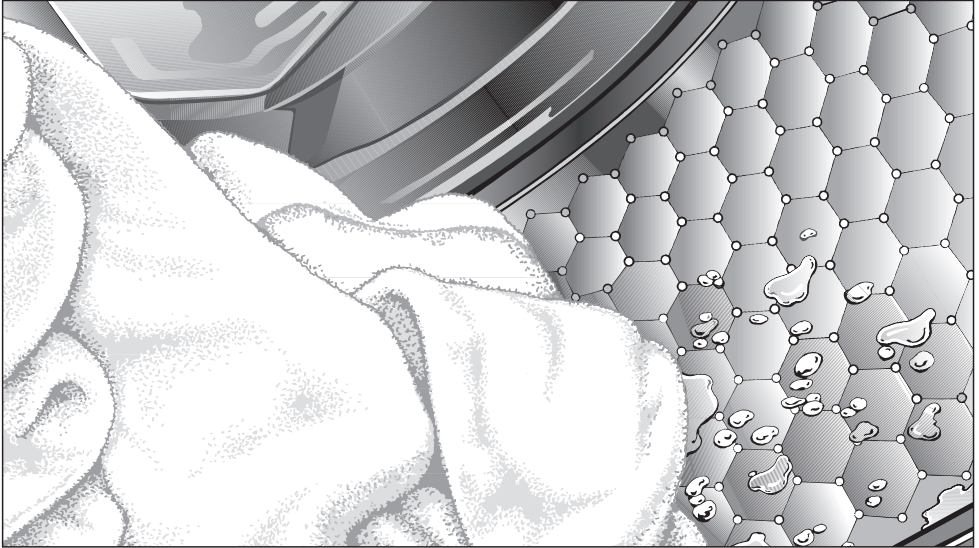

## Washing machine IntelliQ 200

To avoid the risk of personal injury or damage to the appliance, it is **essential** that you read these operating instructions **before** installation and use. This machine is not approved for use in the United States.

en - CA

M.-Nr. 09 076 790

# Contents


---

<b>IMPORTANT SAFETY INSTRUCTIONS</b> . . . . .	4
<b>Guide to the washer</b> . . . . .	7
Control panel . . . . .	7
Display function . . . . .	8
<b>Before using for the first time</b> . . . . .	9
Setting the display language . . . . .	9
Washing tips: . . . . .	10
<b>Using the washer</b> . . . . .	11
1. Prepare and sort the laundry . . . . .	11
2. Load the laundry . . . . .	12
Loading a comforter . . . . .	13
3. Select a program . . . . .	14
4. Select a temperature and/or spin speed . . . . .	14
Program guide . . . . .	15
Final spin speed . . . . .	19
5. Select an option . . . . .	20
6. Add detergent . . . . .	21
Detergents . . . . .	23
Fabric after care . . . . .	24
7. Select Delay Start (if desired) . . . . .	25
8. Start the program . . . . .	26
9. Activate the Child Lock (if desired) . . . . .	26
10. Program end . . . . .	27
Canceling a program . . . . .	28
Interrupting a program . . . . .	28
Changing a program . . . . .	28
Adjusting the temperature . . . . .	28
Adjusting the spin speed . . . . .	28
Adjusting the options . . . . .	28
<b>Quick guide</b> . . . . .	29
<b>Using the washer</b> . . . . .	29
Adding/removing laundry during a wash program . . . . .	29

<b>Cleaning and care</b> . . . . .	30
Cleaning the exterior and control panel . . . . .	30
Cleaning the drum . . . . .	30
Cleaning the dispenser drawer . . . . .	31
<b>Cleaning and care</b> . . . . .	33
Cleaning the water inlet filters . . . . .	33
<b>Frequently asked questions</b> . . . . .	34
No wash program will start . . . . .	34
The display shows a fault message. . . . .	35
General issues with the washer . . . . .	36
Unsatisfactory wash results . . . . .	37
The drum door cannot be opened. . . . .	38
<b>After sales service</b> . . . . .	41
<b>Installation instructions</b> . . . . .	43
<b>Installation</b> . . . . .	44
Installation site . . . . .	46
Removing the shipping struts . . . . .	47
Leveling the washer. . . . .	48
The Miele water protection system . . . . .	49
Connecting to the water supply . . . . .	49
Drainage system . . . . .	50
Electrical connection . . . . .	51
ELECTRICAL INSTRUCTIONS. . . . .	51
Electrical connection . . . . .	51
<b>Setting the display language</b> . . . . .	52
<b>Caring for the environment</b> . . . . .	53

# IMPORTANT SAFETY INSTRUCTIONS

---

 **WARNING** - To reduce the risk of fire, electric shock or injury to persons while using your appliance follow basic safety precautions, including the following:

Read all instructions before installation or use to prevent injury and appliance damage.

This appliance conforms to all uniform safety codes and regulations.

Keep these operating instructions in a safe place and pass them on to any future user.

**SAVE THESE INSTRUCTIONS**

## Correct usage

▶ Only use the washing machine to wash items which are specified by the manufacturer to be machine washable on the fabric care label. Any other applications may be dangerous.

▶ Persons who lack physical, sensory or mental abilities, or experience with the appliance should not use it without supervision or instruction by a responsible person.

## Children

▶ Do not allow children to play on or in the appliance. Close supervision is necessary when the appliance is used near children.

▶ The drum door glass will be hot when washing at very high temperatures.

Do not touch the glass. Danger of burns! Keep children away from the washer when in use.

# IMPORTANT SAFETY INSTRUCTIONS

## Technical safety

▶ Do not install or use a washer with visible damage.

▶ Before connecting the machine, ensure that the connection data on the data plate (fusing, voltage and frequency) match the mains electrical supply. If in doubt contact an electrician.

### ▶ GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment- grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

▶ **WARNING** - Improper connection of the equipment-grounding conductor may result in a risk of electric shock. Check with a qualified electrician if you are in doubt as to whether the appliance is properly grounded.

▶ Do not modify the plug provided with the appliance - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

▶ Do not use an extension cord to connect this appliance to the power supply. Extension cords do not guarantee the required safety of the appliance (e.g. danger of overheating).

▶ Faulty components must only be replaced with genuine Miele spare parts.

▶ Installation, repair and maintenance work should be performed by a Miele authorized service technician. Work by unqualified persons could be dangerous and may void the warranty.

▶ Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in these operating instructions.

▶ If the power cord is damaged it must only be replaced by a Miele Service technician with a genuine Miele power cord.

▶ Before servicing, cleaning or in the event of a fault, disconnect the appliance from the main power supply.

▶ Only use a new hose kit to connect the washer to the water supply. Old hosing should not be re-used.

▶ Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for 2 weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot water system has not been used for such a period, turn on all hot water faucets and let the water flow from each for several minutes before using the washing machine. This will release any built-up hydrogen gas. Do not smoke or use an open flame during this time, the gas is flammable.

▶ Before the appliance is removed for service or discarded, remove the door.

# IMPORTANT SAFETY INSTRUCTIONS

---

## Safety

▶ Do not install or store this appliance where it will be exposed to the weather.

▶ Do not install the washing machine in rooms where temperatures below freezing may occur.

▶ Before using the washer for the first time, remove the shipping struts at the back of the appliance (see "Installation - Removing the shipping struts"). Failure to remove the shipping struts can damage the washer and surroundings during spinning.

▶ During extended absences (e.g., vacation), close the water supply.

▶ **Danger of flooding!**  
Before hanging the drain hose in the sink, make sure the water will drain away quickly enough.  
Secure the hose. The force of the water exiting the hose can cause an unsecured hose to pop out of the sink.

▶ Ensure that no foreign objects are left in pockets (e.g. nails, coins, paper clips, etc.) this can cause damage to clothes and the machine.

▶ Proper dosing of the detergent will eliminate the need to remove lime deposits. However, if heavy limescale does form on the washer, select a descaling agent with corrosion protection. Closely follow the instructions on the product package.

▶ Do not wash articles that have been previously cleaned, washed, soaked or spotted with gasoline, dry-cleaning solvents or other flammable substances. These articles give off vapors that could ignite or explode. Do not add these items to the wash load.

▶ Do not add gasoline, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapors which could ignite or explode.

▶ Do not use cleaning solvents on or near the machine or the controls. Contact with cleaning solvents will damage the surface.

▶ Do not reach into the appliance if the drum is moving.


▶ Do not tamper with the controls.

## Accessories

▶ Only use genuine Miele accessories. If unapproved parts are used, guarantee, performance and product liability claims may become void.

**SAVE THESE INSTRUCTIONS  
AND REVIEW THEM  
PERIODICALLY**

## Control panel

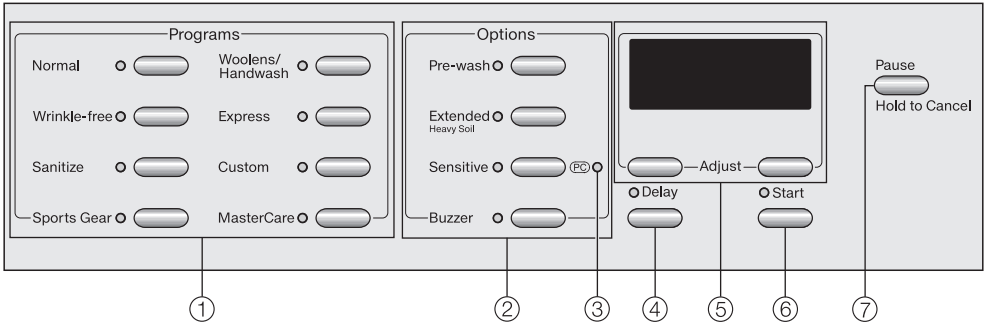

### ① Program buttons

To select a wash program.

### ② Option buttons

Special features to enhance a wash program.

### ③ PC Indicator

Allows a service technician to check and update the wash programs.

### ④ Delay Start button

To delay the start of a program.

### ⑤ Display with menu buttons

See "Display function" for more information.

### ⑥ Start

Starts the selected wash program.

### ⑦ Pause button

Pauses or cancels a program.

# Guide to the washer

## Display function

The display allows you to operate and select various functions of the washer.

### Selection and display of program settings


- Temperature selection
- Spin speed selection
- Delay start
- Display of an approximate program running time

### Program selection using the display

By pressing the "MasterCare" button, you can select from the following programs:

- Extra White
- Delicates
- Silk
- Denim / Jeans
- Dress shirts
- Comforters
- Outerwear
- Table linens
- Beach towels
- Drain / Spin
- Quick rinse
- Clean Machine

## "Menu" buttons

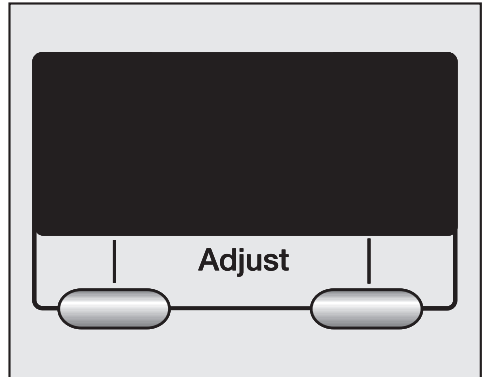

Various settings can be made with the "Menu" buttons.


The values above the vertical line can be adjusted and/or confirmed.

Example:



Pressing the left menu button "**Warm**" allows to adjust the temperature. The "**High spin**" button allows you to adjust the spin speed.

Example:

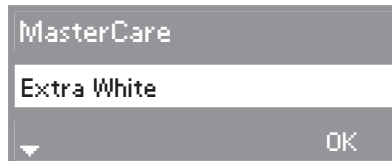

With the "▼" button additional programs can be selected and confirmed with the "OK" button.



# Before using for the first time

The appliance must be correctly installed and connected before the first use. Please see the "Installation instructions."

This washing machine has undergone thorough testing in the factory, there may be some residual water in the drum from this process.

Running a spin cycle before the first use is, for safety reasons, not possible. To activate the spin cycle a wash program must be run **without laundry or detergent**.

- Turn on the water supply.

The Welcome screen shows once the washer is turned on for the first time.

The Welcome screen will not show after the washer has run for more than 1 hour.

The display now shows the language setting.

## Setting the display language

The default setting for the display language is **German**. The display language can be adjusted.



- Select the desired language by pressing the left menu button "▼". Confirm the setting with the right "OK" button.


## Shipping strut reminder

The shipping struts must be removed before the first use to avoid machine damage.

- Confirm that the shipping struts have been removed by pressing "OK".

The washer is now ready for the first use.

## Starting the first wash program

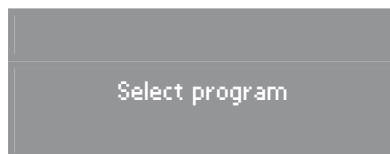

- Press the program button "Sanitize".
- Press the "Start" button.

Once the program has finished the first use is complete. The washer can be used.

# Before using for the first time

---

## Washing tips:

### Energy and water consumption

- Do not overload the washer. The energy and water consumption will be most energy efficient.
- Use the "Express" program for small loads.
- When smaller amounts of laundry are washed using the "Normal" and "Sanitize" programs, the automatic load recognition feature will automatically reduce the water, energy, and time for that load. This may cause a correction in the remaining time displayed for the wash.
- If applicable use the program "Normal - Very Warm" instead of "Sanitize". It saves between 35% and 45% energy. For most soiling, this is sufficient. For stubborn soiling use the option "Pre-wash".

## Detergent use

- Use the recommended amount of detergent.
- Bear in mind the soiling degree of the laundry.
- Use less detergent for small loads.

## Options selection (Extended, Pre-wash)


Select for:

- For light to normal soiled items without stains use a wash program without an option.
- For normal to heavily soiled items with stains wash with the "Extended" option.
- For heavily soiled items use a wash program with the "Pre-wash" option and "Extended".
- Items with larger soiling, e.g. dust, sand, use a program with the option "Pre-wash".

## Tip: If you will be using a tumble dryer to dry the laundry

- Select the highest spin speed suitable for the wash load to remove as much water as possible to save energy when tumble drying.

## 1. Prepare and sort the laundry

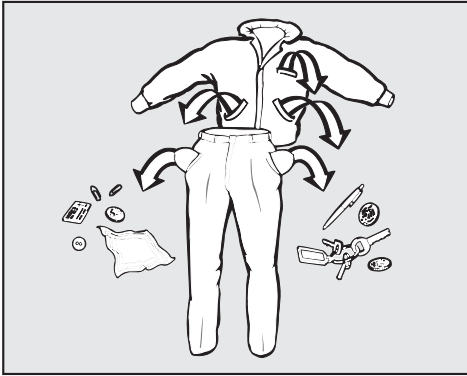

- Empty all pockets.

⚠ Foreign objects left in pockets (e.g. nails, coins, paper clips, etc.) can cause damage to clothes and the machine.

### Pre-treat stains


- Tough stains (blood, egg, coffee, tea, etc.) or badly soiled areas (collars and cuffs) should be pre-treated with a stain remover or a paste made from powder detergent and warm water. Dab stains with a damp light colored cloth. Do not rub!

⚠ Do not use chemical solvents in the machine.

### Sort the laundry


- Only wash items that are labeled machine washable by the manufacturer. Most garments have a fabric care label in the collar or side seam.
- Sort the laundry by care label and color.

### General tips


- Dark fabrics often bleed the first few times they are washed. They should be washed separately several times before being included in a mixed load.
- Curtains: Remove any lead weights or strips before washing.
- Loose bra underwires should be removed or sewn in place before washing.
- Woolens, knitted garments, jeans, pants and sweat shirts should be turned inside out.
- Close zippers, hooks and eyelets before washing.
- Comforter covers and pillowcases should be fastened to prevent small items from rolling inside of them.
- **Do not** wash items with the  symbol on the fabric care label.

# Using the washer


## 2. Load the laundry

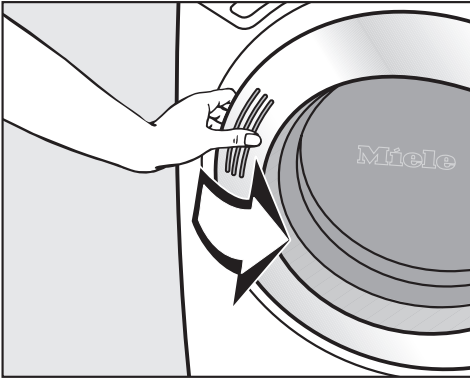

- Open the drum door.
- Load the laundry loosely into the drum. For best results, wash mixed loads of small and large items. This will improve washing effectiveness and help distribute the load evenly.

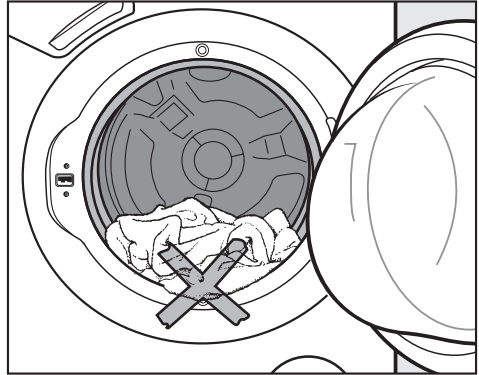

- Close the drum door. To prevent damage, make sure that there is no clothing caught between the drum door and the seal.

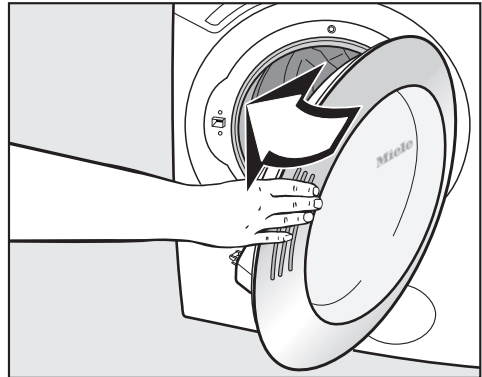


- Close the drum door.


## Loading a comforter

"Full size" comforters up to 84" x 88" / 213 x 224 cm can be washed.


Make sure to load the comforter correctly to avoid damage.

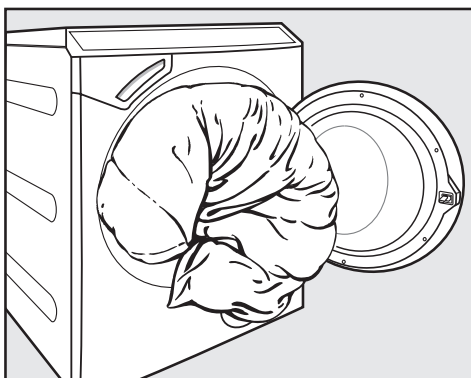

- Fold the comforter and load into the washer.
- Turn the comforter in the drum so that a smooth surface forms facing the door when the comforter is completely loaded.

 Make sure that the comforter does not touch the rubber door seal and that all corners are tucked in.

## Comforter loaded correctly

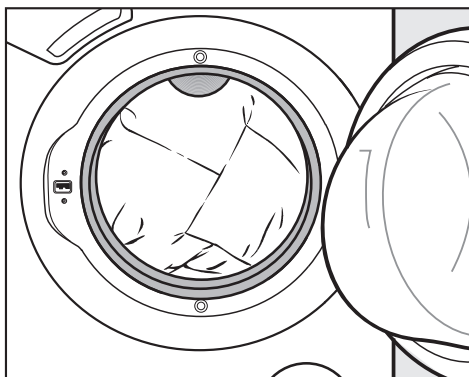


## Comforter loaded incorrectly



# Using the washer

## 3. Select a program

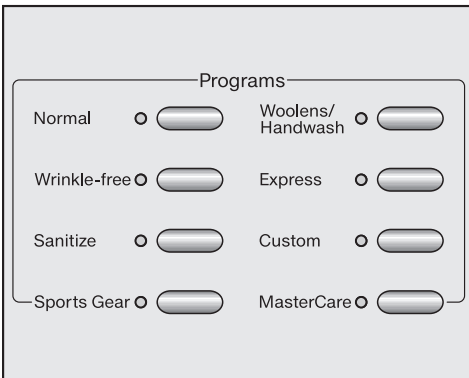

- Press the button of the desired program.  
The indicator of the selected program lights.

## 4. Select a temperature and/or spin speed

The preselected temperature and/or spin speed can be adjusted if the program allows for it. See the "Program guide".



By pressing the left menu button "**Warm**", the temperature will be adjusted. Pressing the right menu button "**High spin**" will adjust the spin speed.

If "MasterCare" is selected a list will appear in the display.















- With the left menu button "▼" additional programs can be selected and then confirmed with the right menu button "OK".












- If desired and allowed by the program, adjust the temperature with the left menu button and spin speed with the right menu button.

## Program guide

Temperature		Final Spin	Item / Tip
<b>Normal</b>		Options: Pre-wash, Extended, Sensitive, Buzzer	
Hot		<b>Max spin</b>	<b>Important:</b> Fill the drum only $\frac{3}{4}$ of the way. Items need room to move otherwise they might get caught in the drum door seal.
Very warm			
<b>Warm</b>			
Cold			
No heat			
<b>Wrinkle-free</b>		Options: Pre-wash, Extended, Sensitive, Buzzer	
Hot		<b>High spin</b>  Med spin	Items made from synthetics, mixed fabrics or wrinkle free cottons.
Very warm			
Warm			
<b>Cold</b>			
No heat			
<b>Sanitize</b>		Options: <b>Pre-wash</b> , Extended, Sensitive, Buzzer	
<b>Sanitize</b>		<b>Max spin</b> High spin	Items which have skin contact or for special hygienic requests.
Hot			
<b>Sports Gear</b>		Options: Pre-wash, Extended, Sensitive, Buzzer	
Warm		<b>Med spin</b>	Sportswear such as singlets and leggings as well as microfibre and fleece garments.
<b>Cold</b>			
No heat			














The default settings are highlighted in **bold**.

# Using the washer



Temperature		Final Spin	Item / Tip
<b>Woolens/Handwash</b>		Options: Sensitive, Buzzer	
Warm		<b>High spin</b> Med spin Slow spin Rinse hold No spin	Items made from washable wool or mixed woolens and hand washable itmes..
<b>Cold</b>			
No heat			
<b>Express</b>		Options: Buzzer	
<b>Warm</b>		<b>Max spin</b> High spin Med spin Slow spin Rinse hold No spin	Small loads of mixed items without a high degree of soiling.
Cold			
No heat			
<b>Custom</b>		Options: Extended, Pre-wash, Sensitive, Buzzer	
Sanitize		<b>Max spin</b> High spin Med spin Slow spin Rinse hold No spin	All options are selectable for "Sanitize" and "Normal" programs.
Hot			
Very warm			
Warm			
<b>Cold</b>			
No heat			



# Using the washer

Temperature		Final Spin	Item / Tip
<b>Extra White</b>		Options: Pre-wash, Extended, Sensitive, Buzzer	
<b>Hot</b>		<b>Max spin</b> High spin	For white items without special hygienic requests.
Very warm			
<b>Delicates</b>		Options: Extended, Buzzer	
Warm		<b>Med spin</b> Slow spin Rinse hold No spin	For delicate items made from synthetics.
<b>Cold</b>			
No heat			
<b>Silk</b>		Options: Buzzer	
<b>Warm</b>		<b>Slow spin</b>	Silk and hand washable items which do not contain wool.
Cold			
<b>Denim / Jeans</b>		Options: Pre-wash, Extended, Sensitive, Buzzer	
<b>Warm</b>		<b>High spin</b> Med spin	All items made from denim. Before washing denim items turn them inside out.
Cold			
No heat			
<b>Dress shirts</b>		Options: Pre-wash, Sensitive, Buzzer	
<b>Warm</b>		<b>Med spin</b> Slow spin Rinse hold No spin	Pre-treat collars and cuffs depending on soiling.
Cold			
No heat			
<b>Comforters</b>		Options: Pre-wash, Extended, Sensitive, Buzzer	
<b>Warm</b>		<b>High spin</b> Med spin Slow spin	Comforters and pillows Max. 81" -84" x 86" - 88" (205 cm-213 cm x 218 cm-224 cm)
Cold			
No heat			
<b>Outerwear</b>		Options: Buzzer	
<b>Cold</b>		<b>Med spin</b>	Close all zippers. Do not use fabric softener.

# Using the washer

Temperature		Final Spin	Item / Tip
<b>Table linens</b>		Options: Buzzer	
<b>Warm</b>		<b>High spin</b>	For tablecloths and napkins.
Cold		Med spin	
No heat		Slow spin	
		Rinse hold	
		No spin	
<b>Beach towels</b>		Options: Buzzer	
<b>Cold</b>		<b>Max spin</b>	Program to rinse sand from beach towels. Do not use detergent.
<b>Drain / Spin</b>		Options: Buzzer	
		<b>Max spin</b> High spin Med spin Slow spin No spin	
<b>Quick rinse</b>		Options: Buzzer	
		<b>High spin</b> Med spin Slow spin Rinse hold No spin	
<b>Clean Machine</b>		Options: Buzzer	
<b>Sanitize</b>			To clean the drum and all waterways. Run program without laundry.

## Final spin speed

Program	
Normal	Max spin
Wrinkle free	High spin
Sanitize	Max spin
Sport Gear	Med spin
Woolens/Handwash	High spin
Express	Max spin
Custom	Max spin
Extra White	Max spin
Delicates	Med spin
Silk	Slow spin
Denim / Jeans	High spin
Dress shirts	Med spin
Comforters	High spin
Outerwear	Med spin
Table linens	High spin
Beach towels	Max spin
Drain / Spin	Max spin
Quick rinse	High spin
Clean Machine	–

The final spin speed can be reduced, if the program allows changes. The selection of a final spin speed higher than that shown above is not possible.

## Rinse spin

The laundry is spun after the main wash and between the rinse cycles. Reducing the final spin speed will also reduce the rinse spin speeds.

### Hold

- Select "Hold".

The laundry is not spun and remains soaking in water. This will prevent wrinkles if the laundry is not removed immediately at the end of the wash program.

- Selecting/Starting the final spin

The washer is set default to the maximum spin speed of the wash program. You can select a lower spin speed if desired.


- Press "Start" to start the final spin.
- To finish the program
- Press and hold the "Pause" button until the program ends.

### No spin (Deselect rinse spin and final spin)

- Select "No spin". The laundry is not spun after the final rinse, but the water is drained away. After the drain cycle the washer goes immediately into the anti-crease cycle.

# Using the washer

## 5. Select an option

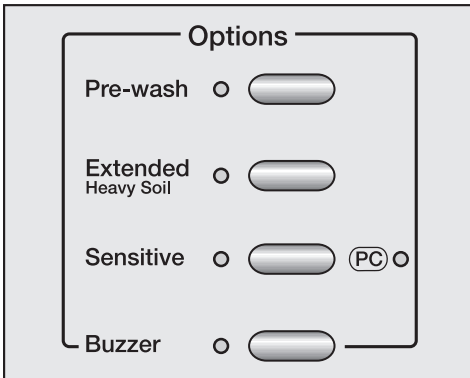

- Select the desired Option with the respective button. Once an Option is selected, the indicator lights.

See the "Program Guide" to determine which Option is selectable for each program.

If an Option cannot be selected, the wash program does not permit it.

### Pre-wash

For heavily soiled laundry or stubborn dried on stains.

A pre-wash takes place and the wash time for the main wash is extended.

### Extended

For laundry with normal to heavy soiling or stains.

The main wash cycle time for the wash program is extended.

### Sensitive

An additional final rinse washes away detergent residue and scents.

An additional rinse takes place.

### Buzzer

A buzzer signals the end of the wash program or after "Hold". The buzzer sounds until the washer is turned off. The buzzer volume can be adjusted.

### Adjusting the buzzer volume

No program is selected.

- Press the "Buzzer" button until the display shows:



- Press the left menu button "▶" to adjust the buzzer volume. Confirm with "OK".

## 6. Add detergent

Front loading washing machines require significantly less detergent than traditional top loaders. Closely follow the requirements of the detergent manufacturer.

Use detergent according to the laundry soiling and water hardness.

### **Light soiling**

No soiling or stains are visible.

### **Normal soiling**

Some visible soiling or a few light stains.

### **Heavy soiling**

Very visible soiling or stains.

Use the "Pre-wash" function and add detergent in the Heavy soil compartment as described.


### **Too little detergent may cause:**

- Ineffective cleaning of laundry; fabrics may become gray and stiff over time.
- Grease stains on the laundry.
- Hard water deposits on the heating element.


### **Too much detergent may cause:**

- Over sudsing with minimal drum movement; poor wash, rinse and spin results.
- Higher water consumption through an automatic, additional rinse cycle.
- Higher environmental burden.

## Using the washer

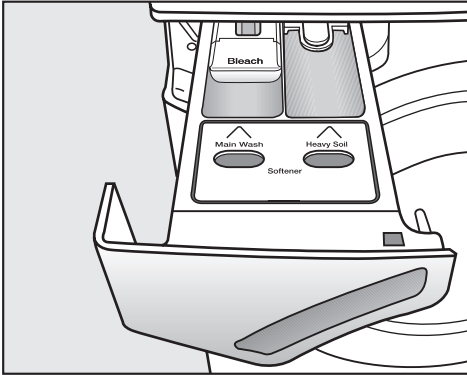

- Pull out the detergent dispenser drawer.

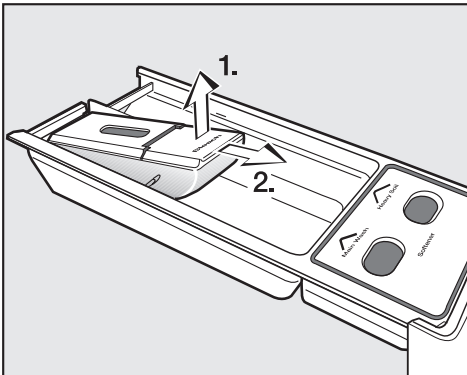

- If you do not use bleach, please remove the insert from the main wash compartment.

- Add detergent to the desired compartments.
  - **Main wash**  
Detergent for the main wash
  - **Heavy Soil**  
Detergent for the pre-wash
  - **Bleach**  
Bleach used as described by the manufacturer; placed in the bleach compartment
  - **Softener**  
Fabric softener or liquid starch
- Add detergent to the Main Wash compartment at the beginning of each wash program.
- Only add detergent ( $\frac{1}{4}$  total recommended amount) to the "Heavy Soil" compartment, if the "Pre-wash" option was selected.
- Close the detergent drawer.

## Detergents

You can use all **high efficiency detergents** which are formulated for household washing machines. Closely follow the requirements of the detergent manufacturer.

	Universal	Color	Delicate	Special	Bleach	Fabric Softener
Normal	X	X	–	–	X	X
Wrinkle free	X	X	–	–	X	X
Sanitize	X	–	–	–	X	X
Sports Gear		X	X	–	–	
Woolens/Handwash	–	–	–	X	–	–
Express <sup>1)</sup>	X	X	–	–	–	X
Custom	X	X	–	–	X	X
Extra White	X	–	–	–	X	X
Delicates	–	–	X	X	X	X
Silk	–	–	–	X	–	X
Denim / Jeans <sup>1)</sup>	X	X	X	X	X	X
Dress shirts	X	X	–	–	X	X
Comforters <sup>1)</sup>	–	–	–	X	X	X
Outerwear	–	–	–	X	X	–
Table linens	X	–	–	–	X	–
Beach towels	–	–	–	–	–	X
Quick rinse	–	–	–	–	–	X
Clean Machine	–	–	–	–	X	–

<sup>1)</sup> only liquid detergent

Miele offers a variety of specialized laundry detergents and fabric softeners, each uniquely designed to meet your individual laundry care needs. For more information visit the [www.miele.ca](http://www.miele.ca) web site or the Miele Boutique at <http://www.miele.ca/miele/canada/boutique.asp>.

# Using the washer

## Fabric after care

### Fabric softener


Makes fabrics feel softer and reduces static cling in the dryer.

### Mild liquid starch

A synthetic starch wash that gives fabrics some stiffness.

### Starch

Gives the fabrics stiffness and volume.

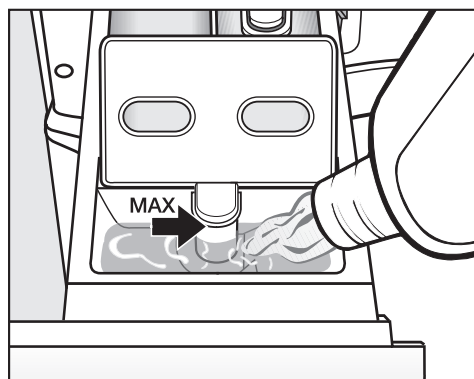


- Add the fabric softener or mild liquid starch to the "Softener" compartment. **Do not exceed the maximum fill level marked inside the compartment.**

The fabric softener / liquid starch will be dispensed during the final rinse. A small amount of water will remain in the compartment at the end of the program.

If starching frequently, clean the dispenser compartment and especially the siphon tube.

## Bleach

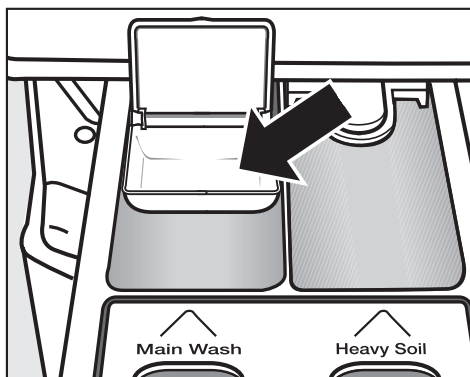

- Pour bleach into the bleach compartment.

During the Main Wash the bleach will be automatically rinsed from the compartment and added to the cycle.

## Dyes / Dye removers

The use of dyes in the washer is recommended only to a degree of usual household use. The salt used for dyeing may corrode the stainless steel with frequent use.


- Use as directed by the manufacturer.

**⚠ Do not use dye removers in this washer!**



## 7. Select Delay Start (if desired)

Delay start allows you to delay the start of a program from 30 minutes to a maximum of 24 hours.

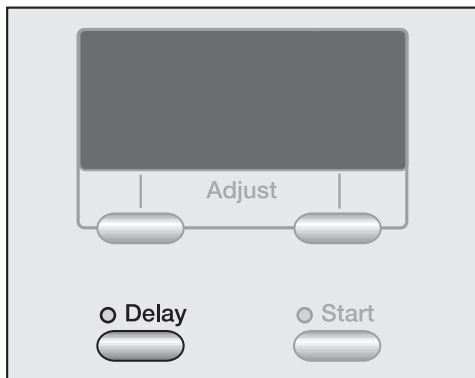

- Press the "Delay" button.



- With every touch of the "Delay" button, the start is delayed longer. Hold to speed up the count.
  - For a delay less than 10 hours, the delay time extends in 30 minute increments.
  - For a delay more than 10 hours, the delay time extends in 1 hour increments.

### Cancel


- Press the "Pause" button.

### Adjust

To adjust the "Delay Start" time cancel then reset.

# Using the washer

## 8. Start the program

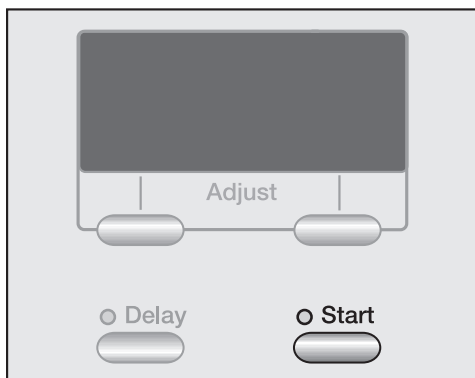


- Press the flashing "Start" button.

If a delay start is set, the remaining times elapses in the display. Once the delayed start time has elapsed or immediately after the program starts, the approximate program running time is displayed. The washer calculates the water absorbency of the laundry in the first 8 minutes. The overall program time may be shortened or lengthened.

Additionally the sequence cycle is displayed. The washer shows the current program step.

The drum door will be locked and the drum light will turn off once the program starts.

 If a program was started without detergent, cancel the program first. Add detergent, then select and start a program again.

## 9. Activate the Child Lock (if desired)

The Child Lock prevents a program from being canceled.

- Press and hold the "Pre-wash" button until the display shows:



### Deactivate the Child Lock

- Press and hold the "Pre-wash" button until the display shows:




Once the program has finished, the Child Lock must be deactivated.

### 10. Program end

End

- Open the drum door and remove the laundry.

Check the drum for any missed pieces of laundry. Items inadvertently left in the washer may be damaged (e.g. shrink or discolor) during the next wash cycle.

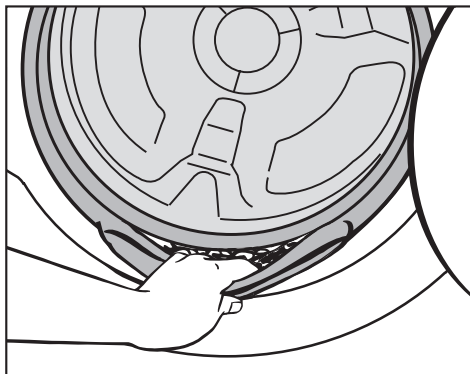


- Check the folds of the door seal for any small articles.
- Close the drum door.
- Activate the Child Lock so children or animals do not find their way into the drum.
- Shut off the water supply if the washer will not be used for a longer period of time, e.g. vacationing.

# Using the washer

---

## Canceling a program

A program can be canceled any time after the program start.

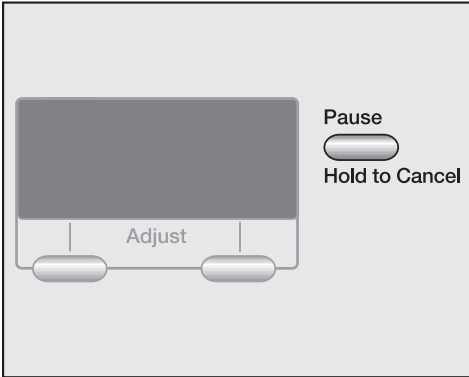

- Press and hold the "Pause" button until the display shows:



The wash water will be drained away.

## To add or remove laundry

- Open the drum door.

## To select another program

The display requests the program selection.

- Select the desired program.

## Interrupting a program

- Press the "Pause" button briefly.

The washer interrupts the program and unlocks the door.

To continue:

- Press the "Start" button.

## Changing a program

A program change is not possible once the program has started. The program must be canceled.

## Adjusting the temperature

The temperature can be changed up to 6 minutes after the program start.

## Adjusting the spin speed


The spin speed can be adjusted anytime up to the beginning of the final spin.

## Adjusting the options

The options "Extended" or "Sensitive" can be selected or deselected up to 6 minutes after the program start.

The "Buzzer" option can be selected or deselected at any time.

# Miele

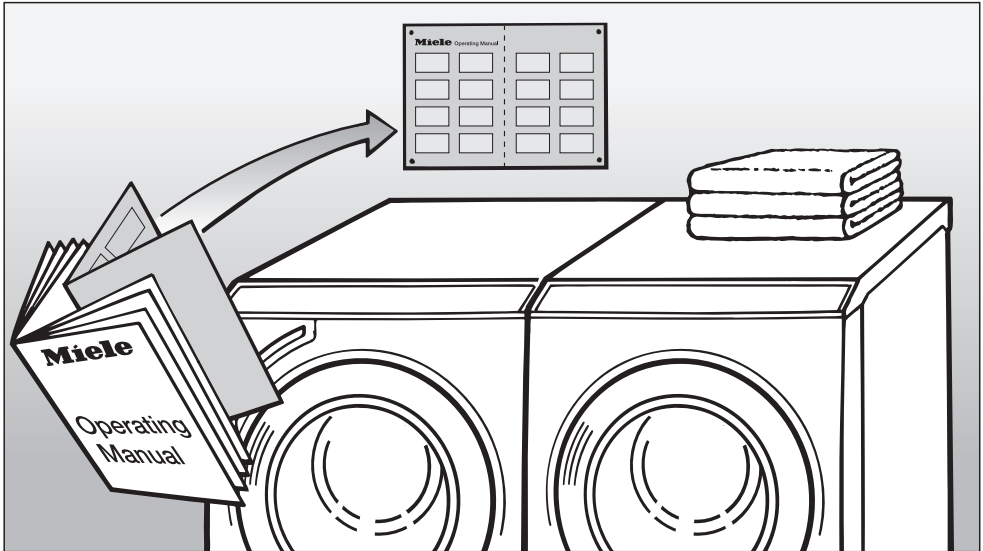


## Quick guide

**Remove this guide for easy reference**

Please read all instructions, especially the "Important Safety Instructions", before using the washer.


# Quick guide

## 1. Sort the laundry

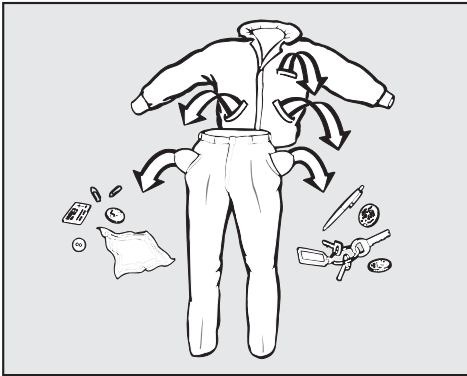

- Empty all pockets.
- Sort the laundry by fabric care label and color.
- Pre-treat stains.

## 2. Load the laundry

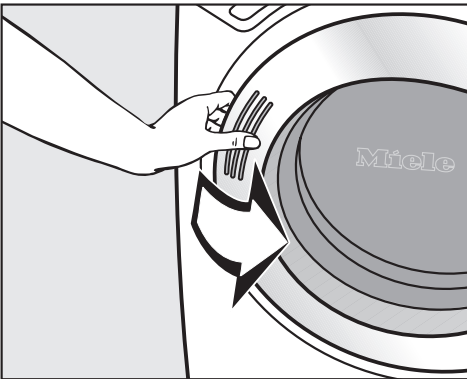

- Open the drum door and load the laundry.
- Close the drum door.

To prevent damage, make sure that no clothing is caught between the drum door and seal.

## 3. Select a program



- Press the button of the desired program.

The indicator of the selected program lights.

## 4. Select a temperature


The preselected temperature and/or spin speed can be adjusted if the program allows.

Example:




By pressing the left menu button "**Warm**", the temperature will be adjusted. Pressing the right menu button "**High spin speed**" will adjust the spin speed.

## 5. Select an Option

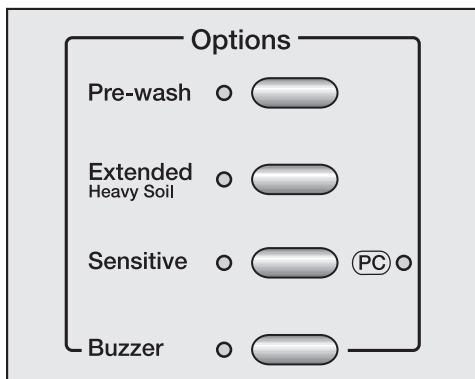

- Select the desired Option with the respective button. Once an Option is selected the indicator lights.

## 6. Add detergent

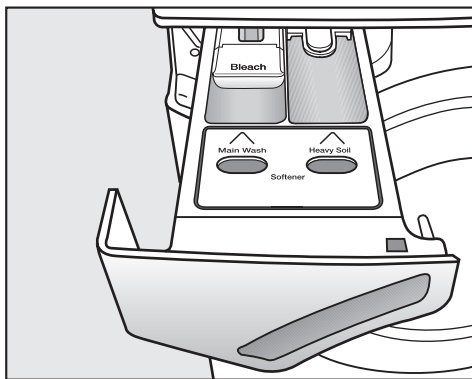

- Add detergent to the appropriate compartments.

## 7. Select Delay Start (if desired)

- Press the "Delay" button.



- With every touch of the "Delay" button, the start is delayed longer.

## 8. Start a program

- Press the flashing "Start" button.

## 9. Activate the Child Lock (if desired)

- Press the "Pre-wash" button until the display shows:



- Deactivate the Child Lock after the program has finished.

## 10. Unload the laundry

- Open the drum door.
- Remove the laundry.
- Shut off the water supply if the washer will not be used for a longer period of time, e.g. vacationing.

Check the drum for any missed pieces of laundry. Items inadvertently left in the washer may be damaged (e.g. shrink or discolor) during the next wash cycle.





### Adding/removing laundry during a wash program

- Press the "Pause" button briefly.

The washer interrupts the program and unlocks the door.

- Open the drum door.
- Add or remove laundry.
- Close the door.
- Press the "Start" button.


The program continues automatically.

**Note:** Once the program has started the washer can not make adjustments of the load size.

### The drum door cannot be opened if:

- the water temperature is greater than **130°F (55°C)**.
- the water level is too high.
- the program has reached the "Final Spin".
- The Child Lock function is activated.

If you attempt to open the door while the washer is in one of the above statuses "Machine locked" will appear in the display.

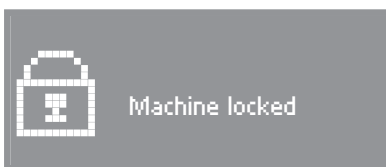

## Cleaning and care

⚠ Before cleaning or maintenance, disconnect the power supply by unplugging the unit or manually "tripping" the circuit breaker.

⚠ Do not hose the washer down.

### Cleaning the exterior and control panel


- Clean the exterior of the washer with a mild solution of non-abrasive detergent or soap and water, then wipe dry with a soft cloth.
- Clean the drum with a stainless steel cleaner specially formulated for use on washing machines (available from Miele).

⚠ Do not use chemical solvents, abrasive cleaners, glass or all-purpose cleaners! They will damage the surface.

### Cleaning the drum

To ensure that your machine remains clean and free of any soil build-up or odors, the washer comes equipped with a self-cleaning program for the drum and water lines. It is suggested to run this program approx. once a month.

The program is completed **without laundry** in the drum.

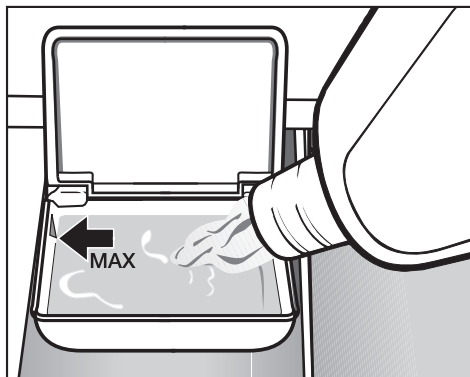


- Load approx. ½ cup of bleach into the *Bleach* compartment. Do not exceed the max. fill mark (small triangle on the sides).
- Close the door.
- Press the "MasterCare" button.
- Use the display to select the "Clean machine" program.
- Press the "Start" button.

Once the program is finished:


- Clean the dispenser drawer as described on the following pages.

## Cleaning the dispenser drawer


Regularly remove any detergent residue.

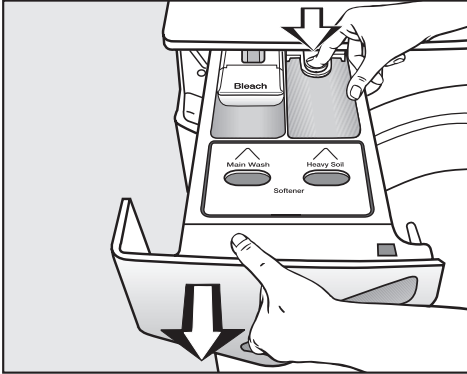

- Pull the detergent drawer out until it stops, press down the release catch, and remove the drawer from the washer.

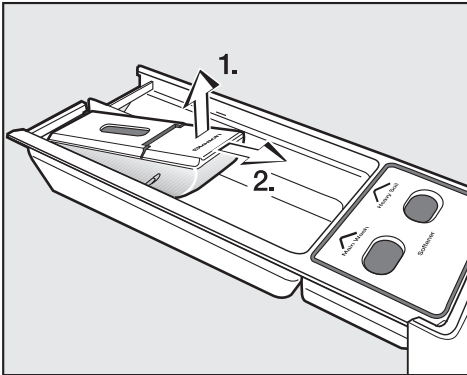


- Remove the bleach compartment to clean it.

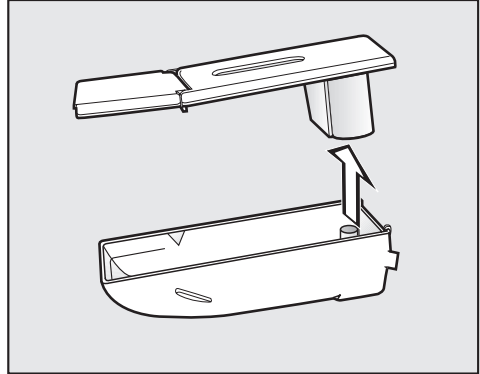


- Remove the lid from the bleach container and clean both parts thoroughly in warm water.
- Re-attach the lid.
- Clean the "Heavy Soil" and "Main Wash" compartments with warm water.
- Put the bleach container back in the "Main Wash" compartment.

# Cleaning and care

## Cleaning the siphon and softener channel

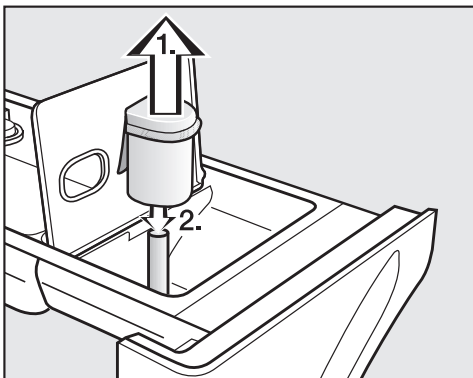


1. Pull the siphon out of the "Softener" compartment, and rinse under warm running water. Clean the siphon tube the same way.
2. Put the siphon back in place.

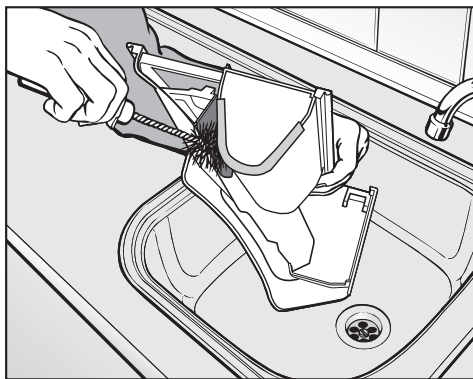

- Clean the fabric softener channel with warm water and a brush.

Clean the siphon tube and fabric softener channel more often if you frequently use liquid starch. Liquid starch tends to build up.

## Cleaning the detergent drawer niche

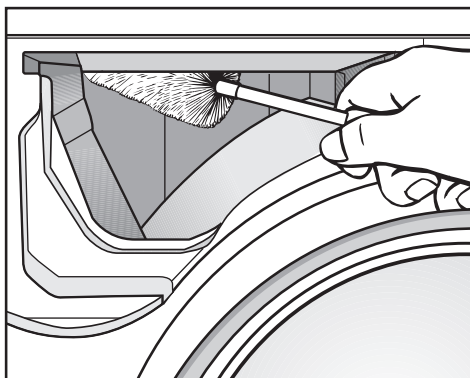


- Use a bottle brush to remove any detergent residue and lime deposits from the jets inside the detergent drawer.
- Slide the drawer back into place.

## Cleaning the water inlet filters

The washer has two water inlet filters to protect each inlet valve. These filters should be checked and cleaned if necessary every 6 months. This may need to be done more frequently with some water supplies.


- Turn off the water supply.
- Unscrew the inlet hose from the valve by turning the connector counter-clockwise using a wrench if necessary.

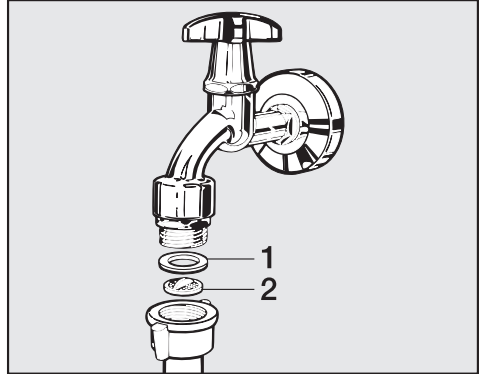

- Remove the rubber seal, **1**, from the connector.
- Using needle nose pliers, grasp the plastic filter, **2**, and pull it out of the hose connector.
- Clean the filter under running water and carefully remove any large particles.
- Replace the filter and seal then reconnect the hose.
- Slowly turn on the valve and check for leaks. If water leaks, tighten the bolt.

Both filters **must** be put back in place after cleaning.





## Frequently asked questions

 All electrical work should be carried out by a suitably qualified and trained person, in accordance with all applicable local and national safety regulations. Repairs and other work by unqualified persons could be dangerous.

The following section will help you avoid placing a service call, by identifying issues you may encounter while operating the appliance:

<b>No wash program will start</b>		
<b>Problem</b>	<b>Possible cause</b>	<b>Remedy</b>
<b>The display is dark and the indicator lights for the program buttons do not come on.</b>	There is no power to the washer.	Check whether: <ul style="list-style-type: none"><li>– the cord is plugged in.</li><li>– the circuit breaker has tripped.</li></ul>
<b>Immediately after the program start the washer cancels the program.</b>	The "child entrapment sensor" has triggered.	<ul style="list-style-type: none"><li>■ Open the drum door.</li><li>■ Check the drum.</li><li>■ Restart the program.</li></ul>
<b>Although there is power to the washer, the program will not start.</b>	The drum door is not properly closed and the lock can not engage.	<ul style="list-style-type: none"><li>■ Open the drum door.</li><li>■ Re-close it.</li></ul>

## Frequently asked questions

<b>The display shows a fault message</b>		
<b>Issue</b>	<b>Possible fault</b>	<b>Fix <sup>1)</sup></b>
 <b>Drain fault</b> <b>Check drain</b>	<ul style="list-style-type: none"> <li>– The drain is blocked.</li> <li>– The drain hose is too high.</li> </ul>	<ul style="list-style-type: none"> <li>– Clean the drain filter and the drain pump.</li> <li>– The maximum drain pump height is 3 ft (1m).</li> </ul>
 <b>Water inlet fault</b> <b>Open water faucet</b>	<ul style="list-style-type: none"> <li>– The water intake is blocked.</li> </ul>	Possible fault: <ul style="list-style-type: none"> <li>– check if the water supply is open all the way.</li> <li>– the inlet hose is kinked.</li> </ul>
 <b>Waterproof system activated</b>	The waterproof system has activated.	Contact Technical Service.
 <b>Technical fault</b> <b>Call Technical Service</b>	There is a fault.	Restart the program. If the fault message appears again contact Technical Service.
In the display flashes <b>Anti-crease</b> alternating with <b>Check detergent</b>	The machine has over sudsed.	Use less detergent in the next wash program, and follow the recommended amount on the detergent packaging.

1) To turn off the fault message:

- To turn the fault message off: Open the drum door or press the "Pause" button until the fault message goes out.

## Frequently asked questions

<b>General issues with the washer</b>		
<b>Issue</b>	<b>Possible cause</b>	<b>Solution</b>
<b>The "Over sudsing" indicator lights.</b>	The machine has over sudsed.	Use less detergent in the next wash program.
<b>The "Main wash" indicator flashes.</b>	There is a fault.	Restart the program. If the fault message appears again, call Miele's Technical Service Department.
<b>The washer shakes during the spin cycle.</b>	The four feet are not resting evenly on the floor.	Level the machine (see "Installation - Leveling the washer").
<b>There are unusual sounds coming from the drain pump.</b>	There is no fault. Lapping sounds at the beginning and end of the pump process are normal.	
<b>A large amount of detergent residue remains in the dispenser drawer.</b>	The water pressure is too low.	<ul style="list-style-type: none"> <li>– Clean the water intake hose filter under running water and carefully remove any large particles.</li> <li>– Select the "Sensitive" button.</li> </ul>
<b>The fabric softener is not completely dispensed, or too much water remains in the fabric softener compartment ☼.</b>	The siphon tube is incorrectly positioned or clogged.	Clean the siphon tube (see "Cleaning and care- Cleaning the detergent dispenser drawer").



## Frequently asked questions

<b>Unsatisfactory wash results</b>		
<b>Issue</b>	<b>Possible cause</b>	<b>Solution</b>
<b>The laundry is not clean enough when using liquid detergent.</b>	Liquid detergents do not contain bleaching agents. Fruit, coffee and tea stains may not be removed.	<ul style="list-style-type: none"><li>– Use powder detergents containing bleach.</li><li>– Pre-treat stains</li></ul>
<b>Laundry has a gray sticky residue.</b>	<ul style="list-style-type: none"><li>– Not enough detergent was used to dissolve greasy deposits on heavily soiled laundry.</li><li>– The laundry was soiled with grease, e.g. oils, lotions, etc.</li></ul>	<ul style="list-style-type: none"><li>– Add more detergent to laundry with grease stains or use a liquid detergent.</li><li>– Run the "Sanitize" program without laundry using liquid detergent to clean the washer before using it for laundry again.</li></ul>
<b>There is white detergent residue on dark laundry.</b>	The detergent has not completely dissolved because of hard water. These residues are difficult to remove.	<ul style="list-style-type: none"><li>– After drying, remove white residues with a clothes brush.</li><li>– In the future add a water softener to the detergent.</li></ul>


## Frequently asked questions


---

<b>The drum door cannot be opened</b>	
<b>Possible cause</b>	<b>Solution</b>
<b>The door is locked during the wash cycles.</b>	Press the "Pause" button. The door lock opens.
<b>The Child Lock is activated.</b>	Deactivate the Child Lock as described in the chapter "Using the washer - Activate the Child Lock".
<b>Power failure</b>	Open the door as described on the following page.
<b>There is still water in the drum and the washer cannot drain the water.</b>	Clean the drain filter and drain pump. See "Cleaning and Care - Cleaning the drain pump and lint trap".
As a safeguard against scalding, the drum door cannot be opened if the wash water temperature is over 130°F (55°C).	


## Frequently asked questions

### Opening the drum door during a power failure or when the drain is blocked

 Pull the plug from the electrical outlet before cleaning the washer!

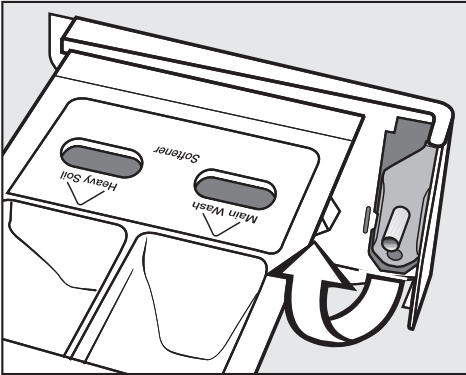


- Open the detergent dispenser drawer and remove the tool.

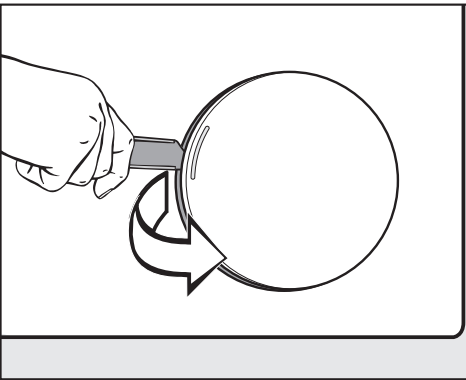

- Open the lint trap door.

If the drain is clogged there will be water in the machine (max. 9.25 gal [35 l]).


 Make sure the machine is turned off and the drum has stopped turning. A moving drum is dangerous.




- Place a container under the drain tube.
- Open the drain filter until water runs out, but do not take it out completely.
- If the container becomes too full, interrupt the water flow by tightening the drain filter.
- Discard the water and continue.

## Frequently asked questions


Once the flow of water stops:

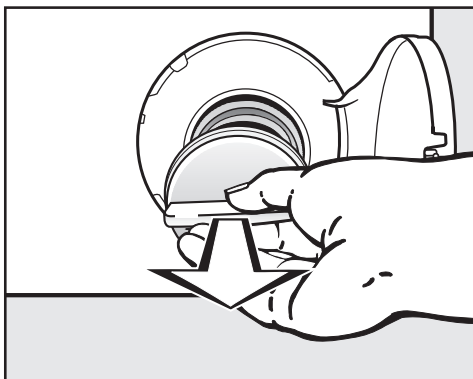


- Remove the drain filter.
- Clean out any foreign objects or lint from the filter.

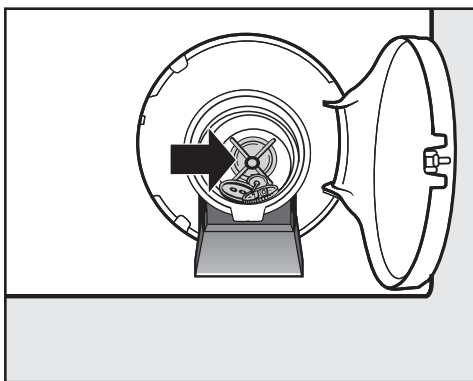


- Check that the drain pump impeller (in the back of the chamber) rotates freely by spinning it with your hand.
- Return the drain filter and tighten it into place.

 If the drain filter is not securely tightened water will leak out when the machine is used.

### Opening the drum door

 Make sure the machine is turned off and the drum has stopped turning. A moving drum is dangerous.

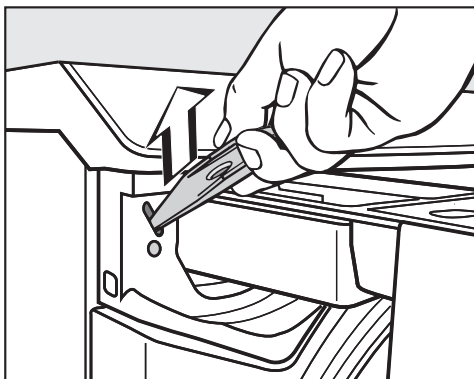


- Pull out the detergent drawer.
- Insert a screw driver into the slot of the emergency opener and pull upwards. The door will now open.

## Repairs

In the event of a fault which you cannot fix yourself, please contact the service number on the back of this manual.

When contacting the Service Department, please quote the model and serial number of your appliance. This information can be found on the data plate located at the door hinge.

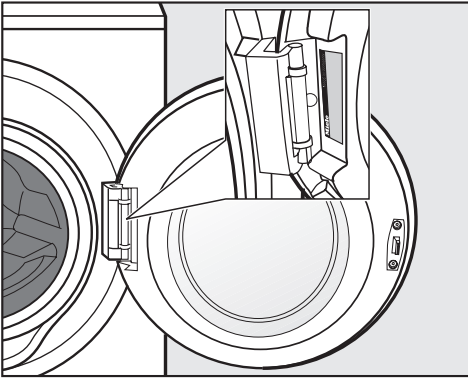

## PC Update

The indicator marked PC allows a technician to make use of new technology. When, for example, new programs are developed or new fabrics are introduced, a service technician will be able to modify existing program cycles accordingly.

Miele will provide information when such possibilities become available.

## Optional accessories

Optional accessories are available through your Miele dealer or Miele.

## MieleCare

(only USA)

**MieleCare**, our Extended Service Contract program; gives you the assurance of knowing that your appliance investment is covered by 5 years of worry free ownership.


**MieleCare** is the only Extended Service Contract in the industry that guarantees repairs by a Miele Authorized Service Provider using genuine Miele parts. Only genuine Miele parts installed by factory trained professionals can guarantee the safety, reliability and longevity of your Miele appliance.

Please note that unless expressly approved in writing by the Miele Service department, Extended Service Contracts offered by other providers for Miele products will not be recognized by Miele. Our goal is to prevent unauthorized (and untrained) service personnel from working on your Miele products, possibly doing further damage to them, you and/or your home.

To learn more about **MieleCare** Extended Service Contracts, please contact your appliance dealer or visit us online at:

<http://miele.com/mielecare>



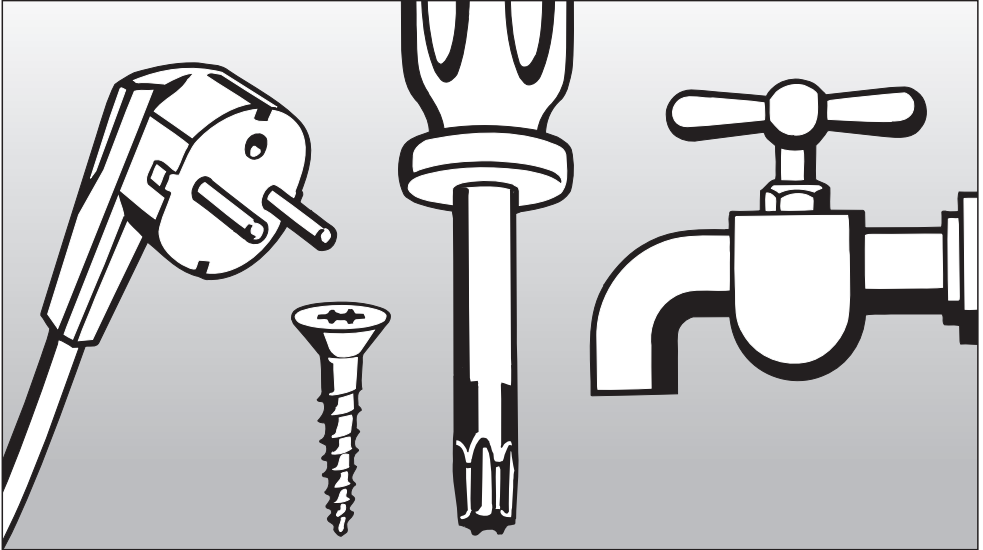


## Installation Instructions

To prevent accidents  
and appliance damage  
read these instructions

**before**  
installation or use.

# Installation


## Front view

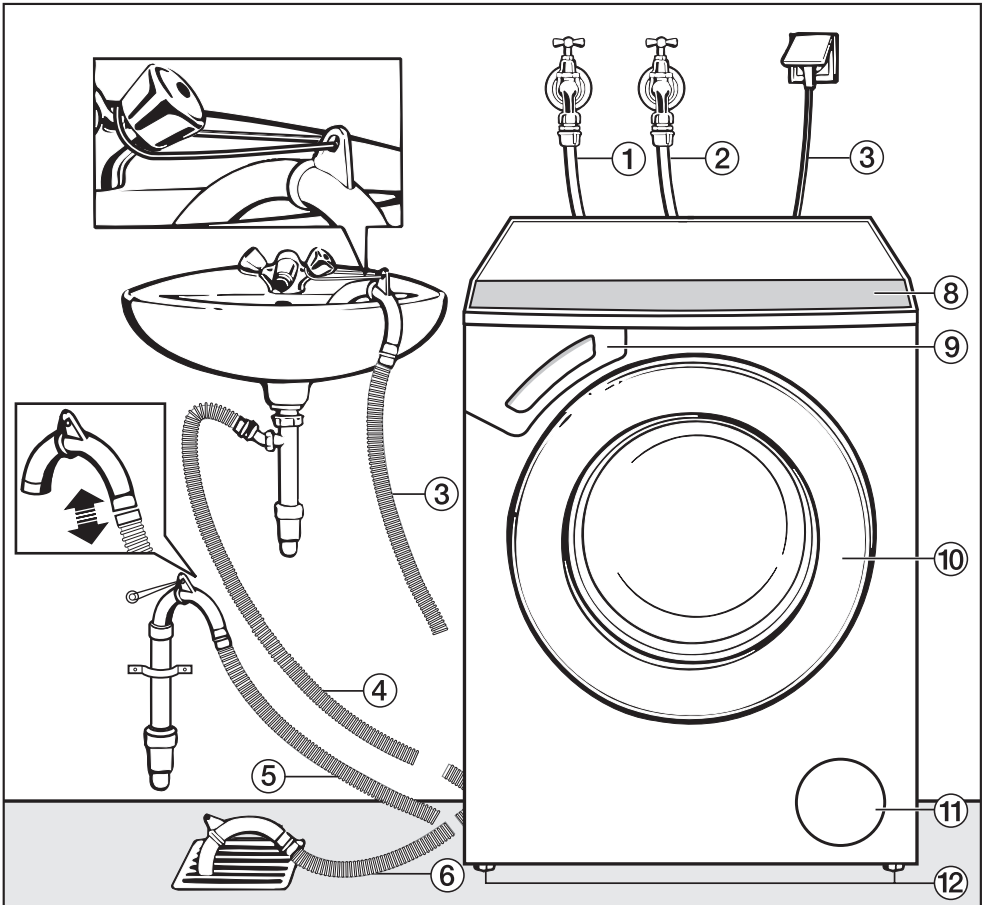

- ① High pressure intake hose, red mark for hot water
- ② High pressure intake hose, blue mark for cold water
- ③ Power cord
- ④ - ⑦ Flexible drain hose with detachable swivel elbow (drain options shown)
- ⑧ Control panel
- ⑨ Detergent dispenser drawer and door opener in case of power failure
- ⑩ Drum door
- ⑪ Access panel to lint trap and drain pump
- ⑫ Four height-adjustable feet



## Rear view

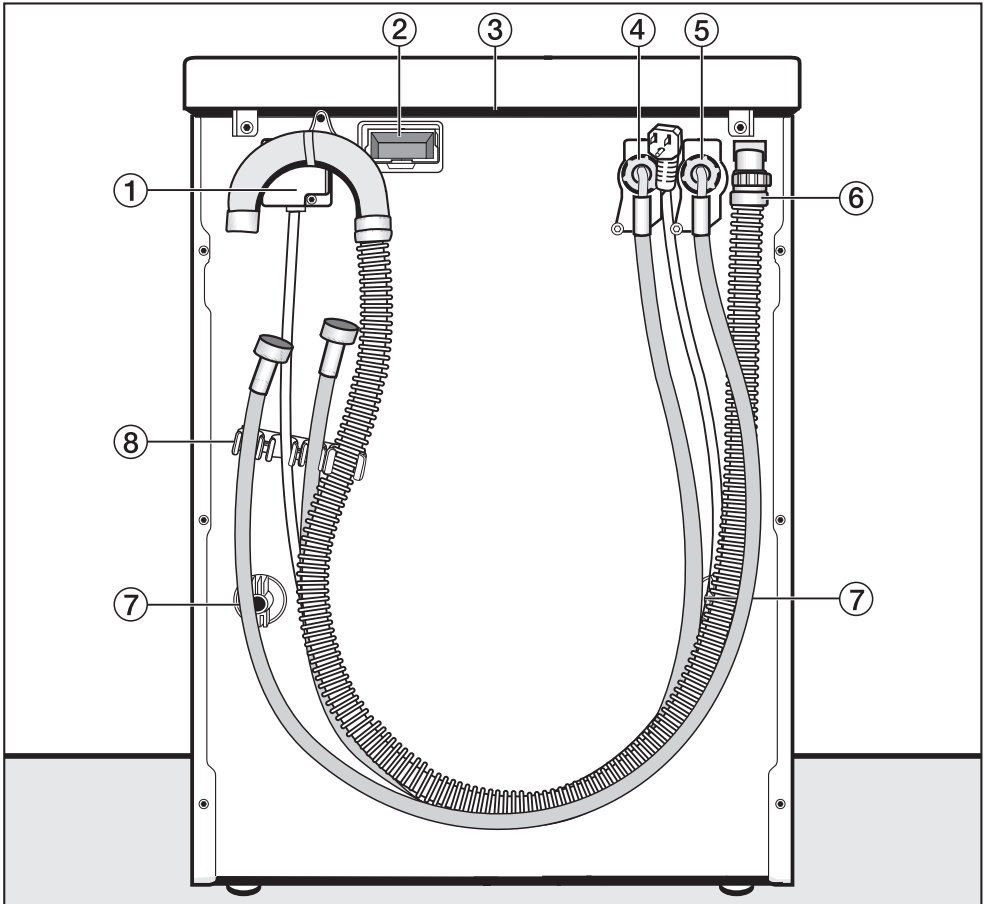

- ① Electrical connection
- ② W-LAN communication module
- ③ Rear access with grip for transport
- ④ Water intake hose cold water (blue stripes)
- ⑤ Water intake hose hot water (red stripes)
- ⑥ Drain hose
- ⑦ Shipping struts
- ⑧ Brackets for intake and drain hoses

# Installation

---


## Installation site

For best performance front loading washers should be installed on the ground floor or basement of the building.


A concrete or reinforced floor is the most suitable surface for the washer. These floors are less prone to vibration during the spin cycle.

If the installation must be on a wooden joist floor:

- the corner of a room where the stability of the floor is at its greatest is the best place to install the washer.
  - the machine must be leveled and securely positioned.
  - to avoid vibration while spinning, the machine should not be installed on soft floor coverings.
- Install the unit on a 1 1/4" (32 mm) thick, 28" x 31" (71x78 cm) wide plywood base. Ideally the base should be large enough to span several joists and should be anchored to the joists and not just the floor boards.

 If the machine is installed on a raised platform it must be secured with retaining clips available from your dealer or Miele.


If installed on a masonry or concrete base, the base should have a 1/2" (13 mm) to 3/4" (19 mm) high rim. This must be done to prevent the washer from vibrating off the stand during the spin cycle.

 The washer must not be built under a countertop.


## Installation

- Use the front washer feet and the rear excess end to transport the washer from its shipping pallet to the installation site.


**Do not lift the washer by the drum door!**

 Ensure that the machine's feet and the floor are dry to prevent slippage during the spin cycle.


## Removing the shipping struts

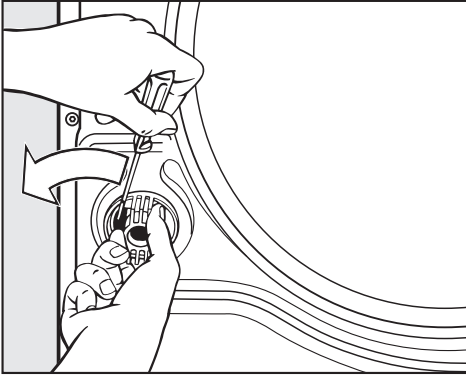


- Turn the left shipping strut counterclockwise 90°.

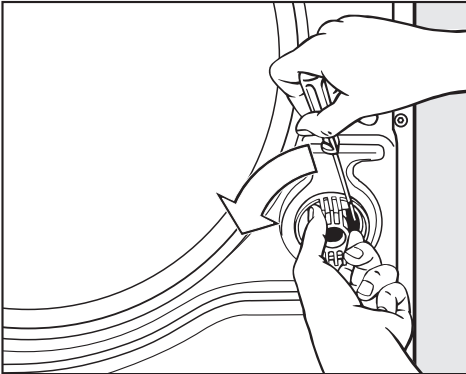


- Turn the right shipping strut counterclockwise 90°.

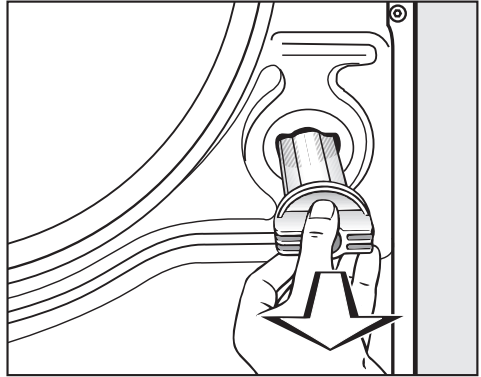

- Withdraw the two struts together with the support plate.

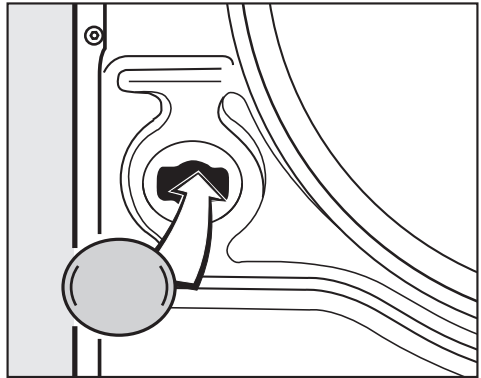

- Cover the two holes with the provided plugs.


 Movement of the washer without the shipping struts in place should be kept to a minimum. The struts must be reinstalled before the machine is moved. The shipping struts should be stored in a safe place for future use.

- Reinstall the struts by reversing the above procedure.

# Installation

## Leveling the washer

To ensure smooth operation the washer must be level.

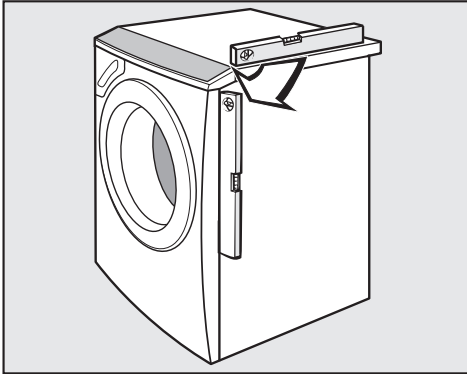


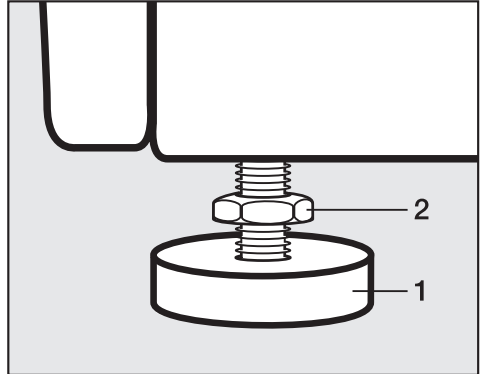
Failure to level the machine can result in increased water and energy consumption, loud noises during the spin cycle or "walking" across the floor during use.

### Adjust the four leveling feet


The washer is leveled by adjusting the four feet. The machine is delivered with all four feet completely screwed in.

- Tip the machine slightly and place a support, such as a block of wood, underneath it.

 **CAUTION:** The washer is extremely heavy. When tipping the machine be careful that it does not slip.



- Loosen the locking ring, **2**, with the supplied wrench.
- Unscrew each of the four feet as much as necessary by turning both the foot, **1**, and locking ring, **2**, to the left.
- Remove the support and stand the machine on its feet.
- Check that the machine stands level.
- Repeat the above procedure until the machine stands level.
- Once level, hold the foot, **1**, immobile with a wrench. At the same time, turn the locking ring, **2**, to the right using another wrench.

 All four locking rings must be tight against the bottom of the machine. In addition, check to see that the feet were not inadvertently unscrewed while tightening the rings. Operating a machine that is not level or whose feet are not tight may cause damage to both the machine and its surroundings.

## The Miele water protection system

The Miele water protection system protects the washer from water damage.

The system consists of three main components:

- 1) the inlet hose
- 2) the washer electronics and housing
- 3) the drain hose

### 1) The inlet hose

- Hose burst protection

The inlet hose can withstand pressure of more than 7000 kPa.

### 2) The electronics and housing

- Sump

Any leaking water is collected in a sump in the base of the washer. A float then switches off the inlet valves, preventing any additional water inflow, and any water in the suds container is pumped away.

- Overflow protection

This feature helps prevent the washer from taking in too much water. If the water exceeds a certain level, the drain pump starts and pumps away the water.

### 3) The drain hose


The drain hose is equipped with a ventilation system that prevents the washer from being emptied accidentally.

## Connecting to the water supply

The washer is designed to comply with applicable CSA standards, for connection to a tap water line. It does not require a non-return valve.

The flow pressure must be between 100 kPa and 1000 kPa. If the pressure is above 1000 kPa, a pressure-reducing valve **MUST** be installed.

Two stopcocks with  $\frac{3}{4}$ " thread are required for connecting to the water supply. If these are not available, you will need to have a qualified plumber fit the washer to the water supply.

 The screw fittings are under pressure from the water line. To check that the connections are watertight, slowly open the taps. Correct the placement of the washer and union as needed.

## Maintenance and care

If the hose ever needs to be replaced, use only a genuine Miele hose - it is tested to withstand pressure of at least 7000 kPa.

In order to protect the water inlet valve, the two dirt filter screens (one in the open end of the inlet hose, the other in the inlet point in the washer) should not be removed.

## Optional extension hose

Longer hoses 2.5 or 4.0 m in length are available from your Miele dealer or Miele Customer Service.

# Installation

---

## Drainage system

The appliance drains through a pump with a 1m delivery head. For the water to drain freely, the hose must be free of kinks. The swivel elbow at the end of the hose can be turned in either direction, or removed as needed with a sharp twist and pull.

If required, the hose can be extended to a length of 5m. The necessary parts can be ordered through your Miele dealer or Miele Customer Service.

For delivery heads over 1m (up to a max. of 1.8 m), contact your Miele Customer Service for a replacement pump and with a part # 1053992.

### **Drain hose connection:**

1. Hang directly into a washbasin or sink:

Please note:

- Secure the hose over the edge so that it will not slip.
  - Make sure that the water can drain away freely without hindrance. Otherwise, the water could overflow or be sucked back up into the washing machine.
2. Connect securely to a plastic drain pipe with a rubber sleeve (not-return valve not required).
  3. Connect securely to a floor gully.
  4. Attach to a washbasin with a plastic fitting.

## Electrical connection

### GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of a malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

**WARNING** - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service representative if you are in doubt as to whether the appliance is properly grounded.

Do not modify the plug provided with the appliance; if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

## ELECTRICAL INSTRUCTIONS

This installation should be performed by an experienced and qualified technician, in accordance with local codes and regulations.

The washing machine is supplied with a 1.6 m long, 3 wire cord, ending in an NEMA 5-15P plug, ready for connection to a 120 V, 15 A, 60 Hz AC power supply.

The proper outlet can be purchased from an electrical supply dealer.

### Electrical connection

The washer is equipped with a power cord and plug, ready for connection to the power supply.

The plug and socket must always be accessible, to facilitate disconnecting the washer from the electrical supply at any time.

To eliminate a potential fire source, the washer should NEVER be connected by means of extension cords, multi-outlet power strips or similar items.

The appliance data plate indicates the nominal power consumption and the appropriate fuse capacity. Check that the household electrical supply matches the information on the data plate.

# Setting the display language

---

The display language can be changed at any time as long as no program is running.

- Press the "Extended" button until the display shows:



- Select the desired language by pressing the left menu button "◀". Confirm with "OK".

The display is shown in the selected language.



### **Disposal of packing materials**

The packing materials protect the washer from damage during shipping. They have been selected with an eye to environmental compatibility and efficient disposal, and should be recycled.

Returning packaging to the materials cycle helps conserve raw materials and reduces waste. The packing materials can be returned to your dealer.

### **Disposing of your old appliance**

Old electric and electronic equipment often contains valuable materials. However, they may also contain harmful substances that were necessary for safe use. Improperly disposing of these items in your household waste can be detrimental to health and the environment. This is why it is important NEVER to dispose of your old appliance with the regular household garbage.

Instead, please contact your local community waste collection point to return and recycle electric and electronic appliances. Your dealer should be able to provide you with details.

If the appliance is being stored for disposal, please make sure it has been child-proofed.







## **Miele Limited**

### **Headquarters and Showroom**

161 Four Valley Drive

Vaughan, ON L4K 4V8

Phone: 800-643-5381

905-660-9936

Fax: 905-532-2290

[www.miele.ca](http://www.miele.ca)

[professional@miele.ca](mailto:professional@miele.ca) (commercial enquiries)

### **MieleCare National Service**

Phone: 800-565-6435

905-532-2272

Fax: 905-532-2292

[customercare@miele.ca](mailto:customercare@miele.ca) (general and technical enquiries)

## **Germany**

Miele & Cie. KG

Carl-Miele-Straße 29

33332 Gütersloh

